

SERVICE MANUAL

MT-09 MT-09SP

MT09R MT09RC MT09SPR MT09SPRC

FAS20003

IMPORTANT

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Please refer to "BASIC INFORMATION" (separate volume, Y0A-28197-10*) for basic instructions that must be observed during servicing. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools is necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from their vehicle and to conform to federal environmental quality objectives.

Yamaha Motor Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

TIP

- * If the contents of the manual are revised, the last digit of the manual number will be increased by one.
- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
- Designs and specifications are subject to change without notice.

EAS30001

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations.

<u> </u>	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
♠ WARNING	A WARNING indicates a hazardous situation which, if not avoided, could
WARNING	result in death or serious injury.
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.
TIP	A TIP provides key information to make procedures easier or clearer.

EAS20002


MT09R/MT09RC
MT09SPR/MT09SPRC
SERVICE MANUAL
©2024 by Yamaha Motor Corporation, U.S.A.
First edition, February 2024
All rights reserved.
Any reproduction or unauthorized use
without the written permission of
Yamaha Motor Corporation, U.S.A.
is expressly prohibited.
Printed in U.S.A.
P/N LIT-11616-37-68

FAS2000

HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- The manual is divided into chapters and each chapter is divided into sections. The current section title "1" is shown at the top of each page.
- Sub-section titles "2" appear in smaller print than the section title.
- To help identify parts and clarify procedure steps, there are exploded diagrams "3" at the start of each removal and disassembly section.
- Numbers "4" are given in the order of the jobs in the exploded diagram. A number indicates a disassembly step.
- Symbols "5" indicate parts to be lubricated or replaced. Refer to "SYMBOLS".
- A job instruction chart "6" accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc. This step explains removal and disassembly procedure only. For installation and assembly procedure, reverse the steps.
- Jobs "7" requiring more information (such as special tools and technical data) are described sequentially.

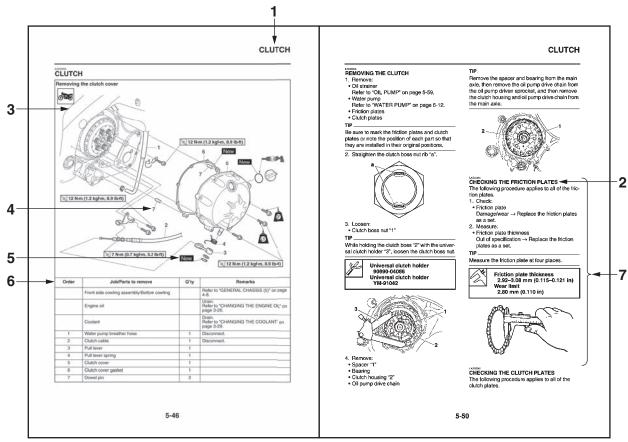

G088877

SYMBOLS

The following symbols are used in this manual for easier understanding.

The following symbols are not relevant to every vehicle.

SYMBOL	DEFINITION	SYMBOL	DEFINITION
0000	Serviceable with engine mounted	G	Gear oil
	Filling fluid		Molybdenum disulfide oil
-1	Lubricant	—∥ BF	Brake fluid
	Special tool	B	Wheel bearing grease
	Tightening torque	LS	Lithium-soap-based grease
	Wear limit, clearance	M	Molybdenum disulfide grease
	Engine speed	S	Silicone grease
0	Electrical data	<u>l</u>	Apply locking agent (LOCTITE®).
Ē	Engine oil	New	Replace the part with a new one.

TABLE OF CONTENTS

GENERAL INFORMATION	1
SPECIFICATIONS	2
PERIODIC CHECKS AND ADJUSTMENTS	3
CHASSIS	4
ENGINE	5
COOLING SYSTEM	6
FUEL SYSTEM	7
ELECTRICAL SYSTEM	8
SELF DIAGNOSTIC	9

GENERAL INFORMATION

IDENTIFICATION	
VEHICLE IDENTIFICATION NUMBER	1-1
MODEL LABEL	1-1
FEATURES	1-2
GLOSSARY	1-2
DISPLAY	
MENU SYSTEM	1-9
BASIC SERVICE INFORMATION	
ELECTRICAL SYSTEM	1-24
SPECIAL TOOLS	1-25


EAS20007

IDENTIFICATION

EAS30002

VEHICLE IDENTIFICATION NUMBER


The vehicle identification number "1" is stamped into the right side of the steering head pipe.

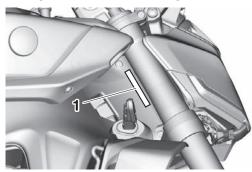

EAS30003

MODEL LABEL

The model label "1" is affixed to the battery box under the rider seat. This information will be needed to order spare parts.

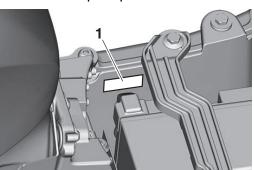

EAS20008

FEATURES

EAS31706

GLOSSARY

ABS - Anti-lock Brake System

ABS ECU - Anti-lock Brake System Electronic

Control Unit

BC - Brake Control

BCM - Body Control Module

BSR - Back Slip Regulator

EBM - Engine brake management

ECU - Engine Control Unit

GCU - Generator Control Unit

IMU - Inertial Measurement Unit

LIF - Lift Control System

PWR - Power delivery mode

QS - Quick Shifter

SCS - Slide Control System

TCS - Traction Control System

YRC - Yamaha Ride Control

EAS31707

DISPLAY

The following items can be found on the display:

Theme1



Theme2



Theme3




Theme4



- 1. Vehicle information display
- 2. Indicator icons
- 3. Clock
- 4. Transmission gear display
- 5. Speedometer
- 6. YRC mode display
- 7. Tachometer

TRACK (for MT09SPR/MT09SPRC)

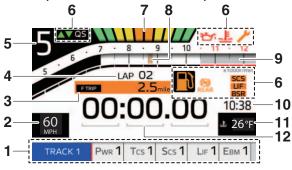

- 1. YRC mode display
- 2. Speedometer
- 3. Vehicle information display
- Lap counter
- 5. Transmission gear display
- 6. Indicator icons
- 7. Shift indicator
- 8. Revolution peak hold indicator
- 9. Tachometer
- 10. Clock
- 11. Coolant temperature display
- 12. Lap time display

Minimized display view (while menu system/ navigation are open)

When the menu system or the navigation function are open, the information on the main display is relocated as shown.

Theme4, TRACK (for MT09SPR/MT09SPRC)



- 1. Indicator icons
- 2. Vehicle information display
- 3. Transmission gear display
- 4. Clock
- 5. Speedometer
- 6. YRC mode display
- 7. Tachometer

TIP

- The brightness level of the display screen can be adjusted in the menu system.
- If the display becomes too hot, the display screen brightness levels will automatically reduce to avoid damage.
- This model uses a thin-film-transistor liquidcrystal display (TFT LCD) for good contrast and readability in various lighting conditions. However, due to the nature of this technology, it is normal for a small number of pixels to be inactive.
- In TRACK theme, the audio player, telephone and headset related functions are not controllable from the vehicle.

- The display units can be switched between kilometers-miles and Celsius-Fahrenheit.
- The navigation system display units can be changed separately using the Garmin Street-Cross app.

Display system controls

The display user interface is controlled with the joystick / "" and the home button "". Each control has various functions for different situations, see the following list for details.

Operate the joystick left-right-updown:

Main display active: highlights and adjusts items in the vehicle information display, and also the YRC mode display (Theme4, TRACK).

Navigation active: up-down zoom the map view in-out.

Turn-by-turn pop-up active: left-right adjust the displayed information.

Menu system active: highlight and adjusts various menu items.

Short press "✓":

Main display active: highlight and select items in the vehicle information display, and also the YRC mode display (Theme4, TRACK).

Navigation active: directly open the "Navigation" menu display.

Menu system active: select highlighted menu items.

Long press "✓":

Highlighted vehicle information display item flashing: reset the item.

Smartphone connected with music app: play/pause music (except TRACK).

Short press the home button ">":

Main display/navigation active: open the first pop-up layer of the menu system.

Menu system active: cancel/return to previous.

Long press the home button ">":

Main display active: switch to navigation display (except TRACK).

Navigation active: switch to main display. Menu system active: exit to the previously open main display/navigation display.

Clock

The clock uses a 12-hour time system. The clock is updated automatically from connected smartphones or can also be manually set in "Settings" > "Clock".

Speedometer

The speedometer shows the vehicle's traveling speed.

Tachometer

The tachometer shows the engine speed, as measured by the rotational velocity of the crankshaft, in revolutions per minute (r/min).

NOTICE

Do not operate the engine in the tachometer red zone.

Transmission gear display

This display shows which gear the transmission is in. This vehicle has 6 gears and a neutral position. The neutral position is indicated by the neutral indicator light "N" and by the transmission gear display reading: "N".

YRC mode display

This display indicates which YRC mode is currently selected: "SPORT", "STREET", "RAIN", "CUSTOM 1" and "CUSTOM 2" (In TRACK theme, "TRACK 1" or "TRACK 2").

Cycle through the YRC modes by using the YRC mode button "MODE" and also view/customize them in the menu system.

TIP_

The names of "CUSTOM 1" and "CUSTOM 2" can also be customized via the My Ride app.

In Theme4, TRACK (for MT09SPR/MT09SPRC):

In these themes, the YRC mode display is expanded to show the current "PWR", "TCS", "SCS", "LIF" and "EBM" settings for each YRC mode. In addition to using the YRC mode button "MODE", you can move the joystick up-down to cycle between the vehicle information display and the YRC mode display. When highlighted, short press "✓" to select the YRC mode display. Move the joystick left-right to cycle between the available items. Move the joystick up-down to cycle the highlighted YRC mode or change the setting for the highlighted item.

TIP

In TRACK theme, simply operating the joystick will adjust the YRC mode display. You do not need to first highlight and select the YRC mode display.

In Theme1-3:



Long press the YRC mode button "MODE" to open/close an expanded YRC mode pop-up at the bottom of the screen. While the pop-up is open, short press the YRC mode button "MODE" to cycle through the presets and use the joystick to adjust individual items.

TIP_

- If the selected YRC mode is customizable, "PWR", "TCS", "SCS", and "LIF" can be highlighted and adjusted using the joystick.
- "EBM" can be adjusted for any of the YRC modes.

Vehicle information display

The vehicle information display contains 3 cells which can be set to display the following:

- Odometer (ODO)
- Two tripmeters (TRIP 1 / TRIP 2)
- Fuel reserve tripmeter (TRIP F)
- Instantaneous fuel consumption (INST FUEL)
- Average fuel consumption (AVG FUEL)
- Estimated fuel range (RANGE)
- Coolant temperature (COOLANT)
- Air temperature (AIR)
- Trip timer (TRIP TIME)
- Fuel Meter

In Theme1-3:

- Move the joystick left-right to cycle between the cells. Move the joystick up-down to cycle the display item for the highlighted cell. If a display item is flashing, long press "✓" to reset it.
- It can also be set in "Vehicle Info
 "in the menu system.

In Theme4:

Move the joystick up-down to cycle between the vehicle information display and the YRC mode display. When highlighted, short press "\rightarrow" to select the vehicle information display. Move the joystick left-right to cycle between the cells. Move the joystick updown to cycle the display item for the highlighted cell. If a display item is flashing, long press "\rightarrow" to reset it.

In TRACK (for MT09SPR/MT09SPRC):

The vehicle information display contains 1 cell which can be set to display the following:

- Fastest lap time (FASTEST)
- Latest lap time (LATEST)
- Odometer (ODO)
- Average fuel consumption (AVG FUEL)
- Air temperature (AIR)

Navigate to "

Vehicle Info" in the menu system to highlight the vehicle information display. Once highlighted, operate the joystick up-down to cycle the visible item.

If a display item is flashing, long press "✓" to reset it.

TIP

- Resettable items can also be individually viewed and reset by navigating to "Settings" > "Information / Reset" in the menu system.
- While on the navigation display, navigate to "® Vehicle Info" in the menu system to highlight the two cells.

Odometer (ODO)

The odometer shows the total distance traveled by the vehicle.

TIP_

The odometer will lock at 999999 and cannot be

Tripmeters (TRIP 1 / TRIP 2)

"TRIP 1" and "TRIP 2" show the distance traveled since they were last set to zero.

"TRIP 1" and "TRIP 2" will reset to 0 and begin counting again after 9999.9 has been reached. Fuel reserve tripmeter (TRIP F)

When the fuel tank reserve level has been reached, "TRIP F" activates and begins recording distance traveled from that point. After refueling and traveling some distance, "TRIP F" will automatically deactivate and reset.

TIP_

When "TRIP F" is inactive it will show as "--.-".

Instantaneous fuel consumption (INST FUEL)

When using kilometers, the instantaneous fuel consumption display can be set to "km/L" or "L/ 100km".

When using miles, the instantaneous fuel consumption is displayed in "MPG".

Average fuel consumption (AVG FUEL)

When using kilometers, the average fuel consumption display can be set to "km/L" or "L/ 100km". When using miles, the average fuel consumption is displayed in "MPG".

Estimated fuel range (RANGE)

The estimated distance that can be traveled under the current riding conditions with the remaining fuel.

Coolant temperature (COOLANT)

The coolant temperature is displayed from –30 °C (–22 °F) to 130 °C (266 °F) in 1 °C (1 °F) increments.

TIP

- When using Celsius, the coolant temperature display will read "-30" when the vehicle coolant temperature is below -30 °C.
- When using Fahrenheit, the coolant temperature display will read "-22" when the vehicle coolant temperature is below -22 °F.
- If the vehicle coolant temperature is too high the coolant temperature display will read "Hi".

Air temperature (AIR)

The air temperature is displayed from -9 °C (15 °F) to 50 °C (122 °F) in 1 °C (1 °F) increments. The temperature displayed may vary from the actual ambient temperature.

TIP

- "---" will be displayed if the detected temperature is lower than –9 °C (15 °F).
- "---" will be displayed if the detected temperature is higher than 50 °C (122 °F).

Trip timer (TRIP TIME)

Displays the engine running time.

Fuel Meter

The fuel meter indicates the amount of fuel in the fuel tank. The display segments of the fuel meter disappear from "F" (full) towards "E" (empty) as the fuel level decreases. When the last segment starts flashing, refuel as soon as possible.

NOTICE

Do not let the vehicle run completely out of fuel. This may cause damage to the catalytic converter.

Fastest lap time (FASTEST) (for MT09SPR/MT09SPRC)

Indicates the fastest lap time recorded since the lap timer was started. If no laps have been recorded, it will read 00:00.00.

Latest lap time (LATEST) (for MT09SPR/MT09SPRC)

Indicates the latest lap time recorded. If no laps have been recorded, it will read 00:00.00.

Warning and indicator icons



Low fuel indicator """

This icon comes on when approximately 2.5 L (0.66 US gal, 0.55 Imp.gal) of fuel remains in the tank.

Coolant temperature warning "L"

This icon appears when the coolant temperature is high. Stop the vehicle and turn off the engine. Allow the engine to cool.

ECA10022

NOTICE

Do not continue to operate the engine if it is overheating.

Oil pressure warning ""

This icon appears when the engine oil pressure is low. When the vehicle is first turned on, engine oil pressure has yet to build, so this indicator will come on and stay on until the engine has been started.

TIP

If a malfunction is detected, this icon will flash repeatedly.

ECA26410

NOTICE

Do not continue to operate the engine if the oil pressure is low.

Auxiliary system warning " > "

This icon appears if a problem is detected in a system not related to the engine.

Quick shift indicator "QS"

This icon and accompanying arrow icons indicate the status of the quick shifter.

Respective arrow icon off: the quick shifter is disabled.

- "△": the system is active for upshifts but cannot currently quickshift.
- " ∇ ": the system is active for downshifts but cannot currently quickshift.
- "

 ": quick upshift available."
- "\": quick downshift available.

TIP_

The upshift and downshift functions are independent and can be activated separately in the menu system.

Network connectivity indicator "all" (except TRACK)

This icon indicates the connected smartphone's network connection status.

Icon off: No smartphone connected.

- : A smartphone is connected but has no network connectivity.
- III: A smartphone is connected and has network connectivity. The icon segments indicate the signal strength.

TIP

This icon may not operate with some smartphone models, even if the connected smartphone has network connectivity.

Smartphone battery level indicator "0" (except TRACK)

This icon indicates the connected smartphone's battery level.

Icon off: No smartphone connected.

- The center bar moves up and down to indicate the battery level.
- : Smartphone is charging.

TIP

The battery level indicated by the icon may not always be consistent with the battery level displayed on the smartphone.

Headset indicator "O" (except TRACK)

This icon comes on if a Bluetooth headset is connected to the smartphone.

TID

For some smartphones, this icon may go off during phone calls.

My Ride app indicator "[app]" (except TRACK)
This icon comes on when the My Ride app is successfully connected to the vehicle.

The icon turns yellow when the connected smartphone becomes overheated.

TIP_

Depending on the smartphone, the icon may remain yellow even after the smartphone is no longer overheating.

Navigation connection indicator "" (except TRACK)

This icon comes on when the Garmin Street-Cross app is connected.

Telephone indicator "&"/"&" (except TRACK)

This icon comes on green when there is an active call and red when there is a recent missed call. The missed call icon will disappear when the recent contact list is opened at " Applications" > "Phone" in the menu system.

Notification indicator "" (except TRACK)

This icon comes on when the connected smartphone receives an SNS, Email or other notification. After that, the icon stays on until you turn the vehicle off. Check the notifications by navigating to "Applications" > "Notification" in the menu system.

TIP

- This function works only when a smartphone is connected to the CCU via the My Ride app.
- Permission to access notifications must be granted to the My Ride app on your smartphone.

Grip warmer indicator "" (except TRACK) (if equipped)

The grip warmers can be used when the engine is running. There are 3 customizable temperature presets that can be customized between 10 different temperature levels.

The icon displays the current temperature setting:

- □: Grip warmer off
- : Medium preset

ECA17932

NOTICE

- Be sure to wear gloves when using the grip warmers
- Do not use the grip warmers in warm weather.
- If the handlebar grip or throttle grip becomes worn or damaged, stop using the grip warmers and replace the grips.

BC indicator "BC"

This icon comes on if "BC" (brake control system) is deactivated.

ECA28560

NOTICE

When turning the main switch on, avoid any movement or vibration of the vehicle as it may interfere with the initialization of the IMU. If this occurs, the brake control system will not operate and the BC indicator will come on until the IMU can initialize.

SCS indicator "SCS"

This icon comes on if "SCS" (slide control system) is deactivated.

LIF indicator "LIF"

This icon comes on if the "LIF" (lift control system) is deactivated.

BSR indicator "BSR"

This icon comes on if the "BSR" (back slip regulator) is deactivated.

REAR ABS OFF indicator "..." (for MT09SPR/MT09SPRC)

This icon comes on to indicate that "REAR ABS OFF" has been selected in the menu system and the rear wheel anti-lock braking system is disabled.

Cruise control indicator "® /® /" (except TRACK)

This icon comes on if the cruise control system is on standby, turns green when the system is active, or amber if there is an error.

Set speed indicator "0 / 0" (except TRACK)

This indicator displays the current set speed of the cruise control system. This icon comes on if the cruise control system is on standby and turns green when the system is active.

Coolant temperature display (TRACK) (for MT09SPR/MT09SPRC)

The coolant temperature is displayed from -30 °C (-22 °F) to 130 °C (266 °F) in 1 °C (1 °F) increments.

TIP_

- When using Celsius, the coolant temperature display will read "– 30" when the vehicle coolant temperature is below –30 °C.
- When using Fahrenheit, the coolant temperature display will read "–22" when the vehicle coolant temperature is below –22 °F.
- If the vehicle coolant temperature is too high the coolant temperature display will read "Hi".

Lap timer (TRACK) (for MT09SPR/MT09SPRC)

This stopwatch function is controlled using the menu system and the dimmer/pass switch. In TRACK theme, open the menu system and select "Timer Ready". The menu will exit to the main display and the ":" and "." in the lap timer will blink to indicate the lap timer is on standby. Press the dimmer/pass switch down towards "PASS" to start the timer.

Each press of the dimmer/pass switch will increase the lap count by 1 and reset the current lap timer.

To stop the lap timer, open the menu system and select "[®] Timer Stop" and the timer will return to standby.

The lap timer can be resumed by selecting "o Timer Ready" in the menu system and once again pressing the dimmer/pass switch down towards "PASS".

To reset the lap timer and delete all recorded lap times and other lap data, navigate to "TRACK Settings" > "Lap Reset" in the menu system.

TIP_

The headlight does not flash when the dimmer/pass switch is pressed in TRACK.

<u>Lap counter (TRACK) (for MT09SPR/MT09SPRC)</u>

Counts the number of times the dimmer/pass switch is pressed down towards "PASS" to a maximum of 40 before resetting.

Revolution peak hold indicator (TRACK) (for MT09SPR/MT09SPRC)

This small bar momentarily appears within the tachometer to mark the most recent peak engine speed.

Shift indicator (TRACK) (for MT09SPR/MT09SPRC)

A series of cells that sequentially come on and change color as engine speed increases. This indicator uses the same settings as the shift indicator light, which can be adjusted by navigating to "Settings" > "Shift Indicator" in the menu system.

Navigation Display

There are 3 display modes for route guidance: "Default View", "Turn-by-Turn", and "Turn List". Default View




In "Default View" mode: Operate the joystick updown to zoom in/out.

Turn List



In "Turn List" mode: Operate the joystick updown to scroll through the list of turns on the route.

Turn-by-Turn

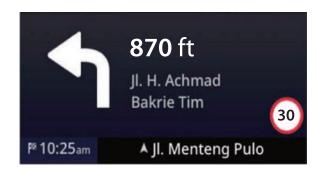


In "Turn-by-Turn" mode: Operate the joystick leftright to cycle the information at the bottom of the display between distance remaining to destination/estimated time to arrival and current location. Short press " " to open the menu system and navigate to " Applications" > "Navigation" > "Change View" to switch between the display modes.

TIP_

- If the Bluetooth connection becomes unstable, the navigation display may automatically change to the "Turn-by-Turn" mode or freeze with a loading animation. When the connection improves, the navigation display will return to the former setting.
- For some smartphones, using the phone function while navigation is in progress may display
 a connection error after returning to the navigation display. If this happens, follow the instructions on the display.
- If the connected smartphone's Al assistant function is deactivated in the smartphone's settings, and a headset is also connected, a connection error may be displayed when using the navigation home display (iOS only).

EAS33988

MENU SYSTEM

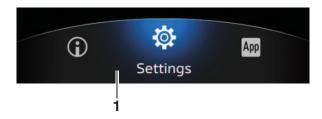

1. Pop-up menu

The menu system for this vehicle is controlled with the joystick/home button on the left handlebar.

The first layer of the menu is a pop-up at the bottom of the main display. Deeper layers of the menu system are viewed using the minimized display view.

To open the pop-up menu from the main display: Short press the home button "5".

Menu system operation:

- Operate the joystick left-right-updown to highlight and adjust menu items.
- Short press "✓" to select an item.

- Short press the home button "^¹ to cancel/return to previous.
- Long press the home button "→□" to close the menu system.

TIP

When arrows appear "^"/" " a menu item, operating the joystick in the direction of the arrows will adjust the selected function.

The pop-up menu is divided into the following main functions:

"Theme"	Select the visual theme of the display.
"Applications"	Access the smartphone related functions.
"Grip Warmer" (if equipped)	Control the grip warmers.
"Vehicle Info"	Reset/cycle the vehicle information display items.
** "Settings"	Adjust settings related to the vehicle's operation.
"Phone" (if call active)	Open the telephone function for an active call.
fi "Music"	Access simple pop-up audio player.
"Navigation"	Open the navigation display.
"Meter Display"	Open the main display.
ீTurn-by-Turn"	Activate Turn-by-Turn route guidance.
"Turn-by-Turn OFF"	De-activate Turn-by-Turn route guidance.
Timer Stop (for MT09SPR/ MT09SPRC)	Stops lap timer.
*Timer Ready" (for MT09SPR/ MT09SPRC)	Resets lap timer to stand- by.
"TRACK Set- tings" (for MT09SPR/ MT09SPRC)	Shift indicator and lap timer settings.

TIP___

- The items contained in the menu vary depending on the currently selected theme and also whether the main display or navigation display is active.
- If the vehicle is in motion, "Theme" and "Settings" will be grayed out.
- If a smartphone is not connected to the vehicle, "☐ Music" and "☐ Turn-by Turn/Turn-by-Turn OFF" will be grayed out.

Theme

The visual theme of the main display can be changed between four options.

Applications > Navigation



This menu contains the following commands for the navigation system:

- · "Change View"
- "Stop Navigation"
- "Skip Next Stop"
- "Go Home"
- "Go to Work"
- "Favorites"
- "Nearby Gas Stations"

TIP

- Except for the commands listed above, operate the navigation system using the Garmin StreetCross app on your smartphone.
- "Change View", "Stop Navigation" and "Skip Next Stop" are not available unless route guidance is active.



When a command is used to select a destination, the navigation display will open and show the new/updated route.



If route guidance is already active when a command is used to select a destination, the following options will be available:

"Start a New Route": Cancels previous route and sets route to new destination.

"Add as Next Stop": Adds new destination as the next stop in the current route.

"Add as Last Stop": Adds new destination as the last stop in the current route.



If a route requires a toll, you will be prompted to search for another route without tolls. Select "Yes" to find a route without tolls. Select "No" to accept the current route.

TIP

After 10 seconds, the route (with tolls) will be selected automatically.

"Change View"



This menu changes the navigation system display mode (Default View/Turn List/Turn-by-

Turn). After selection, the navigation display will open in the selected display mode.

"Stop Navigation"

Cancels the current route guidance and opens the navigation home display.

"Skip Next Stop"

Skips the next stop in your planned route and opens the navigation home display.


"Go Home"

Sets route guidance for home location (home location must already be set in the Garmin Street-Cross app).

"Go to Work"

Sets route guidance for work location (work location must already be set in the Garmin Street-Cross app).

"Favorites"

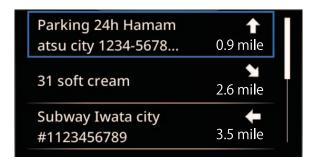

Shows a list of saved locations and their distance from current location (must have saved locations in the Garmin StreetCross).

TIP

If route guidance is in progress, arrows appear showing the direction to the saved locations. The current direction of travel is indicated by the upwards arrow.

"Nearby Gas Stations"



Shows a list of nearby gas stations and their distance from current location.

TIP__

If route guidance is in progress, arrows appear showing direction to the gas stations. The current direction of travel is indicated by the upwards arrow.

Applications > Music



This opens an audio player which interfaces with your smartphone's audio player app.

Operate the joystick up-down to adjust the volume.

Operate the joystick left-right to skip to the next/previous track.

Short press "✓" to play/pause the track.

TIP

- All audio track information is imported from the music player application on your smartphone.
- Depending on the smartphone and music player application, the audio player may start playing automatically, the track information may not display, or the next/previous track and volume adjustment may not function.

Applications > Phone



This is a list of recent telephone calls (since connection to CCU) from the connected smart-phone. When this list has been viewed, the missed call indicator "\end{array}" will disappear.


: Inbound missed call (red arrow)

⟨
≤: Inbound call (green arrow)

TIP_

- Repeated calls for the same contact are indicated by the number next to the contact in brackets.
- The maximum number of stored items is 30; when the limit is reached, older items will be deleted.

Applications > Weather

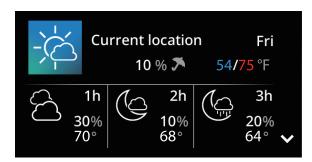


This menu displays weather information at your current location. Operate the joystick up-down to change the timeframe of the weather information (hourly/daily).


TIP

The weather information in this menu may be different than on the navigation home display.

Applications > Notification

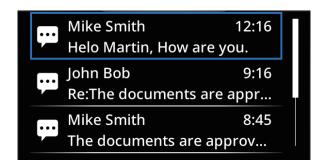

This is a list of notifications (since connection to CCU) from the connected smartphone. Select an item to read the notification message. The notification indicator "=" will not turn off until the vehicle power is turned off.

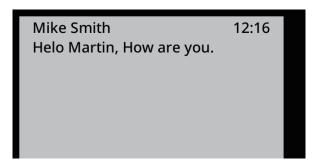


TIP

- For some smartphones and/or applications, notifications may not function.
- The maximum number of stored items is 30.
 When the limit is reached, older items will be deleted.
- If a message is too long then not all of it will be displayed.
- Messages cannot be opened and read while the vehicle is in motion.
- Notification timestamps may be slightly different than when displayed on your smartphone.

Applications > Information Transfer

This menu allows you to transfer and display images on the display using the My Ride app.

Applications > Connectivity Settings > Connection > Bluetooth

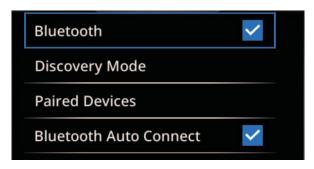


"Bluetooth"

Turns the CCU's Bluetooth ON/OFF. The checkmark indicates ON.

"Discovery Mode"

Puts the CCU in Bluetooth discovery mode when pairing a smartphone.

"Paired Devices"

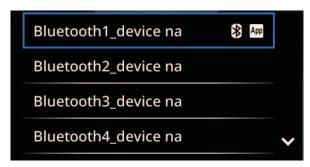

Paired smartphones are listed here. The My Ride app symbol "" next to a device name indicates that the app is currently connected to the CCU. The Bluetooth symbol "8" next to a device name indicates that Garmin Street- Cross is currently connected to the CCU.

TIP

There is a maximum of 8 paired devices.

Select a device name for more options:



"Delete Pairing": Deletes the selected paired device from the CCU memory.

"Connect": Connect to the selected paired device.

"Disconnect": Disconnect from the selected paired device.

TIP

If "Bluetooth Auto Connect" is on, the CCU may immediately reconnect to the smartphone after being disconnected.


"Bluetooth Auto Connect"

Turns the Bluetooth automatic connection ON/ OFF. The checkmark indicates ON. When the auto connect is ON, the CCU will automatically connect to the last connected device. If it is not available, the CCU will attempt to connect to another device in the paired device list.

TIP_

If "Bluetooth Auto Connect" is OFF, previously paired devices can be connected manually via the "Paired Devices" list.

Applications > Connectivity Settings > System Information

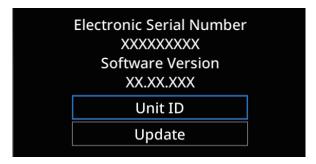

This menu displays the current system software version.

"Unit ID"



This menu contains a QR code with the CCU's unit identification number. Short press "✓" to return to the previous menu.

TIP_

The CCU's unit ID is only required for dealer service operations.

Applications > Connectivity Settings > Legal Information



Third-party license agreements can be viewed here.

Grip Warmer (if equipped)



With this item highlighted, operate the joystick up-down to cycle between grip warmer OFF and 3 presets which can be customized in "Settings" > "Grip Warmer Settings".

With this item highlighted, long press "✔" to shortcut to "♣ Settings" > "Grip Warmer Settings" where the grip warmer presets can be further customized.

TIP

Theme4: This function is not accessible via the menu system and is instead located within the vehicle information display. The function is the same.


Vehicle Info

This allows you to adjust the vehicle information display items.

TIP_

This function is not available in Theme4.

Settings

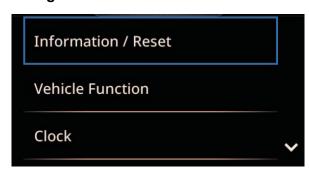

The "Settings" menu contains the following:

Module	Description
"Information /Reset"	Reset vehicle information.
"Vehicle Function"	Adjust vehicle electronic rider aids.
"Clock"	Adjust time/set automatic update.
"Display"	Change display brightness and background settings.
"Unit"	Change the display units.
"Grip Warmer Set- tings" (if equipped)	Customize the grip warmer presets.
"Shift Indicator"	Change the shift indicator settings.
"Connectivity Set- tings"	Smartphone connectivity settings.

Settings > Information / Reset



This menu allows the viewing and reset of tripmeters, maintenance tripmeters, vehicle information items, and the mass reset of other settings to factory defaults. "Trip Mileage Reset"

TRIP 1	15.5 mile
TRIP 2	1471.7 mile
TRIP F	3.5 mile

This menu allows reset of the tripmeters on the vehicle information display. Operate the joystick to highlight an item. Short press "✓" to reset the item. Confirm by selecting "OK".

TIP__

"TRIP F" can only be selected when the fuel is low. Otherwise the item is grayed out.

"Maintenance Reset"



This menu allows you to record distance traveled between engine oil changes "OIL" and two other maintenance items of your choice "FREE-1" and "FREE-2". After maintenance to one of the items has been completed, operate the joystick to highlight the item. Short press "\(\sigma \)" to reset the item. Confirm by selecting "OK". "Vehicle Info"



This menu allows reset of the vehicle information display items. Operate the joystick to highlight an item. Short press "✓" to reset the item. Confirm by selecting "OK".
"All Reset"





Use this menu to mass reset the multi-function meter to its default settings. This includes YRC settings, display settings, grip warmer presets, traction control, units, Bluetooth connection settings, and vehicle information display items. Confirm by selecting "OK".

TIP__

- After a reset, the display will restart and may take several minutes to reboot.
- If "All Reset" is executed, the corresponding pairing record must be deleted from the smartphone in order to pair again.
- Before selling or changing ownership of the vehicle, reset the multi-function meter to ensure all personal data from your smartphone (i.e., call history and contact information) is deleted.
- After the multi-function meter is reset, Bluetooth pairing records and the My Ride app pairing records must be deleted from your smartphone. If this is not completed, the CCU will not be able to pair with the smartphone again.
- The multi-function meter cannot be reset while the vehicle is in motion.

Settings > Vehicle Function > YRC Settings > YRC Modes

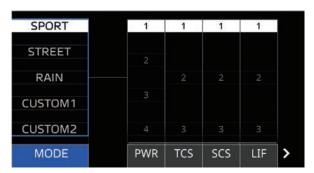

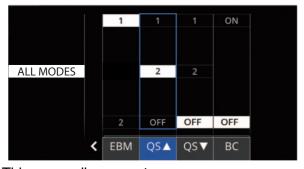

This menu allows you to:

- View the five YRC mode presets and the two presets: "SPORT", "STREET", "RAIN", "CUS-TOM 1" and "CUSTOM 2".
- Customize the "PWR", "TCS", "SCS" and "LIF" setting levels for the "CUSTOM 1" and "CUS-TOM 2" YRC mode presets.
- Customize the "QS△", "QS▽" and "BC" setting levels for all YRC mode presets.

Operate the joystick up-down to select the YRC mode preset that you want to adjust.

Operate the joystick left-right to select the YRC item that you want to adjust. Adjust the selected YRC item by operating the joystick up-down.


Short press "✓" to switch to a visual representation of the highlighted YRC item. Short press the home button ">□" to exit the visual representation.

Short press the home button "5" to save and go back to the previous menu.

TIP

- The names and setting levels for "CUSTOM 1", "CUSTOM 2", "TRACK 1" and "TRACK 2" can also be changed via the My Ride app.
- Adjustments to "QS" or "BC" settings affect all YRC mode presets.

"PWR" (Power delivery mode)

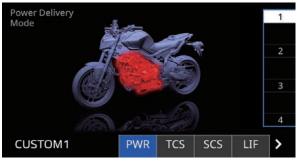

"PWR" can be set to 1, 2, 3 and 4.

Level 1 - Sporty engine response.

Level 2 - Moderate engine response.

Level 3 - Mild engine response.

Level 4 - Rainy days or whenever less engine power is desirable.

TIP

35kw restricted vehicles are limited to two PWR levels:

Level 1: Moderate engine response.

Level 2: Rainy days or whenever less engine power is desirable.

"TCS" (Traction control system)



This model uses a variable traction control system. For each setting level, the farther the vehicle is leaned over, the more traction control (system intervention) is applied. There are 3 setting levels available. Level 1 applies the least system intervention, while level 3 applies the most overall traction control to reduce rear wheel slippage.

Level 1 - Suitable for more sporty riding.


Level 2 - Suitable for street riding.

Level 3 - Suitable for riding on wet or slippery surfaces.

TIP

The traction control system can only be turned off completely via "Settings" > "Vehicle Function" > "Stability Control ON/OFF".

"SCS" (Slide control system)

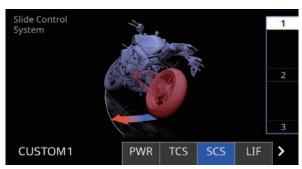

"SCS" can be set to 1, 2, and 3. Setting level 1 provides the least amount of system intervention, and setting level 3 provides the greatest amount of system intervention to reduce lateral wheel slippage.

Level 1 - Suitable for racing more sporty riding.

Level 2 - Suitable for street riding.

Level 3 - Suitable for riding on wet or slippery surfaces.

TIP

The slide control system can only be turned off completely via "Settings" > "Vehicle Function" > "Stability Control ON/OFF".

"LIF" (Lift control system)



"LIF" can be set to 1, 2, and 3. Setting level 1 provides the least amount of system intervention and setting 3 most strongly reduces the amount of wheel lift.

Level 1 - Least lift control. Suitable for more sporty riding.

Level 2 - More lift control. Suitable for sporty riding.

Level 3 - Most lift control. Suitable for street riding.

TIP

The lift control system can only be turned off completely via "Settings" > "Vehicle Function" > "Stability Control ON/OFF".

"EBM" (Engine brake management) (for MT09SPR/MT09SPRC)





"EBM" can be set to 1 or 2. Setting level 1 provides the least amount of system intervention and setting 2 most strongly reduces engine braking.

Level 1 - Least engine brake management suitable for more sporty riding.

Level 2 - More engine brake management. Suitable for street riding.

"QS△"/ "QS♥" (Quick shifter)

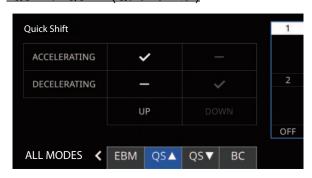

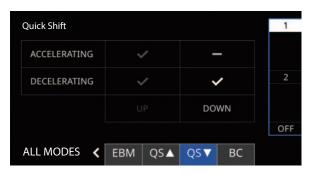

The quick shifter is divided into "QS \triangle " (upshift) and "QS ∇ " (downshift) sections. "QS \triangle " and "QS ∇ " are not linked and can be set independently.

Setting 1: Can quick upshift only while accelerating. Can quick downshift only while decelerating. Setting 2: Can quick upshift while accelerating or decelerating. Can quick downshift while decelerating or accelerating.

"OFF" turns the respective upshift or downshift function off, and the clutch lever must then be used when shifting in that direction.

TIP

- Setting 1 has more limited conditions for quickshifts and may be preferable for preventing unintentional gearshifts if the shift pedal is touched accidentally when track riding.
- Setting 2 allows quickshifts under a wider array of conditions to better suit normal riding.
- "QS△"/"QS▽" ON/OFF status is reflected by the quick shifter indicator.

"BC" (Brake control system)



OFF: Only the standard ABS (anti-lock brake system), which adjusts brake pressure based on vehicle speed and wheel speed data. The standard ABS is designed to engage and maximize braking when the vehicle is upright.

ON: ABS (Anti-lock brake system) and cornering assist braking are both active. In addition to the standard ABS, it suppresses the increase in brake pressure when unavoidable abrupt braking occurs during cornering, making the vehicle's recovery to upright position more gradual. Also, additional data from the IMU regulates applied brake power depending on lean angle in order to increase the feeling of stability and to suppress wheel lock.

TIP


For skilled riders or when track riding, a variety of conditions may cause BC to brake faster than expected for a desired cornering speed or intended cornering line.

Settings > Vehicle Function > YRC Settings > TRACK YRC Modes



This menu contains 4 additional custom YRC mode presets which are used for TRACK theme.

Settings > Vehicle Function > YRC Settings > Import / Export to App

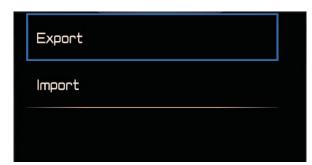

This menu allows you to import/export custom YRC mode settings using the My Ride app.

Settings > Vehicle Function > Stability Control ON/OFF



This menu allows you to activate/deactivate the stability control systems: "Traction Control" (TCS), "Slide Control" (SCS), "Lift Control" (LIF), and "Back Slip Regulator" (BSR).

If a system is turned off, the corresponding indicator will come on.

Turning on/off "TCS" will turn "SCS", "LIF" and "BSR" on/off together. The stability control system indicator light "SC" will come on to indicate "TCS" OFF status.

TIP

- "BSR" turns off automatically and "Back Slip Regulator" is grayed out when in TRACK theme.
- "TCS" turns on automatically when the vehicle power is turned on.

Settings > Vehicle Function > ABS



This module allows you to turn the rear wheel ABS (anti-lock braking system) on/off. The currently selected ABS mode is indicated by the REAR ABS OFF indicator "...".


TIP_

- The rear wheel ABS will remain disabled until:
- The main switch is turned off.
- The Stop/Run/Start switch "⋈/೧/⑤" is turned to off "⋈" while the engine is running.
- The ABS is reactivated via the menu system while the vehicle is not moving.



Turn the ABS off only when riding on a closed circuit course.

Settings > Clock

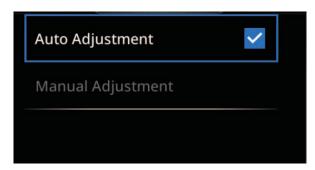


The clock can be set to auto-adjust in sync with a smartphone. "Auto Adjustment" ON is indicated by the checkmark and requires a connection with the My Ride app.

"Manual Adjustment" allows the clock to be calibrated manually.



To manually adjust the clock, operate the joystick left-right to highlight an item and up-down to adjust the highlighted item. Short press "✓" to finalize the clock setting and then select "OK" to confirm.

Settings > Display > Brightness

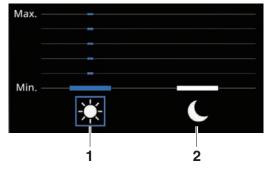

- 1. Day preset
- 2. Night preset


The multi-function meter is equipped with a sensor to detect ambient lighting conditions and automatically switch the display between day/night presets. The preset brightness levels can be customized here.

Select a preset by operating the joystick left-right and adjust its brightness level from 1–6 by operating the joystick up-down. Short press "✓" to confirm the setting and return to the previous menu.

TIP

Only adjust brightness presets in ambient light conditions which are appropriate for that preset.

Settings > Display > Background

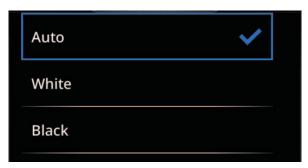

The multi-function meter is equipped with a sensor to detect ambient lighting conditions and adjust the display between day/night presets. Select "White" (day) or "Black" (night) to keep


the display in that preset.

Select "Auto" to enable automatic switching depending on the ambient light levels.

TIP.

Only "White" (day) is available for TRACK theme.

Settings > Unit

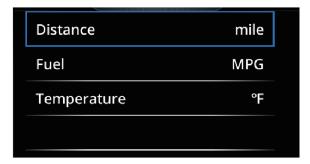


The display units can be customized as follows:

- "Distance": "km" or "mile"
- "Fuel": "km/L", "L/100km" or "MPG"
- "Temperature": "°C" or "°F"

When "mile" is selected for the distance unit, the fuel consumption unit is automatically changed to "MPG". At this time, the "Fuel" is grayed out and cannot be selected.

Settings > Grip Warmer Settings (if equipped)

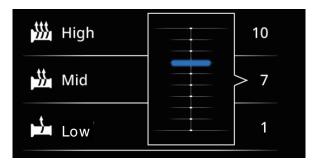

The three grip warmer presets can be customized here. Short press "✓" to select a preset and then adjust its heat level from 1–10 by operating the joystick up-down. Short press "✓" to confirm the setting and return to the previous menu.

Settings > Shift Indicator



This menu contains settings for the shift indicator light.

"Indicator Type"




Select "ON" to have the indicator come on at the final r/min. Select "FLASH" to have the indicator start flashing at the initial r/min. When the final r/min is reached, the indicator light will start flashing at a higher frequency. Select "OFF" to turn the indicator off. Short press "\(\sigma\)" to select the highlighted option and return to the previous menu.

TIP_

The shift indicator light will come on or flash as a demonstration of each setting in this menu as it is selected.

"r/min Range"

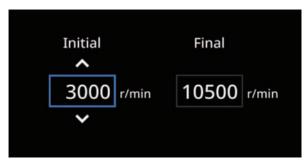


Select the r/min at which the shift indicator light will come on. The operational range is 3000–10500 r/min. It can be adjusted by 250 r/min increments. Short press "✓" to confirm the setting and return to the previous menu.

TIP

- The "Initial" r/min cannot be higher than the "Final" r/min.
- The shift indicator light does not come one when in neutral or 6th gear.

"Brightness"

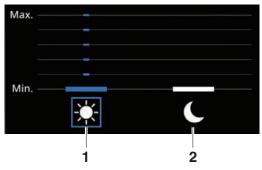

- 1. Day preset
- 2. Night preset

Select the day/night brightness levels of the shift indicator light from 1–6 by operating the joystick up-down. Short press "✓" to confirm the setting and return to the previous menu.

TIP_

Only adjust brightness presets in ambient light conditions which are appropriate for that preset.

Phone (if call active)



Selecting this menu opens an active call display. The contact name and call time are displayed. Operate the joystick up-down to adjust the call volume.

Short press "✓" to end the call.

TIP

Call volume control and/or ending call via the vehicle is not available for all types of smart-phones. If this function is unavailable, the volume adjustment and end call graphics will be grayed out. If this occurs, the call can be controlled directly on your smartphone.

Music



While this item is shown in the menu, operate the joystick up-down to adjust the volume. Short press "✓" to open additional audio controls.



This opens an audio player which interfaces with your smartphone's audio player app.

Operate the joystick up-down to adjust the vol-

Operate the joystick left-right to skip to the next/previous track.

Short press "✓" to play/pause the track.

TIF

- All audio track information is imported from the music player application on your smartphone.
- Depending on the smartphone and music player application, the audio player may start playing automatically, or the next/previous track and volume adjustment may not function.
- Theme4: This function is not accessible via the menu system and is instead located within the vehicle information display. The function is the same.

Navigation



This opens the navigation display. This menu option is only available from the main display.

Meter Display



This opens the main display. This menu option is only available from the navigation display.

Turn-by-Turn / Turn-by-Turn OFF



This activates/deactivates a turn-by-turn route guidance at the bottom of the main display.



This menu option is only available from the main display.

Timer Ready (for MT09SPR/MT09SPRC)



Sets the lap timer to standby. The menu will exit to the main display and the ":" and "." in the lap timer will blink to indicate the lap timer is on standby. This menu option is only available in TRACK.


Timer Stop (for MT09SPR/MT09SPRC)



Pauses the lap timer and returns to the main display. The lap timer can be resumed by once again selecting "Timer Ready".

This menu option is only available in TRACK.

TRACK Settings > Shift Indicator Mode (for MT09SPR/MT09SPRC)

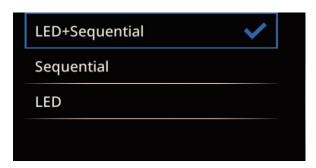

This module enables you to choose between the LED shift indicator light and the shift indicator located on the TFT display in the TRACK theme. "LED+Sequential": Both shift indicators are active.

"Sequential": Only TFT indicator is active. "LED": Only LED shift indicator light is active.

TRACK Settings > Peak Rev Indicator (for MT09SPR/MT09SPRC)

This item activates / deactivates the peak rev hold indicator.

TRACK Settings > Lap Time (for MT09SPR/MT09SPRC)

This module contains recorded lap times the date of the first recorded lap and additional lap data.



Operate the joystick in the direction of the arrows to access additional lap data and delete lap data individually.



TRACK Settings > Lap Reset (for MT09SPR/MT09SPRC)

This item deletes all recorded lap times and additional recorded lap data and resets the lap timer.

EAS20010

BASIC SERVICE INFORMATION

EAS30014


ELECTRICAL SYSTEM


Electrical parts handling

ECA2261

NOTICE

- Do not perform angle adjustment of the IMU and battery box by pinching the washer and related parts.
- When installing the IMU, apply a thin coat of silicone grease onto the washer where contacting the IMU grommet.
- When installing the IMU, use only a genuine bolt and washer, and tighten the bolt to the specified torque.
- Pay attention not to expose the IMU to strong shocks, such as striking or dropping it.
- Do not place any foreign objects in and around the battery box.
- Do not obstruct breather opening "a" of the IMIL
- Do not clean the breather opening and do not blow it with compressed air.
- When replacing the collar or grommet, replace all four collars and grommets.

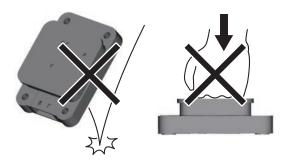

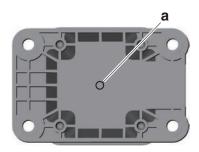

EAS20012

SPECIAL TOOLS

The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools as this will help prevent damage caused by the use of inappropriate tools or improvised techniques. Special tools, part numbers or both may differ depending on the country. When placing an order, refer to the list provided below to avoid any mistakes.

TIP

- For U.S.A. and Canada, use part number starting with "YM-", "YU-", or "ACC-".
- For others, use part number starting with "90890-".

Tool name/Tool No.	Illustration	Reference pages
Yamaha diagnostic tool USB (US) 90890-03275	YDT C	3-4, 4-67, 4-68, 7-12, 9-3, 9-39, 9-40
Yamaha diagnostic tool (A/I) 90890-03273	HIMMIN OF THE PROPERTY OF THE	3-4, 4-67, 4-68, 7-12, 9-3, 9-39, 9-40
Thickness gauge 90890-03268 Feeler gauge set YU-26900-9		3-6, 4-22, 4-30, 5-27, 5-50
Valve lapper (ø14) 90890-04101 Valve lapper (ø14) YM-A8998	90890-04101	3-7
	YM-A8998	
Vacuum gauge 90890-03094 Vacuummate YU-44456	90890-03094	3-9
	YU-44456	

SPECIAL TOOLS

Tool name/Tool No.	Illustration	Reference pages
Carburetor angle driver 2 90890-03173		3-10
Steering nut wrench 90890-01403 Exhaust flange nut wrench YU-A9472	R20	3-20, 4-90
Oil filter wrench 90890-01426 Oil filter wrench YU-38411	64.2	3-29
Oil pressure gauge joint 18 mm 90890-04176 YU-04176	Ø18	3-30
Oil pressure gauge set 90890-03120	The state of the s	3-30
Cylinder cup installer 90890-01996	and the second of the second o	4-47
HU holder 90890-01912	Rolling Rolling	4-64, 4-65
Fork spring compressor 90890-01441 Fork spring compressor YM-01441	955	4-80, 4-85
Rod holder 90890-01434 Damper rod holder double ended YM-01434	11.	4-80, 4-85

SPECIAL TOOLS

Tool name/Tool No.	Illustration	Reference
	illustration	pages
Damper rod holder (ø27) 90890-01582 Damper rod holder YM-01582		4-81, 4-82
Fork seal driver 90890-01442 Adjustable fork seal driver (36–46 mm) YM-01442		4-83, 4-83, 4-84
Rod puller 90890-01437 Universal damping rod bleeding tool set YM-A8703	90890-01437 YM-A8703	4-84, 4-85
Rod puller attachment (M10 long) 90890-01578 Universal damping rod bleeding tool set YM-A8703	90890-01578 YM-A8703	4-84, 4-85
Ring nut wrench 90890-01268 Spanner wrench YU-01268	R22	4-90
Drive chain cut & rivet tool 90890-01550 Drive chain cut & rivet tool YM-01550		4-103, 4-105

Tool name/Tool No.	Illustration	Reference pages
Compression gauge 90890-03081 Engine compression tester YU-33223	90890-03081 YU-33223	5-7
Compression gauge extension 122mm 90890-04136 Compression gauge extension 122mm YM-04136	122	5-7
Pivot shaft wrench 90890-01518 Frame spanner socket YM-01518	<u>\$</u>	5-14, 5-14, 5-15
Pivot shaft wrench adapter 90890-01476		5-14, 5-14, 5-15
Camshaft wrench 90890-04162 Camshaft wrench YM-04162	16	5-19, 5-22
Valve spring compressor 90890-04200 Valve spring compressor YM-04019	031,00	5-31, 5-35
Valve spring compressor attachment (ø23) 90890-04179 Valve spring compressor adapter (ø23) YM-04179	ø23 0	5-31, 5-35
Valve guide remover (ø4.5) 90890-04116 Valve guide remover (4.5 mm) YM-04116		5-32

SPECIAL TOOLS

Tool name/Tool No.	Illustration	Reference pages
Valve guide installer (ø4.5) 90890-04117 Valve guide installer (4.5 mm) YM-04117	Ø4.5 Ø10	5-32
Valve guide reamer (ø4.5) 90890-04118 Valve guide reamer (4.5 mm) YM-04118		5-32
Sheave holder 90890-01903 Primary clutch holder YS-01880-A		5-38, 5-38, 5-39, 5-39
Flywheel puller 90890-01362 Heavy duty puller YU-33270-B		5-38
Yamaha bond No. 1215 90890-85505 Three bond No. 1215®		5-40, 5-65
Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927		5-43, 8-70, 8-73, 8-73, 8-75, 8-77, 8-78, 8-78, 8-79, 8-80, 8-80, 8-80, 8-82, 8-83, 8-83, 8-83, 8-84, 8-84, 8-85, 8-85
Clutch holder 90890-04199 Universal clutch holder YM-91042	M8×P1.25	5-49, 5-52
	YM-91042	


		Reference
Tool name/Tool No.	Illustration	pages
Piston pin puller set 90890-01304 Piston pin puller YU-01304	90890-01304 M6×P1.0	5-70
	YU-01304	
Connecting rod big end bearing installer 90890-04193 Connecting rod big end bearing installer YM-04193	Ø7 Ø8.1 Ø9.1	5-72, 5-75
Piston installing tool 90890-04161 Piston installing tool YM-04161		5-77
Radiator cap tester 90890-01325 Mityvac cooling system tester kit YU-24460-A	90890-01325	6-5, 6-5
	YU-24460-A	
Radiator cap tester adapter 90890-01352 Pressure tester adapter YU-33984	90890-01352	6-5, 6-5
	YU-33984	
Mechanical seal installer 90890-04078 Water pump seal installer YM-33221-A	ø35 ø27.5	6-14

Tool name/Tool No.	Illustration	Reference pages
Middle driven shaft bearing driver 90890-04058 Middle drive bearing installer 40 & 50 mm YM-04058	ø28 ø40	6-14
Pressure gauge 90890-03153 Pressure gauge YU-03153	The state of the s	7-11, 7-12
Fuel injector pressure adapter 90890-03210 Fuel injector pressure adapter YU-03210		7-11
Fuel pressure adapter 90890-03176 Fuel pressure adapter YM-03176		7-12
Ignition checker 90890-06754 Oppama pet–4000 spark checker YM-34487		8-78

TIP_

Yamaha diagnostic tool (A/I) 90890-03273


This special tool includes the YDT sub harness (6P) (90890-03266).

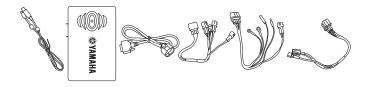

TIP_

YDT sub harness (6P) 90890-03266

If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.

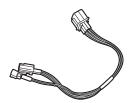

SPECIAL TOOLS

SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
ENGINE SPECIFICATIONS	2-2
CHASSIS SPECIFICATIONS	2-6
ELECTRICAL SPECIFICATIONS	2-10
TIGHTENING TORQUES	2-12
CABLE ROUTING OPTION COUPLER LOCATION CHART	

GENERAL SPECIFICATIONS

BME3 (MT09R)
BME4 (MT09RC)
BMM4 (MT09SPR)
BMM5 (MT09SPRC)
2090 mm (82.3 in)
820 mm (32.3 in)
1145 mm (45.1 in)
1430 mm (56.3 in)
140 mm (5.51 in)
3.0 m (9.84 ft)
193 kg (425 lb) (MT09R, MT09RC)
194 kg (428 lb) (MT09SPR, MT09SPRC)
167 kg (368 lb) (MT09SPR, MT09SPRC)
168 kg (372 lb) (MT09R, MT09RC)
2 person

FAS20014

Enante of Eon ToATIONS	
Engine	
Combustion cycle	4-stroke
Cooling system	Liquid cooled
Valve train	DOHC
Displacement	890 cm ³
Cylinder arrangement	Inline
Number of cylinders	3-cylinder
Bore × stroke	$78.0 \times 62.1 \text{ mm} (3.07 \times 2.44 \text{ in})$
Compression ratio	11.5 : 1
Compression pressure	1392–1792 kPa/425 r/min (13.9–17.9 kgf/cm²/ 425 r/min, 198.0–254.9 psi/425 r/min)
Compression pressure (#2 cylinder)	1383–1780 kPa/425 r/min (13.8–17.8 kgf/cm²/ 425 r/min, 196.7–253.3 psi/425 r/min)
Fuel	
Recommended fuel	Unleaded gasoline (E10 acceptable)
Octane number (RON)	95
Fuel tank capacity	14 L (3.7 US gal, 3.1 Imp.gal)
Fuel reserve amount	2.5 L (0.66 US gal, 0.55 Imp.gal)
Engine oil	
Recommended brand	YAMALUBE
SAE viscosity grades	10W-40, 10W-50, 15W-40, 20W-40 or 20W-50
Recommended engine oil grade	API service SG type or higher, JASO standard MA
Lubrication system	Wet sump
Engine oil quantity	
Oil change	2.80 L (2.96 US qt, 2.46 Imp.qt)
With oil filter removal	3.20 L (3.38 US qt, 2.82 Imp.qt)
Quantity (disassembled)	3.50 L (3.70 US qt, 3.08 Imp.qt)
Oil filter	
Oil filter type	Cartridge
Oil pump	
Oil pressure	200.0 kPa/5000 r/min (2.00 kgf/cm²/5000 r/min, 29.0 psi/5000 r/min)
Cooling system	
Coolant quantity	
Radiator (including all routes)	1.72 L (1.82 US qt, 1.51 Imp.qt)
Coolant reservoir (up to the maximum level	
mark)	0.28 L (0.30 US qt, 0.25 Imp.qt)
Radiator cap valve opening pressure	107.9–137.3 kPa (1.08–1.37 kgf/cm², 15.6–19.9 psi)
Cooling system leak test pressure	137.3 kPa (1.37 kgf/cm², 19.9 psi)

Thermostat	
Valve opening temperature	80.0-84.0 °C (176.00-183.20 °F)
Valve full open temperature	95.0 °C (203.00 °F)
Spark plug(s)	
Manufacturer/model	NGK/LMAR9A-9
Spark plug gap	0.8–0.9 mm (0.031–0.035 in)
Cylinder head	
Warpage limit	0.10 mm (0.0039 in)
Camshaft	
Camshaft cap inside diameter	24.500–24.521 mm (0.9646–0.9654 in)
Camshaft journal diameter	24.459–24.472 mm (0.9630–0.9635 in)
Camshaft-journal-to-camshaft-cap clearance	
limit	0.080 mm (0.0032 in)
Camshaft lobe dimensions	
Lobe height limit (Intake)	35.590 mm (1.4012 in)
Lobe height limit (Exhaust)	35.620 mm (1.4024 in)
Camshaft runout limit	0.030 mm (0.0012 in)
Valve, valve seat, valve guide	
Valve clearance (cold)	
Intake	0.11–0.20 mm (0.0043–0.0079 in)
Exhaust	0.28-0.32 mm (0.0110-0.0126 in)
Valve dimensions	
Valve seat contact width limit (intake)	1.6 mm (0.06 in)
Valve seat contact width limit (exhaust)	1.8 mm (0.07 in)
Valve stem diameter limit (intake)	4.445 mm (0.1750 in)
Valve stem diameter limit (exhaust)	4.430 mm (0.1744 in)
Valve guide inside diameter (intake)	4.500-4.512 mm (0.1772-0.1776 in)
Valve guide inside diameter (exhaust)	4.500-4.512 mm (0.1772-0.1776 in)
Valve-stem-to-valve-guide clearance limit	0.000 (0.0000 in)
(intake)	0.080 mm (0.0032 in)
Valve-stem-to-valve-guide clearance limit	0.100 mm (0.0020 in)
(exhaust) Valve stem runout	0.100 mm (0.0039 in) 0.020 mm (0.0008 in)
Valve spring	
Free length limit (intake)	39.18 mm (1.54 in)
Free length limit (exhaust)	38.58 mm (1.52 in)
- 100 longer mine (oxhaust)	30.30 mm (1.02 m)
Cylinder	70.000 70.010 (6.0000 0.0010)
Bore	78.000–78.010 mm (3.0709–3.0713 in)
Wear limit	78.060 mm (3.0732 in)
Piston	
Diameter	77.975–77.990 mm (3.0699–3.0705 in)
Measuring point (from piston skirt bottom)	9.0 mm (0.35 in)
Piston-to-cylinder clearance	0.010–0.035 mm (0.0004–0.0014 in)

	47.040 (0.07.10.1.)
Piston pin bore inside diameter limit	17.043 mm (0.6710 in)
Piston pin outside diameter limit	16.970 mm (0.6681 in)
Piston ring	
Top ring	
End gap limit	0.50 mm (0.0197 in)
Side clearance limit	0.115 mm (0.0045 in)
2nd ring	
End gap limit	1.15 mm (0.0453 in)
Side clearance limit	0.115 mm (0.0045 in)
Connecting rod	
Oil clearance	0.027-0.051 mm (0.0011-0.0020 in)
Bearing color code	
Code 1	Blue
Code 2	Black
Code 3	Brown
Code 4	Yellow green
Crankshaft	
Runout limit	0.030 mm (0.0012 in)
Journal oil clearance	0.013-0.037 mm (0.0005-0.0015 in)
Bearing color code	
Code 0	White
Code 1	Blue
Code 2	Black
Code 3	Brown
Code 4	Yellow green
Balancer	
Balancer shaft runout limit	0.030 mm (0.0012 in)
Bearing color code	
Code 1	Blue
Code 2	Black
Code 3	Brown
Code 4	Green
Code 5	Yellow
Balancer shaft journal to balancer shaft	
bearing clearance	0.023–0.047 mm (0.0009–0.0019 in)
Clutch	
Clutch type	Wet, multiple-disc
Clutch lever free play	5.0-10.0 mm (0.20-0.39 in)
Assembly width	42.7-43.5 mm (1.68-1.71 in)
Friction plate 1 thickness	2.92-3.08 mm (0.115-0.121 in)
Plate quantity	6 pcs
Wear limit	2.82 mm (0.111 in)
Friction plate 2 thickness	2.92-3.08 mm (0.115-0.121 in)
Plate quantity	3 pcs
Wear limit	2.82 mm (0.111 in)

Clutch plate 1 thickness	2.18-2.42 mm (0.086-0.095 in)
Plate quantity	1 pcs
Warpage limit	0.10 mm (0.004 in)
Clutch plate 2 thickness	1.90-2.10 mm (0.075-0.083 in)
Plate quantity	7 pcs
Warpage limit	0.10 mm (0.004 in)
Clutch spring free length limit	42.53 mm (1.67 in)
Drivetrain	
Primary reduction ratio	1.681 (79/47)
Transmission type	Constant mesh 6-speed
Gear ratio	
1st	2.571 (36/14)
2nd	1.947 (37/19)
3rd	1.619 (34/21)
4th	1.381 (29/21)
5th	1.190 (25/21)
6th	1.037 (28/27)
Main axle runout limit	0.08 mm (0.0032 in)
Drive axle runout limit	0.08 mm (0.0032 in)
Secondary reduction ratio	2.813 (45/16)
Final drive	Chain
Shifting mechanism	
Installed shift rod length	236.4-238.4 mm (9.31-9.39 in)
Air filter	
Air filter element	Oil-coated paper element
Fuel injector	
Resistance	12.0 Ω
Idling condition	
Engine idling speed	1200–1400 r/min
O2 feedback control	Active
Coolant temperature	90–100 °C (194–212 °F)
Difference in vacuum pressure between the	
cylinders	0 kPa-1.3 kPa (0 mmHg-10 mmHg, 0 inHg-0.4 inHg)
CO%	0.0–2.0 %
Fuel line pressure (at idle)	300-390 kPa (3.0-3.9 kgf/cm², 43.5-56.6 psi)
	0.0–2.0 %

EAS20015

CHASSIS SPECIFICATIONS

Chassis
Caster angle 24.7 °

Trail 108 mm (4.3 in)

Front wheel

Wheel type

Rim size

17M/C x MT3.50

Radial wheel runout limit

1.0 mm (0.04 in)

Lateral wheel runout limit

0.5 mm (0.02 in)

Wheel axle bending limit 0.40 mm (0.02 in)

Rear wheel

Wheel type

Rim size

Radial wheel runout limit

Lateral wheel runout limit

Cast wheel

17M/C x MT5.50

1.0 mm (0.04 in)

0.5 mm (0.02 in)

Front tire

Type Tubeless

Size 120/70ZR17M/C (58W)

Manufacturer/model BRIDGESTONE/BATTLAX HYPERSPORT

S23F

0.40 mm (0.02 in)

Rear tire

Type Tubeless

Size 180/55ZR17M/C (73W)

Manufacturer/model BRIDGESTONE/BATTLAX HYPERSPORT

S23R

Tire air pressure (measured on cold tires)

Up to 90 kg (198 lb) load

Wheel axle bending limit

Front 250 kPa (2.50 kgf/cm², 36 psi)
Rear 290 kPa (2.90 kgf/cm², 42 psi)

90 kg (198 lb) load - maximum load

Front 250 kPa (2.50 kgf/cm², 36 psi) Rear 290 kPa (2.90 kgf/cm², 42 psi)

Front brake

Brake disc thickness limit 4.0 mm (0.16 in)

Brake disc runout limit (as measured on

wheel) 0.10 mm (0.0039 in)

Brake pad lining thickness limit 0.5 mm (0.02 in) (MT09R, MT09RC)

1.0 mm (0.04 in) (MT09SPR, MT09SPRC)

Master cylinder inside diameter 16.00 mm (0.63 in)

Caliper cylinder inside diameter (Left) 30.00 mm, 30.00 mm (1.18 in, 1.18 in) (MT09SPR, MT09SPRC) 30.23 mm, 27.00 mm (1.19 in, 1.06 in) (MT09R, MT09RC) Caliper cylinder inside diameter (Right) 30.00 mm, 30.00 mm (1.18 in, 1.18 in) (MT09SPR, MT09SPRC) 30.23 mm, 27.00 mm (1.19 in, 1.06 in) (MT09R, MT09RC) Specified brake fluid DOT 4 Rear brake Brake disc thickness limit 4.5 mm (0.18 in) Brake disc runout limit (as measured on wheel) 0.15 mm (0.0059 in) Brake pad lining thickness limit 1.0 mm (0.04 in) Master cylinder inside diameter 12.7 mm (0.50 in) Caliper cylinder inside diameter 38.18 mm (1.50 in) Specified brake fluid DOT 4 Front suspension Hydraulic damper Shock absorber Fork spring free length limit 251.4 mm (9.90 in) (MT09R, MT09RC) 261.7 mm (10.31 in) (MT09SPR, MT09SPRC) 0.2 mm (0.01 in) Inner tube bending limit Recommended oil Yamaha Suspension Oil 01 456.0 cm³ (15.42 US oz, 16.08 lmp.oz) (MT09R, Quantity (left) MT09RC) 466.0 cm³ (15.76 US oz, 16.44 lmp.oz) (MT09SPR, MT09SPRC) Quantity (right) 460.0 cm³ (15.55 US oz, 16.22 lmp.oz) (MT09R, MT09RC) 466.0 cm³ (15.76 US oz, 16.44 Imp.oz) (MT09SPR, MT09SPRC) 105 mm (4.1 in) (MT09SPR, MT09SPRC) Level (left) 109 mm (4.3 in) (MT09R, MT09RC) Level (right) 105 mm (4.1 in) (MT09SPR, MT09SPRC) 109 mm (4.3 in) (MT09R, MT09RC) Spring preload Adjustment value (Soft) 19.0 mm (0.75 in) Adjustment value (STD) 14.0 mm (0.55 in) (MT09SPR, MT09SPRC) 16.0 mm (0.63 in) (MT09R, MT09RC) Adjustment value (Hard) 4.0 mm (0.16 in) Rebound damping Unit for adjustment Click Adjustment value from the start position (Soft) 11 (MT09R, MT09RC) 26 (MT09SPR, MT09SPRC) Adjustment value from the start position 11 (MT09SPR, MT09SPRC) (STD) 6 (MT09R, MT09RC)

Adjustment value from the start position (Hard) 1 Compression damping Unit for compression damping adjustment Click (MT09R, MT09RC) Adjustment value from the start position 11 (MT09R, MT09RC) (Soft) Adjustment value from the start position 6 (MT09R, MT09RC) (STD) Adjustment value from the start position (Hard) 1 (MT09R, MT09RC) Fast compression damping Unit for adjustment Turn (MT09SPR, MT09SPRC) Adjustment value from the start position 5+1/2 (MT09SPR, MT09SPRC) (Soft) Adjustment value from the start position (STD) 2+3/4 (MT09SPR, MT09SPRC) Adjustment value from the start position (Hard) 0 (MT09SPR, MT09SPRC) Slow compression damping Unit for adjustment Click (MT09SPR, MT09SPRC) Adjustment value from the start position (Soft) 18 (MT09SPR, MT09SPRC) Adjustment value from the start position (STD) 9 (MT09SPR, MT09SPRC) Adjustment value from the start position 1 (MT09SPR, MT09SPRC) (Hard) **Rear suspension** Shock absorber Gas-hydraulic damper Spring preload Unit for adjustment Cam position (MT09R, MT09RC) Adjustment value (Soft) 1 (MT09R, MT09RC) 4 (MT09R, MT09RC) Adjustment value (STD) 7 (MT09R, MT09RC) Adjustment value (Hard) Adjustment value (Soft) 154.5 mm (6.08 in) (MT09SPR, MT09SPRC) Adjustment value (STD) 150.0 mm (5.91 in) (MT09SPR, MT09SPRC) Adjustment value (Hard) 146.5 mm (5.77 in) (MT09SPR, MT09SPRC) Rebound damping Unit for adjustment Click (MT09SPR, MT09SPRC) Turn (MT09R, MT09RC) Adjustment value from the start position (Soft) 2 1/2 (MT09R, MT09RC) 30 (MT09SPR, MT09SPRC) Adjustment value from the start position 1 (MT09R, MT09RC) (STD) 18 (MT09SPR, MT09SPRC) Adjustment value from the start position 0 (Hard) Compression damping Unit for adjustment Click (MT09SPR, MT09SPRC)

Adjustment value from the start position
(Soft)

Adjustment value from the start position
(STD)

Adjustment value from the start position
(STD)

Adjustment value from the start position
(Hard)

0 (MT09SPR, MT09SPRC)

Drive chain

Size 525
Chain type Sealed type

Number of links 110

Drive chain slack (Maintenance Stand) 36.0–41.0 mm (1.42–1.61 in)

Drive chain slack (Sidestand) 36.0–41.0 mm (1.42–1.61 in)

Drive chain slack limit 46.0 mm (1.81 in) 15-link length limit 239.3 mm (9.42 in)

ELECTRICAL SPECIFICATIONS

ELECTRICAL SPECIFICATIONS	
Voltage	
System voltage	12 V
Ignition system	
Ignition timing (B.T.D.C.)	3.0–7.0 °/1300 r/min
Engine control unit	
Model	TBDFBT (MT09R)
	TBDFBY (MT09RC)
	TBDFCA (MT09SPR)
	TBDFCE (MT09SPRC)
Ignition coil	
Primary coil resistance	1.19–1.61 Ω
Secondary coil resistance	9.35–12.65 kΩ
Charging system	
Charging system	AC magneto
Standard output	14.0 V, 42.5 A at 5000 r/min
Generator control unit	
Regulated voltage (DC)	14.1–14.9 V
Battery	
Model	YTZ10S
Voltage, capacity	12 V, 8.6 Ah (10 HR)
Bulb wattage	
Headlight	LED
Brake/tail light	LED
Front turn signal/position light	LED
Rear turn signal light	LED
Auxiliary light	LED
License plate light	5.0 W
Meter lighting	LED
Indicator light	
Neutral indicator light	LED
Stability control indicator light	LED
High beam indicator light	LED
Turn signal indicator light	LED
Engine trouble warning light	LED
ABS warning light	LED
Shift timing indicator light	LED
Smart key system indicator light	LED (MT09SPR/MT09SPRC)
Starter motor	
Brush overall length limit	6.5 mm (0.26 in)
Mica undercut (depth)	0.70 mm (0.03 in)

ELECTRICAL SPECIFICATIONS

Fuel sender unit	
Sender unit resistance (full)	9.0–12.0 Ω
Sender unit resistance (empty)	213.0–219.0 Ω
Fuel injection sensor	
Crankshaft position sensor resistance	228–342 Ω
Intake air temperature sensor resistance	5400–6600 Ω at 0 °C (5400–6600 Ω at 32 °F)
Intake air temperature sensor resistance	290–390 Ω at 80 °C (290–390 Ω at 176 °F)
Intake air pressure sensor output voltage	3.59-3.67 V at 101.3 kPa (3.59-3.67 V at 1.01
	kgf/cm ² , 3.59-3.67 V at 14.7 psi)
Coolant temperature sensor resistance	2513–2777 Ω at 20 °C (2513–2777 Ω at 68 °F)
Coolant temperature sensor resistance	210–221 Ω at 100 °C (210–221 Ω at 212 °F)
Fuse(s)	
Main fuse	50.0 A
Headlight fuse	7.5 A
Brake light fuse	2.0 A
Signaling system fuse	7.5 A
Ignition fuse	10.0 A
Radiator fan motor fuse	15.0 A
Fuel injection system fuse	7.5 A
ABS control unit fuse	7.5 A
ABS motor fuse	30.0 A
ABS solenoid fuse	15.0 A
Accessory fuse	2.0 A
Terminal fuse 1	5.0 A
Cruise control fuse	2.0 A
Backup fuse	7.5 A
Electronic throttle valve fuse	7.5 A
Ignition fuse 2	7.5 A
Backup fuse 2	15.0 A
•	

EAS20017

TIGHTENING TORQUES

EAS30016

ENGINE TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torque	Remarks
Exhaust pipe nut	M8	6	20 N·m (2.0 kgf·m, 15 lb·ft)	
Spark plug	M10	3	13 N·m (1.3 kgf·m, 9.6 lb·ft)	
Cylinder head cover bolt	M6	4	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Generator rotor bolt	M12	1	75 N·m (7.5 kgf·m, 55 lb·ft)	⊣ €
Generator cover bolt	M6	2	12 N·m (1.2 kgf·m, 8.9 lb·ft)	-©
Generator cover bolt	M6	8	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Clutch boss nut	M20	1	125 N·m (12.5 kgf·m, 92 lb·ft)	Stake. -
Clutch spring bolt	M6	3	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Clutch cover bolt	M6	11	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Oil filter cartridge	M20	1	17 N·m (1.7 kgf·m, 13 lb·ft)	
Oil filter cartridge union bolt	M20	1	70 N·m (7.0 kgf·m, 52 lb·ft)	⊸ €
Water pump drain bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Engine oil drain bolt	M14	1	43 N·m (4.3 kgf·m, 32 lb·ft)	

EAS30017

CHASSIS TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torque	Remarks
Front wheel axle	M18	1	72 N·m (7.2 kgf·m, 53 lb·ft)	
Front wheel axle pinch bolt	M8	1	23 N·m (2.3 kgf·m, 17 lb·ft)	
Rear wheel sprocket nut	M10	5	80 N·m (8.0 kgf·m, 59 lb·ft)	
Rear wheel axle nut	M24	1	105 N·m (10.5 kgf·m, 77 lb·ft)	
Rear brake caliper bolt (front)	M12	1	27 N·m (2.7 kgf·m, 20 lb·ft)	- (s)-
Rear brake caliper bolt (rear)	M8	1	22 N·m (2.2 kgf·m, 16 lb·ft)	and
Front brake master cylinder bleed screw	M8	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Front brake caliper bleed screw (MT09R/MT09RC)	M8	2	5 N⋅m (0.5 kgf⋅m, 3.7 lb⋅ft)	
Front brake caliper bleed screw (MT09SPR/MT09SPRC)	M8	2	8 N·m (0.8 kgf·m, 5.9 lb·ft)	
Rear brake caliper bleed screw	M8	1	5 N·m (0.5 kgf·m, 3.7 lb·ft)	
Front brake caliper bolt	M10	4	35 N·m (3.5 kgf·m, 26 lb·ft)	
Upper handlebar holder bolt	M8	4	22 N·m (2.2 kgf·m, 16 lb·ft)	
Lower handlebar holder nut	M10	2	40 N·m (4.0 kgf·m, 30 lb·ft)	
Clutch cable locknut	M8	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	

TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torque	Remarks
Lower bracket pinch bolt	M8	4	23 N·m (2.3 kgf·m, 17 lb·ft)	
Upper bracket pinch bolt	M8	2	26 N·m (2.6 kgf·m, 19 lb·ft)	
Lower ring nut	M30	1	See TIP.	
Drive sprocket nut	M22	1	160 N·m (16 kgf·m, 118 lb·ft)	Stake.
Sidestand nut	M10	1	65 N·m (6.5 kgf·m, 48 lb·ft)	
Sidestand switch screw	M5	2	4.3 N·m (0.43 kgf·m, 3.2 lb·ft)	-1

TIP_____


Lower ring nut

- 1. Tighten the ring nut to approximately 52 N·m (5.2 kgf·m, 38 lb·ft) with a torque wrench, then loosen the lower ring nut completely.
- 2. Tighten the lower ring nut to 14 N·m (1.4 kgf·m, 10 lb·ft).

TIGHTENING TORQUES

CABLE ROUTING


Headlight (front side view)

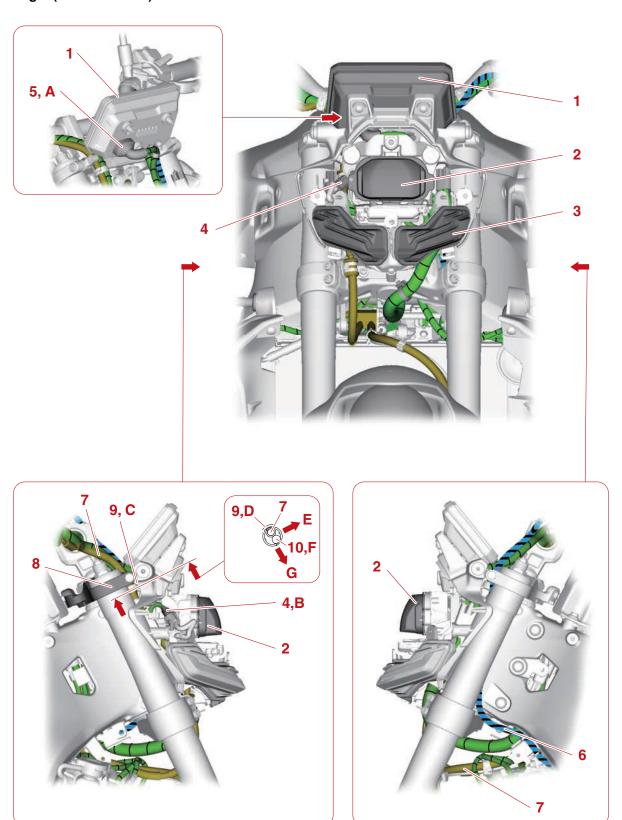


CABLE ROUTING

- 1. Meter assembly
- 2. Headlight assembly
- 3. Auxiliary light
- 4. Auxiliary light coupler
- 5. Coupler cover
- 6. Clutch cable
- 7. Brake hose
- 8. Upper bracket
- 9. Clamp
- 10. Wire harness (to handlebar switch (right))
- A. Connect the meter assembly coupler to the meter assembly, and then insert the coupler cover until it contacts the meter assembly.
- B. Insert the auxiliary light coupler into the bracket of the headlight assembly from the rear side of the vehicle.
- C. Mount the clamp more to the lower side of the vehicle than the upper bracket.
- D. Face the opening of the clamp to the right side of the vehicle.
- E. Front side of the vehicle
- F. Pass the wire harness (to handlebar switch (right)) more to the left side of the vehicle than the brake hose.
- G. Left side of the vehicle

Handlebar 1 (front side view)

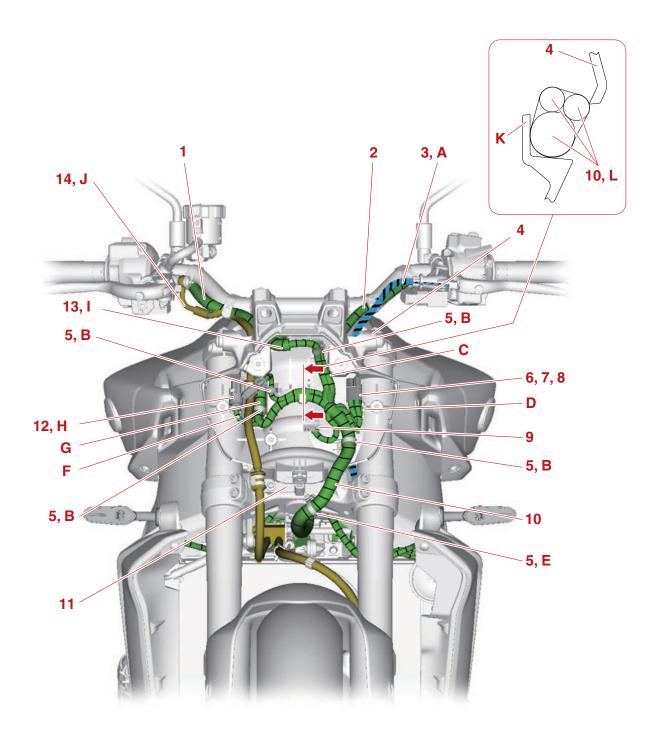

- 1. Wire harness (to handlebar switch (right))
- 2. Wire harness (to handlebar switch (left))
- 3. Clutch cable
- 4. Meter assembly bracket
- 5. Clamp
- 6. Joint connector
- 7. Grip warmer coupler (right) (option)
- 8. Grip warmer coupler (left) (option)
- 9. Headlight control unit coupler
- 10. Wire harness
- 11. Headlight bracket
- 12. Auxiliary DC jack coupler (option)
- 13. Wire harness (to meter assembly coupler)
- 14. Brake hose
- A. Pass the clutch cable more to the front side of the vehicle than the wire harness (to handlebar switch (left)).
- B. Insert the clamp into the hole of the meter assembly bracket.
- C. Pass the wire harness (to handlebar switch (left)) through the hole of the meter assembly bracket.
- D. Clamp the bonder, grip warmer coupler (right), and grip warmer coupler (left) with the wire harness clamp, and insert the wire harness clamp into the hole of the meter assembly bracket.
- E. Insert the clamp into the hole of the headlight bracket.
- F. Pass the wire harness (to USB jack) to the wire harness (to handlebar switch (right)) and brake hose at the rear side of the vehicle.
- G. Pass the wire harness (to handlebar switch (right) through the hole of the meter assembly bracket.
- H. Insert the USB jack coupler into the hook part of the meter assembly bracket.
- Pass the wire harness (to meter assembly coupler) through the hole of the meter assembly bracket.
- J. Pass the brake hose through the hole of the meter assembly bracket.
- K. Hook part of the meter assembly bracket
- Hook the white tape part of the wire harness with the hook part of the meter assembly bracket.

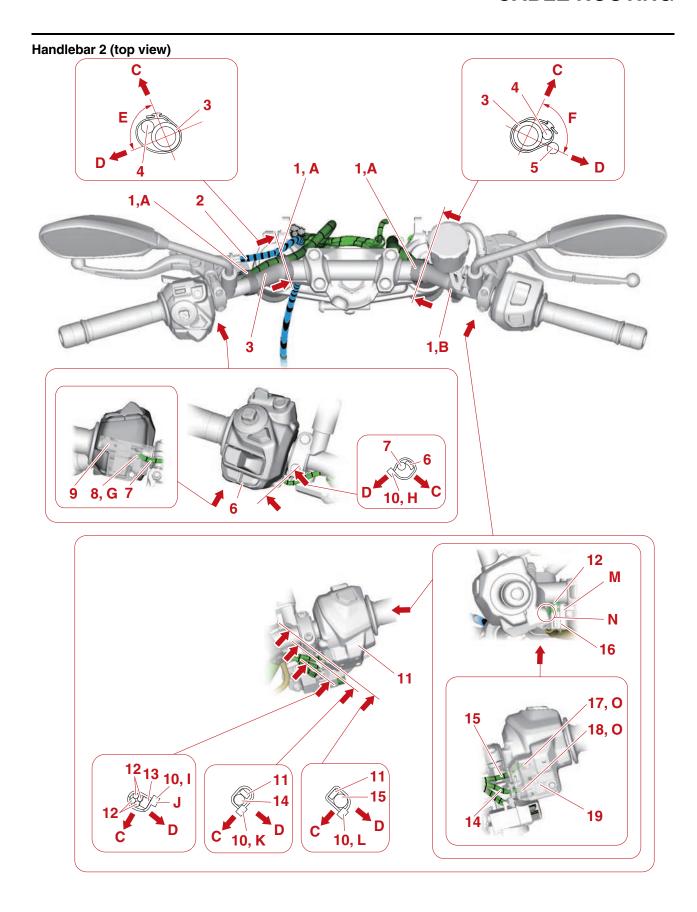


CABLE ROUTING

- 1. Rubber band
- 2. Clutch cable
- 3. Handlebar
- 4. Wire harness
- Brake hose
- 6. Handlebar switch (left)
- Wire harness (to handlebar switch coupler (left))
- 8. Handlebar switch coupler (left)
- Handlebar switch cover (left)
- 10. Plastic locking tie
- 11. Handlebar switch (right)
- 12. Wire harness (to front brake light switch)
- 13. Front brake light switch
- Wire harness (to handlebar switch coupler 1 (right))
- Wire harness (to handlebar switch coupler 2 (right))
- 16. Front brake light switch cover
- 17. Handlebar switch coupler 2 (right)
- 18. Handlebar switch coupler 1 (right)
- 19. Handlebar switch cover (right)
- A. Fasten the wire harness near the center of the curved part of the handlebar with a rubber band. Face the fastener of the rubber band toward the front of the vehicle, and face the end downwards.
- B. Fasten the wire harness near the center of the curved part of the handlebar with a rubber band. Face the fastener of the rubber band downwards, and face the end towards the rear of the vehicle.
- C. Front side of the vehicle
- D. Lower side of the vehicle
- E. Pass the wire harness through the range as shown in the illustration.
- F. Pass the wire harness more to the front side of the vehicle than the brake hose and within the range as shown in the illustration.
- G. Insert the handlebar switch coupler (left) precisely.
- H. Fasten the plastic locking tie over the protective tube of the wire harness (to handlebar switch coupler (left)). Face the tip downward to the rear of the vehicle and cut it. Do not forcefully pull on the leads when fastening them.
- Fasten the plastic locking tie over the protective tube of the wire harness (to front brake light switch). Face the tip downward to the rear of the vehicle and cut it. Do not forcefully pull on the leads when fastening them.
- Install the front brake light switch cover and then fasten the plastic locking tie.


- K. Fasten the plastic locking tie over the protective tube of the wire harness (to handlebar switch coupler (right) 1). Face the tip downward to the front of the vehicle and cut it. Do not forcefully pull on the leads when fastening them
- L. Fasten the plastic locking tie over the protective tube of the wire harness (to handlebar switch coupler (right) 2). Face the tip downward to the front of the vehicle and cut it. Do not forcefully pull on the leads when fastening them.
- M. Assemble the L-type terminals to the front brake light switch so the bases of the lead wires face the upper side of the vehicle.
- N. Pass the front brake light switch lead between the front brake light switch and handlebar switch (right).
- O. Insert the handlebar switch coupler 1 and 2 (right) precisely. Insert the coupler 1 (6-pin terminal) to the front side of the vehicle and the coupler 2 (8-pin terminal) to the rear side of the vehicle.

Frame and engine 1 (right side view)

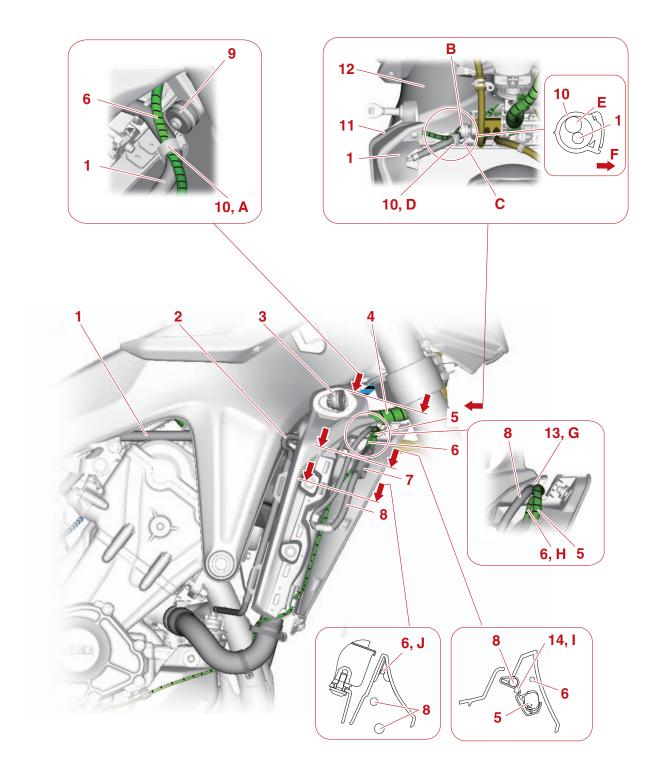


- 1. Radiator hose (cylinder head to radiator)
- 2. Coolant reservoir hose
- 3. Front turn signal/position light (right)
- 4. Wire harness
- Wire harness (to front turn signal/position light (right))
- 6. Wire harness (to oil pressure switch)
- 7. Front turn signal/position light coupler (right)
- 8. Front turn signal/position light lead (right)
- 9. Grommet
- 10. Clamp
- Radiator cover (right)
- 12. Frame
- 13. Front side panel (right)
- 14. Plastic locking tie
- A. Fasten the clamp on the gray tape section of the wire harness (to oil pressure switch) and more to the right side of the vehicle than the grommet.
- B. Pass the front turn signal/position light coupler (right) and wire harness (to oil pressure switch) to the rear side of the vehicle around the radiator mounting boss on the frame.
- C. Do not allow the wire harness (to oil pressure switch) to be pinched horizontally between the radiator and frame.
- D. Fasten the clamp at the gray tape on the wire harness (to oil pressure switch). Face the clamp opening towards the front of the vehicle
- E. Pass the front turn signal/position light coupler (right) and wire harness (to oil pressure switch) to the upper side of the vehicle over the radiator hose (cylinder head to radiator).
- F. Front side of the vehicle
- G. Pass the wire harness and lead wire within the range shown in the illustration through the cut-out in the front side panel (right) and route them in the order in the illustration.
- H. Do not allow the wire harness (to oil pressure switch) to be pinched while assembling the radiator cover (right).
- I. Pass a plastic locking tie through the hole in the front side panel (right) to fasten the front turn signal/position light lead (right), wire harness (to front turn signal/position light (right)), and wire harness (to oil pressure switch). Face the fastener toward the front side of the vehicle, and face the tip of the plastic locking tie, which does not need to be cut, towards the front of the vehicle. But, do not allow the tip of the plastic locking tie to extend beyond the side cover.
- J. Fit the wire harness (to oil pressure switch) into the groove when assembling the exterior cover. But, after the outer cover is assembled, it is OK for it to come out of the groove.

Frame and engine 2 (right side view)

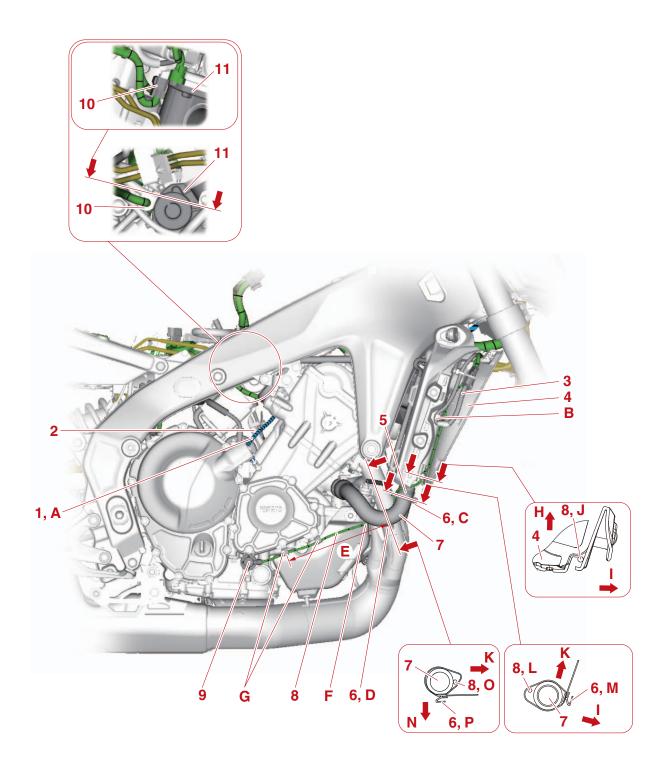


- 1. Clutch cable
- 2. Stator coil lead
- 3. Front turn signal/position light lead (right)
- 4. Front side panel (right)
- 5. Hose clamp
- 6. Plastic locking tie
- 7. Radiator inlet hose
- 8. Wire harness (to oil pressure switch)
- 9. Oil pressure switch
- 10. Throttle servo motor coupler
- 11. Throttle body
- Pass the clutch cable more to the front side of the vehicle than the stator coil lead.
- B. Fit the front turn signal/position light lead (right) to the hook of the front side panel (right).
- C. Fix the plastic locking tie to the radiator inlet hose more to the lower side of the vehicle than the hose clamp.
- D. Fix the plastic locking tie at the lower end of the radiator inlet hose.
- E. Route the wire harness (to oil pressure switch) as shown between the arrows in the illustration.
- F. Pass the wire harness (to oil pressure switch) more to the inside of the vehicle than the radiator inlet hose.
- G. Pass the wire harness (to oil pressure switch) into the clamp.
- H. Left side of the vehicle
- I. Front side of the vehicle
- Fit the wire harness (to oil pressure switch) to the hook of the front side panel (right).
- K. Inside of the vehicle
- L. Fix the wire harness (to oil pressure switch) with the plastic locking tie more the rear of the vehicle than the radiator inlet hose.
- M. Face the locking part of the plastic locking tie toward of the vehicle. Face the end of the plastic locking tie to the inside of the vehicle.
- N. Lower side of the vehicle
- O. Fix the wire harness (to oil pressure switch) with the plastic locking tie more to the inside of the vehicle than the radiator inlet hose.
- P. Face the locking part of the plastic locking tie lower side of the vehicle. Face the end of the plastic locking tie to the inside of the vehicle.

Frame and engine 3 (right side view)

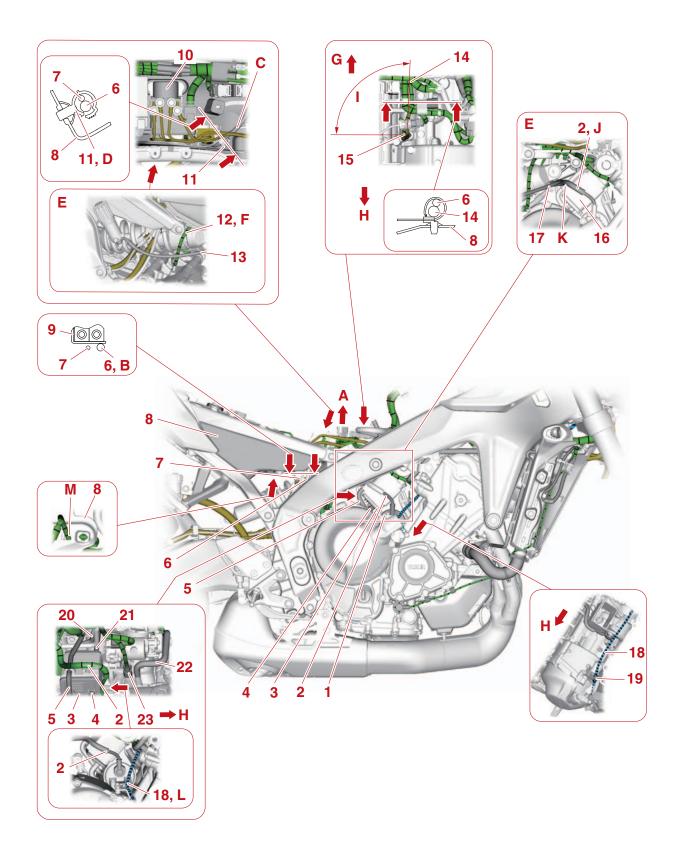

- 1. Starter motor
- 2. Starter motor lead
- 3. Canister (for California only)
- 4. Canister breather hose (for California only)
- 5. Fuel tank drain hose
- 6. Rear brake light switch lead
- 7. Rear wheel sensor lead
- 8. Battery box
- 9. Brake hose joint holder
- 10. Hydraulic unit
- 11. Clamp
- 12. Neutral switch lead
- Rear shock absorber sub tank hose (for MT09SPR/MT09SPRC)
- 14. Wire harness (to neutral switch)
- 15. Neutral switch coupler
- 16. Canister holder (for California only)
- Spring preload adjuster hose (for MT09SPR/ MT09SPRC)
- 18. Clutch cable
- 19. Clutch cable holder
- 20. Fuel tank breather hose
- 21. Canister purge hose (purge cut valve solenoid to canister) (for California only)
- 22. Radiator hose (cylinder head to radiator)
- 23. Coolant temperature sensor coupler
- A. To fuel pump
- B. Pass the rear brake light switch lead more to the front side of the vehicle than the rear wheel sensor lead.
- C. Pass the rear brake light switch lead more to the upper side of the vehicle than the rear wheel sensor lead.
- D. Insert it into the hole in the battery box so the notch in the clamp faces to the outside of the vehicle.
- E. For MT09SPR/MT09SPRC
- F. Pass the neutral switch lead more to the inside of the vehicle than the spring preload adjuster hose.
- G. Left side of the vehicle
- H. Right side of the vehicle
- The direction of installation of the neutral switch coupler must be within the range as shown in the illustration. Route the wire harness (to neutral switch) more to the outside of the vehicle.
- J. Pass the starter motor lead more to the front side of the vehicle than the spring preload adjuster hose and the rib of the canister holder (for MT09SPR/MT09SPRC).
- K. The rib of canister holder (for California only)
- Pass the clutch cable more to the front side of the vehicle than the starter motor lead.
- M. Pass the wire harness (to neutral switch) through the hole in the battery box.


Frame and engine 4 (left side view)

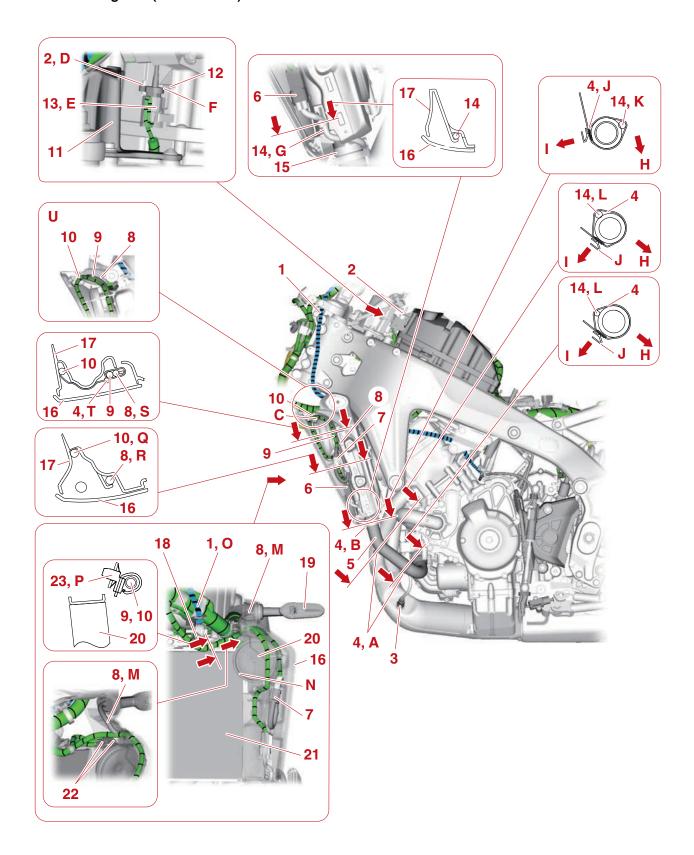

CABLE ROUTING

- 1. Clutch cable
- 2. Intake air temperature sensor
- 3. O₂ sensor
- 4. Plastic locking tie
- 5. Radiator hose
- 6. O₂ sensor coupler
- 7. Front turn signal/position light coupler (left)
- 8. Front turn signal/position light lead (left)
- Wire harness (to front turn signal/position light (left))
- 10. Wire harness (to O₂ sensor)
- 11. Main switch bracket
- 12. Air filter case assembly
- 13. Intake air temperature sensor coupler
- 14. O₂ sensor lead
- 15. Hose clamp
- 16. Radiator cover (left)
- 17. Front side panel (left)
- 18. Cable guide
- 19. Front turn signal/position light (left)
- 20. Horn
- 21. Radiator
- 22. Horn coupler
- 23. Clamp
- A. Clamp the plastic locking tie at the base of the curve of the radiator hose.
- B. Clamp the plastic locking tie at the radiator hose more to the under of the vehicle than the hose clamp.
- C. Align the wire harness along the guide to the rear of the vehicle.
- D. Insert the intake air temperature sensor into the pin of the air filter case assembly.
- E. Install the intake air temperature sensor more to the under of the vehicle than the rib part of the air filter case.
- F. Connect the intake air temperature sensor to its coupler and install the intake air temperature sensor to the hook of the air filter assembly. Do not ride the intake air temperature sensor lead over the main switch bracket.
- G. Route the white tape part of the O₂ sensor lead more to lower side of the hook part of the front side panel (left).
- H. Left and outside of the vehicle
- Front and lower side of the vehicle
- J. Face the lock part of the plastic locking tie to the front side of the vehicle. Face the end of the plastic locking tie to the inside of the vehicle.
- K. Fix the O₂ sensor lead more to the rear side of the vehicle than the radiator hose.
- L. Fix the O₂ sensor lead more to the inside of the vehicle than the radiator hose.
- M. Route the slacking of the front turn signal/ position light lead (left) more to outside of the vehicle than edge of the horn.


- N. Edge of the horn
- O. Pass the clutch cable through recess of the cable guide.
- P. Insert the clamp into the hole in the cable guide.
- Q. Fit the radiator cover (left) in the groove of the front side panel (left) during assembly. But, after the radiator cover (left) is assembled, it is OK for it to come out of the groove of the front side panel (left).
- R. Fit the front turn signal/position light lead (left) to the clamp.
- S. Pass the plastic locking tie through the hole in the front side panel (left) to fasten the front turn signal/position light coupler (left) and front turn signal/position light lead (left).
- T. Face the fastener toward the front side of the vehicle, and face the plastic locking tie, which does not need to be cut, towards the front of the vehicle. However, do not let the tip of the plastic locking tie extend out more than the radiator cover (left).
- U. Pass the front turn signal/position light lead (left), wire harness (to front turn signal/position light (left)), and O₂ sensor lead through the cut-out in the front side panel (left) and route them in the order shown in the illustration.

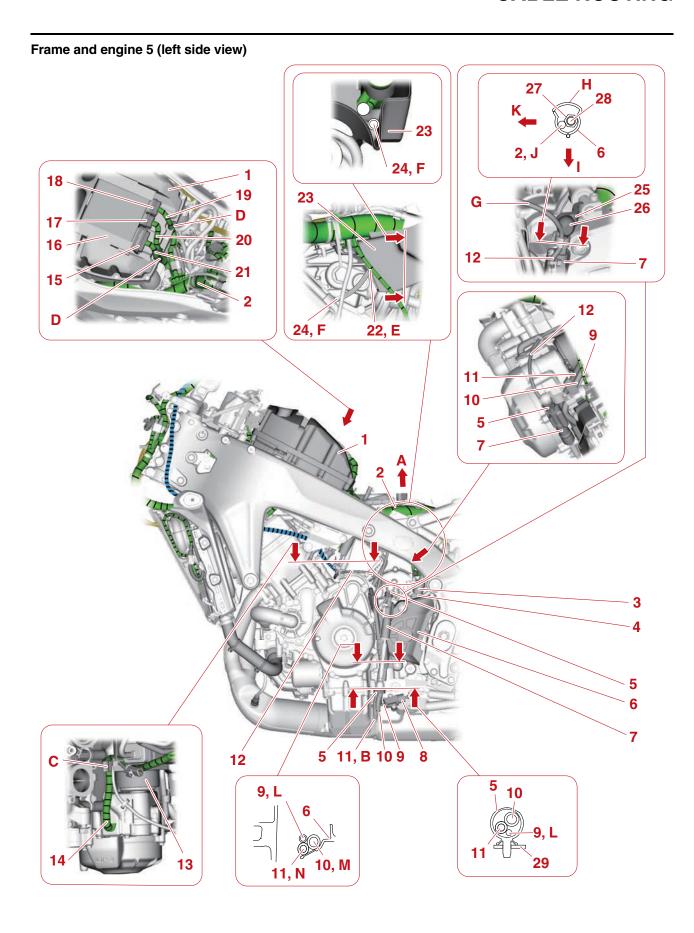

- 1. Air filter case assembly
- 2. Wire harness
- Gear position sensor coupler
- 4. Gear position sensor
- Clamp
- 6. Drive sprocket cover
- 7. Shift sensor
- 8. Sidestand switch
- 9. Sidestand switch lead
- Fuel tank breather hose (except for California) or canister breather hose (for California only)
- 11. Fuel tank drain hose
- 12. Shift sensor lead
- Starter motor holder (except for California) or canister holder (for California only)
- 14. Stator coil lead
- 15. ECU coupler 3
- 16. ECU (Engine Control Unit)
- 17. ECU coupler 2
- 18. ECU coupler 1
- 19. Wire harness (to ECU coupler 1)
- 20. Wire harness (to ECU coupler 2)
- 21. Wire harness (to ECU coupler 3)
- 22. Wire harness (to gear position sensor)
- 23. Battery box
- 24. Starter motor lead
- 25. Shift arm
- 26. Dust cover
- 27. Locknut
- 28. Shift rod joint
- 29. Muffler bracket (left)
- A. To fuel pump
- B. Pass the fuel tank drain hose more to the front side of the vehicle than fuel tank breather hose (except for California) or canister breather hose (for California only) and more to the outside of the vehicle than sidestand switch lead.
- C. Hook the stator coil lead on the hook of the starter motor holder (except for California) or canister holder (for California only).
- D. Fit the wire harness between the hook ribs and recesses of the air filter case assembly.
- E. Pass the wire harness (to gear position sensor) more to the left side of the vehicle than the stator coil lead and starter motor lead.
- F. Pass the starter motor lead from the front side of the vehicle through the battery box.
- G. Pass the shift sensor lead more to the front of the vehicle than the dust cover and shift arm.
- H. Face the clamp opening towards the right side of the vehicle.
- I. Left side of the vehicle
- Route the shift sensor lead to the front side of the vehicle.


- K. Front side of the vehicle
- L. Route the sidestand switch lead more to the inside of the vehicle than the fuel tank drain hose and fuel tank breather hose (except for California) or canister breather hose (for California only).
- M. Pass the fuel tank breather hose (except for California) or canister breather hose (for California only) to the inside of the vehicle of the drive sprocket cover.
- N. Pass the fuel tank drain hose to the inside of the vehicle of the drive sprocket cover.


Frame and engine 6 (left side view)

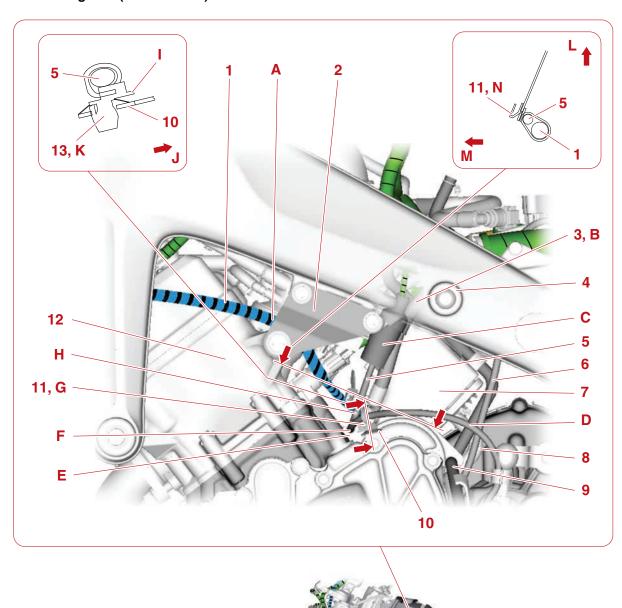


- 1. Clutch cable
- 2. Engine bracket (left)
- 3. Stator coil lead
- 4. Frame
- 5. Shift sensor lead
- 6. Sidestand switch lead
- 7. Canister holder (for California only)
- 8. Canister breather hose (for California only)
- 9. Fuel tank drain hose
- 10. Shift sensor lead bracket
- 11. Plastic locking tie
- 12. Cylinder head
- 13. Clamp
- Pass the clutch cable between the cylinder head and the engine bracket (left).
- B. Pass the stator coil lead more to the front and the upper side of the frame.
- Connect the shift sensor coupler to the connectors of the wire harness inside the coupler cover.
- D. Pass the shift sensor lead more to the outside of the vehicle than the fuel tank drain hose.
- E. Pass the stator coil lead more to the lower side than the canister holder (for California only).
- F. Fit the shift sensor lead into the recess of the canister holder (for California only).
- G. Align the installation position of the clamp with the taping on the shift sensor lead.
- H. Pass the shift sensor lead and stator coil lead more to the left side of the vehicle than the clutch cable.
- I. Insert the clamp into the hole of the bracket.
- J. Left side of the vehicle
- K. Face the tip of the clamp to left side of the vehicle and cut it.
- L. Right side of the vehicle
- M. Front side of the vehicle
- N. Fasten the plastic locking tie at the gray tape on the stator coil lead to fasten the stator coil lead and shift sensor lead, and face the tip to the right side of the vehicle.


Main switch (rear view) (for MT09R/MT09RC)

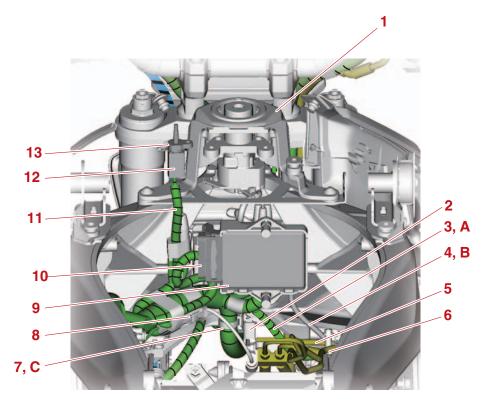

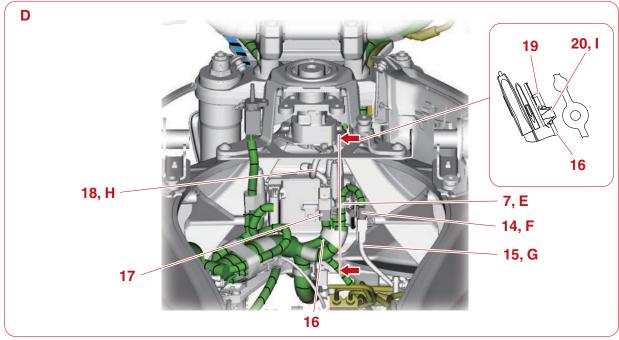


- 1. Main switch bracket
- 2. Brake hose joint bracket
- 3. Wire harness
- 4. Radiator fan motor lead
- Brake hose (front brake master cylinder to hydraulic unit)
- Brake hose (hydraulic unit to front brake calipers)
- 7. Clamp
- 8. Front wheel sensor coupler
- 9. BCM (Body Control Module)
- 10. BCM coupler
- Wire harness (to intake air temperature sensor)
- 12. Intake air temperature sensor coupler
- 13. Intake air temperature sensor
- 14. Radiator fan motor coupler
- 15. Radiator fan motor lead
- 16. Wire harness (to main switch)
- 17. Main switch coupler
- 18. Main switch lead
- 19. Coupler cover
- 20. Joint connector
- Pass the wire harness between the brake hoses and the frame.
- B. Pass the radiator fan motor lead between the brake hoses and the frame.
- C. Insert the clamp into the hole of the brake hose joint bracket.
- D. After removing the BCM
- E. Insert the clamp from the inside of the vehicle through the hole in the coupler cover.
- F. Insert the radiator fan motor coupler from outside the vehicle through the hole in the coupler cover.
- G. Pass the radiator fan motor lead to the rear of the vehicle of the wire harness (to front turn signal/position light (right).
- H. When assembling the vehicle, face the lock of the main switch coupler to the right side of the vehicle. The direction after that does not matter.
- Insert the joint connector through the hole in the coupler cover.

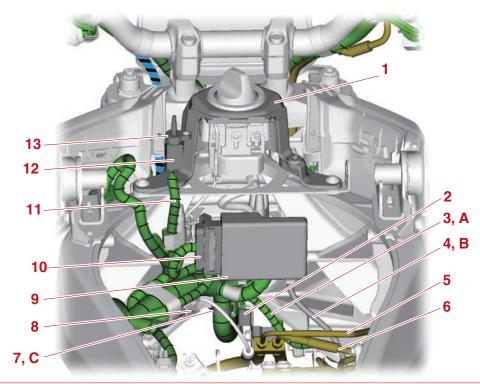

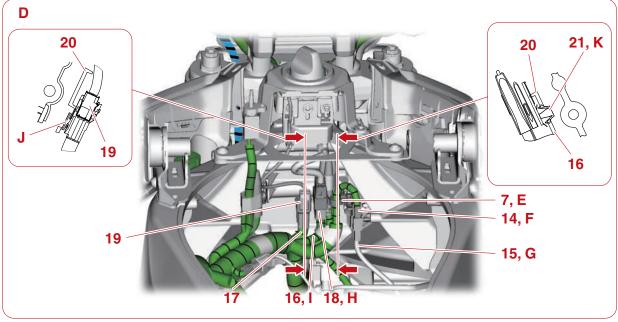


- 1. Main switch bracket
- 2. Brake hose joint bracket
- 3. Wire harness
- 4. Radiator fan motor lead
- Brake hose (front brake master cylinder to hydraulic unit)
- Brake hose (hydraulic unit to front brake calipers)
- 7. Clamp
- 8. Front wheel sensor coupler
- 9. BCM (Body Control Module)
- 10. BCM coupler
- Wire harness (to intake air temperature sensor)
- 12. Intake air temperature sensor coupler
- 13. Intake air temperature sensor
- 14. Radiator fan motor coupler
- 15. Radiator fan motor lead
- 16. Wire harness (to main switch coupler 1)
- 17. Wire harness (to main switch coupler 2)
- 18. Main switch coupler 1
- 19. Main switch coupler 2
- 20. Coupler cover
- 21. Joint connector
- Pass the wire harness between the brake hoses and the frame.
- B. Pass the radiator fan motor lead between the brake hoses and the frame.
- Insert the clamp into the hole of the brake hose joint bracket.
- D. After removing the BCM
- E. Insert the clamp from the inside of the vehicle through the hole in the coupler cover.
- F. Insert the radiator fan motor coupler from outside the vehicle through the hole in the coupler cover.
- G. Pass the radiator fan motor lead to the rear of the vehicle of the wire harness (to front turn signal/position light (right).
- H. When assembling the vehicle, face the lock of the main switch coupler 1 to the right side of the vehicle. The direction after that does not matter.
- Pass the wire harness (to main switch coupler 1) more to the rear of the vehicle than the wire harness (to main switch coupler 2).
- J. Insert the main switch coupler 2 into the ribs of the coupler cover.
- K. Insert the joint connector through the hole in the coupler cover.


Remote Control Unit (top and left side view) (for MT09SPR/MT09SPRC)

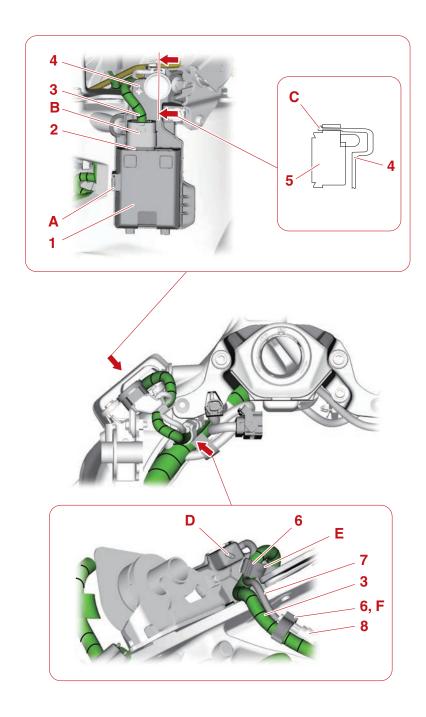

- 1. Rubber band
- 2. Remote control unit
- 3. Wire harness (to remote control unit)
- 4. Remote control unit bracket
- 5. Buzzer
- 6. Clamp
- 7. Buzzer lead
- 8. Buzzer coupler
- Insert the rubber band into the rib of the remote control unit bracket.
- B. Insert the remote control unit coupler into the remote control unit until it makes a sound.
- Insert it until the buzzer goes over the clinch part of the rib on the remote control unit bracket.
- D. Protrusion
- E. Insert the clamp into the hole of the remote control unit bracket with the clamp opening facing toward the protrusion on the remote control unit bracket.
- F. Face the lock of the buzzer coupler to the front side of the vehicle, align the different levels of the connectors and clamp them together with the wire harness, and face the openings toward the front of the vehicle. Buzzer coupler is more to the front side of the vehicle than the wire harness.

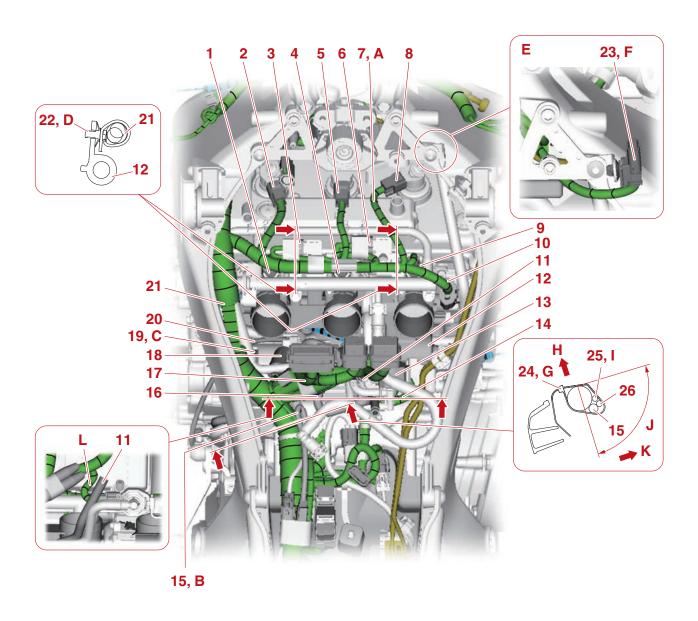


- 1. Injector #1 coupler
- 2. Ignition coil #1 coupler
- Intake air pressure sensor 2
- 4. Injector #2 coupler
- 5. Ignition coil #2 coupler
- 6. Intake air pressure sensor 1
- 7. Wire harness (to ignition coil #3 coupler)
- 8. Ignition coil #3 coupler
- 9. Injector #3 coupler
- 10. Throttle position sensor coupler
- 11. Fuel tank breather hose
- 12. Throttle body
- 13. Throttle servo motor coupler
- 14. Wire harness
- 15. Stator coil lead
- 16. Fuel tank drain hose
- 17. Wire harness (to ECU (engine control unit))
- 18. Shift sensor coupler
- 19. Coupler cover
- 20. Shift sensor lead
- 21. Wire harness
- 22. Clamp
- Fuel tank cap coupler (for MT09SPR/ MT09SPRC)
- 24. Plastic locking tie
- 25. Crankshaft position sensor lead (to crankshaft position sensor coupler)
- 26. Crankshaft position sensor lead (to stator coil lead)
- A. Pass the wire harness (to ignition coil #3 coupler) to the left side of the vehicle of the mount of the cylinder head breather hose.
- B. Fix the stator coil lead between the branches and the clamp, with plastic locking ties.
- C. Slide the coupler cover until the coupler is completely hidden, then face the opening to the lower side of the vehicle.
- D. Insert the clamp into the hole on the throttle body.
- E. For MT09SPR/MT09SPRC
- F. Insert the fuel tank cap coupler into the hole in the frame.
- G. Face the lock part of the plastic locking tie to the left side of the vehicle and insert the tip of the plastic locking tie between the frame and wire harness.
- H. Upper side of the vehicle
- Bend the crankshaft position sensor lead into a U shape and secure the extra wire, facing the front side of the vehicle, with a plastic locking tie.
- J. The crankshaft position sensor lead must be within the range shown in the illustration.
- K. Inside of the vehicle
- L. Pass the wire harness (to purge cut valve solenoid) to the front side of the vehicle of the fuel tank breather hose (for California only).

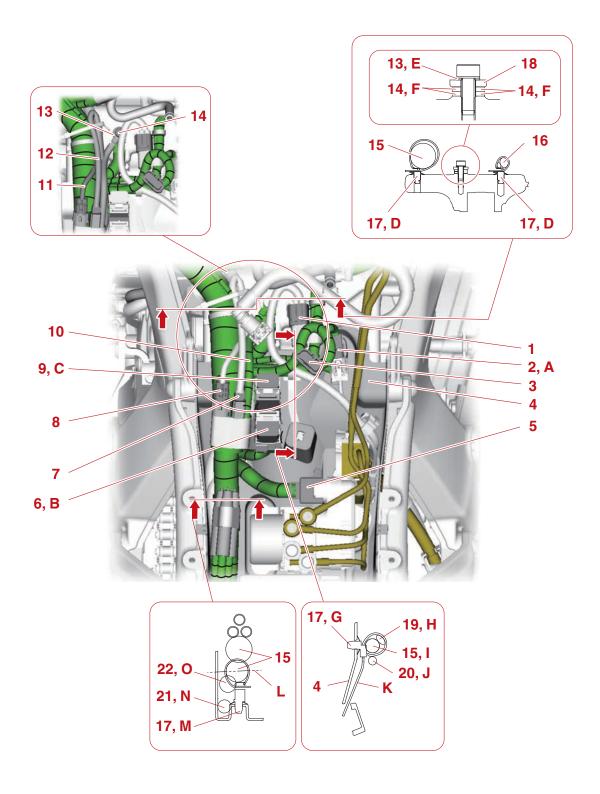

- 1. Rear brake light switch coupler
- 2. Rear wheel sensor coupler
- 3. Fuel pump coupler
- 4. Battery box
- 5. ABS ECU coupler
- 6. Radiator fan motor relay
- 7. Crankshaft position sensor coupler
- 8. Sidestand switch coupler
- 9. Horn relay
- 10. Wire harness (to frame ground 3)
- Sidestand switch lead
- 12. Crankshaft position sensor lead
- 13. Frame ground 3
- 14. Frame ground 1, 2, 4, 5
- 15. Wire harness
- 16. Wire harness (to throttle servo motor coupler)
- 17. Clamp
- 18. Washer
- 19. Rear brake light switch lead
- 20. Wire harness (to neutral switch coupler)
- 21. Stator coil lead
- 22. Starter motor lead
- Insert the rear wheel sensor coupler into the hole in the battery box.
- B. Insert the radiator fan motor relay into the ribs on the battery box.
- Insert the horn relay into the ribs on the battery box.
- D. Insert the clamp into the hole of the frame.
- E. Route the frame ground 3 more to the upper side of the vehicle than the frame ground 1,2,4 and 5 with a washer interposed between them, and assemble them so the crimped terminals do not overlap.
- F. Route the frame ground 1,2,4 and 5, with a washer interposed between them, more to the lower side of the vehicle than frame ground 3, and assemble the crimped terminals of each lead wire to face the upper side of the vehicle.
- G. Insert the clamp into the hole in the battery box.
- H. Fasten the rear brake light switch lead at the gray tape part.
- Fasten the clamp at the white tape on the wire harness.
- J. Pass the wire harness (to neutral switch) to the rear side of the vehicle of the clamp.
- K. Insert the tip of the clamp into the hole in the battery box.
- L. Centerline of the clamp
- M. Insert the clamp into the hole of the battery box.


- N. Pass the stator coil lead more to the left side of the vehicle than the wire harness and more to the under side of the vehicle than the starter motor lead.
- O. Pass the starter motor lead more to the left side of the vehicle than the wire harness and lower than the centerline of the clamp.

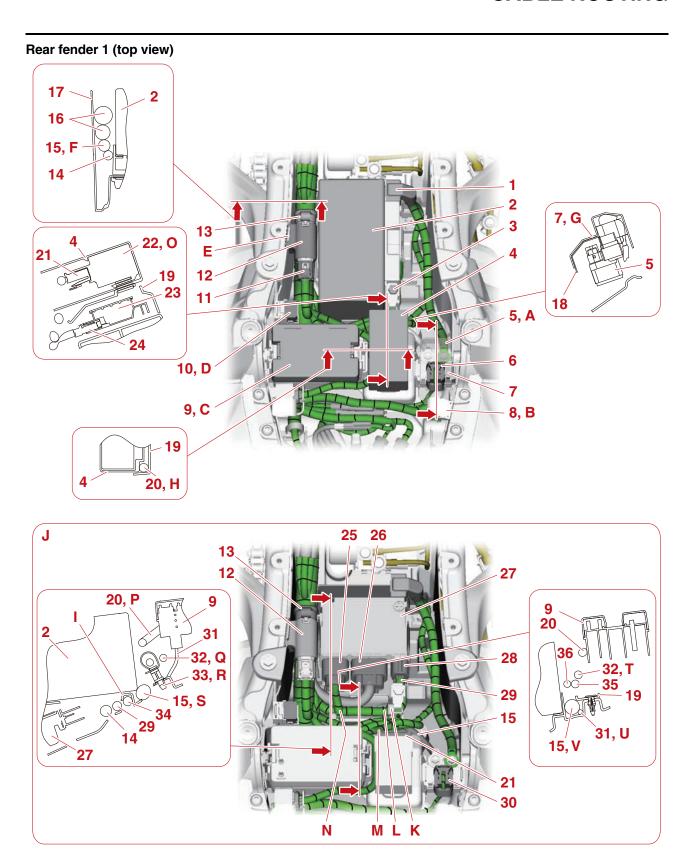

- 1. Positive battery terminal
- 2. Battery
- 3. Negative battery terminal
- 4. Relay unit cover
- 5. Starter relay
- 6. Starter relay coupler
- 7. Starter relay cover
- 8. Starting circuit cut-off relay 2
- 9. Fuse box
- 10. Engine stop relay
- 11. USB jack coupler
- 12. Rubber band
- 13. USB jack
- 14. Stator coil lead
- Starter motor lead
- Wire harness
- 17. Battery box
- 18. Starter relay inner cover
- 19. IMU cover
- 20. Wire harness (to YDT coupler)
- 21. Relay unit coupler
- 22. Relay unit
- 23. IMU (Inertial Measurement Unit)
- 24. IMU coupler
- 25. GCU coupler 1
- 26. Stator coil coupler
- 27. GCU (Generator Control Unit)
- 28. GCU coupler 3
- 29. Wire harness (to GCU coupler 3)
- 30. Starter relay coupler
- 31. Wire harness (to positive battery terminal)
- 32. Wire harness (to negative battery terminal)
- 33. Clamp
- 34. Wire harness (to GCU coupler 1)
- 35. Wire harness (to relay unit coupler)
- 36. Wire harness (to IMU coupler)
- A. Insert the starter relay until it contacts the stopper rib in the battery box.
- B. Insert the starting circuit cut-off relay 2 into the rib of the battery box.
- Insert the fuse box into the ribs of the battery box.
- D. Insert the engine stop relay into the ribs of the battery box.
- E. After putting the USB jack in the rubber band, insert the rubber band into the ribs of the battery box.
- F. Pass the starter motor lead to the upper side of the vehicle of the stator coil lead.
- G. When installing the starter relay cover, put it directly against the inside relay cover.
- H. Pass the wire harness (to YDT coupler) below the IMU cover, but between the IMU cover and relay unit cover.


- Do not allow the wire harness (to GCU coupler 1) to extend above the upper side of the vehicle more than the hook of the battery box. The wire harness may extend from the hook.
- J. Details near GCU (Generator Control Unit)
- K. Hook of the battery box
- L. Fit the wire harness (to GCU coupler 3) to the hook of the battery box.
- M. Pass the wire harness (to negative battery terminal) to the upper side of the vehicle of the wire harness (to relay unit).
- N. Pass the wire harness (to GCU coupler 1) to the upper side of the vehicle of the wire harness (to GCU coupler 3) and stator coil lead.
- O. After putting the relay unit in the relay unit cover, fit it to the rib of the IMU cover.
- P. Pass the wire harness (to YDT coupler) more to the front side of the vehicle than the wire harness (to positive battery terminal).
- Q. Pass the wire harness (to negative battery terminal) to the upper side of the vehicle of the wire harness (to positive battery terminal).
- R. Insert the clamp into the hole of the battery box.
- S. Pass the starter motor lead to the front side of the vehicle of the clamp.
- T. Pass the wire harness (to negative battery terminal) to the upper side of the vehicle of the wire harness (to starter relay coupler) and the wire harness (to IMU coupler).
- U. Pass the wire harness (to positive battery terminal) to the lower side of the vehicle of the starter motor lead.
- V. Pass the starter motor lead to the lower side of the vehicle of the IMU cover.

Rear fender 2 (top view)

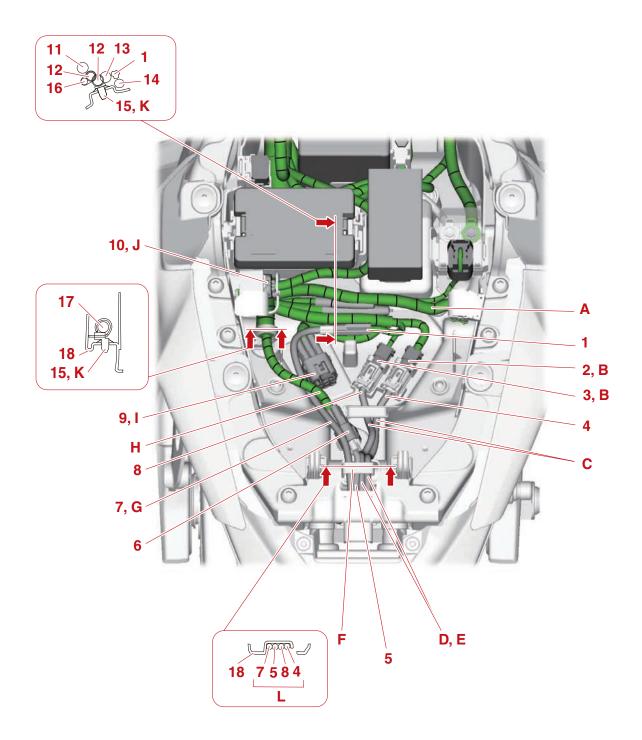


- 1. License plate light coupler
- 2. Rear turn signal light coupler (right) (white)
- 3. Rear turn signal light coupler (left) (black)
- 4. Rear turn signal light lead (right)
- 5. Tail/brake light lead
- 6. Tail/brake light coupler
- 7. License plate light lead
- 8. Rear turn signal light lead (left)
- 9. Accessory coupler (option)
- 10. YDT coupler
- 11. Wire harness (to starter relay coupler)
- 12. Joint connector
- Wire harness (to rear turn signal light coupler)
- 14. Wire harness (to accessory coupler)
- 15. Clamp
- 16. Wire harness (to starting circuit cut-off relay 2)
- 17. Wire harness
- 18. Battery box
- A. Pass the wire harness (to starter relay coupler) to the upper side of the vehicle of the wire harness (to starting circuit cut-off relay 2).
- B. Fit the rear turn signal light (right) (white) and rear turn signal light (left) (black) to the hook of the battery box.
- C. Fit the rear turn signal light lead (left) and rear turn signal light lead (right) to the hook of the battery box.
- D. Do not allow the turn signal light lead(s) to rise up above the hook of the battery box.
- E. Let the turn signal light lead(s) hang from the hook to the rear side of the vehicle.
- F. Fit the rear turn signal light lead (left), the rear turn signal light lead (right), tail/brake light lead and license plate light lead to the hook of the battery box.
- G. Pass the license plate light lead to the lower side of the vehicle of the wire harness (to tail/ brake light coupler).
- H. Pass the wire harness (to tail/brake light coupler) in front of the hook and over the license plate light lead.
- Insert the accessory coupler into the hole in the battery box.
- Insert the YDT coupler into the ribs of the battery box.
- K. Insert the clamp into the hole of the battery box.
- L. Route the rear turn signal light lead (right), rear turn signal light lead (left), tail/brake light lead, and license plate light lead in the positional relationship shown in the illustration.

Main switch (left side view)

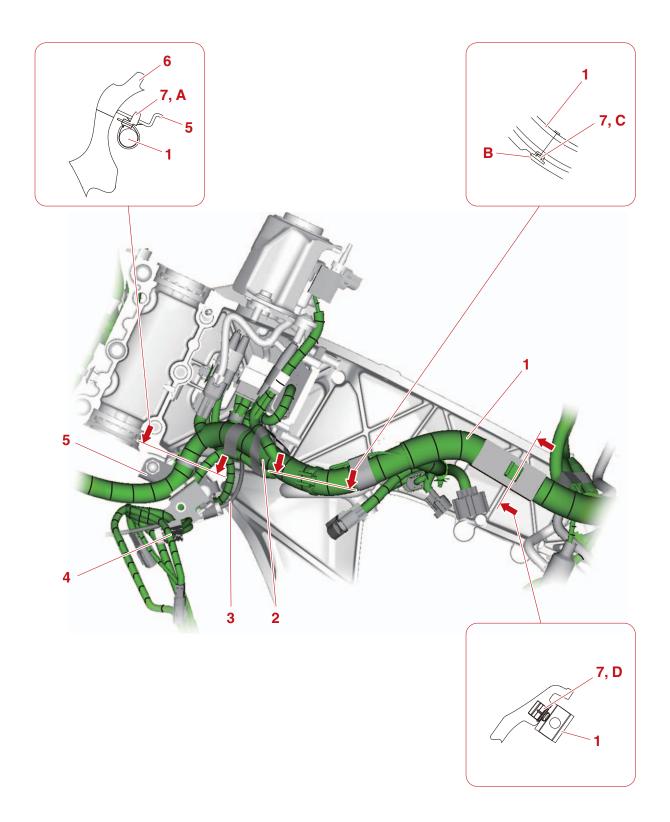


- 1. Wire harness
- 2. Front wheel sensor coupler
- 3. Front wheel sensor lead
- 4. Wire harness (to O₂ sensor)
- 5. Brake hose joint bracket
- 6. Frame
- 7. Clamp
- A. Insert the clamp into the hole of the brake hose joint bracket.
- B. Insert the clamp with touched the protrusion on the frame.
- C. Insert the clamp into the rib of the frame.
- D. Insert the clamp between the protrusions on the frame.

Front brake hose (right side view)

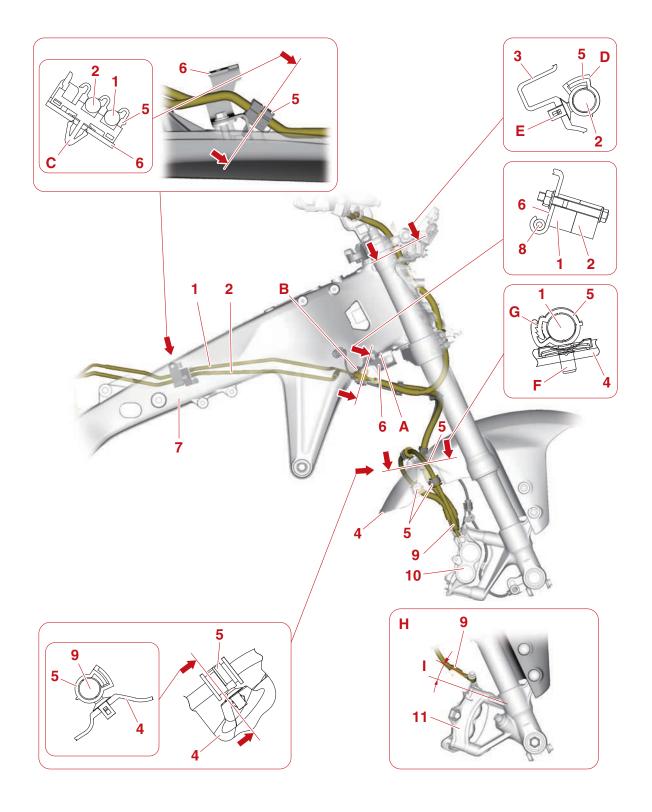

- Brake hose (hydraulic unit to front brake caliper (left))
- Brake hose (front brake master cylinder to hydraulic unit)
- 3. Meter assembly bracket
- 4. Front fender
- 5. Clamp
- Brake hose bracket
- 7. Frame
- 8. Front wheel sensor lead
- Brake hose (front brake caliper (left) to front brake caliper (right))
- Front brake caliper (right) (for MT09R/ MT09RC)
- Front brake caliper (right) (for MT09SPR/ MT09SPRC)
- A. It is OK for the stopper of the bracket to not contact the frame.
- B. Put the brake hose (front brake master cylinder to hydraulic unit) and brake hose (hydraulic unit to front brake caliper (left)) against the stopper of the bracket.
- C. Insert the clamp all the way into the brake hose bracket precisely.
- D. Tighten the claws of the clamps at least 2 notches. Also, assemble it with the opening facing the left side of the vehicle.
- E. Insert the clamp all the way into the meter assembly bracket precisely.
- F. Insert the clamp all the way into the front fender precisely.
- G. Tighten the claws of the clamps at least 2 notches. Also, assemble it with the opening facing the rear of the vehicle.
- H. For MT09SPR/MT09SPRC
- I. 12°


Front brake hose (left side view)

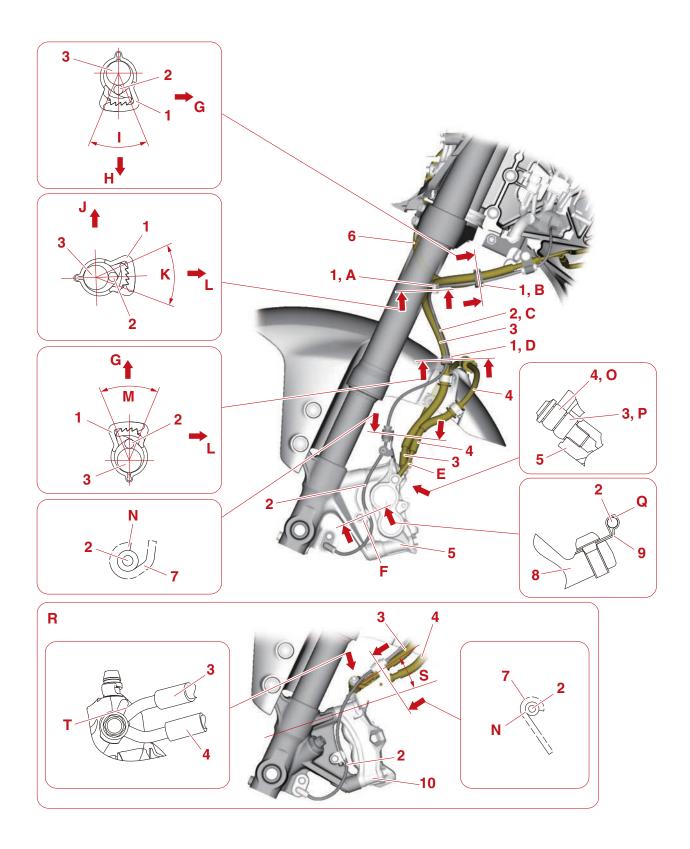

- 1. Clamp
- 2. Front wheel sensor lead
- Brake hose (hydraulic unit to front brake caliper (left))
- Brake hose (front brake caliper (left) to front brake caliper (right))
- Front brake caliper (left) (for MT09R/ MT09RC)
- Brake hose (front brake master cylinder to hydraulic unit)
- Reflector bracket
- 8. Front fork
- 9. Holder
- Front brake caliper (left) (for MT09SPR/ MT09SPRC)
- A. Fasten the white tape portion of the front wheel sensor lead with the clamp.
- B. Fasten the white tape portion of the brake hose (hydraulic unit to front brake caliper (left)) with the clamp.
- C. Make the front wheel sensor lead to follow the brake hose (hydraulic unit to front brake caliper (left)). After routing, it is OK to have a gap between the front wheel sensor lead and brake hose (hydraulic unit to front brake caliper (left)).
- D. Fix the clamp at the end of the protector of the brake hose (hydraulic unit to front brake caliper (left)).
- E. Install the brake hose (front brake caliper (left) to front brake caliper (right)) with its white paint mark facing outward.
- Install the holder with contacted the front fork leg.
- G. Left side of the vehicle
- H. Lower side of the vehicle
- Face the opening of the clamp and the front wheel sensor lead to the lower side of the vehicle. Tighten the claws to the end (4 notches).
- J. Upper side of the vehicle
- K. Face the opening of the clamp and the front wheel sensor lead to the rear of the vehicle. Tighten the claws to the end (4 notches).
- L. Rear of the vehicle
- M. Face the opening of the clamp and the wheel sensor lead to the left side of the vehicle. Tighten the claws to the end (4 notches).
- N. Insert the grommet of the front wheel sensor lead into the reflector bracket.
- Put the brake hose (hydraulic unit to front brake caliper (left)) against the positioning stopper of the caliper.
- P. Face the brake hose (front brake caliper (left) to front brake caliper (right)) with the orientation of the metal fitting of the brake hose (hydraulic unit to front brake caliper (left)).
- Q. Fasten the white tape portion of the front wheel sensor lead with the holder.
- R. For MT09SPR/MT09SPRC


- S. 16°
- T. Put the pin of the brake hose (front brake caliper (left) to front brake caliper (right)) against the metal fitting of the brake hose (hydraulic unit to front brake caliper (left)).

Rear brake hose (right side view)

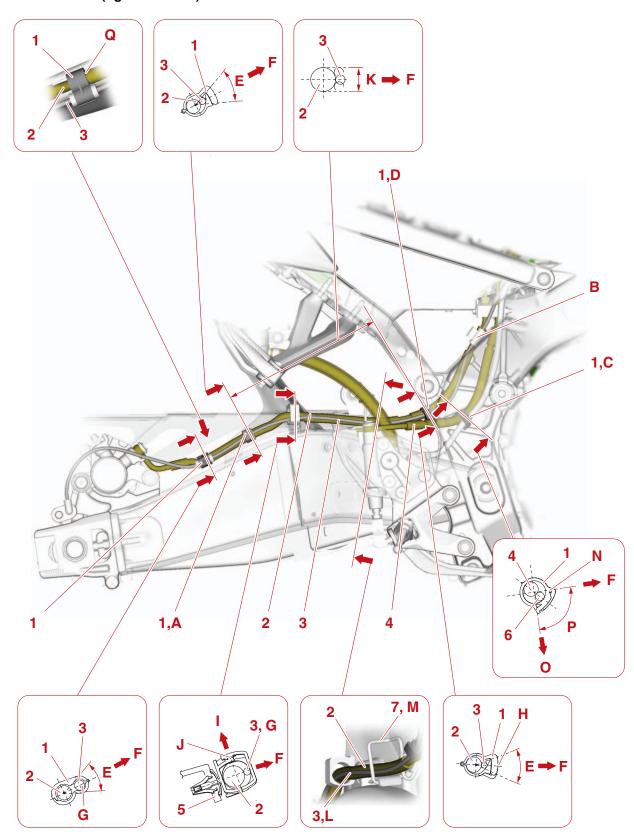


- 1. Clamp
- Rear brake hose (hydraulic unit to rear brake caliper)
- Rear wheel sensor lead
- 4. Rear brake hose (rear brake master cylinder to hydraulic unit)
- 5. Rear fender
- 6. Rear brake light switch lead
- 7. Wire harness guide
- Fasten the white tape portion of the rear wheel sensor lead with the clamp.
- B. Fasten the grommet of the rear wheel sensor lead with the clamp.
- Fasten the gray tape portion of the rear brake light switch lead with the clamp.
- D. Fasten the white tape portion of the rear brake hose (hydraulic unit to rear brake caliper) with the clamp.
- E. 45°
- F. Right side of the vehicle
- G. Put the rear wheel sensor lead more to the right side of the vehicle than the rear brake hose (hydraulic unit to rear brake caliper).
- H. Face the opening of the clamp and the rear wheel sensor lead to the right side of the vehicle. Tighten the claws to 4 notches.
- Upper side of the vehicle
- J. Face the clamp opening towards the upper side of the vehicle. Tighten the claws to at least 3 notches.
- K. Route the rear wheel speed sensor lead to the distance between the clamp(s) in the illustration along the rear brake hose (hydraulic unit to rear brake caliper).
- L. Pass the rear wheel sensor lead more to the right side of the vehicle than the rear brake hose (hydraulic unit to rear brake caliper).
- M. Pass the rear brake hose (hydraulic unit to rear brake caliper) and rear wheel sensor lead through the inside of the wire harness quide.
- N. Face the opening of the clamp and the rear brake light switch lead to the right side of the vehicle and to the front of the vehicle. Tighten the claws to at least 3 notches.
- O. Front side of the vehicle
- P. 90°
- Q. Fasten the protector of the rear brake hose (hydraulic unit to rear brake caliper) with the clamp.

ABS ECU (top and left side view)

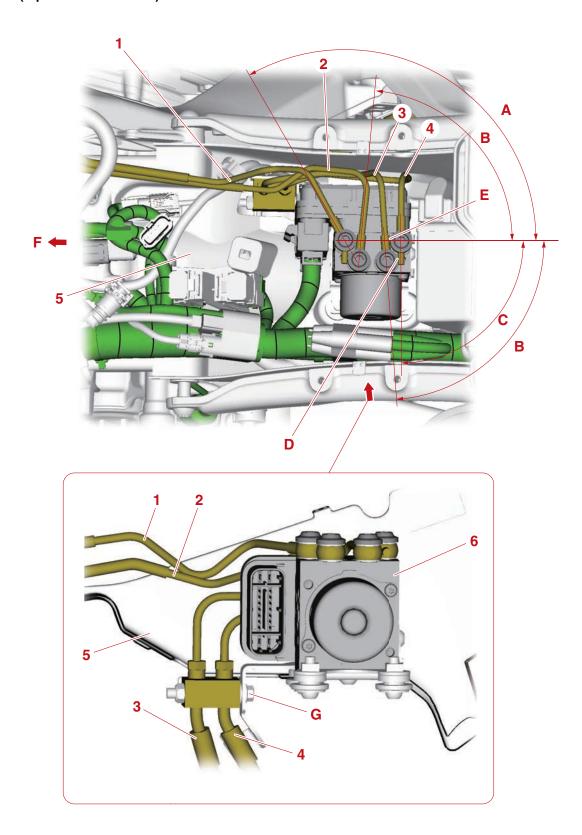


- Brake hose (hydraulic unit to front brake caliper (left))
- Brake hose (hydraulic unit to front brake master cylinder)
- Brake hose (hydraulic unit to rear brake master cylinder)
- Brake hose (hydraulic unit to rear brake caliper)
- 5. Battery box
- 6. Hydraulic unit assembly
- A. 120°
- B. 85°
- C. 89°
- D. Tighten while keeping the pin of the brake hose (hydraulic unit to rear brake caliper) against the brake hose (rear brake master cylinder to hydraulic unit). After tightening, it is OK to have a gap between the brake hose (hydraulic unit to rear brake caliper) and the brake hose (rear brake master cylinder to hydraulic unit).
- E. Tighten while keeping the pin of the brake hose (rear brake master cylinder to hydraulic unit) against the brake hose (hydraulic unit to rear brake caliper). After tightening, it is OK to have a gap between the brake hose (hydraulic unit to rear brake caliper) and the brake hose (rear brake master cylinder to hydraulic unit).
- F. Front side of the vehicle
- G. Tighten the bolt after assembling brake hose (rear brake master cylinder to hydraulic unit) and the brake hose (hydraulic unit to rear brake caliper) at the hydraulic unit assembly.

Fuel tank (left side view)

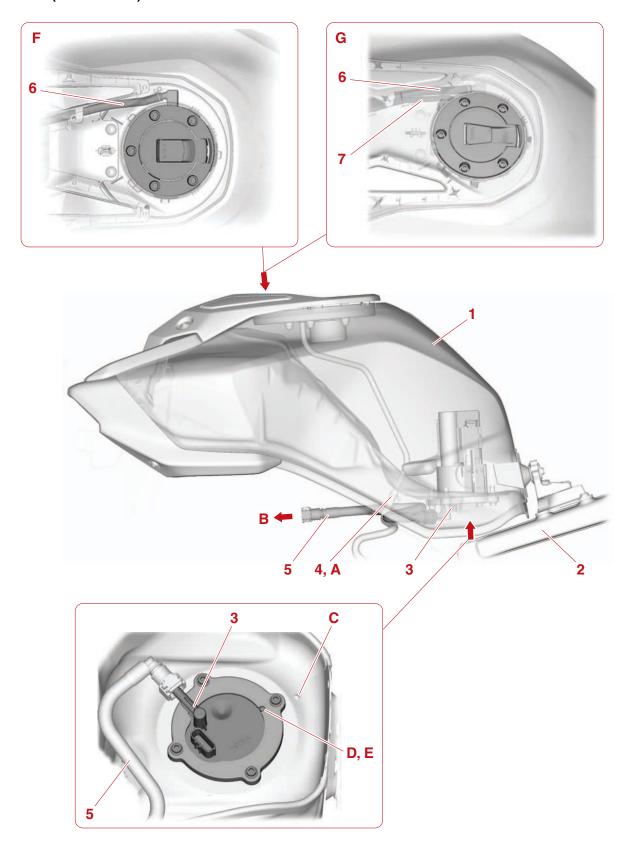


- 1. Fuel tank
- 2. Frame
- 3. Fuel pump
- 4. Fuel tank drain hose
- 5. Fuel hose
- 6. Fuel tank breather hose
- Fuel tank cap lead (for MT09SPR/ MT09SPRC)
- A. Pass the fuel tank drain hose over the fuel hose.
- B. To fuel rail
- C. Recess mark
- D. Boss
- E. Face the positioning boss of the fuel pump toward the recess mark on the fuel tank.
- F. For MT09R/MT09RC
- G. For MT09SPR/MT09SPRC

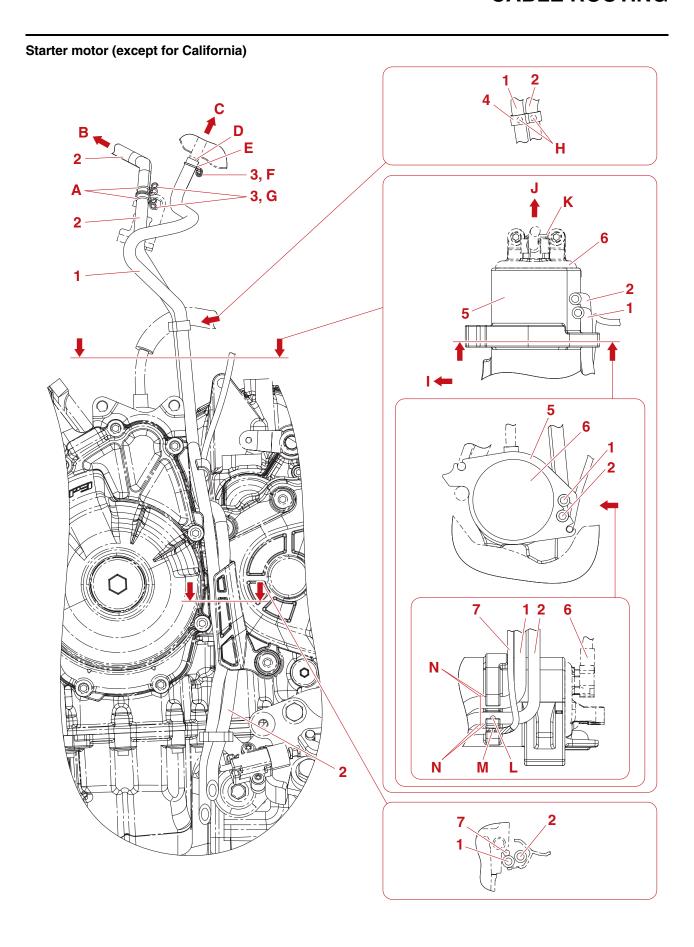

- 1. Fuel tank drain hose
- 2. Fuel tank breather hose
- 3. Clip
- 4. Clamp
- 5. Starter motor holder
- 6. Starter motor
- 7. Sidestand switch lead
- A. Assemble the fuel tank breather hose so the white paint mark faces the rear of the vehicle.
- B. To fuel tank cap
- C. To fuel tank
- D. Insert the end of the fuel tank drain hose until it contacts the fuel tank.
- E. Assemble the fuel tank drain hose so the blue paint faces the rear of the vehicle.
- F. Assemble the knob of the clip to align with the blue paint mark on the fuel tank drain hose.
- G. Assemble the knobs of the clips to align with the white paint mark on the fuel tank breather hose.
- H. Fasten the white paint portion of the fuel tank drain hose and the white paint portion of the fuel tank breather hose with the clamp.
- I. Front side of the vehicle
- J. Right side of the vehicle
- K. Locate the protrusion on the starter motor holder between the starter motor mounting bosses on the crankcase.
- Assemble the fuel tank breather hose so it is lower than the fuel tank drain hose.
- M. Fit the gray tape portion of the sidestand switch lead to the starter motor holder.
- N. While installing the fuel tank drain hose and fuel tank breather hose to the holder, do not allow the bases of the curves of the hoses to rise up on the starter motor holder.


Canister (for California only)

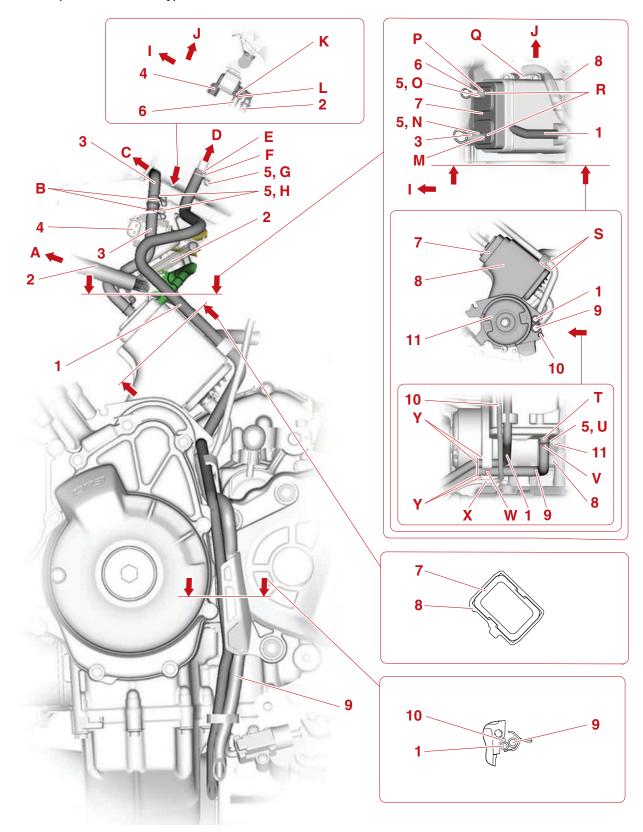

- 1. Fuel tank drain hose
- 2. Canister purge hose (purge cut valve solenoid to hose joint)
- Fuel tank breather hose (fuel tank cap to canister)
- 4. Purge cut valve solenoid
- Clip
- Canister purge hose (purge cut valve solenoid to canister)
- 7. Canister
- 8. Canister holder
- 9. Canister breather hose
- Sidestand switch lead
- 11. Starter motor
- A. To throttle body
- B. Assemble the fuel tank breather hose (fuel tank cap to canister) so the white paint mark faces the rear of the vehicle.
- C. To fuel tank cap
- D. To fuel tank
- E. Insert the end of the fuel tank drain hose until it contacts the fuel tank.
- F. Assemble the fuel tank drain hose so the blue paint faces the rear of the vehicle.
- G. Assemble the knob of the clip to align with the blue paint mark on the fuel tank drain hose.
- H. Assemble the knobs of the clips to align with the white paint mark on the fuel tank breather hose (fuel tank cap to canister).
- I. Front side of the vehicle
- J. Right side of the vehicle
- K. Insert the end of the canister purge hose (purge cut valve solenoid to canister) until it contacts the purge cut valve solenoid.
- L. Assemble the canister purge hose (purge cut valve solenoid to canister) so the yellow paint mark faces the upper side of the vehicle.
- M. Assemble the fuel tank breather hose (fuel tank cap to canister) so the yellow paint mark faces the upper side of the vehicle.
- N. Assemble the knob of the clip to align with the yellow paint mark on the fuel tank breather hose (fuel tank cap to canister).
- Assemble the knob of the clip to align with the blue paint mark on the canister purge hose (purge cut valve solenoid to canister).
- P. Assemble the canister purge hose (purge cut valve solenoid to canister) so the blue paint mark faces the upper side of the vehicle.
- Q. Locate the protrusion on the canister holder between the starter motor mounting bosses on the crankcase.
- R. Insert the end of the hose until it contacts the canister.
- S. While installing the fuel tank drain hose to the canister holder, do not allow the base of the curves of the fuel tank drain hose to rise up on the clamp of the canister holder.


- T. Insert the end of the canister breather hose until it contacts the canister.
- U. Assemble the knob of the clip to align with the white paint mark on the canister breather hose
- Assemble the canister breather hose so the white paint mark faces the upper side of the vehicle.
- W. Assemble the canister breather hose so it is lower than the fuel tank drain hose.
- Fit the gray tape portion of the sidestand switch lead to the canister holder.
- Y. While installing the fuel tank drain hose and canister breather hose to the canister holder, do not allow the bases of the curves of the hoses to rise up on the canister holder.

Fuel tank (top and right side view)

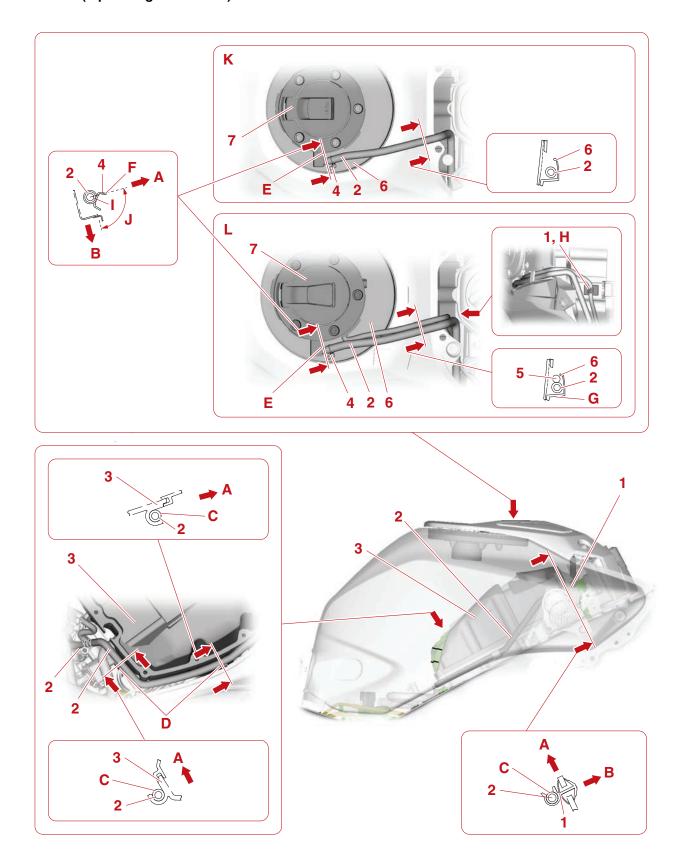


- 1. Clamp
- 2. Fuel tank breather hose
- 3. Air filter case assembly
- Clip
- Fuel tank cap lead (for MT09SPR/ MT09SPRC)
- 6. Fuel tank
- 7. Fuel tank cap
- A. Upper side of the vehicle
- B. Right side of the vehicle
- C. Assemble the fuel tank breather hose so the white paint faces the upper side of the vehicle.
- D. Assemble the fuel tank breather hose to the claw on the air filter case assembly.
- E. Insert the end of the fuel tank breather hose until it contacts the fuel tank cap.
- F. Install the knob of the clip to align with the yellow paint on the fuel tank breather hose.
- G. Route the fuel tank breather hose on the rib side of the fuel tank.
- H. Fix the fuel tank cap lead with a clamp.
- Assemble so the yellow paint on the fuel tank breather hose is located within the range shown in the illustration.
- J. 90°
- K. For MT09R/MT09RC
- L. For MT09SPR/MT09SPRC

Air filter case and throttle bodies (left side view)

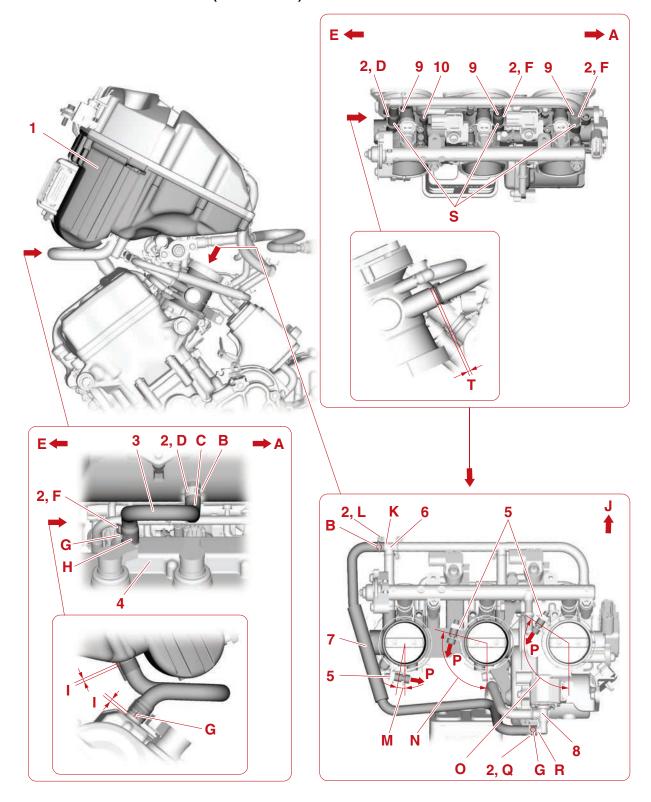


- 1. Air filter case
- 2. Clip
- Cylinder head breather hose
- 4. Cylinder head cover
- 5. Hose clamp
- 6. Hose joint
- 7. Canister purge hose (purge cut valve solenoid to hose joint) (for California only)
- 8. Purge cut valve solenoid (for California only)
- 9. Canister purge hose (for California only)
- 10. Throttle body
- A. Left side of the vehicle
- B. Yellow paint mark
- C. Assemble the cylinder head breather hose so the yellow paint mark faces the left side of the vehicle. Insert the end of the cylinder head breather hose until it contacts the air filter case.
- D. Face the claw of the clip to left side of the vehicle.
- E. Right side of the vehicle
- F. Face the claw of the clip to right side of the vehicle.
- G. White paint mark
- H. Assemble the cylinder head breather hose so the white paint mark faces the right side of the vehicle. Insert the end of the cylinder head breather hose until it contacts the cylinder head cover.
- I. 1–3 mm (0.04–0.12 in)
- J. Front side of the vehicle
- K. Insert the end of the canister purge hose (purge cut valve solenoid to hose joint) until it contacts the hose joint. (for California only)
- Face the claw of the clip to front side of the vehicle.
- M. 10°
- N. 105°
- O. 123°
- P. Face the bolt head to the position as shown in the illustration.
- Face the claw of the clip to upper side of the vehicle.
- R. Insert the end of the canister purge hose (purge cut valve solenoid to hose joint) until it contacts the purge cut valve solenoid. (for California only)
- Insert the end of the canister purge hose until it contacts the throttle body. (for California only)
- T. 5-7 mm (0.20-0.28 in)

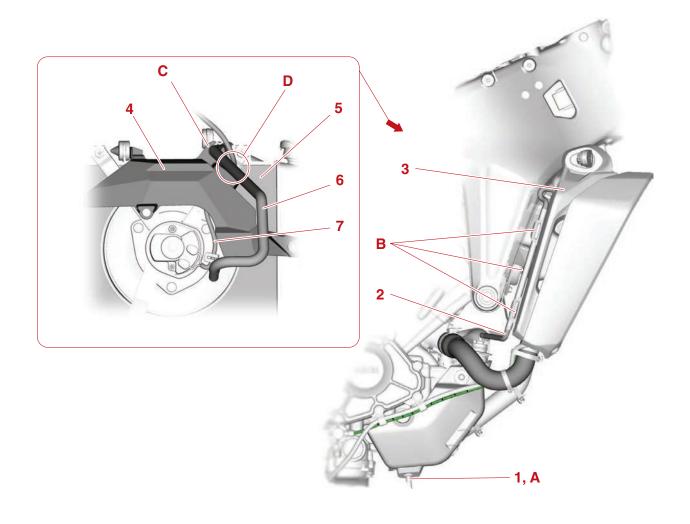

- 1. Coolant reservoir breather hose
- 2. Coolant reservoir hose
- 3. Front side panel (right)
- 4. Radiator fan cover
- 5. Radiator
- 6. Radiator hose (cylinder head to radiator)
- 7. Radiator fan motor lead
- A. Direction of the coolant reservoir breather hose tip does not matter.
- B. Pass the coolant reservoir hose through the front side panel (right) guide.
- C. Pass the radiator hose (cylinder head to radiator) through the notch hole of the radiator fan cover.
- D. Pass the radiator fan motor lead through the notch of the radiator fan cover.

Radiator 2 (front side view)

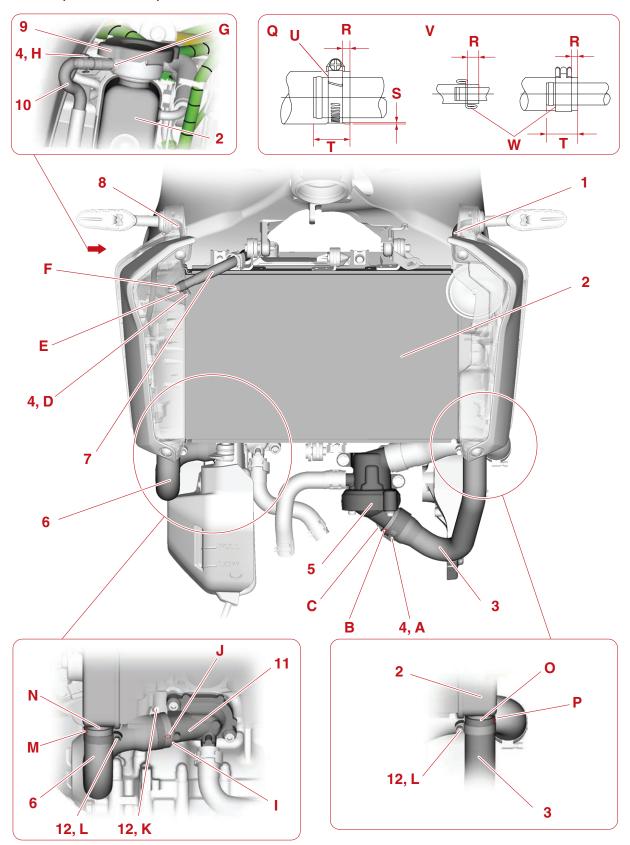



- 1. Front turn signal/position light lead (left)
- 2. Radiator
- 3. Radiator outlet hose
- 4. Clip
- 5. Thermostat assembly
- 6. Radiator inlet hose
- 7. Radiator hose (cylinder head to radiator)
- 8. Front turn signal/position light lead (right)
- 9. Radiator cap
- 10. Coolant reservoir hose
- 11. Water jacket joint
- 12. Hose clamp
- A. Face the knob of the clip toward the yellow paint mark on the radiator outlet hose.
- Align the yellow paint mark on the radiator outlet hose with the rib on the thermostat assembly.
- C. Insert the radiator outlet hose until it touches the rib of the thermostat assembly.
- Install the clip with its knob facing the down of the vehicle.
- E. Assemble the radiator hose (cylinder head to radiator) so the white paint mark faces the front of the vehicle.
- F. Install the radiator hose (cylinder head to radiator) up to the base of the bend in the radiator pipe.
- G. Insert the coolant reservoir hose up to the section where the radiator pipe increases in diameter.
- H. Face the knob of the clip to the inside of the vehicle. Fit the clip in the center between the raised portion of the hose fittings, never ride on the raised portion of the hose fitting.
- I. Insert the radiator inlet hose until it touches the rib of the water jacket joint.
- J. Align the yellow paint mark on the radiator inlet hose with the rib on the water jacket joint.
- K. Install the hose clamp screw to face it top side of the vehicle.
- Install the hose clamp with the screw head facing the inside of the vehicle.
- M. Install the radiator inlet hose with its white paint mark facing outside of the vehicle.
- N. Insert the radiator inlet hose up to the section where the fuel tank pipe increases in diameter.
- Insert the radiator outlet hose up to the section where the fuel tank pipe increases in diameter.
- P. Install the radiator outlet hose with its white paint mark facing outside of the vehicle.
- Q. Hose clamp fixed position details.
- R. 3 mm (0.12 in) or more
- S. 0–1 mm (0–0.04 in)
- T. Hose plug-in section

- U. Make sure not to install the hose clamp on the raised portion of the hose fitting.
- V. Clip fixed position details.
- W. Make sure not to install the clip on the raised portion of the hose fitting.

EAS34037

OPTION COUPLER LOCATION CHART

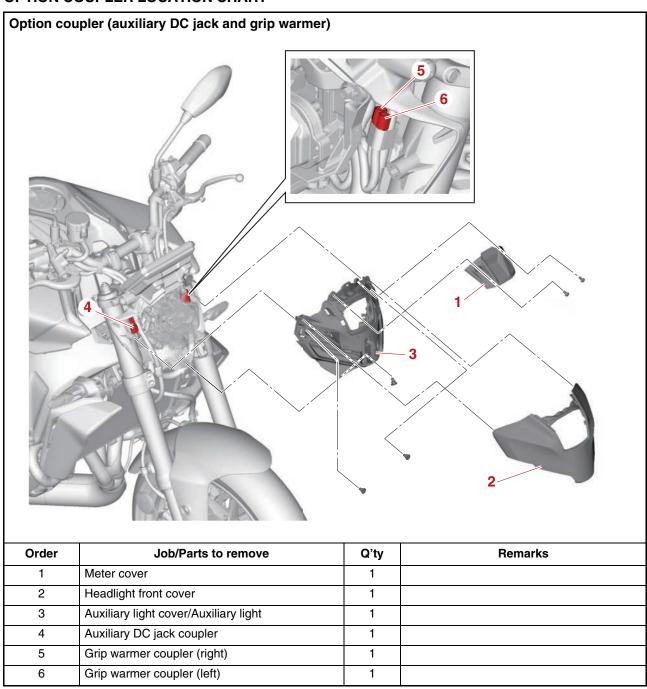

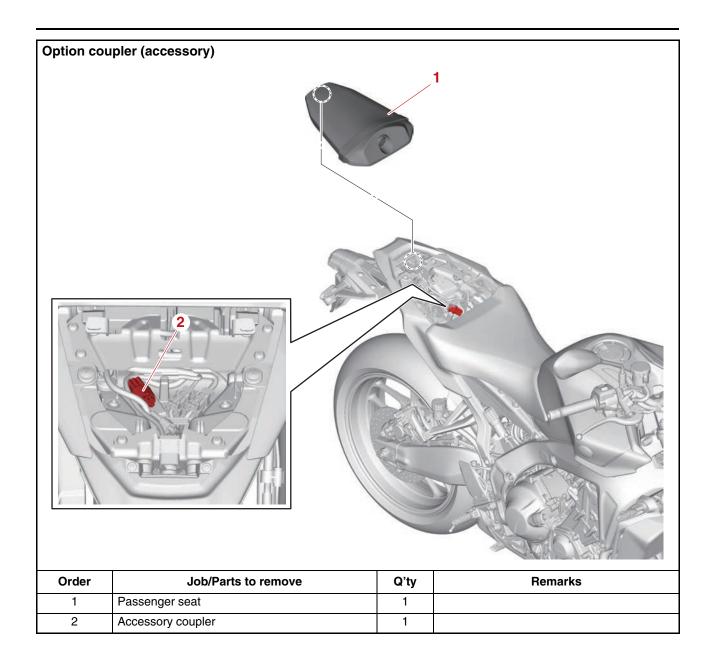

PERIODIC CHECKS AND ADJUSTMENTS

PERIODIC MAINTENANCE	_
INTRODUCTION	
PERIODIC MAINTENANCE CHART FOR THE EMISSION CONTROL	
SYSTEM	
GENERAL MAINTENANCE AND LUBRICATION CHART	3-1
CHECKING THE VEHICLE USING THE YAMAHA DIAGNOSTIC	
TOOL	
CHECKING THE FUEL LINE	
CHECKING THE SPARK PLUGS	
ADJUSTING THE VALVE CLEARANCE	
CHECKING THE ENGINE IDLING SPEED	
SYNCHRONIZING THE THROTTLE BODIES	
CHECKING THE THROTTLE BODY JOINTS	
CHECKING THE CYLINDER HEAD BREATHER HOSE	.3-10
CHECKING THE EXHAUST SYSTEM	
CHECKING THE CANISTER (for California only)	.3-11
CHECKING THE PURGE CUT VALVE SOLENOID	
(for California only)	.3-11
REPLACING THE AIR FILTER ELEMENT	.3-11
ADJUSTING THE CLUTCH LEVER POSITION	.3-12
ADJUSTING THE CLUTCH LEVER FREE PLAY	
CHECKING THE BRAKE OPERATION	.3-13
CHECKING THE BRAKE FLUID LEVEL	.3-13
ADJUSTING THE FRONT DISC BRAKE	
CHECKING THE FRONT BRAKE PADS	.3-14
ADJUSTING THE REAR DISC BRAKE	
CHECKING THE REAR BRAKE PADS	
CHECKING THE FRONT BRAKE HOSE	
CHECKING THE REAR BRAKE HOSE	
BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)	
CHECKING THE WHEELS	
CHECKING THE TIRES	
CHECKING THE WHEEL BEARINGS	
CHECKING THE SWINGARM OPERATION	
LUBRICATING THE SWINGARM PIVOT	.3-18
DRIVE CHAIN SLACK	
LUBRICATING THE DRIVE CHAIN	
CHECKING AND ADJUSTING THE STEERING HEAD	
LUBRICATING THE STEERING HEAD	
CHECKING THE CHASSIS FASTENERS	
LUBRICATING THE BRAKE LEVER	
LUBRICATING THE CLUTCH LEVER	
LUBRICATING THE PEDAL	
ADJUSTING THE SHIFT PEDAL	
CHECKING THE SIDESTAND	
LUBRICATING THE SIDESTAND	
CHECKING THE SIDESTAND SWITCH	
CHECKING THE FRONT FORK	
ADJUSTING THE FRONT FORK LEGS (for MT09R/MT09RC)	
ADJUSTING THE FRONT FORK LEGS (for MT09SPR/MT09SPRC)	.3-23

CHECKING THE REAR SHOCK ABSORBER ASSEMBLY	3-25
ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY	
(for MT09R/MT09RC)	3-25
ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY	
(for MT09SPR/MT09SPRC)	3-26
CHECKING THE CONNECTING ARM AND RELAY ARM	3-28
CHECKING THE ENGINE OIL LEVEL	3-28
CHANGING THE ENGINE OIL	3-29
MEASURING THE ENGINE OIL PRESSURE	3-30
CHECKING THE COOLANT LEVEL	
CHECKING THE COOLING SYSTEM	
CHANGING THE COOLANT	3-32
CHECKING THE FRONT BRAKE LIGHT SWITCH	3-33
ADJUSTING THE REAR BRAKE LIGHT SWITCH	3-34
CHECKING AND LUBRICATING THE CABLES	3-34
CHECKING THE THROTTLE GRIP	3-34
LUBRICATING THE THROTTLE GRIP	3-34
CHECKING AND CHARGING THE BATTERY	3-34
CHECKING THE FUSES	3-34
ADJUSTING THE HEADLIGHT BEAMS	3-35

FAS20022

PERIODIC MAINTENANCE

EAS30022

INTRODUCTION

This chapter includes all information necessary to perform recommended checks and adjustments. If followed, these preventive maintenance procedures will ensure more reliable vehicle operation, a longer service life and reduce the need for costly overhaul work. This information applies to vehicles already in service as well as to new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

TIP

- From 24000 mi (37000 km) or 36 months, repeat the maintenance intervals starting from 8000 mi (13000 km) or 12 months.
- Items marked with an asterisk require special tools, data and technical skills, have a Yamaha dealer perform the service.

EAS30614

PERIODIC MAINTENANCE CHART FOR THE EMISSION CONTROL SYSTEM

				INITIAL	INITIAL ODOMETER READINGS				
N	lo.	ITEM	ROUTINE	600 mi (1000 km) or 1 month	4000 mi (7000 km) or 6 months	8000 mi (13000 km) or 12 months	12000 mi (19000 km) or 18 months	16000 mi (25000 km) or 24 months	20000 mi (31000 km) or 30 months
1	*	Fuel line	Check fuel hoses for cracks or damage. Replace if necessary.		√	V	V	V	V
2	*	Spark plugs	Check condition. Adjust gap and clean.		V	V	√	V	V
			Replace.		Every 12	2000 mi (190	00 km) or 18	3 months	
3	*	Valve clearance	Check and adjust valve clear- ance when engine is cold.	Every 26600 mi (42000 km)					
4	*	Crankcase breath- er system	Check breather hose for cracks or damage. Replace if necessary.		√	V	V	V	V
5	*	Fuel injection	Adjust synchronization.	V	V	V	V	V	1
6	*	Exhaust system	Check for leakage. Tighten if necessary. Replace gasket(s) if necessary.	V	V	V	V	V	V
7	*	Evaporative emission control system (for California only)	Check control system for damage. Replace if necessary.				V		V

EAS30615

GENERAL MAINTENANCE AND LUBRICATION CHART

				INITIAL	INITIAL ODOMETER READINGS					
ı	No.	ITEM	ROUTINE	600 mi (1000 km) or 1 month	4000 mi (7000 km) or 6 months	8000 mi (13000 km) or 12 months	12000 mi (19000 km) or 18 months	16000 mi (25000 km) or 24 months	20000 mi (31000 km) or 30 months	
1	*	Diagnostic system check	Perform dynamic inspection using Yamaha diagnostic tool. Check the error codes.	V	V	V	V	V	V	
2	*	Air filter element	Replace.	Every 24000 mi (37000 km)						
3	*	Clutch	Check operation. Adjust or replace cable.	V	V	V	V	√	V	

				INITIAL		ODON	IETER REA	DINGS		
No	э.	ITEM	ROUTINE	600 mi (1000 km) or 1 month	4000 mi (7000 km) or 6 months	8000 mi (13000 km) or 12 months	12000 mi (19000 km) or 18 months	16000 mi (25000 km) or 24 months	20000 mi (31000 km) or 30 months	
4	*	Front brake	Check operation, fluid level, and for fluid leakage. Replace brake pads if necessary.	V	√	V	V	V	V	
5	*	Rear brake	Check operation, fluid level, and for fluid leakage. Replace brake pads if necessary.	V	V	V	V	V	V	
6	*	Brake hoses	 Check for cracks or damage. Check for correct routing and clamping. 		V	V	1	1	V	
			Replace.			Every -	4 years			
7	*	Brake fluid	Change.		T	Every :	2 years	1	1	
8	*	Wheels	Check runout and for damage.Replace if necessary.		√	√	√	√	√	
9	*	Tires	 Check tread depth and for damage. Replace if necessary. Check air pressure. Correct if necessary. 		V	V	V	V	V	
10	*	Wheel bearings	 Check bearings for smooth operation. Replace if necessary. 		V	V	V	√	V	
		Swingarm pivot bearings	Check operation and for excessive play.		V	V	V	1	V	
11	^		Moderately repack with lithi- um-soap-based grease.		E	very 32000 i	mi (50000 kr	n)		
12		Drive chain	 Check chain slack, alignment and condition. Adjust and lubricate chain with a special O-ring chain lubri- cant thoroughly. 	Every 600 mi (1000 km) and after washing the motorcycle, riding in the rain or riding in wet areas						
4.0	_		Check bearing assemblies for looseness.	V	√	V	V	1	√	
13	^	Steering bearings	Moderately repack with lithi- um-soap-based grease.		E	very 12000 i	mi (19000 kr	cm)		
14	*	Chassis fasteners	 Check all chassis fitting and fasteners. Correct if necessary. 		√	V	√	√	√	
15		Brake lever pivot shaft	Apply silicone grease lightly.		V	V	V	V	V	
16		Brake pedal pivot shaft	Apply lithium-soap-based grease lightly.		V	V	V	V	√	
17		Clutch lever pivot shaft	Apply lithium-soap-based grease lightly.		V	V	V	V	√	
18		Shift pedal pivot shaft	Apply lithium-soap-based grease lightly.		V	V	V	V	√	
19		Sidestand pivot	Check operation. Apply lithium-soap-based grease lightly.		V	V	V	V	V	
20	*	Sidestand switch	Check operation and replace if necessary.	V	V	V	V	V	√	
21	*	Front fork	Check operation and for oil leakage. Replace if necessary.		V	V	V	√	V	
22	*	Shock absorber assembly	 Check operation and for oil leakage. Replace if necessary. 		V	V	V	√	V	
23	*	Rear suspension link pivots	Apply lithium-soap-based grease lightly.			√		V		

						ODOMETER READINGS			
N	o.	ITEM	ROUTINE	600 mi (1000 km) or 1 month	4000 mi (7000 km) or 6 months	8000 mi (13000 km) or 12 months	12000 mi (19000 km) or 18 months	16000 mi (25000 km) or 24 months	20000 mi (31000 km) or 30 months
24		Engine oil	Change (warm engine before draining).	V	V	√	√	√	V
25		Engine oil filter cartridge	Replace.	V		1		V	
26	*	* Cooling system	Check coolant level and vehi- cle for coolant leakage.		V	1	√	√	V
			Change coolant.	Every 3 years					
27	*	Front and rear brake switches	Check operation.	V	V	V	√	√	V
28	*	Control cables	Apply Yamaha cable lubricant or other suitable cable lubri- cant thoroughly.	V	V	V	V	V	V
29	*	Throttle grip	Check operation. Lubricate throttle grip housing tube guides.		V	V	V	V	V
30	*	Lights, signals and switches	Check operation. Adjust headlight beam.	V	√	1	√	√	V

TIP___

- Air filter
- This model uses a disposable oil-coated paper element. This element cannot be cleaned with compressed air, doing so will only damage it.
- Replace the air filter more frequently if you often ride in the rain or dusty conditions.
- Hydraulic brake service
- Regularly check the brake fluid levels. Replenish as necessary.
- Every two years replace the internal components of the brake master cylinders and calipers, and change the brake fluid.
- Replace the brake hoses every four years or sooner if cracked or damaged.

EAS32024

CHECKING THE VEHICLE USING THE YAMAHA DIAGNOSTIC TOOL

Use the YDT and check the vehicle according to the following procedure.

- 1. Remove:
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Remove the protective cap, and then connect the YDT to the coupler.
 Refer to "YDT" on page 9-3.



Yamaha diagnostic tool USB (US) 90890-03275 Yamaha diagnostic tool (A/I)

TIP

Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).

90890-03273

- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.
- 3. Check:
 - DTC

TIP

Use the "Diagnosis of malfunction" function of the YDT to check the DTC. For information about using the YDT, refer to the operation manual that is included with the tool.

DTC No. is displayed → Check and repair the probable cause of the malfunction.

Refer to "SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE" on page 9-41.

- 4. Perform:
 - Dynamic inspection

TIP

Use the "Dynamic inspection" function of the YDT version 3.0 and after to perform the dynamic inspection. For information about using the YDT, refer to the operation manual that is included with the tool.

- 5. Install:
 - Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.

EAS3061

CHECKING THE FUEL LINE

The following procedure applies to all of the fuel, drain and breather hoses.

- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank center cover
- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank Refer to "FUEL TANK" on page 7-1.
- 2. Check:
 - Fuel hose "1"
 - Fuel tank breather hose "2"
 - Fuel tank drain hose "3"
 Cracks/damage → Replace.
 Loose connection → Connect properly.


ECA14940

NOTICE

Make sure the fuel tank breather hose is routed correctly.

TIP_

Before removing the fuel hoses, place a few rags in the area under where it will be removed.

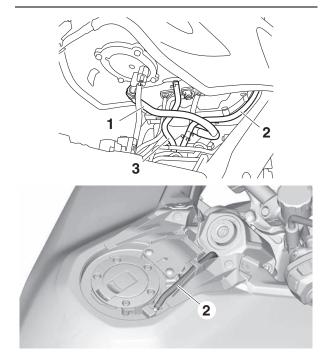

- 3. Install:
 - Fuel tank
 Refer to "FUEL TANK" on page 7-1.
 - Air scoop
 - Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Rider seat
 - Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.

EAS30620

CHECKING THE SPARK PLUGS

The following procedure applies to all of the spark plugs.

- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank center cover
- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank
 Refer to "FUEL TANK" on page 7-1.
- Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
- 2. Remove:
 - · Ignition coil
 - Spark plug

ECA13320

NOTICE

Before removing the spark plugs, blow away any dirt accumulated in the spark plug wells with compressed air to prevent it from falling into the cylinders.

- 3. Check:
 - Spark plug type Incorrect → Change.



Manufacturer/model NGK/LMAR9A-9

- 4. Check:
- Electrode "1"

Damage/wear \rightarrow Replace the spark plug.


• Insulator "2"

Abnormal color \rightarrow Replace the spark plug. Normal color is medium-to-light tan.

- 5. Clean:
- Spark plug (with a spark plug cleaner or wire brush)
- 6. Measure:
- Spark plug gap "a" (with a wire thickness gauge)
 Out of specification → Regap.



Spark plug gap 0.8-0.9 mm (0.031-0.035 in)

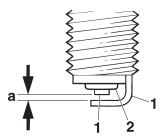

G088879

- 7. Install:
 - Spark plug
 - Ignition coil



Spark plug 13 N·m (1.3 kgf·m, 9.6 lb·ft)

TIP

Before installing the spark plug, clean the spark plug and gasket surface.

- 8. Install:
 - Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
 - Fuel tank Refer to "FUEL TANK" on page 7-1.
 - Air scoop
 - Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Rider seat
 - Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.

FAS3062


ADJUSTING THE VALVE CLEARANCE

The following procedure applies to all of the valves.


TIP

Valve clearance adjustment should be made on a cold engine, at room temperature.


- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank center cover
- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank Refer to "FUEL TANK" on page 7-1.
- Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
- Front side panel Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Radiator Refer to "RADIATOR" on page 6-3.
- 2. Remove:
 - Ignition coil
 - Spark plug
 - Cylinder head cover
 - Cylinder head cover gasket Refer to "CAMSHAFTS" on page 5-16.
- 3. Remove:
 - Timing mark accessing bolt "1"
 - Crankshaft end cover "2"

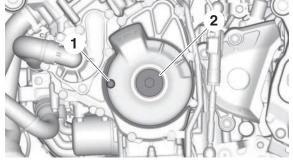

- 4. Measure:
- Valve clearance
 Out of specification → Adjust.

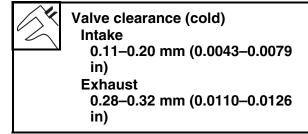

- a. Turn the crankshaft counterclockwise.
- b. When piston #1 is at TDC on the compression stroke, align the TDC mark "a" on the generator rotor with the generator rotor cover mark "b".

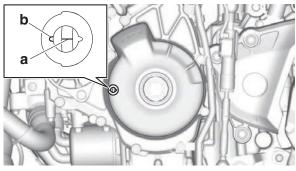

TIP

TDC on the compression stroke can be found when the camshaft lobes are turned away from each other.

c. Measure the valve clearance with a thickness gauge.




Thickness gauge 90890-03268 Feeler gauge set YU-26900-9

TIP


- If the valve clearance is incorrect, record the measured reading.
- Measure the valve clearance in the following sequence.

Valve clearance measuring sequence Cylinder #1 \rightarrow #2 \rightarrow #3

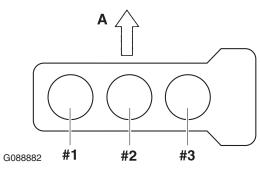

A. Front

d. To measure the valve clearances of the other cylinders, starting with cylinder #1 at TDC, turn the crankshaft counterclockwise as specified in the following table.

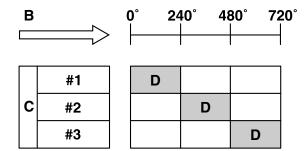

- B. Degrees that the crankshaft is turned counterclockwise
- C. Cylinder
- D. Combustion cycle

Cylinder #2	240°
Cylinder #3	480°

- 5. Remove:
 - Camshaft

TIP

- Refer to "CAMSHAFTS" on page 5-16.
- When removing the timing chain and camshafts, fasten the timing chain with a wire to retrieve it if it falls into the crankcase.
- 6. Adjust:
 - Valve clearance
 - a. Remove the valve lifter and the valve pad with a valve lapper.



Valve lapper (ø14) 90890-04101 Valve lapper (ø14) YM-A8998

TIP

- Cover the timing chain opening with a rag to prevent the valve pad from falling into the crankcase.
- Make a note of the position of each valve lifter and valve pad so that they can be installed in the correct place.
 - b. Calculate the difference between the specified valve clearance and the measured valve clearance.

Example:

Specified valve clearance = 0.11–0.20 mm (0.004–0.008 in)

Measured valve clearance = 0.25 mm (0.010 in)

0.25 mm (0.010 in) - 0.20 mm (0.008 in) = 0.05 mm (0.002 in)


c. Check the thickness of the current valve pad.

TIP_

The thickness "a" of each valve pad is marked in hundredths of millimeters on the side that touches the valve lifter.

Example:

If the valve pad is marked "158", the pad thickness is 1.58 mm (0.062 in).

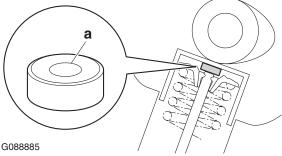

d. Calculate the sum of the values obtained in steps (b) and (c) to determine the required valve pad thickness and the valve pad number.

Example:

1.58 mm (0.062 in) + 0.05 mm (0.002 in) = 1.63 mm (0.064 in)

The valve pad number is 163.

e. Round off the valve pad number according to the following table, and then select the suitable valve pad.

Last digit	Rounded value
0, 1, 2	0
3, 4, 5, 6	5
7, 8, 9	10

TIP

Refer to the following table for the available valve pads.

Valve pad range	Nos. 150–240
Valve pad thickness	1.50–2.40 mm (0.0590–0.0944 in)
Available valve pads	19 thicknesses in 0.05 mm (0.002 in) increments

Example:

Valve pad number = 163 Rounded value = 165 New valve pad number = 165

f. Install the new valve pad and the valve lifter.

TIP_

- Lubricate the valve pad with molybdenum disulfide oil.
- Lubricate the valve lifter (Top side) with molybdenum disulfide oil.
- Lubricate the valve lifter (Outer side) with engine oil.
- Install the valve lifter and the valve pad in the correct place.
- The valve lifter must turn smoothly when rotated by hand.
 - g. Install the exhaust and intake camshafts, timing chain and camshaft caps.



Camshaft cap bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP_

- Refer to "CAMSHAFTS" on page 5-16.
- Lubricate the camshaft lobes and camshaft journals.
- First, install the exhaust camshaft.
- Align the camshafts marks with the camshaft cap marks.
- Turn the crankshaft counterclockwise several full turns to seat the parts.
 - h. Measure the valve clearance again.
 - If the valve clearance is still out of specification, repeat all of the valve clearance adjustment steps until the specified clearance is obtained.
- 7. Install:
- All removed parts

TIP

For installation, reverse the removal procedure.

EAS31017

CHECKING THE ENGINE IDLING SPEED

TIP

Prior to checking the engine idling speed, the throttle body synchronization should be adjusted properly, the air filter element should be clean, and the engine should have adequate compression.

- 1. Start the engine and let it warm up for several minutes.
- 2. Check:
 - Engine idling speed
 Out of specification → Go to next step.



Engine idling speed 1200–1400 r/min

- 3. Check:
 - ISC (idle speed control) learning value "00" or "01" → Check the intake system.
 "02" → Clean the throttle bodies.
 Refer to "CHECKING AND CLEANING THE THROTTLE BODIES" on page 7-8.
 - a. Connect the YDT.
 Use the diagnostic code number "67".
 Refer to "DIAGNOSTIC CODE: SENSOR OPERATION TABLE" on page 9-66.
 - b. Check the ISC (idle speed control) leaning value.

EAS3079

SYNCHRONIZING THE THROTTLE BODIES

TIF

Before synchronizing the throttle bodies, check the following items:

- Valve clearance
- Spark plug
- Air filter element
- Throttle body joint
- Fuel hose
- Exhaust system
- Breather hose


Checking the throttle body synchronization

1. Stand the vehicle on a level surface.

TIP

Place the vehicle on a maintenance stand.


- 2. Remove:
 - Passenger seat
 - Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Fuel tank center cover
- Air scoop
 Refer to "GENERAL CHASSIS (1)" on
 page 4-1.
- Fuel tank Refer to "FUEL TANK" on page 7-1.
- Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
- 3. Remove:
 - Service hose cap "1"

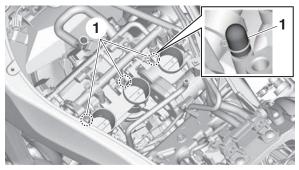

- 4. Install:
 - Vacuum gauge "1"



Vacuum gauge 90890-03094 Vacuummate YU-44456

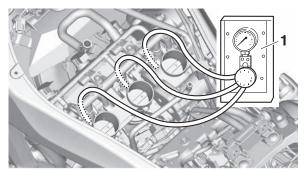

- 5. Install:
- Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
- Fuel tank
 Refer to "FUEL TANK" on page 7-1.
- 6. Check:
- Throttle body synchronization

 a. Start the engine, warm it up for several minutes, and then let it run at the specified engine idling speed.



Engine idling speed 1200–1400 r/min

b. Check the vacuum pressure.



Difference in vacuum pressure between the cylinders 0-1.3 kPa (10 mmHg, 0.4 inHg)

If out of specification \rightarrow Adjust the throttle body synchronization.

Adjusting the throttle body synchronization

- 1. Adjust:
 - Throttle body synchronization
 - a. Start the engine, warm it up for several minutes, and then let it run at the specified engine idling speed.



Engine idling speed 1200–1400 r/min

b. Using the throttle body that has the bypass air screw "1" with a white paint mark as the standard, adjust the other throttle bodies by turning its bypass air screw in or out.

ECA21300

NOTICE


Do not turn the bypass air screw (white paint mark) of the throttle body that is the standard. Otherwise, the engine may run roughly at idle and the throttle bodies may not operate properly.

TIP

- Turn the bypass air screw using the carburetor angle driver.
- After each step, rev the engine two or three times, each time for less than a second, and check the synchronization again.
- If a bypass air screw was removed, turn the screw in fully and be sure to synchronize the throttle bodies.
- If the throttle body synchronization can not be adjusted using the bypass air screw, clean or replace the throttle bodies.
- The difference in vacuum pressure between the throttle bodies should not exceed 1.3 kPa (10 mmHq).



Carburetor angle driver 2 90890-03173

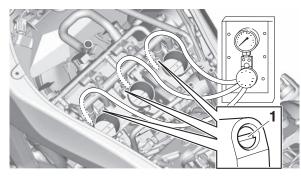

- 2. Stop the engine and remove the measuring equipment.
- 3. Install:
 - Service hose cap
- 4. Install:
 - Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
 - Fuel tank Refer to "FUEL TANK" on page 7-1.
 - Air scoop
 - Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Rider seat
 - Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.

EAS30798

CHECKING THE THROTTLE BODY JOINTS

- 1. Remove:
- Throttle body Refer to "THROTTLE BODIES" on page 7-6.
- 2. Check:
 - Throttle body joint Cracks/damage → Replace.
- 3. Install:
 - Throttle body Refer to "THROTTLE BODIES" on page 7-6.

EAS30623


CHECKING THE CYLINDER HEAD BREATHER HOSE

- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank center cover

- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank
 Refer to "FUEL TANK" on page 7-1.
- Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
- 2. Check:
- Cylinder head breather hose "1"
 Cracks/damage → Replace.
 Loose connection → Connect properly.

NOTICE

Make sure the cylinder head breather hose is routed correctly.

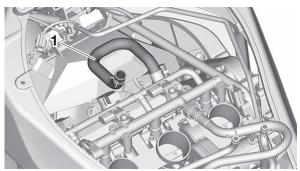

- 3. Install:
 - Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
 - Fuel tank
 Refer to "FUEL TANK" on page 7-1.
 - Air scoop
 - Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Rider seat
 - Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.


EAS3062

CHECKING THE EXHAUST SYSTEM

- 1. Check:
- Muffler assembly "1"
 Cracks/damage → Replace.
- Gasket "2"
 Exhaust gas leaks → Replace.
- 2. Check:
 - Tightening torque
 - Exhaust pipe nut "3"
 - Muffler bolt "4"



Exhaust pipe nut 20 N·m (2.0 kgf·m, 15 lb·ft) Muffler bolt 20 N·m (2.0 kgf·m, 15 lb·ft)

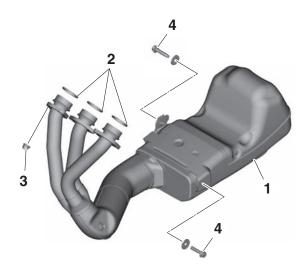

EAS30626

CHECKING THE CANISTER (for California only)

- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank center cover
- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank
 Refer to "FUEL TANK" on page 7-1.
- 2. Check:
 - Canister
 - Canister purge hose
 - Fuel tank breather hose
 - Canister breather hose Cracks/damage → Replace. Loose connection → Connect properly. Refer to "FUEL TANK" on page 7-1.
- 3. Install:
 - Fuel tank
 Refer to "FUEL TANK" on page 7-1.
 - Air scoop

- Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Rider seat
- Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.

EAS33546


CHECKING THE PURGE CUT VALVE SOLENOID (for California only)

Refer to "CHECKING THE PURGE CUT VALVE SOLENOID (for California only)" on page 7-5.

EAS3062

REPLACING THE AIR FILTER ELEMENT


- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank center cover
- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuel tank
 Refer to "FUEL TANK" on page 7-1.
- 2. Remove:
- ECU (Engine Control Unit) "1"
- Air filter case cover "2"
 Refer to "GENERAL CHASSIS (2)" on page 4-14.

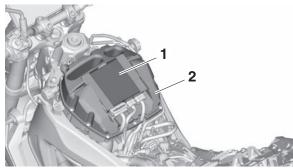

- 3. Check:
- Air filter element "1"
- Air filter seal
 Damage → Replace.

TIP

- Replace the air filter element every 24000 mi (37000 km) of operation.
- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.

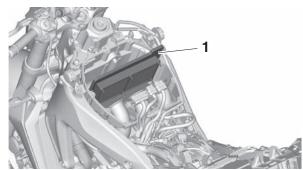

- 4. Install:
- Air filter element
- · Air filter case cover
- ECU (Engine Control Unit)
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

ECA20710

NOTICE

Never operate the engine without the air filter element installed. Unfiltered air will cause rapid wear of engine parts and may damage the engine. Operating the engine without the air filter element will also affect throttle body synchronization, leading to poor engine performance and possible overheating.

TIP


When installing the air filter element into the air filter case cover, make sure that the sealing surfaces are aligned to prevent any air leaks.

- 5. Install:
 - Fuel tank
 Refer to "FUEL TANK" on page 7-1.
 - Air scoop
 - Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Rider seat
 - Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.


EAS3148

ADJUSTING THE CLUTCH LEVER POSITION

- 1. Adjust:
- Clutch lever position (distance "a" from the handlebar grip to the clutch lever)

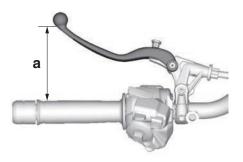

- a. Push the clutch lever forward.
- b. Turn the adjusting knob "1" until the clutch lever is in the desired position.

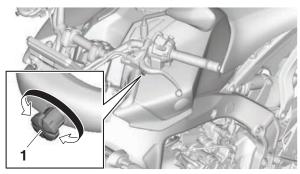


EAS3062

ADJUSTING THE CLUTCH LEVER FREE PLAY

- 1. Check:
- Clutch lever free play "a"
 Out of specification → Adjust.



Clutch lever free play 5.0–10.0 mm (0.20–0.39 in)

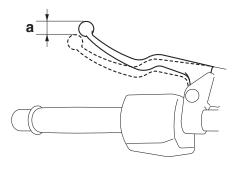


G088887

- 2. Adjust:
 - Clutch lever free play

Handlebar side

- a. Loosen the locknut "1".
- b. Turn the adjusting bolt "2" until the specified clutch lever free play is obtained.

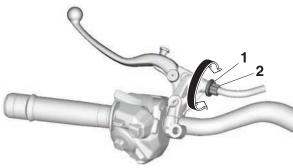

c. Tighten the locknut.

TIP


If the specified clutch lever free play cannot be obtained on the handlebar side of the cable, use the adjusting nut on the engine side.

Engine side

- a. Loosen the locknut "1".
- b. Turn the adjusting nut "2" until the specified clutch lever free play is obtained.
- c. Tighten the locknut "1".



Clutch cable locknut 7 N·m (0.7 kgf·m, 5.2 lb·ft)

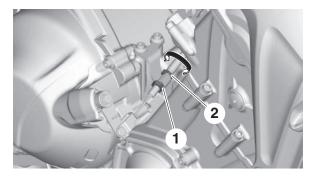

EAS30801

CHECKING THE BRAKE OPERATION

- 1. Check:
- Brake operation
 Brake not working properly → Check the brake system.

Refer to "FRONT BRAKE" on page 4-31 and "REAR BRAKE" on page 4-49.

TIP

Drive on the dry road, operate the front and rear brakes separately and check to see if the brakes are operating properly. FAS30632

CHECKING THE BRAKE FLUID LEVEL

1. Stand the vehicle on a level surface.

TIE

- Place the vehicle on a maintenance stand.
- Make sure the vehicle is upright.
- 2. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.



Front brake
Specified brake fluid
DOT 4
Rear brake
Specified brake fluid
DOT 4

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.


TIP

In order to ensure a correct reading of the brake fluid level, make sure the top of the brake fluid reservoir is horizontal.

EAS3063


ADJUSTING THE FRONT DISC BRAKE

- 1. Adjust:
- Front brake lever position (distance "a" from the throttle grip to the brake lever)

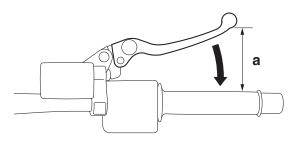

G088889

- a. Push the brake lever forward.
- b. Turn the adjusting knob "1" until the brake lever is in the desired position.

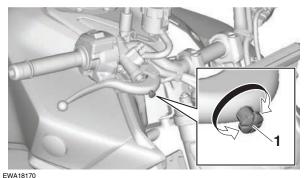

WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. Before the vehicle is operated, the air must be removed by bleeding the brake system. Air in the brake system will considerably reduce brake performance resulting in loss of control and possibly cause an accident. Therefore, check and if necessary, bleed the brake system.

ECA13490

NOTICE

After adjusting the brake lever position, make sure there is no brake drag.


EAS30633

CHECKING THE FRONT BRAKE PADS

The following procedure applies to all of the brake pads.


- 1. Operate the brake.
- 2. Check:
 - Front brake pad For MT09R/MT09RC

Wear indicators "1" almost touch the brake disc \rightarrow Replace the brake pads as a set. Refer to "FRONT BRAKE" on page 4-31.

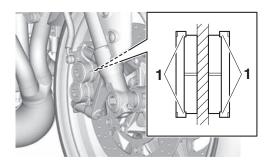

For MT09SPR/MT09SPRC

Wear indicator grooves "1" almost disappeared → Replace the brake pads as a set. Refer to "FRONT BRAKE" on page 4-31.

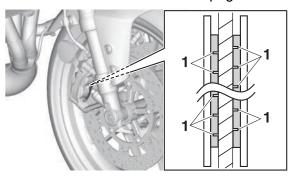

EAS3063

ADJUSTING THE REAR DISC BRAKE

- 1. Adjust:
- Brake pedal position
- a. Loosen the locknut "1".
- b. Turn the adjusting bolt "2" until the specified brake pedal position is obtained.

EWA18830

WARNING

After adjusting the brake pedal position, check that the end of the adjusting bolt "a" is visible through the hole "b".

c. Tighten the locknut "1" to specification.



Rear brake master cylinder locknut

18 N·m (1.8 kgf·m, 13 lb·ft)

EWA17030


WARNING

A soft or spongy feeling in the brake pedal can indicate the presence of air in the brake system. Before the vehicle is operated, the air must be removed by bleeding the brake system. Air in the brake system will considerably reduce braking performance.

ECA13510

NOTICE

After adjusting the brake pedal position, make sure there is no brake drag.

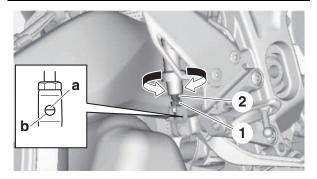

- 2. Adjust:
 - Rear brake light switch Refer to "ADJUSTING THE REAR BRAKE LIGHT SWITCH" on page 3-34.

EAS30634


CHECKING THE REAR BRAKE PADS

The following procedure applies to all of the brake pads.

- 1. Operate the brake.
- 2. Check:
- Rear brake pad

Wear indicator grooves "1" almost touch the brake disc \rightarrow Replace the brake pads as a set.

Refer to "REAR BRAKE" on page 4-49.

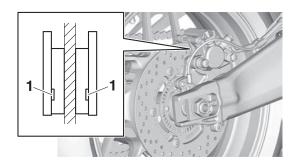

EAS3063

CHECKING THE FRONT BRAKE HOSE

The following procedure applies to all of the brake hoses and brake hose holders.

- 1. Check:
- Brake hose Cracks/damage/wear → Replace.
- 2. Check:
 - $\begin{tabular}{ll} \bullet & Brake hose holder \\ Loose \to Tighten the holder bolt. \\ \end{tabular}$
- 3. Hold the vehicle upright and apply the brake several times.

- 4. Check:
- Brake hose

Brake fluid leakage \rightarrow Replace the damaged hose.

Refer to "FRONT BRAKE" on page 4-31.

EAS3063

CHECKING THE REAR BRAKE HOSE

- 1. Check:
 - Brake hose Cracks/damage/wear → Replace.
- 2. Check:
 - Brake hose holder
 Loose Connection → Tighten the holder bolt.
- 3. Hold the vehicle upright and apply the rear brake several times.
- 4. Check:
 - Brake hose

Brake fluid leakage \rightarrow Replace the damaged hose.

Refer to "REAR BRAKE" on page 4-49.

EAS3089

BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)

EWA14000

WARNING

Always bleed the brake system when the brake related parts are removed.

ECA22640

NOTICE

- Bleed the brake system in the following order.
- 1st step: Front brake master cylinder
- 2nd step: Front brake calipers
- 3rd step: Rear brake caliper

EWA1653


WARNING


Bleed the ABS whenever:


- the system is disassembled.
- a brake hose is loosened, disconnected or replaced.
- the brake fluid level is very low.
- brake operation is faulty.

TIP

- Be careful not to spill any brake fluid or allow the brake fluid reservoir to overflow.
- When bleeding the ABS, make sure that there is always enough brake fluid before applying the brake. Ignoring this precaution could allow air to enter the ABS, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the brake fluid settle for a few hours.
- Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.
- 1. Bleed:
- ABS
- a. Fill the brake fluid reservoir to the proper level with the specified brake fluid.
- b. Install the brake fluid reservoir diaphragm.
- c. Connect a clear plastic hose "1" tightly to the bleed screw "2".

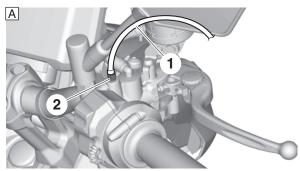

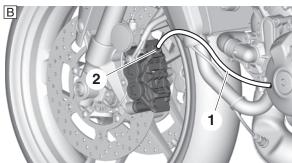

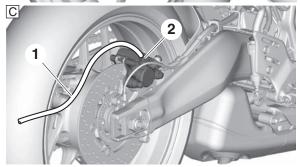

- A. Front brake master cylinder
- B. Front brake caliper (left/right)
- C. Rear brake caliper

- d. Place the other end of the hose into a container.
- e. Slowly apply the brake several times.
- f. Fully squeeze the brake lever or fully depress the brake pedal and hold it in position.
- g. Loosen the bleed screw.

TIP_

Loosening the bleed screw will release the pressure and cause the brake lever to contact the throttle grip or the brake pedal to fully extend.

- h. Tighten the bleed screw and then release the brake lever or brake pedal.
- Repeat steps (e) to (h) until all of the air bubbles have disappeared from the brake fluid in the plastic hose.
- j. Check the operation of the hydraulic unit. Refer to "HYDRAULIC UNIT OPERATION TESTS" on page 4-66.

ECA17061

NOTICE

Make sure that the main switch is turned to "OFF" before checking the operation of the hydraulic unit.

- k. After operating the ABS, repeat steps (e) to (i), and then fill the brake fluid reservoir to the proper level with the specified brake fluid
- I. Tighten the bleed screw to specification.



Front brake master cylinder bleed screw

6 N·m (0.6 kgf·m, 4.4 lb·ft) Front brake caliper bleed screw (MT09R/MT09RC)

5 N·m (0.5 kgf·m, 3.7 lb·ft) Front brake caliper bleed screw (MT09SPR/MT09SPRC)

8 N·m (0.8 kgf·m, 5.9 lb·ft)
Rear brake caliper bleed screw
5 N·m (0.5 kgf·m, 3.7 lb·ft)

m. Fill the brake fluid reservoir to the proper level with the specified brake fluid. Refer to "CHECKING THE BRAKE FLUID LEVEL" on page 3-13.

WARNING

After bleeding the hydraulic brake system, check the brake operation.

EAS30638

CHECKING THE WHEELS

The following procedure applies to both of the wheels.

- 1. Check:
- Wheel

Damage/out-of-round \rightarrow Replace.

EWA13

WARNING

Never attempt to make any repairs to the wheel.

TIP

After a tire or wheel has been changed or replaced, always balance the wheel.

EAS30640

CHECKING THE TIRES

The following procedure applies to both of the tires.

- 1. Check:
- Tire air pressure
 Out of specification → Regulate.

WA13181

WARNING

- The tire pressure should only be checked and regulated when the tire temperature equals the ambient air temperature.
- The tire pressure and the suspension must be adjusted according to the total weight (including cargo, rider, passenger and accessories) and the anticipated riding speed.
- Operation of an overloaded vehicle could cause tire damage, an accident or an injury.
 NEVER OVERLOAD THE VEHICLE.



Tire air pressure (measured on cold tires) Up to 90 kg (198 lb) load Front 250 kPa (2.50 kgf/cm², 36 psi) 290 kPa (2.90 kgf/cm², 42 psi) 90 kg (198 lb) load - maximum load Front 250 kPa (2.50 kgf/cm², 36 psi) Rear 290 kPa (2.90 kgf/cm², 42 psi) Maximum load 167 kg (368 lb) (MT09SPR, MT09SPRC) 168 kg (372 lb) (MT09R, MT09RC)

- Maximum load: Total weight of rider, passenger, cargo and accessories
- 2. Check:
- Tire surfaces
 Damage/wear → Replace the tire.

EWA13190

WARNING

It is dangerous to ride with a worn-out tire. When the tire tread reaches the wear limit, replace the tire immediately.



Wear limit (front) 1.0 mm (0.04 in) Wear limit (rear) 1.0 mm (0.04 in)

EWA14090

WARNING

After extensive tests, the tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. The front and rear tires should always be by the same manufacturer and of the same design. No guarantee concerning handling characteristics can be given if a tire combination other than one approved by Yamaha is used on this vehicle.



Front tire
Size
120/70ZR17M/C (58W)
Manufacturer/model
BRIDGESTONE/BATTLAX HYPERSPORT S23F



Rear tire Size

180/55ZR17M/C (73W)
Manufacturer/model
BRIDGESTONE/BATTLAX HYPERSPORT S23R

EWA13210


WARNING

New tires have a relatively low grip on the road surface until they have been slightly worn. Therefore, approximately 100 km should be traveled at normal speed before any high-speed riding is done.

TIP

For tires with a direction of rotation mark "1":

- Install the tire with the mark pointing in the direction of wheel rotation.
- Align the mark "2" with the valve installation point.

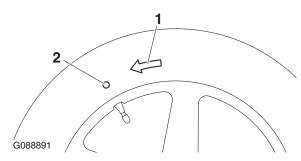

EAS30641

CHECKING THE WHEEL BEARINGS

The following procedure applies to all of the wheel bearing.

- 1. Check:
- Wheel bearing Refer to "CHECKING THE FRONT WHEEL" on page 4-18 and "CHECKING THE REAR WHEEL" on page 4-26.

EAS30802

CHECKING THE SWINGARM OPERATION

- 1. Check:
- Swingarm operation
 Swingarm not working properly → Check the swingarm.
 - Refer to "SWINGARM" on page 4-98.
- 2. Check:
 - Swingarm excessive play Refer to "SWINGARM" on page 4-98.

EAS30643

LUBRICATING THE SWINGARM PIVOT

- 1. Lubricate:
- Dust cover
- Pivot shaft
- Bearing
- Oil seal
- Collar



Recommended lubricant Lithium-soap-based grease

Refer to "INSTALLING THE SWINGARM" on page 4-100.

FAS3192

DRIVE CHAIN SLACK

Checking the drive chain slack

EWA1312

WARNING

Securely support the vehicle so that there is no danger of it falling over.

ECA13550

NOTICE

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

- 1. Shift the transmission into the neutral position.
- 2. Check:
 - Drive chain slack
 Out of specification → Adjust.


TIP_

- Measure the distance "a" between the rib end on the drive chain guide "1" and the center point of the drive chain "2".
- The center point "b" of the drive chain is approx. 32 mm (1.26 in) "c" forward from the edge "d" of the drive chain guide.



Drive chain slack (Maintenance Stand)

36.0-41.0 mm (1.42-1.61 in)
Drive chain slack (Sidestand)
36.0-41.0 mm (1.42-1.61 in)
Drive chain slack limit (Sidestand)
46.0 mm (1.81 in)

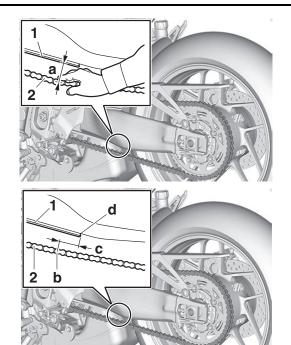

NOTICE

Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slippage or breakage. If the drive chain slack is more than the specified limit, the chain can damage the frame, swingarm, and other parts. To prevent this from occurring, keep the drive chain slack within the specified limits.


Adjusting the drive chain slack

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

- 1. Loosen:
- Wheel axle nut Refer to "REAR WHEEL" on page 4-23.
- 2. Adjust:
 - Drive chain slack
 - a. Loosen both locknuts "1".
 - b. Turn both adjusting bolts "2" until the specified drive chain slack is obtained.

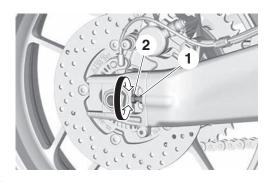

TIP.

- To maintain the proper wheel alignment, adjust both sides evenly.
- There should be no clearance between the adjusting block and adjusting bolt.
 - c. Tighten the wheel axle nut to specification.



Rear wheel axle nut 105 N·m (10.5 kgf·m, 77 lb·ft)

d. Tighten the locknuts to specification.



Chain puller adjusting bolt locknut

16 N·m (1.6 kgf·m, 12 lb·ft)

EAS3080

LUBRICATING THE DRIVE CHAIN

The drive chain consists of many interacting parts. If the drive chain is not maintained properly, it will wear out quickly. Therefore, the drive chain should be serviced, especially when the vehicle is used in dusty areas.

This vehicle has a drive chain with small rubber O-rings between each side plate. Steam cleaning, high-pressure washing, certain solvents, and the use of a coarse brush can damage these O-rings. Therefore, use only kerosene to clean the drive chain. Wipe the drive chain dry and thoroughly lubricate it with engine oil or chain lubricant that is suitable for O-ring chains. Do not use any other lubricants on the drive chain since they may contain solvents that could damage the O-rings.



Recommended lubricant Chain lubricant suitable for Oring chains EAS30645

CHECKING AND ADJUSTING THE STEERING HEAD

1. Stand the vehicle on a level surface.

EWA13120


WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP

Place the vehicle on a maintenance stand so that the front wheel is elevated.


- 2. Check:
 - Steering head
 Grasp the bottom of the front fork legs and
 gently rock the front fork.
 Blinding/looseness → Adjust the steering
 head.
- 3. Remove:
 - Upper bracket
- 4. Adjust:
 - Steering head
 - a. Remove the lock washer "1", the upper ring nut "2", and the rubber washer "3".

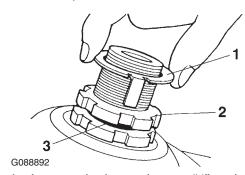

b. Loosen the lower ring nut "4" and then tighten it to specification with a steering nut wrench "5".

TIP_

- Set the torque wrench at a right angle to the steering nut wrench.
- Move the steering to the left and right a couple of times to check that it moves smoothly.

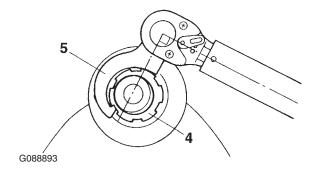



Steering nut wrench 90890-01403 Exhaust flange nut wrench YU-A9472



Lower ring nut (initial tightening torque)
52 N⋅m (5.2 kgf⋅m, 38 lb⋅ft)

c. Loosen the lower ring nut completely, then tighten it to specification.

EWA13140

MARNING

Do not overtighten the lower ring nut.




Lower ring nut (final tightening torque)
14 N·m (1.4 kgf·m, 10 lb·ft)

- d. Check the steering head for looseness or binding by turning the front fork all the way in both directions. If any binding is felt, remove the lower bracket and check the upper and lower bearings. Refer to "STEERING HEAD" on page 4-88.
- e. Install the rubber washer "3".
- f. Install the upper ring nut "2".
- g. Finger tighten the upper ring nut, then align the slots of both ring nuts. If necessary, hold the lower ring nut and tighten the upper ring nut until their slots are aligned.
- h. Install the lock washer "1".

TIP

Make sure the lock washer tabs "a" sit correctly in the ring nut slots "b".

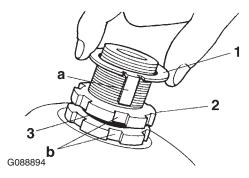

- 5. Install:
- Upper bracket Refer to "HANDLEBAR" on page 4-70.

EAS30646

LUBRICATING THE STEERING HEAD

- 1. Lubricate:
- Upper bearing
- Lower bearing
- · Bearing cover



Recommended lubricant Lithium-soap-based grease

EAS31186

CHECKING THE CHASSIS FASTENERS

Make sure that all nuts, bolts, and screws are properly tightened.

Refer to "CHASSIS TIGHTENING TORQUES" on page 2-12.

EAS30804

LUBRICATING THE BRAKE LEVER

Lubricate the pivoting point and metal-to-metal moving parts of the lever.



Recommended lubricant Silicone grease

EAS30805

LUBRICATING THE CLUTCH LEVER

Lubricate the pivoting point and metal-to-metal moving parts of the lever.



Recommended lubricant Lithium-soap-based grease

EAS30649

LUBRICATING THE PEDAL

Lubricate the pivoting point and metal-to-metal moving parts of the pedal.



Recommended lubricant Lithium-soap-based grease

EAS30851

ADJUSTING THE SHIFT PEDAL

Refer to "ADJUSTING THE SHIFT PEDAL" on page 4-106.

FAS30650

CHECKING THE SIDESTAND

- 1. Check:
- Sidestand operation
 Check that the sidestand moves smoothly.
 Rough movement → Repair or replace.

EAS30651

LUBRICATING THE SIDESTAND

Lubricate the pivoting point, metal-to-metal moving parts and spring contact point of the sidestand.



Recommended lubricant
Molybdenum disulfide grease

AS30652

CHECKING THE SIDESTAND SWITCH

Refer to "ELECTRICAL COMPONENTS" on page 8-65.

EAS3065

CHECKING THE FRONT FORK

1. Stand the vehicle on a level surface.

EWA1312

WARNING

Securely support the vehicle so that there is no danger of it falling over.

- 2. Check:
 - Inner tube

Damage/scratches \rightarrow Replace.

• Front fork leg

Oil leaks between inner tube and outer tube

- \rightarrow Replace the oil seal.
- 3. Hold the vehicle upright and apply the front brake.
- 4. Check:
 - Front fork operation

Push down hard on the handlebar several times and check if the front fork rebounds smoothly.

Rough movement \rightarrow Repair.

Refer to "FRONT FORK" on page 4-77.

FAS3080

ADJUSTING THE FRONT FORK LEGS (for MT09R/MT09RC)

The following procedure applies to both of the front fork legs.

EWA13

WARNING

Securely support the vehicle so that there is no danger of it falling over.

Spring preload

EWA17

WARNING

Always adjust both front fork legs evenly. Uneven adjustment can result in poor handling and loss of stability.

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.


- 1. Adjust:
- Spring preload
- a. Turn the adjusting bolt "1" in direction "a" or "b".

Direction "a"

Spring preload is increased (suspension is harder).


Direction "b"

Spring preload is decreased (suspension is softer).

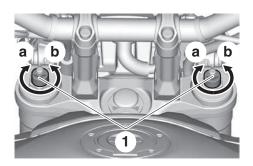

TIP

The spring preload setting is determined by measuring the distance "c" shown in the illustration. The shorter distance "c" is, the higher the spring preload; the longer distance "c" is, the lower the spring preload.

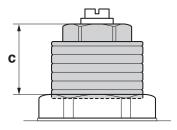



Spring preload
Adjustment value (Soft)
19.0 mm (0.75 in)
Adjustment value (STD)
16.0 mm (0.63 in)
Adjustment value (Hard)
4.0 mm (0.16 in)

Rebound damping (right side only)

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- · Rebound damping
- a. Turn the adjusting screw "1" in direction "a" or "b".

Direction "a"

Rebound damping is increased (suspension is harder).

Direction "b"

Rebound damping is decreased (suspension is softer).



Rebound damping

Adjustment value from the start position (Soft)

11

Adjustment value from the start position (STD)

6


Adjustment value from the start position (Hard)

1

* Start position: With the adjusting screw fully turned in direction "a"

TIP_

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

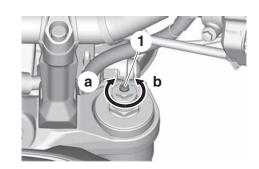

Compression damping (left side only)

EC 413590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- Compression damping
- a. Turn the adjusting screw "1" in direction "a" or "b".

Direction "a"

Compression damping is increased (suspension is harder).

Direction "b"

Compression damping is decreased (suspension is softer).



Compression damping

Adjustment value from the start position (Soft)

11 (MT09R, MT09RC)

Adjustment value from the start position (STD)

6 (MT09R, MT09RC)


Adjustment value from the start position (Hard)

1 (MT09R, MT09RC)

* Start position: With the adjusting screw fully turned in direction "a"

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

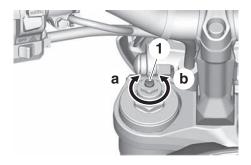

EAS3200

ADJUSTING THE FRONT FORK LEGS (for MT09SPR/MT09SPRC)

The following procedure applies to both of the front fork legs.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

Spring preload

EWA17040

WARNING

Always adjust both front fork legs evenly. Uneven adjustment can result in poor handling and loss of stability.

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.


- 1. Adjust:
- Spring preload
- a. Turn the adjusting bolt "1" in direction "a" or "b".

Direction "a"

Spring preload is increased (suspension is harder).


Direction "b"

Spring preload is decreased (suspension is softer).

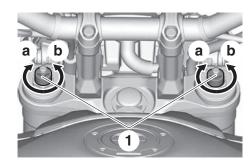

TIP

The spring preload setting is determined by measuring the distance "c" shown in the illustration. The shorter distance "c" is, the higher the spring preload; the longer distance "c" is, the lower the spring preload.

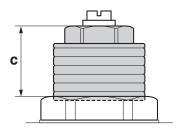



Spring preload
Adjustment value (Soft)
19.0 mm (0.75 in)
Adjustment value (STD)
14.0 mm (0.55 in)
Adjustment value (Hard)
4.0 mm (0.16 in)

Rebound damping

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- Rebound damping
- a. Turn the adjusting screw "1" in direction "a" or "b".

Direction "a"

Rebound damping is increased (suspension is harder).

Direction "b"

Rebound damping is decreased (suspension is softer).



Rebound damping

Adjustment value from the start position (Soft)

26

Adjustment value from the start position (STD)

11


Adjustment value from the start position (Hard)

1

* Start position: With the adjusting screw fully turned in direction "a"

TIP_

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

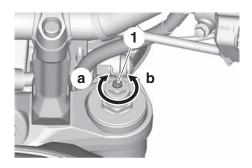

Compression damping

ECA1359

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- Compression damping (fast compression damping)
- a. Turn the adjusting screw "1" in direction "a" or "b".

Direction "a"

Compression damping is increased (suspension is harder).

Direction "b"

Compression damping is decreased (suspension is softer).



Fast compression damping
Adjustment value from the start position (Soft)

5+1/2 (MT09SPR, MT09SPRC)
Adjustment value from the start position (STD)


2+3/4 (MT09SPR, MT09SPRC) Adjustment value from the start position (Hard)

0 (MT09SPR, MT09SPRC)

* Start position: With the adjusting screw fully turned in direction "a"

TIP__

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

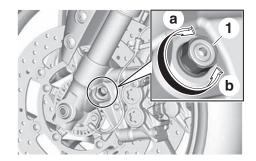

2. Adjust:

- Compression damping (slow compression damping)
- a. Turn the adjusting bolt "1" in direction "a" or "b".

Direction "a"

Compression damping is increased (suspension is harder).

Direction "b"

Compression damping is decreased (suspension is softer).



Slow compression damping
Adjustment value from the start
position (Soft)

18 (MT09SPR, MT09SPRC)
Adjustment value from the start position (STD)


9 (MT09SPR, MT09SPRC)
Adjustment value from the start position (Hard)

1 (MT09SPR, MT09SPRC)

* Start position: With the adjusting bolt fully turned in direction "a"

TIP_

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

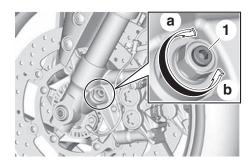

EVESUBU

CHECKING THE REAR SHOCK ABSORBER ASSEMBLY

Refer to "CHECKING THE REAR SHOCK AB-SORBER ASSEMBLY" on page 4-95.

EAS30655

ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY (for MT09R/MT09RC)

EWA1312

WARNING

Securely support the vehicle so that there is no danger of it falling over.

Spring preload

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- Spring preload
- a. Adjust the spring preload with the special wrench "1" and extension bar "2" included in the owner's tool kit.
- b. Turn the adjusting ring "3" in direction "a" or "h"
- c. Align the desired position on the adjusting ring with the stopper "4".

Direction "a"


Spring preload is increased (suspension is harder).

Direction "b"

Spring preload is decreased (suspension is softer).



Spring preload
Adjustment value (Soft)
1 (MT09R, MT09RC)
Adjustment value (STD)
4 (MT09R, MT09RC)
Adjustment value (Hard)
7 (MT09R, MT09RC)

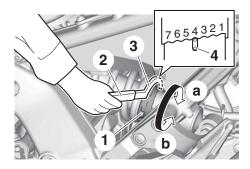

Rebound damping

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- Rebound damping
- a. Remove the cap "1".
- b. Turn the adjusting screw "2" in direction "a" or "b".

Direction "a"

Rebound damping is increased (suspension is harder).

Direction "b"

Rebound damping is decreased (suspension is softer).



Rebound damping

Adjustment value from the start position (Soft)

2+1/2

Adjustment value from the start position (STD)

1


Adjustment value from the start position (Hard)

n

* Start position: With the adjusting screw fully turned in direction "a"

TIP

Although the total number of turns of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of turns always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of turns of each damping force adjusting mechanism and to modify the specifications as necessary.

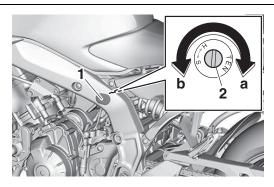

FAS3160

ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY (for MT09SPR/MT09SPRC)

WARNING

Securely support the vehicle so that there is no danger of it falling over.

Spring preload

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
 - Spring preload
 - a. Turn the adjusting knob "1" in direction "a" or "b".


PERIODIC MAINTENANCE

Direction "a"

Spring preload is increased (suspension is harder).


Direction "b"

Spring preload is decreased (suspension is softer).

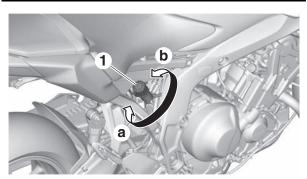

TIP.

The spring preload setting is determined by measuring the distance "c" shown in the illustration. The shorter distance "c" is, the higher the spring preload; the longer distance "c" is, the lower the spring preload.

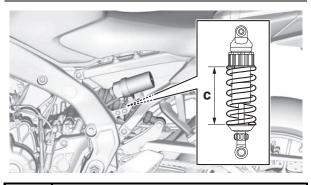



Adjustment value (Soft) 154.5 mm (6.08 in) (MT09SPR, MT09SPRC)

Adjustment value (STD) 150.0 mm (5.91 in) (MT09SPR, MT09SPRC)

Adjustment value (Hard) 146.5 mm (5.77 in) (MT09SPR, MT09SPRC)

Rebound damping

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

- 1. Adjust:
- · Rebound damping
- a. Turn the adjusting knob "1" in direction "a" or "b".

Direction "a"

Rebound damping is increased (suspension is harder).

Direction "b"

Rebound damping is decreased (suspension is softer).



Rebound damping

Adjustment value from the start position (Soft)

30

Adjustment value from the start position (STD)


18

Adjustment value from the start position (Hard)

* Start position: With the adjusting screw fully turned in direction "a"

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

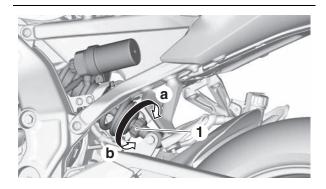

Compression damping

ECA13590

NOTICE

Never go beyond the maximum or minimum adjustment positions.

PERIODIC MAINTENANCE

- 1. Adjust:
- Compression damping
- a. Turn the adjusting knob "1" in direction "a" or "b".

Direction "a"

Compression damping is increased (suspension is harder).

Direction "b"

Compression damping is decreased (suspension is softer).



Compression damping

Adjustment value from the start position (Soft)


20 (MT09SPR, MT09SPRC)
Adjustment value from the start position (STD)

14 (MT09SPR, MT09SPRC)
Adjustment value from the start position (Hard)
0 (MT09SPR, MT09SPRC)

* Start position: With the adjusting knob fully turned in direction "a"

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

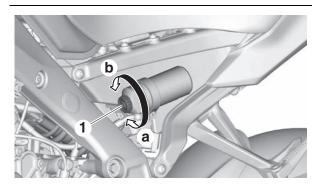

EAS30809

CHECKING THE CONNECTING ARM AND RELAY ARM

Refer to "CHECKING THE CONNECTING ARM AND RELAY ARM" on page 4-96.

EAS3065

CHECKING THE ENGINE OIL LEVEL


1. Stand the vehicle on a level surface.

TIE

- Place the vehicle on a maintenance stand.
- Make sure the vehicle is upright.
- 2. Start the engine, warm it up for several minutes, and then turn it off.
- 3. Check:
 - Engine oil level

The engine oil level should be between the minimum level mark "a" and maximum level mark "b".

Below the minimum level mark \rightarrow Add the recommended engine oil to the proper level.

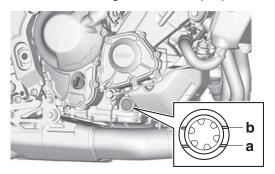



Recommended brand YAMALUBE

SAE viscosity grades 10W-40, 10W-50, 15W-40, 20W-40 or 20W-50

Recommended engine oil grade API service SG type or higher, JASO standard MA

CA13361

NOTICE

- Engine oil also lubricates the clutch and the wrong oil types or additives could cause clutch slippage. Therefore, do not add any chemical additives or use engine oils with a grade of "CD" or higher and do not use oils labeled "ENERGY CONSERVING II".
- Do not allow foreign materials to enter the crankcase.

TIP.

Before checking the engine oil level, wait a few minutes until the oil has settled.

- 4. Start the engine, warm it up for several minutes, and then turn it off.
- 5. Check the engine oil level again.


TIP_


Before checking the engine oil level, wait a few minutes until the oil has settled.

EAS30657

CHANGING THE ENGINE OIL

- 1. Start the engine, warm it up for several minutes, and then turn it off.
- 2. Place a container under the engine oil drain bolt.
- 3. Remove:
 - Engine oil filler cap "1"
 - Engine oil drain bolt "2"
 - Gasket "3"

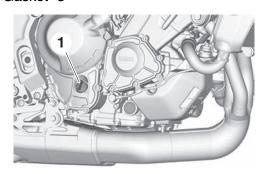


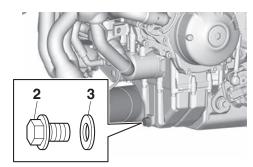

- 4. Drain:
- Engine oil (completely from the crankcase)
- 5. If the oil filter cartridge is also to be replaced, perform the following procedure.
 - a. Remove the oil filter cartridge "1" with an oil filter wrench "2".



Oil filter wrench 90890-01426 Oil filter wrench YU-38411

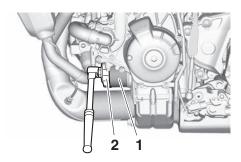

b. Lubricate the O-ring of the new oil filter cartridge with a thin coat of engine oil.

ECA25890

NOTICE

Make sure the O-ring is positioned correctly in the groove of the oil filter cartridge.

c. Tighten the new oil filter cartridge to specification with an oil filter wrench.



Oil filter cartridge 17 N·m (1.7 kgf·m, 13 lb·ft)

- 6. Install:
- Engine oil drain bolt (along with the gasket New)



Engine oil drain bolt 43 N·m (4.3 kgf·m, 32 lb·ft)

- 7. Fill:
 - Crankcase (with the specified amount of the recommended engine oil)



Engine oil quantity
Quantity (disassembled)
3.50 L (3.70 US qt, 3.08 Imp.qt)
Oil change
2.80 L (2.96 US qt, 2.46 Imp.qt)
With oil filter removal
3.20 L (3.38 US qt, 2.82 Imp.qt)

- 8. Install:
 - Engine oil filler cap (along with the O-ring New)
- 9. Start the engine, warm it up for several minutes, and then turn it off.
- 10.Check:
- Engine (for engine oil leaks)

PERIODIC MAINTENANCE


11.Check:

 Engine oil level Refer to "CHECKING THE ENGINE OIL LEVEL" on page 3-28.

EAS30810

MEASURING THE ENGINE OIL PRESSURE

- 1. Check:
- Engine oil level Below the minimum level mark "a" → Add the recommended engine oil to the proper level.

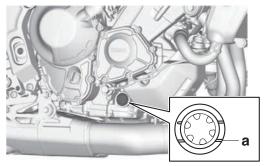

2. Start the engine, warm it up for several minutes, and then turn it off.

ECA13410

NOTICE


When the engine is cold, the engine oil will have a higher viscosity, causing the engine oil pressure to increase. Therefore, be sure to measure the engine oil pressure after warming up the engine.

- 3. Remove:
 - Oil pressure switch joint bolt "1"
 - Oil pressure switch joint (with the oil pressure switch) "2"

EWA12980

WARNING

The engine, muffler and engine oil are extremely hot.

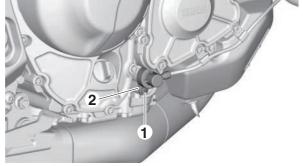


- 4. Install:
- Oil pressure gauge joint 18 mm "1"
- Oil pressure switch joint bolt "2"



Oil pressure gauge joint 18 mm 90890-04176 YU-04176




Oil pressure switch joint bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

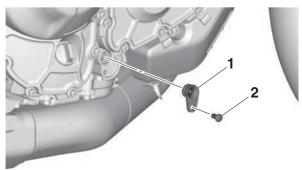

- 5. Install:
- Oil pressure gauge "1"
- Adapter C "2"



Oil pressure gauge set 90890-03120

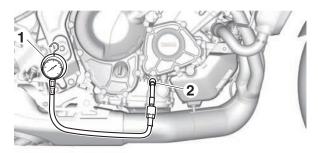

Start the engine, warm it up for several minutes.

ECA13410

NOTICE

When the engine is cold, the engine oil will have a higher viscosity, causing the engine oil pressure to increase. Therefore, be sure to measure the engine oil pressure after warming up the engine.

- 7. Measure:
- Engine oil pressure (at the following conditions)



Oil pressure

200.0 kPa/5000 r/min (2.00 kgf/cm²/5000 r/min, 29.0 psi/5000 r/min)


Out of specification \rightarrow Check.

Engine oil pressure	Possible causes
Below specification	 Faulty oil pump Clogged oil filter Leaking oil passage Broken or damaged oil seal
Above specification	Faulty oil filterOil viscosity too high

- 8. Remove:
 - Oil pressure gauge
 - Adapter C
 - Oil pressure switch joint bolt
 - Oil pressure switch joint (with the O-ring)
- 9. Install:
 - O-ring "1" New
 - Oil pressure switch joint (with the oil pressure switch) "2"
 - Oil pressure switch joint bolt "3"



Oil pressure switch joint bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

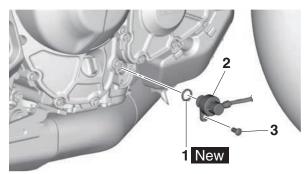

EAS3081

CHECKING THE COOLANT LEVEL


1. Stand the vehicle on a level surface.

TIP

- Place the vehicle on a maintenance stand.
- Make sure the vehicle is upright.
- 2. Check:
 - Coolant level

The coolant level should be between the maximum level mark "a" and minimum level mark "b".

Below the minimum level mark \rightarrow Add the recommended coolant to the proper level.

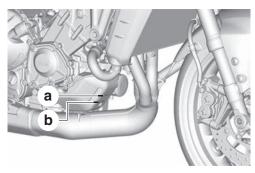

ECA21281

NOTICE

- Adding water instead of coolant dilutes the antifreeze concentration of the coolant. If water is used instead of coolant; check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, if distilled water is not available, soft water may be used.
- 3. Start the engine, warm it up for several minutes, and then turn it off.
- 4. Check:
 - Coolant level

TIP

Before checking the coolant level, wait a few minutes until it settles.


EAS3081

CHECKING THE COOLING SYSTEM

- 1. Check:
- Radiator "1"
- Water pump inlet hose "2"
- Thermostat assembly "3"
- Radiator outlet hose "4"
- Water pump "5"
- Radiator inlet hose "6"
- Oil cooler outlet hose "7"
- Water jacket joint "8"
- Oil cooler inlet hose "9"
- Oil cooler "10"

Cracks/damage → Replace.
Refer to "RADIATOR" on page 6-3, "OIL
COOLER" on page 6-7, "THERMOSTAT" on
page 6-9, and "WATER PUMP" on page 611.

PERIODIC MAINTENANCE

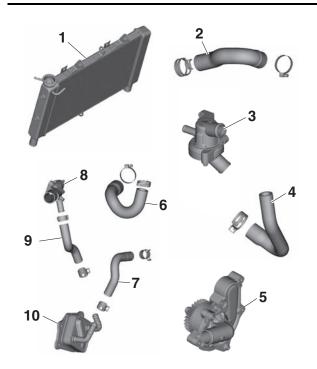

EAS30813

CHANGING THE COOLANT


- 1. Remove:
- Front side panel (right side)
 Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Radiator cap "1"

EWA13030

WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:


Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the radiator cap and turn it counterclockwise to remove.

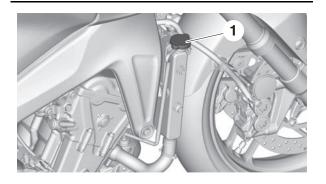

2. Remove:


- Coolant reservoir bolt
- Coolant reservoir cover "1"
- Coolant reservoir "2"
- Collar

Refer to "RADIATOR" on page 6-3.

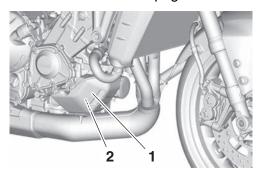


3. Remove:

• Coolant reservoir cap "1"

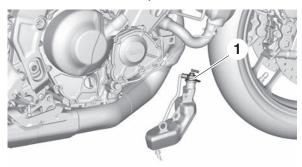

4. Drain:

- Coolant (from the coolant reservoir)
- 5. Remove:
 - Water pump drain bolt "1"
 - Copper washer "2"

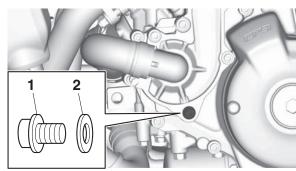

6. Drain:

- Coolant (from the engine and radiator)
- 7. Install:
 - Water pump drain bolt
 - Copper washer New



Water pump drain bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

8. Install:

- Collar
- Coolant reservoir
- Coolant reservoir cover
- Coolant reservoir bolt Refer to "RADIATOR" on page 6-3.



Coolant reservoir bolt (M5)
0.5 N·m (0.05 kgf·m, 0.37 lb·ft)
Coolant reservoir bolt (M6)
9 N·m (0.9 kgf·m, 6.6 lb·ft)
LOCTITE®

9. Fill:

 Cooling system (with the specified amount of the recommended coolant)



Recommended antifreeze

High-quality ethylene glycol antifreeze containing corrosion inhibitors for aluminum engines Mixing ratio

1:1 (antifreeze:water)
Radiator (including all routes)
1.72 L (1.82 US qt, 1.51 Imp.qt)
Coolant reservoir (up to the maximum level mark)
0.28 L (0.30 US qt, 0.25 Imp.qt)

Handling notes for coolant Coolant is potentially harmful and should be handled with special care.

WARNING

- If coolant splashes in your eyes, thoroughly wash them with water and consult a doctor.
- If coolant splashes on your clothes, quickly wash it away with water and then with soap and water.
- If coolant is swallowed, induce vomiting and get immediate medical attention.

ECA21291

NOTICE


- Adding water instead of coolant dilutes the antifreeze concentration of the coolant. If water is used instead of coolant; check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, if distilled water is not available, soft water may be used.
- If coolant comes into contact with painted surfaces, immediately wash them with water.
- Do not mix different types of antifreeze.

10.Install:

Radiator cap

11.Fill:

 Coolant reservoir (with the recommended coolant to the maximum level mark "a")

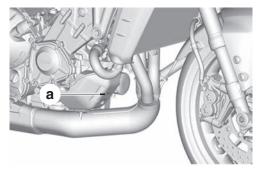

12.Install:

- Coolant reservoir cap
- 13. Start the engine, warm it up for several minutes, and then turn it off.

14.Check:

 Coolant level Refer to "CHECKING THE COOLANT LEV-EL" on page 3-31.

TIP

Before checking the coolant level, wait a few minutes until the coolant has settled.

EAS30814

CHECKING THE FRONT BRAKE LIGHT SWITCH


Refer to "ELECTRICAL COMPONENTS" on page 8-65.

ADJUSTING THE REAR BRAKE LIGHT SWITCH

TIP__

The rear brake light switch is operated by movement of the brake pedal. The rear brake light switch is properly adjusted when the brake light comes on just before the braking effect starts.

- 1. Check:
- Rear brake light operation timing Incorrect → Adjust.
- 2. Adjust:
 - · Rear brake light operation timing
 - a. Hold the main body "1" of the rear brake light switch so that it does not rotate and turn the adjusting nut "2" until the rear brake light comes on at the proper time.

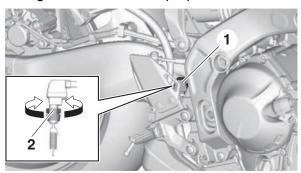

EAS30660

CHECKING AND LUBRICATING THE CABLES

The following procedure applies to all of the inner and outer cables.

EWA13270

WARNING

Damaged outer cable may cause the cable to corrode and interfere with its movement. Replace damaged outer cable and inner cables as soon as possible.

- 1. Check:
- Outer cable
 Damage → Replace.
- 2. Check:
 - Cable operation
 Rough movement → Lubricate.



Recommended lubricant
Engine oil or a suitable cable lubricant

TIP_

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubricating device.

EAS30815

CHECKING THE THROTTLE GRIP

- 1. Check:
 - Throttle grip movement
 Rough movement → Lubricate or replace the defective part(s).

TIP

With the engine stopped, turn the throttle grip slowly and release it. Make sure that the throttle grip turns smoothly and returns properly when released.

EAS32558

LUBRICATING THE THROTTLE GRIP

- 1. Remove:
- Throttle grip Refer to "HANDLEBAR" on page 4-70.
- 2. Lubricate:
 - Throttle grip



Recommended lubricant YAMAHA GREASE "R" (Fluorine-based grease)



- 3. Install:
 - Throttle grip Refer to "INSTALLING THE HANDLEBAR" on page 4-74.

EAS3081

CHECKING AND CHARGING THE BATTERY Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-75.

EAS30662

CHECKING THE FUSES


Refer to "CHECKING THE FUSES" on page 8-73.

PERIODIC MAINTENANCE

EAS3066

ADJUSTING THE HEADLIGHT BEAMS


- 1. Remove:
- Cover "1"

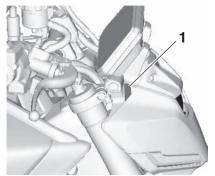


- 2. Adjust:
- Headlight beam (vertically)

TIP

To adjust the headlight beam (vertically), insert a crosshead screwdriver "a" into the hole in the meter bracket, and then turn the adjusting screw.

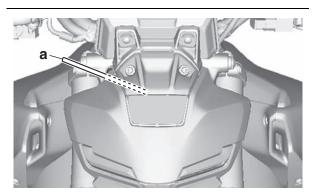


a. Turn the adjusting screw "1".

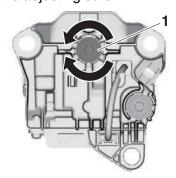


- 3. Adjust:
- Headlight beam (horizontally)

TIP_

To adjust the headlight beam (horizontally), insert a crosshead screwdriver "a" into the hole in the meter bracket, and then turn the adjusting screw.

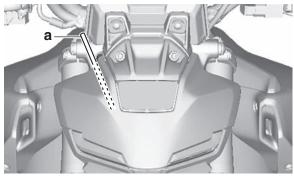

a. Turn the adjusting screw "1".

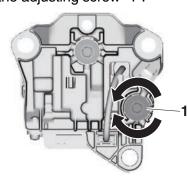


PERIODIC MAINTENANCE


CHASSIS


GENERAL CHASSIS (1)	4-1
REMOVING THE PASSENGER SEAT	4-10
REMOVING THE RIDER SEAT	
REMOVING THE HEADLIGHT FRONT COVER	4-10
REMOVING THE FUEL TANK CENTER COVER	
REMOVING THE FUEL TANK LOWER COVER	
INSTALLING THE FUEL TANK LOWER COVER	
INSTALLING THE FUEL TANK CENTER COVER	
INSTALLING THE HEADLIGHT FRONT COVER	
INSTALLING THE IMU	
INSTALLING THE RIDER SEAT	
INSTALLING THE PASSENGER SEAT	4-12
GENERAL CHASSIS (2)	4-14
FRONT WHEEL	4-16
REMOVING THE FRONT WHEEL	
DISASSEMBLING THE FRONT WHEEL	
CHECKING THE FRONT WHEEL	
ASSEMBLING THE FRONT WHEEL	4-19
MAINTENANCE OF THE FRONT WHEEL SENSOR AND	
SENSOR ROTOR	4-20
ADJUSTING THE FRONT WHEEL STATIC BALANCE	
INSTALLING THE FRONT WHEEL (FRONT BRAKE DISCS)	4-21
REAR WHEEL	4-23
REMOVING THE REAR WHEEL	
DISASSEMBLING THE REAR WHEEL	
CHECKING THE REAR WHEEL	
CHECKING THE REAR WHEEL DRIVE HUB	
CHECKING AND REPLACING THE REAR WHEEL SPROCKET	
ASSEMBLING THE REAR WHEEL	
MAINTENANCE OF THE REAR WHEEL SENSOR AND	
SENSOR ROTOR	
ADJUSTING THE REAR WHEEL STATIC BALANCE	
INSTALLING THE REAR WHEEL (REAR BRAKE DISC)	4-28


FRONT BRAKE	4-31
INTRODUCTION	
CHECKING THE FRONT BRAKE DISCS	4-40
REPLACING THE FRONT BRAKE PADS (for MT09R/MT09RC)	4-40
REPLACING THE FRONT BRAKE PADS `	
(for MT09SPR/MT09SPRC)	4-42
REMOVING THE FRONT BRAKE CALIPERS	4-43
DISASSEMBLING THE FRONT BRAKE CALIPERS	
CHECKING THE FRONT BRAKE CALIPERS	
ASSEMBLING THE FRONT BRAKE CALIPERS	
INSTALLING THE FRONT BRAKE CALIPERS	
(for MT09R/MT09RC)	4-44
INSTALLING THE FRONT BRAKE CALIPERS	
(for MT09SPR/MT09SPRC)	4-45
REMOVING THE FRONT BRAKE MASTER CYLINDER	
CHECKING THE FRONT BRAKE MASTER CYLINDER	_
ASSEMBLING THE FRONT BRAKE MASTER CYLINDER	
INSTALLING THE FRONT BRAKE MASTER CYLINDER	
REAR BRAKE	
ADJUSTING THE FOOTREST POSITION	4-56
INTRODUCTION	
CHECKING THE REAR BRAKE DISC	
REPLACING THE REAR BRAKE PADS	
REMOVING THE REAR BRAKE CALIPER	
DISASSEMBLING THE REAR BRAKE CALIPER	
CHECKING THE REAR BRAKE CALIPER	
ASSEMBLING THE REAR BRAKE CALIPER	
INSTALLING THE REAR BRAKE CALIPER	
REMOVING THE REAR BRAKE MASTER CYLINDER	4-60
CHECKING THE REAR BRAKE MASTER CYLINDER	4-60
ASSEMBLING THE REAR BRAKE MASTER CYLINDER	
INSTALLING THE REAR BRAKE MASTER CYLINDER	4-60
ADO (ANTI LOOK DDAKE OVOTEM)	4.00
ABS (ANTI-LOCK BRAKE SYSTEM)	
REMOVING THE HYDRAULIC UNIT ASSEMBLY	_
CHECKING THE HYDRAULIC UNIT ASSEMBLY	
INSTALLING THE HYDRAULIC UNIT ASSEMBLY	
HYDRAULIC UNIT OPERATION TESTS	
CHECKING THE ABS WARNING LIGHT	4-69
HANDLEBAR	4-70
ADJUSTING THE HANDLEBAR POSITION	
REMOVING THE HANDLEBAR	4-73
CHECKING THE HANDLEBAR	
INSTALLING THE HANDLEBAR	


FRONT FORK	4-77
REMOVING THE FRONT FORK LEGS	
DISASSEMBLING THE FRONT FORK LEGS	
CHECKING THE FRONT FORK LEGS	
ASSEMBLING THE FRONT FORK LEGS	
INSTALLING THE FRONT FORK LEGS	4-86
STEERING HEAD	
REMOVING THE LOWER BRACKET	
CHECKING THE STEERING HEAD	
INSTALLING THE STEERING HEAD	4-91
REAR SHOCK ABSORBER ASSEMBLY	4.00
HANDLING THE REAR SHOCK ABSORBER	
DISPOSING OF A REAR SHOCK ABSORBER	4-95
(for MT09R/MT09RC)	4-95
DISPOSING OF A REAR SHOCK ABSORBER	+ -55
(for MT09SPR/MT09SPRC)	4-95
REMOVING THE REAR SHOCK ABSORBER ASSEMBLY	
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY	
CHECKING THE CONNECTING ARM AND RELAY ARM	4-96
INSTALLING THE RELAY ARM	4-96
INSTALLING THE REAR SHOCK ABSORBER ASSEMBLY	4-96
CW/NC A DM	4.00
REMOVING THE SWINGARM	
CHECKING THE SWINGARMCHECKING THE SWINGARM	
INSTALLING THE SWINGARM	
INOTALEING THE GWINGALIWI	
CHAIN DRIVE	4-102
REMOVING THE DRIVE CHAIN	4-103
CHECKING THE DRIVE CHAIN	
CHECKING THE DRIVE SPROCKET	
CHECKING THE REAR WHEEL SPROCKET	
CHECKING THE REAR WHEEL DRIVE HUB	
INSTALLING THE DRIVE CHAIN	
ADJUSTING THE SHIFT PEDAL	
INSTALLING THE SHIFT PEDAL COVER	4-107

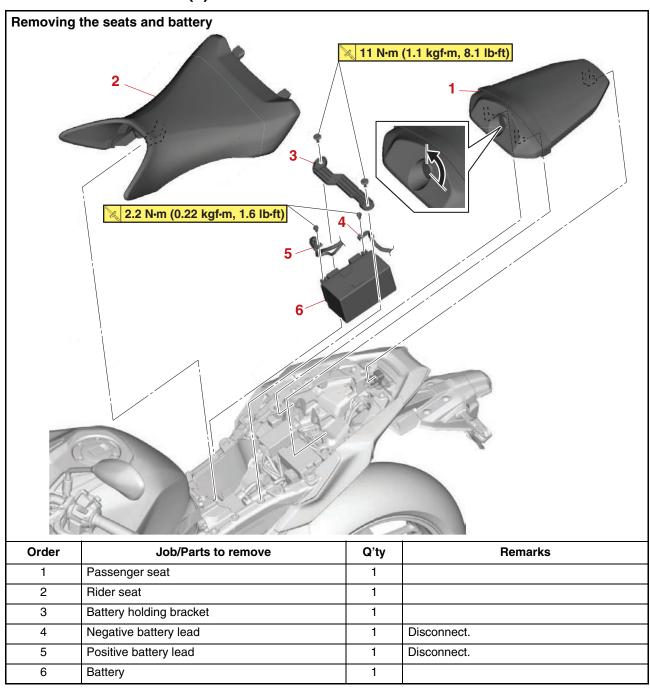


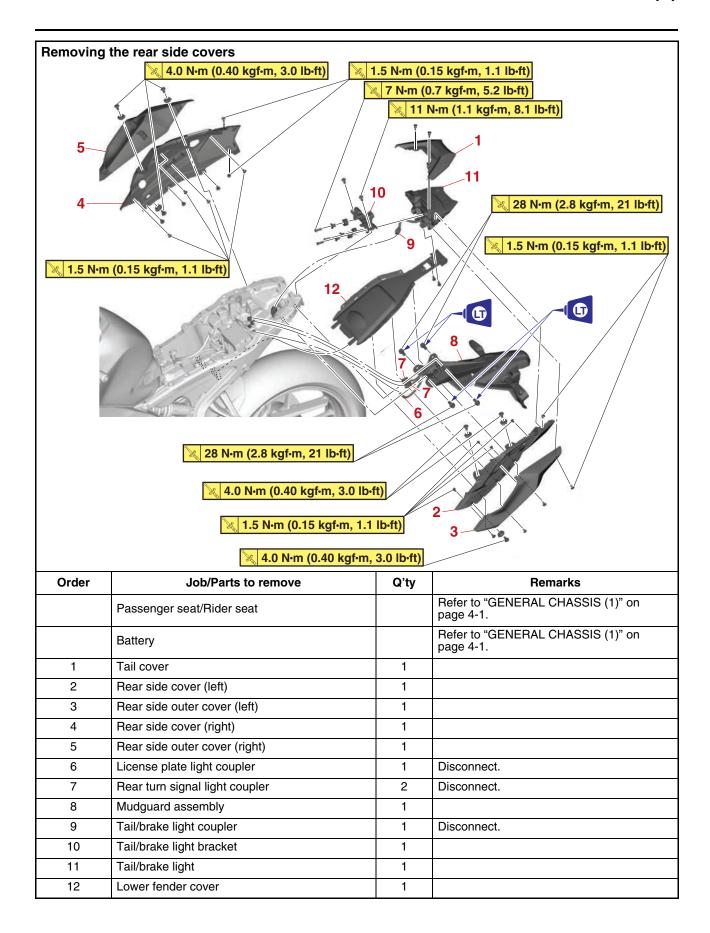


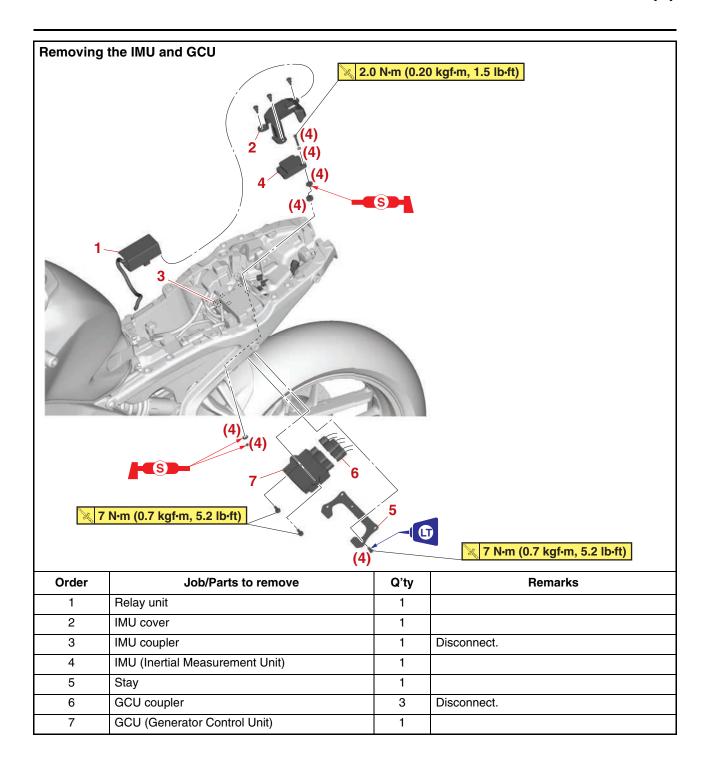


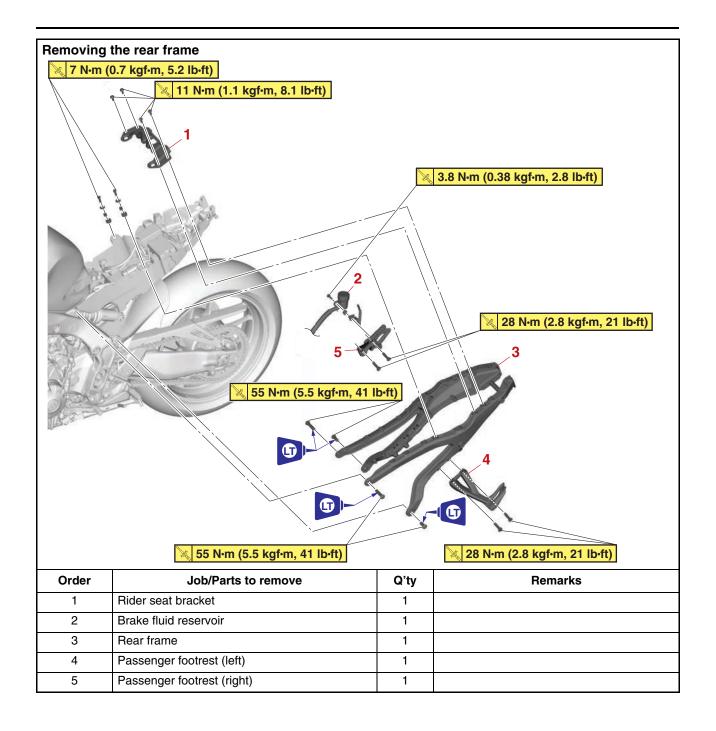


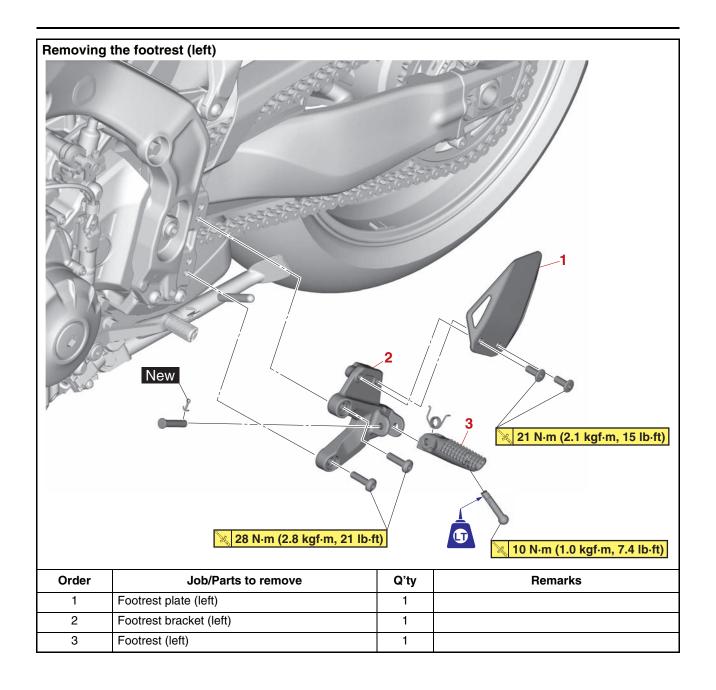

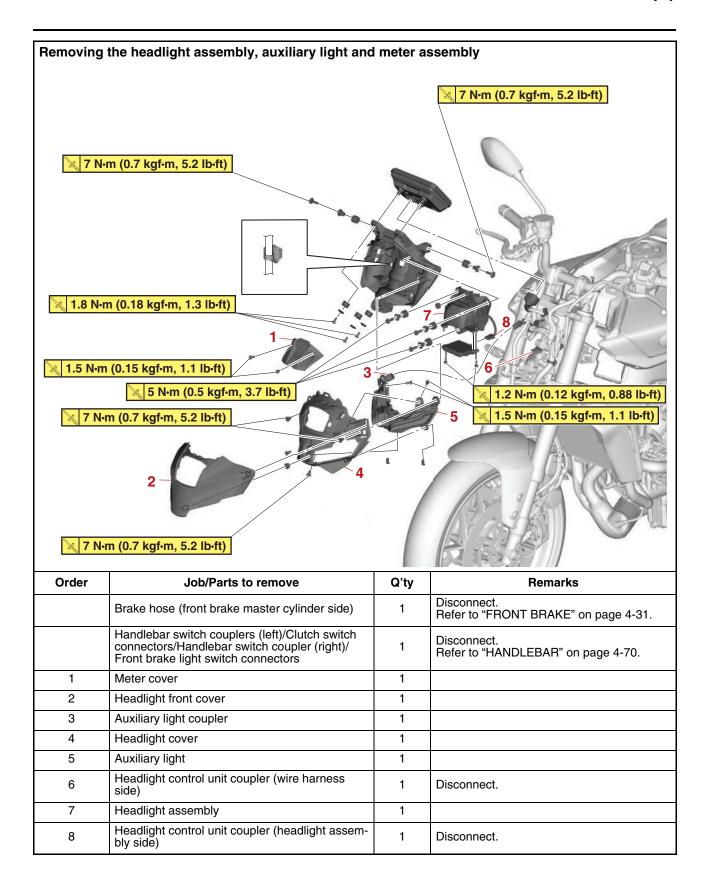

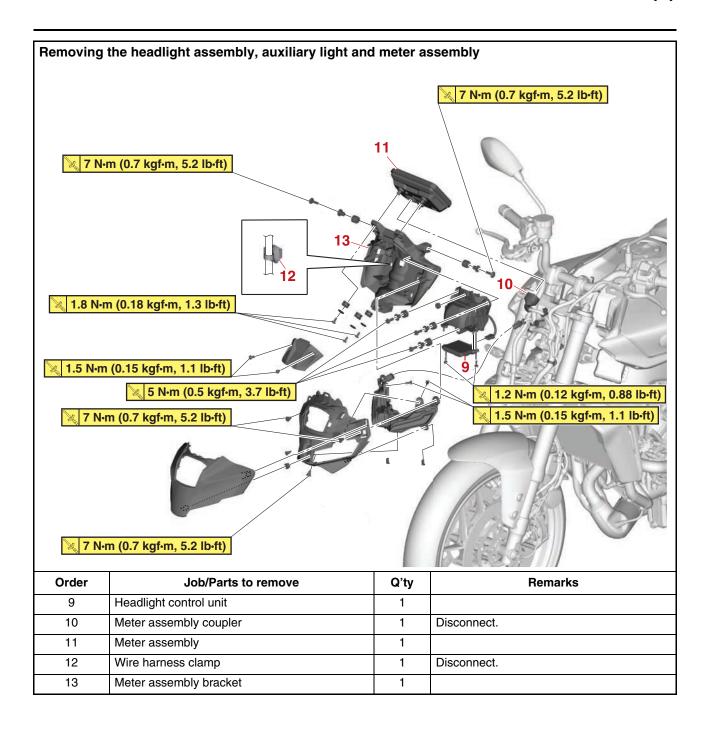

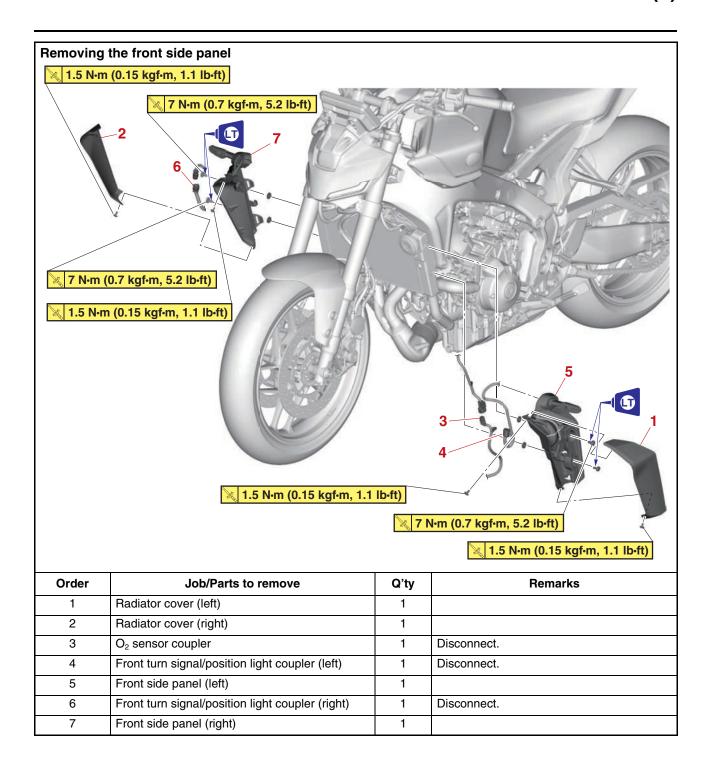

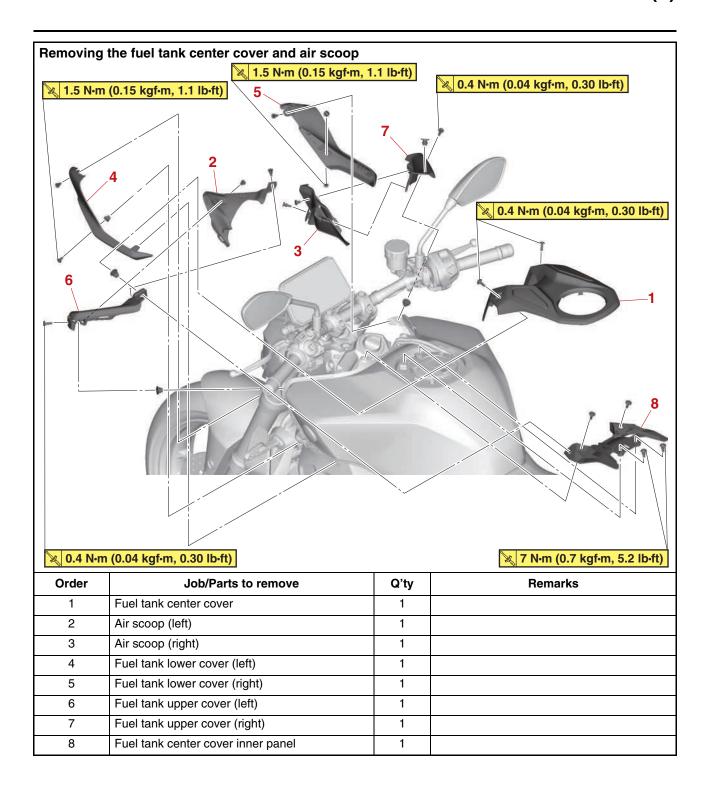

REMOVING THE PASSENGER SEAT


- 1. Remove:
- Passenger seat "1"
- a. Insert the key into the seat lock "2", and then turn it counterclockwise "a".
- b. Lift the front of the passenger seat and pull it forward.



EAS34051

REMOVING THE RIDER SEAT


- 1. Remove:
- Rider seat "1"
- a. Remove the passenger seat.
- b. Lift the rider seat rearward and up to remove it.

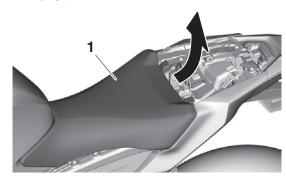

EAS33544

REMOVING THE HEADLIGHT FRONT COVER

- 1. Remove:
- Headlight front cover "1"
- a. Remove the projections "a" on the headlight front cover from the headlight cover.
- Remove the projections "b" on the headlight front cover from holes on the headlight cover.
- c. Remove the projection "c" on the headlight front cover from grommet "d" on the headlight cover.

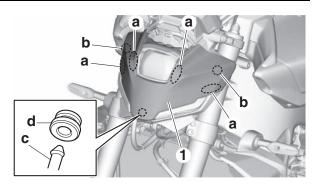


EAS3405

REMOVING THE FUEL TANK CENTER COVER

- 1. Remove:
- Fuel tank center cover "1"
- a. Remove the fuel tank center cover bolts "2".
- b. Remove the fuel tank center cover.

TIP

Remove the projection "a" on the fuel tank center cover from hole on the fuel tank center cover inner panel.

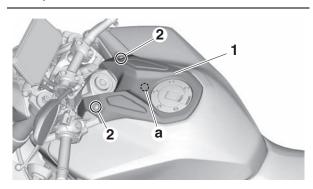

EAS3405


REMOVING THE FUEL TANK LOWER COVER

The following procedure applies to both of the fuel tank lower cover.

- 1. Remove:
- Fuel tank lower cover (left) "1"
- a. Remove the quick fastener "2" and fuel tank lower cover screw "3".
- b. Remove the fuel tank lower cover (left).

TIP_

Remove the projection "a" on the fuel tank lower cover from the hole on the fitting plate.

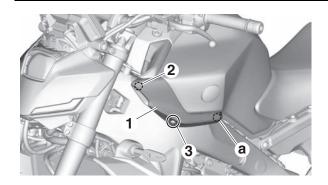


INSTALLING THE FUEL TANK LOWER COVER

The following procedure applies to both of the fuel tank lower cover.

- 1. Install:
- Fuel tank lower cover (left) "1"
- a. Insert the projection "a" on the fuel tank lower cover into the hole on the fitting plate.
- b. Install the quick fastener "2" and fuel tank lower cover screw "3", and then tighten the screw to specification.




Fuel tank lower cover screw 1.5 N·m (0.15 kgf·m, 1.1 lb·ft)

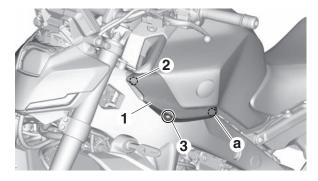

EAS34055

INSTALLING THE FUEL TANK CENTER COVER


- 1. Install:
- Fuel tank center cover "1"
- a. Insert the projection "a" on the fuel tank center cover into hole on the fuel tank center cover inner panel.
- b. Install the fuel tank center cover bolts "2".

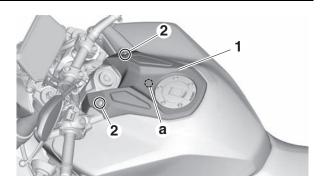

EAS33545

INSTALLING THE HEADLIGHT FRONT COVER

- 1. Install:
- Headlight front cover "1"
- a. Insert the projection "a" on the headlight front cover into the grommet "b" on the headlight cover.
- Insert the projections "c" on the headlight front cover from holes into the headlight cover.
- c. Fit the projections "d" on the headlight front cover to the headlight cover.

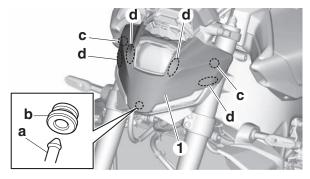


INSTALLING THE IMU

ECA22611

NOTICE

- Do not perform angle adjustment of the IMU and battery box by pinching the washer and related parts.
- When installing the IMU, apply a thin coat of silicone grease onto the washer where contacting the IMU grommet.
- When installing the IMU, use only a genuine bolt and washer, and tighten the bolt to the specified torque.
- Pay attention not to expose the IMU to strong shocks, such as striking or dropping it.
- Do not place any foreign objects in and around the battery box.
- Do not obstruct breather opening "a" of the IMU.
- Do not clean the breather opening and do not blow it with compressed air.
- When replacing the collar or grommet, replace all four collars and grommets.

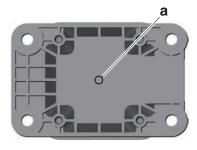

- 1. Install:
- IMU (Inertial Measurement Unit) "1"
- a. Connect the IMU coupler "2" to the IMU.
- b. Install the grommets, collars, IMU "1", washers, IMU nuts and IMU bolts, and then tighten the bolts to specification.

TIP_


Apply a thin coat of silicone grease onto the collars and washers where contacting the grommets.



Recommended lubricant Silicone grease




IMU bolt 2.0 N·m (0.20 kgf·m, 1.5 lb·ft)

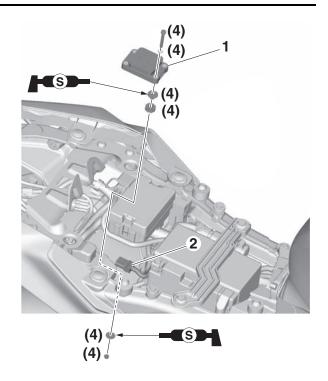

EAS31125

INSTALLING THE RIDER SEAT


- 1. Install:
- Rider seat "1"
- a. Insert the projection "a" on the front of the rider seat into the seat holder "b" and the projections "c" on the rear of the rider seat into the holes "d" on the rider seat bracket.

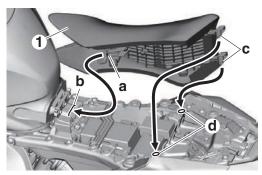

EAS31126

INSTALLING THE PASSENGER SEAT

- 1. Install:
- Passenger seat "1"
- a. Insert the projections "a" on the front and rear of the passenger seat into the seat holders "b".

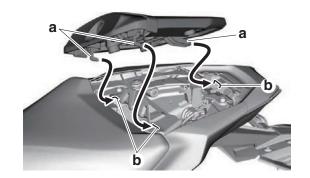


GENERAL CHASSIS (2)

BCM cover


BCM (Body Control Module)

10 11

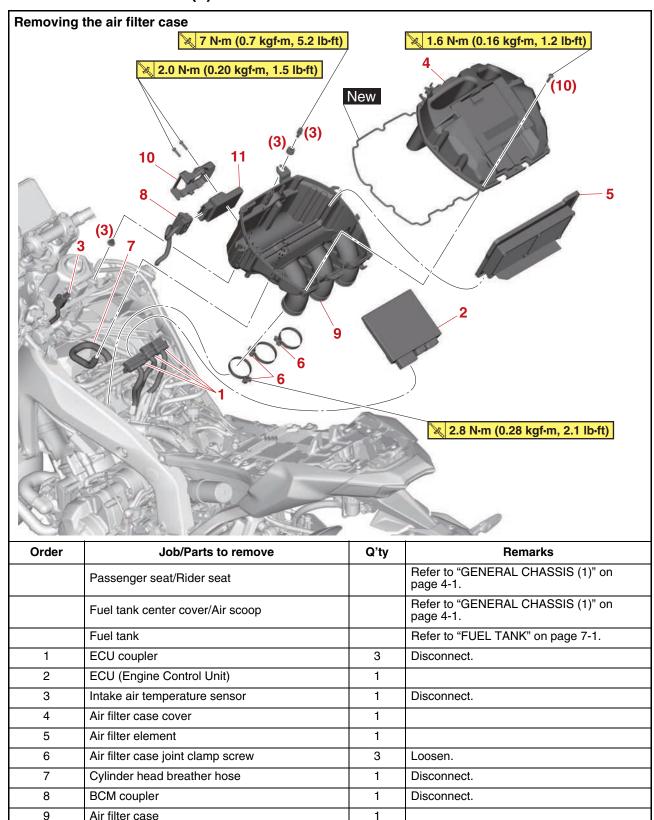


1


1

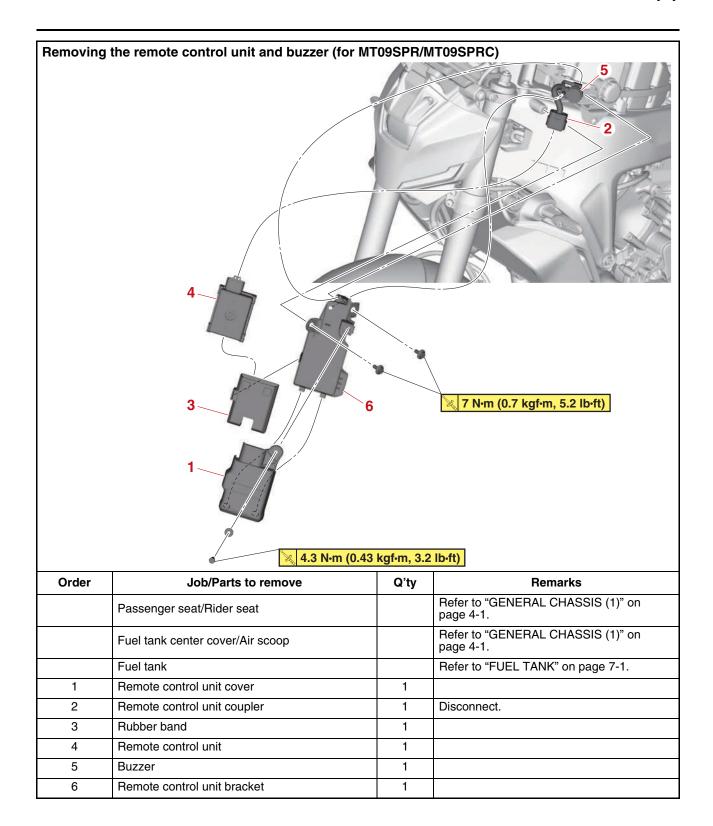

FRONT WHEEL

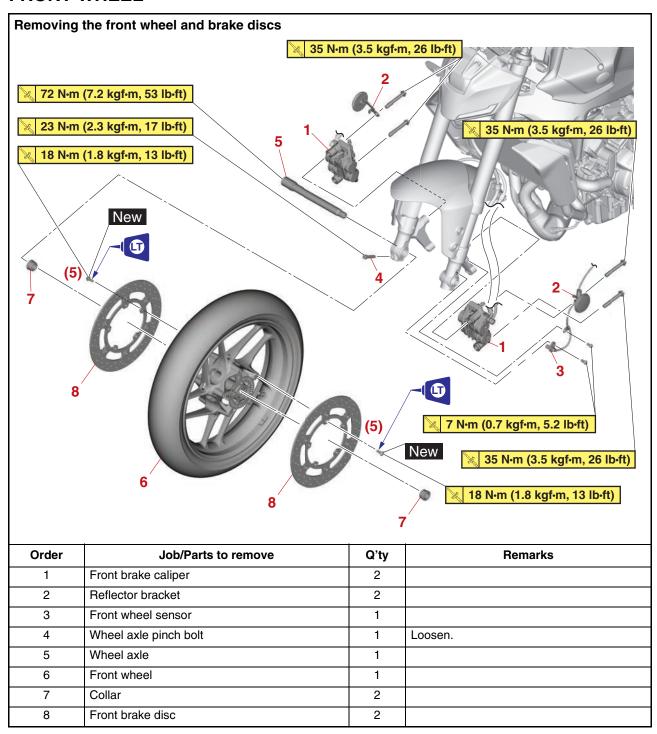

FRONT WHEEL

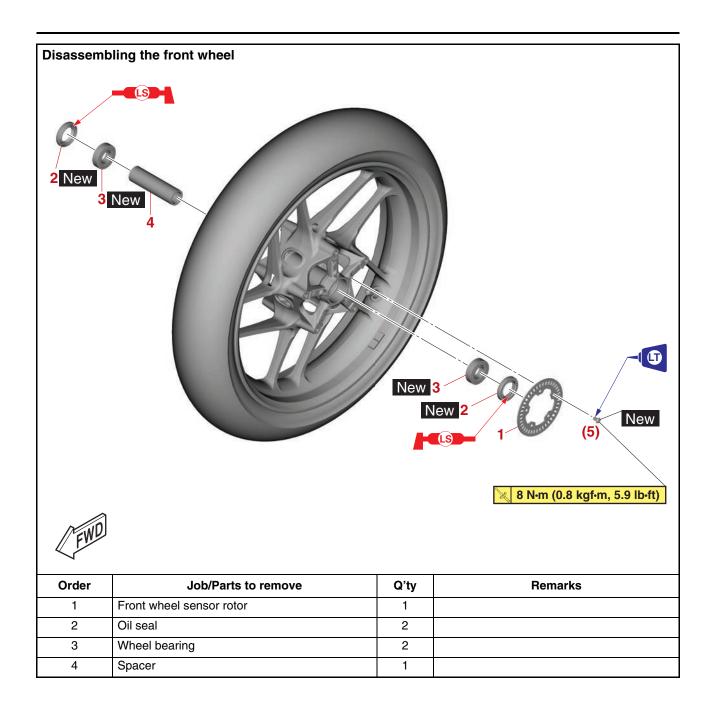

REMOVING THE FRONT WHEEL

ECA20981

NOTICE

- Keep any type of magnets (including magnetic pick-up tools, magnetic screwdrivers, etc.) away from the front wheel sensor or front wheel sensor rotor; otherwise, the sensor or rotor may be damaged, resulting in improper performance of the ABS system.
- Do not drop the front wheel sensor rotor or subject it to shocks.
- If any solvent gets on the front wheel sensor rotor, wipe it off immediately.
- 1. Stand the vehicle on a level surface.

EWA13120

MARNING

Securely support the vehicle so that there is no danger of it falling over.

- 2. Remove:
 - Brake caliper (left)
 - Brake caliper (right)
 - Front wheel sensor

ECA21440

NOTICE

- Do not apply the brake lever when removing the brake calipers.
- Be sure not to contact the sensor electrode to any metal part when removing the front wheel sensor from the sensor housing.
- 3. Elevate:
 - Front wheel

TIP

Place the vehicle on a maintenance stand so that the front wheel is elevated.

- 4. Loosen:
- Wheel axle pinch bolt
- 5. Remove:
 - Wheel axle
 - Front wheel

EAS31149

DISASSEMBLING THE FRONT WHEEL

ECA21340


NOTICE

- Do not drop the wheel sensor rotor or subject it to shocks.
- If any solvent gets on the wheel sensor rotor, wipe it off immediately.

- 1. Remove:
- Oil seal
- · Wheel bearing
- a. Clean the surface of the front wheel hub.
- b. Remove the oil seals "1" with a flat-head screwdriver.

TIP

To prevent damaging the wheel, place a rag "2" between the screwdriver and the wheel surface.

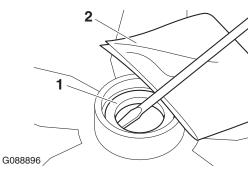

c. Remove the wheel bearings with a general bearing puller.

EAS2014

CHECKING THE FRONT WHEEL

- 1. Check:
- Wheel axle
 Roll the wheel axle on a flat surface.
 Bends → Replace.


WARNING

Do not attempt to straighten a bent wheel ax-le.

- 2. Check:
 - Tire
 - Front wheel
 Damage/wear → Replace.
 Refer to "CHECKING THE TIRES" on page 3-17 and "CHECKING THE WHEELS" on page 3-17.
- 3. Measure:
- Radial wheel runout "1"
- Lateral wheel runout "2"
 Over the specified limits → Replace.



Radial wheel runout limit 1.0 mm (0.04 in) Lateral wheel runout limit 0.5 mm (0.02 in)

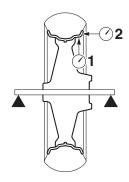

G088897

- 4. Check:
- Wheel bearing
 Front wheel turns roughly or is loose → Replace the wheel bearings.

EAS31150

ASSEMBLING THE FRONT WHEEL

ECA21340

NOTICE


- Do not drop the wheel sensor rotor or subject it to shocks.
- If any solvent gets on the wheel sensor rotor, wipe it off immediately.
- 1. Install:
- Wheel bearing New
- Oil seal New
- a. Install the new wheel bearing (left side).

NOTICE

Do not contact the wheel bearing inner race "1" or balls "2". Contact should be made only with the outer race "3".

TIP

Use a socket "4" that matches the diameter of the wheel bearing outer race.

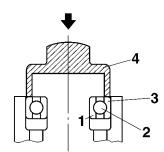


G088898

- b. Install the spacer.
- c. Install the new wheel bearing (right side).

TIP_

Place a suitable washer "1" between the socket "2" and the bearing so that both the inner race "3" and outer race "4" are pressed at the same time, and then press the bearing until the inner race makes contact with the spacer "5".

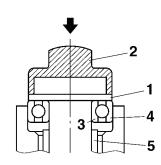

d. Install the new oil seals.

2. Install:

G088899

Front wheel sensor rotor



Wheel sensor rotor bolt 8 N⋅m (0.8 kgf⋅m, 5.9 lb⋅ft) LOCTITE®


ECA17200

NOTICE

Replace the wheel sensor rotor bolts with new ones.

TIP

Install the wheel sensor rotor with the stamped mark "1" facing outward.

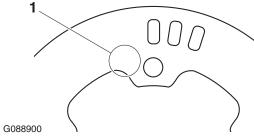

- 3. Measure:
- Wheel sensor rotor runout

Out of specification \rightarrow Correct the wheel sensor rotor runout or replace the wheel sensor rotor.

Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.



Wheel sensor rotor runout limit 0.25 mm (0.01 in)

EAS3115

MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR

ECA21070

NOTICE

- Handle the ABS components with care since they have been accurately adjusted.
 Keep them away from dirt and do not subject them to shocks.
- The front wheel sensor cannot be disassembled. Do not attempt to disassemble it.
 If faulty, replace with a new one.
- Keep any type of magnets (including magnetic pick-up tools, magnetic screwdrivers, etc.) away from the front wheel sensor or front wheel sensor rotor.
- Do not drop or shock the wheel sensor or the wheel sensor rotor.
- 1. Check:
- Front wheel sensor "1"
 Cracks/bends/distortion → Replace.
 Iron powder/dust → Clean.



2. Check:

Front wheel sensor rotor
 Cracks/damage/scratches → Replace the front wheel sensor rotor.

 Iron powder/dust/solvent → Clean.


TIP_

- The wheel sensor rotor is installed on the inner side of the wheel hub.
- When cleaning the wheel sensor rotor, be careful not to damage the surface of the sensor rotor.
- 3. Measure:
 - Wheel sensor rotor runout
 Out of specification → Clean the installation
 surface of the wheel sensor rotor and correct
 the wheel sensor rotor runout, or replace the
 wheel sensor rotor.



Wheel sensor rotor runout limit 0.25 mm (0.01 in)

- a. Hold the dial gauge at a right angle against the wheel sensor rotor surface.
- b. Measure the wheel sensor rotor runout.

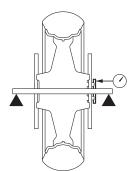

G088902

c. If the runout is above specification, remove the sensor rotor from the wheel, rotate it by two or three bolt holes, and then install it.



Wheel sensor rotor bolt 8 N⋅m (0.8 kgf⋅m, 5.9 lb⋅ft) LOCTITE®

ECA17200

NOTICE

Replace the wheel sensor rotor bolts with new ones.

d. If the runout is still above specification, replace the wheel sensor rotor.

EAS3015

ADJUSTING THE FRONT WHEEL STATIC BALANCE

TIP_

- After replacing the tire, wheel or both, the front wheel static balance should be adjusted.
- Adjust the front wheel static balance with the brake disc installed.
- Refer to "ADJUSTING THE WHEEL STATIC BALANCE" in "BASIC INFORMATION" (separate volume).
- 1. Remove:
- Balancing weight(s)
- 2. Find:
 - Front wheel's heavy spot
- 3. Adjust:
- Front wheel static balance
- 4. Check:
 - Front wheel static balance

INSTALLING THE FRONT WHEEL (FRONT BRAKE DISCS)

- 1. Install:
- Front brake disc



Front brake disc bolt 18 N·m (1.8 kgf·m, 13 lb·ft) LOCTITE®

ECA19150

NOTICE

Replace the brake disc bolts with new ones.

TIP

Tighten the brake disc bolts in stages and in a crisscross pattern.

- 2. Check:
 - Front brake disc Refer to "CHECKING THE FRONT BRAKE DISCS" on page 4-40.
- 3. Lubricate:
 - Oil seal lip



Recommended lubricant Lithium-soap-based grease

- 4. Install:
 - Collar
 - Front wheel
 - Wheel axle
- 5. Tighten:
- Wheel axle
- Wheel axle pinch bolt



Front wheel axle 72 N·m (7.2 kgf·m, 53 lb·ft) Front wheel axle pinch bolt 23 N·m (2.3 kgf·m, 17 lb·ft)


ECA19760

NOTICE

Before tightening the wheel axle, push down hard on the handlebars several times and check if the front fork rebounds smoothly.

TIP

Check that wheel axle end "a" is flush with front fork surface "b" and then tighten the wheel axle pinch bolt. If wheel axle end "a" is not flush with surface "b", align the ends manually or with a plastic hammer.

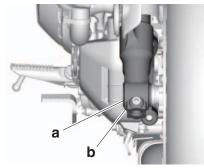

- 6. Install:
- Front wheel sensor



Front wheel sensor bolt 7 N·m (0.7 kgf·m, 5.2 lb·ft)

ECA2102

NOTICE

Make sure there are no foreign materials in the front wheel sensor rotor and front wheel sensor. Foreign materials cause damage to the front wheel sensor rotor and front wheel sensor.

TIP

When installing the front wheel sensor, check the wheel sensor lead for twists.

- 7. Measure:
- Distance "a"

(between the wheel sensor rotor "1" and wheel sensor "2")

Out of specification → Check the wheel bearing for looseness, and the front wheel sensor and sensor rotor installation conditions (warpage caused by overtorque, wrong installation direction, rotor decentering, LOC-TITE® on the mounting surface of the rotor, deformation caused by an impact during service and caught foreign materials). If there is any defective part, repair or replace the defective part.



Distance "a" (between the wheel sensor rotor and front wheel sensor)


0.6–1.8 mm (0.02–0.07 in)

TIP__

Measure the distance between the front wheel sensor rotor and front wheel sensor in several places in one rotation of the front wheel. Do not turn the front wheel while the thickness gauge is installed. This may damage the front wheel sensor rotor and the front wheel sensor.



Thickness gauge 90890-03268 Feeler gauge set YU-26900-9

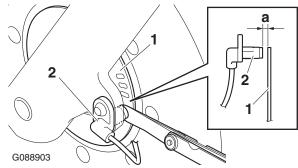

- 8. Install:
 - Front brake caliper




Front brake caliper bolt 35 N·m (3.5 kgf·m, 26 lb·ft)


EWA13500




Make sure the brake hose is routed properly.

REAR WHEEL

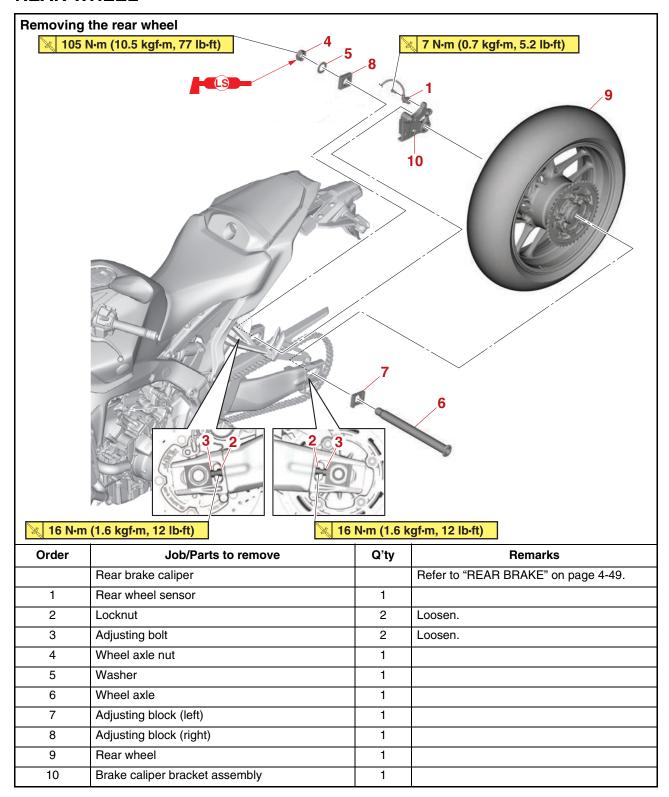

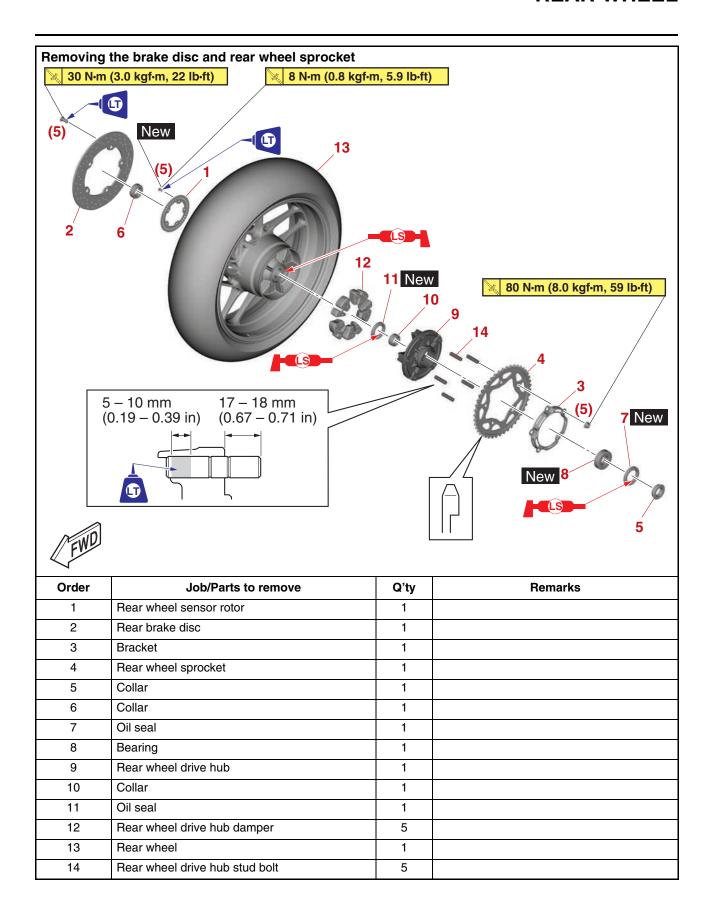

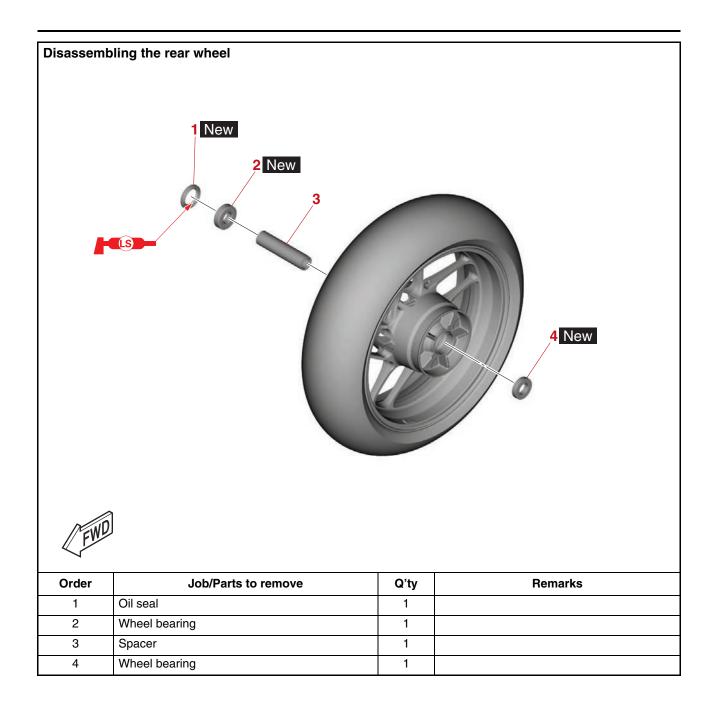

REMOVING THE REAR WHEEL

ECA21030

NOTICE

- Keep any type of magnets (including magnetic pick-up tools, magnetic screwdrivers, etc.) away from the rear wheel sensor or rear wheel sensor rotor; otherwise, the sensor or rotor may be damaged, resulting in improper performance of the ABS system.
- Do not drop the rear wheel sensor rotor or subject it to shocks.
- If any solvent gets on the rear wheel sensor rotor, wipe it off immediately.
- 1. Stand the vehicle on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP

Place the vehicle on a maintenance stand so that the rear wheel is elevated.

- 2. Remove:
 - Rear brake caliper
 - Rear wheel sensor

FCA27270

NOTICE

- Do not depress the brake pedal when removing the brake caliper.
- Be sure not to contact the sensor electrode to any metal part when removing the rear wheel sensor from the rear brake caliper bracket assembly.
- 3. Loosen:
 - Locknut
 - Adjusting bolt
- 4. Remove:
- Wheel axle nut
- Washer
- Wheel axle
- Rear wheel
- Brake caliper bracket assembly

ECA27280

NOTICE

Be sure to remove the rear wheel sensor before removing the brake caliper bracket assembly, otherwise the sensor could be damaged.

TIP

Push the rear wheel forward and remove the drive chain from the rear wheel sprocket.

EAS3115

DISASSEMBLING THE REAR WHEEL

ECA21340

NOTICE

- Do not drop the wheel sensor rotor or subject it to shocks.
- If any solvent gets on the wheel sensor rotor, wipe it off immediately.
- 1. Remove:
- Oil seal
- Wheel bearing Refer to "DISASSEMBLING THE FRONT WHEEL" on page 4-18.

EAS3015

CHECKING THE REAR WHEEL

- 1. Check:
- Wheel axle
- Wheel bearing
- Oil seal Refer to "CHECKING THE FRONT WHEEL" on page 4-18.
- 2. Check:
 - Tire
 - Rear wheel
 Damage/wear → Replace.

 Refer to "CHECKING THE TIRES" on page 3-17 and "CHECKING THE WHEELS"

on page 3-17.


- 3. Measure:
- Radial wheel runout
- Lateral wheel runout Refer to "CHECKING THE FRONT WHEEL" on page 4-18.

EAS30160

CHECKING THE REAR WHEEL DRIVE HUB

- 1. Check:
- Rear wheel drive hub Cracks/damage → Replace.
- Rear wheel drive hub damper Damage/wear → Replace.
- Rear wheel drive hub stud bolt Bends/damage/wear → Replace.
- 2. Replace:
 - Rear wheel drive hub stud bolt "1"
 - a. Remove the rear wheel drive hub stud bolts.
 - b. Clean the threaded holes on the rear wheel drive hub "2".

- Apply LOCTITE® to the drive hub side of the new stud bolts in the area shown in the illustration.
- d. Install the new stud bolts to specification.

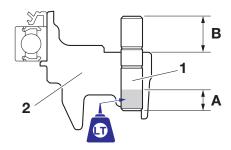


- A. 5-10 mm (0.19-0.39 in)
- B. 17-18 mm (0.67-0.71 in)

CHECKING AND REPLACING THE REAR WHEEL SPROCKET

- 1. Check:
- Rear wheel sprocket

More than 1/4 tooth "a" wear \rightarrow Replace the drive sprocket, the rear wheel sprocket and the drive chain as a set.

Bent teeth \rightarrow Replace the drive sprocket, the rear wheel sprocket and the drive chain as a set.

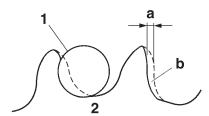

G088904

- b. Correct
- 1. Drive chain roller
- 2. Rear wheel sprocket
- 2. Replace:
 - Rear wheel sprocket
 - a. Remove the rear wheel sprocket nuts and the rear wheel sprocket.
 - b. Clean the rear wheel drive hub with a clean cloth, especially the surfaces that contact the sprocket.
 - c. Install the new rear wheel sprocket.



Rear wheel sprocket nut 80 N·m (8.0 kgf·m, 59 lb·ft)

TIP

Tighten the rear wheel sprocket nuts in stages and in a crisscross pattern.

EAS3016

ASSEMBLING THE REAR WHEEL

ECA2134

NOTICE


- Do not drop the wheel sensor rotor or subiect it to shocks.
- If any solvent gets on the wheel sensor rotor, wipe it off immediately.
- 1. Install:
- Wheel bearing New
- Oil seal New
- a. Install the new wheel bearing (right side).

NOTICE

Do not contact the wheel bearing inner race "1" or balls "2". Contact should be made only with the outer race "3".

TIP

Use a socket "4" that matches the diameter of the wheel bearing outer race.

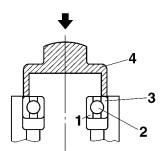


C000000

- b. Install the spacer.
- c. Install the new wheel bearing (left side).

TIP

Place a suitable washer "1" between the socket "2" and the bearing so that both the inner race "3" and outer race "4" are pressed at the same time, and then press the bearing until the inner race makes contact with the spacer "5".

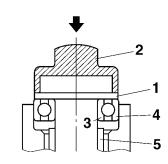

G088899

d. Install the new oil seals.

EAS31156

MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR

ECA21060

NOTICE

- Handle the ABS components with care since they have been accurately adjusted.
 Keep them away from dirt and do not subject them to shocks.
- The rear wheel sensor cannot be disassembled. Do not attempt to disassemble it. If faulty, replace with a new one.
- Keep any type of magnets (including magnetic pick-up tools, magnetic screwdrivers, etc.) away from the rear wheel sensor or rear wheel sensor rotor.
- Do not drop or shock the wheel sensor or the wheel sensor rotor.
- 1. Check:
- Rear wheel sensor
 Refer to "MAINTENANCE OF THE FRONT
 WHEEL SENSOR AND SENSOR ROTOR"
 on page 4-20.
- 2. Check:
 - Rear wheel sensor rotor Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.
- 3. Measure:
 - Wheel sensor rotor runout Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

EAS30164

ADJUSTING THE REAR WHEEL STATIC BALANCE

TIP_

- After replacing the tire, wheel or both, the rear wheel static balance should be adjusted.
- Adjust the rear wheel static balance with the brake disc and rear wheel drive hub installed.
- 1. Adjust:
- Rear wheel static balance Refer to "ADJUSTING THE FRONT WHEEL STATIC BALANCE" on page 4-20.

EAS3115

INSTALLING THE REAR WHEEL (REAR BRAKE DISC)

- 1. Install:
- Rear brake disc



Rear brake disc bolt 30 N·m (3.0 kgf·m, 22 lb·ft) LOCTITE®

ECA19150

NOTICE

Replace the brake disc bolts with new ones.

TIP

Tighten the brake disc bolts in stages and in a crisscross pattern.

- 2. Check:
 - Rear brake disc Refer to "CHECKING THE REAR BRAKE DISC" on page 4-56.
- 3. Lubricate:
 - · Oil seal lip




Recommended lubricant Lithium-soap-based grease


- 4. Install:
 - Brake caliper bracket assembly
 - Rear wheel
 - Adjusting block
 - Wheel axle
 - Washer
 - Wheel axle nut

TIP

- Do not install the brake caliper.
- Align the projection "a" in the swingarm with the slot "b" of the brake caliper bracket assembly.
- Install the adjusting block (left) so that projection "c" faces to the front of the vehicle.
- Install the adjusting block (right) with the chamfered "d" facing the inside.

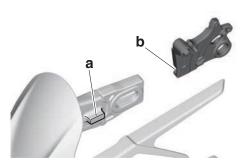



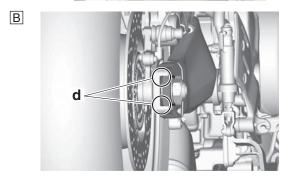

- A. Left side
- B. Right side
- 5. Install:
 - Rear brake caliper
- Rear brake caliper bolt
- 6. Adjust:
- Drive chain slack Refer to "DRIVE CHAIN SLACK" on page 3-18.



Drive chain slack (Maintenance Stand)

36.0-41.0 mm (1.42-1.61 in)
Drive chain slack (Sidestand)
36.0-41.0 mm (1.42-1.61 in)
Drive chain slack limit
46.0 mm (1.81 in)

7. Tighten:

- Wheel axle nut
- Rear brake caliper bolt



Rear wheel axle nut
105 N·m (10.5 kgf·m, 77 lb·ft)
Rear brake caliper bolt (front)
27 N·m (2.7 kgf·m, 20 lb·ft)
Rear brake caliper bolt (rear)
22 N·m (2.2 kgf·m, 16 lb·ft)
LOCTITE®


EWA13500


WARNING

Make sure the brake hose is routed properly.

TIP

When tightening the wheel axle nut, there should be no clearance "a" between the adjusting block "1" and adjusting bolt "2".

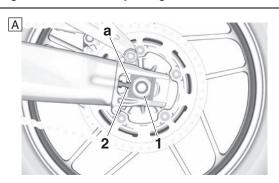

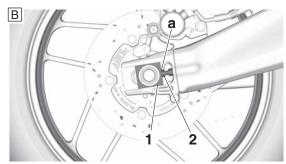

- A. Left side
- B. Right side

- 8. Install:
 - · Rear wheel sensor



Rear wheel sensor bolt 7 N·m (0.7 kgf·m, 5.2 lb·ft)

ECA21080

NOTICE

Make sure there are no foreign materials in the rear wheel sensor rotor and rear wheel sensor. Foreign materials cause damage to the rear wheel sensor rotor and rear wheel sensor.

TIP

When installing the rear wheel sensor, check the rear wheel sensor lead for twists.

9. Measure:

• Distance "a"

(between the wheel sensor rotor "1" and rear wheel sensor "2")

Out of specification → Check the wheel bearing for looseness, and the rear wheel sensor and sensor rotor installation conditions (warpage caused by overtorque, wrong installation direction, rotor decentering, LOC-TITE® on the mounting surface of the rotor, deformation caused by an impact during service and caught foreign materials). If there is any defective part, repair or replace the defective part.



Distance "a" (between the wheel sensor rotor and rear wheel sensor)


0.6-1.7 mm (0.02-0.07 in)

TIP


Measure the distance between the rear wheel sensor rotor and rear wheel sensor in several places in one rotation of the rear wheel. Do not turn the rear wheel while the thickness gauge is installed. This may damage the rear wheel sensor rotor and the rear wheel sensor.




Thickness gauge 90890-03268 Feeler gauge set YU-26900-9

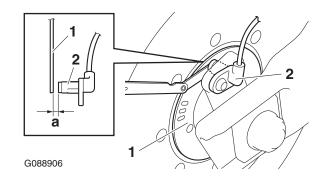


FRONT BRAKE

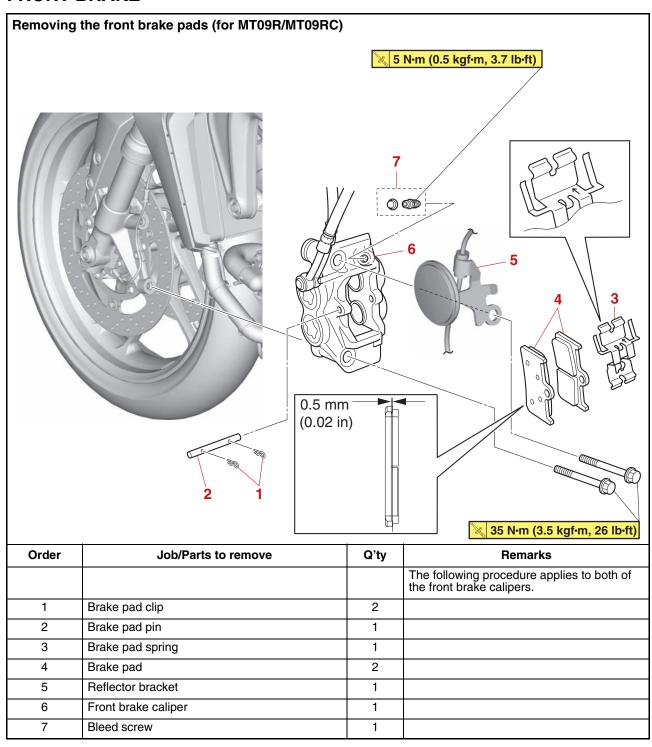


FRONT BRAKE

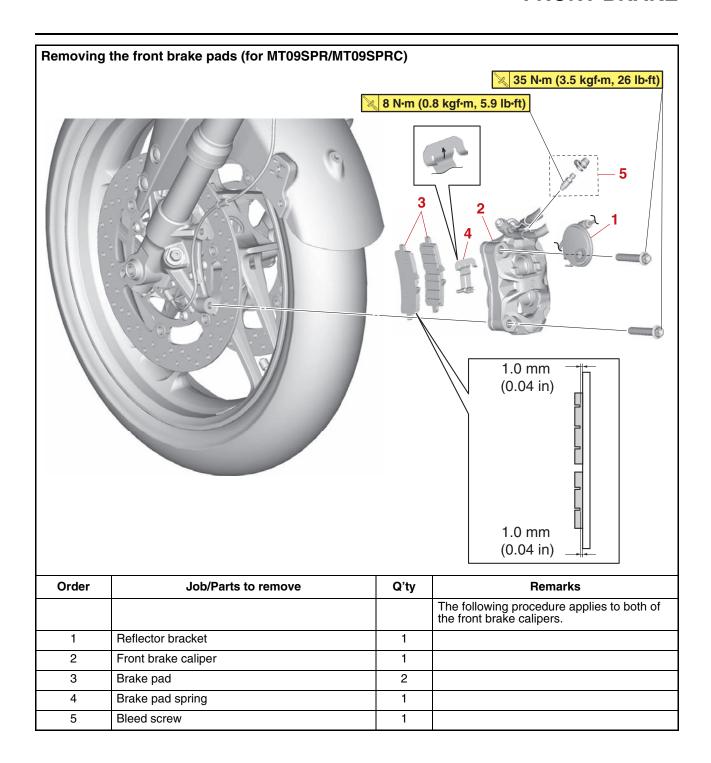

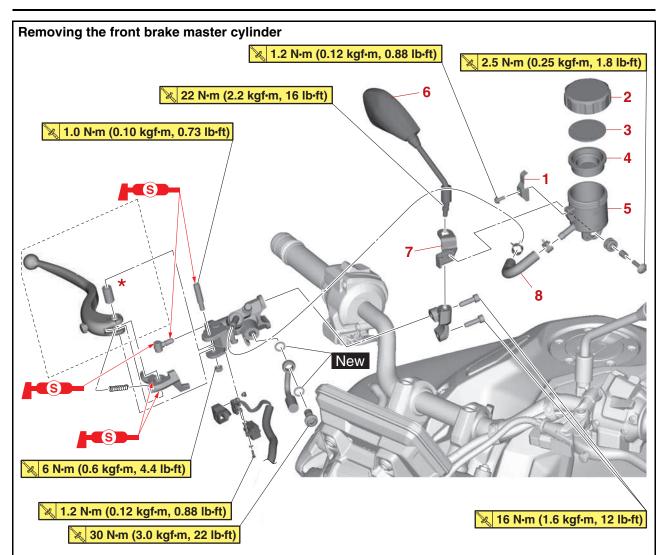

* This collar is press-fitted in the brake lever. When press-fitting the collar into the brake lever, press-fit it from the chamfered side where the collar mounting hole.


Order	Job/Parts to remove	Q'ty	Remarks
	Rearview mirror (right)		Refer to "HANDLEBAR" on page 4-70.
	Brake fluid		Drain. Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.
1	Brake fluid reservoir cap stopper	1	
2	Brake fluid reservoir cap	1	
3	Brake fluid reservoir diaphragm holder	1	
4	Brake fluid reservoir diaphragm	1	
5	Brake fluid reservoir	1	
6	Rearview mirror (right)	1	
7	Brake fluid reservoir bracket	1	
8	Brake fluid reservoir hose	1	

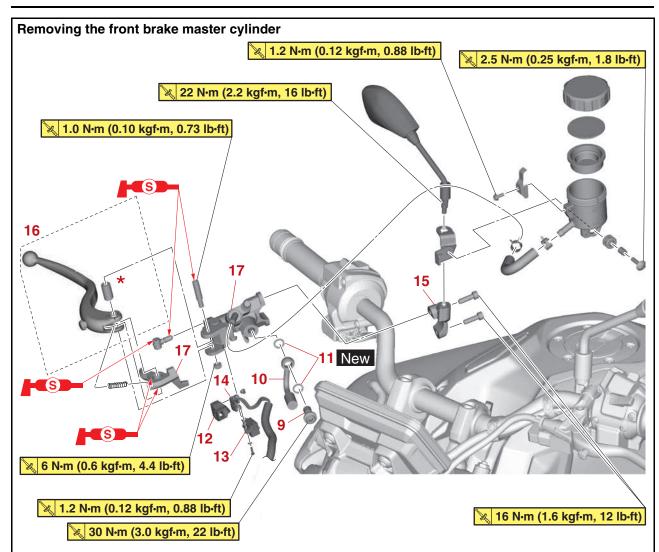



* This collar is press-fitted in the brake lever. When press-fitting the collar into the brake lever, press-fit it from the chamfered side where the collar mounting hole.


Order	Job/Parts to remove	Q'ty	Remarks
9	Brake hose union bolt	1	
10	Brake hose	1	
11	Brake hose gasket	2	
12	Front brake light switch cover	1	
13	Front brake light switch	1	
14	Front brake light switch connector	2	Disconnect.
15	Front brake master cylinder holder	1	
16	Brake lever	1	
17	Front brake master cylinder	1	


FRONT BRAKE

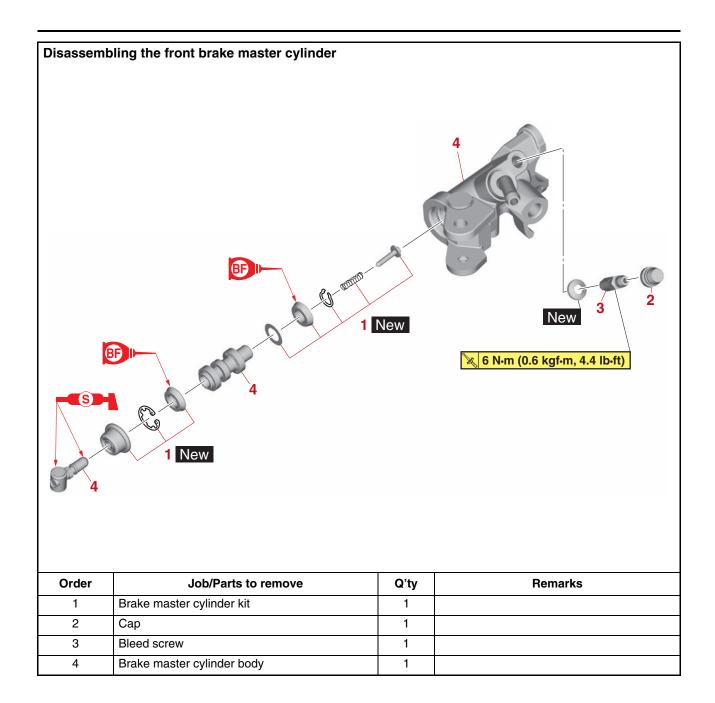

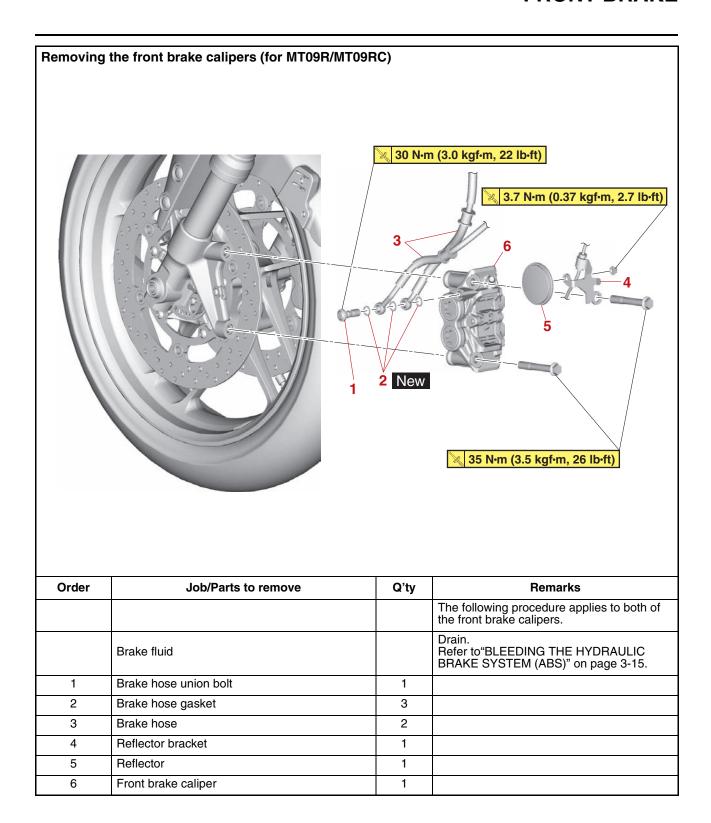

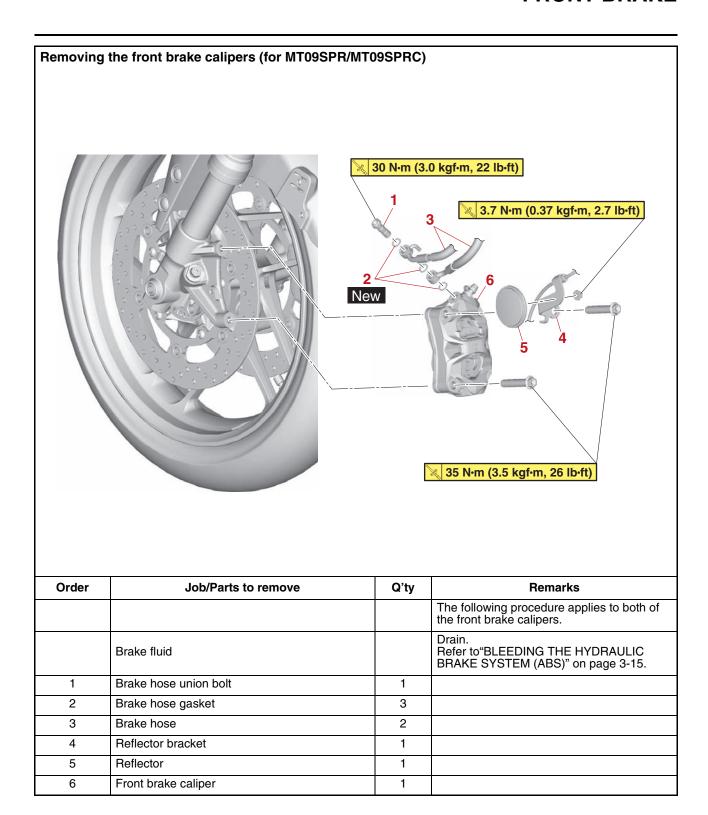

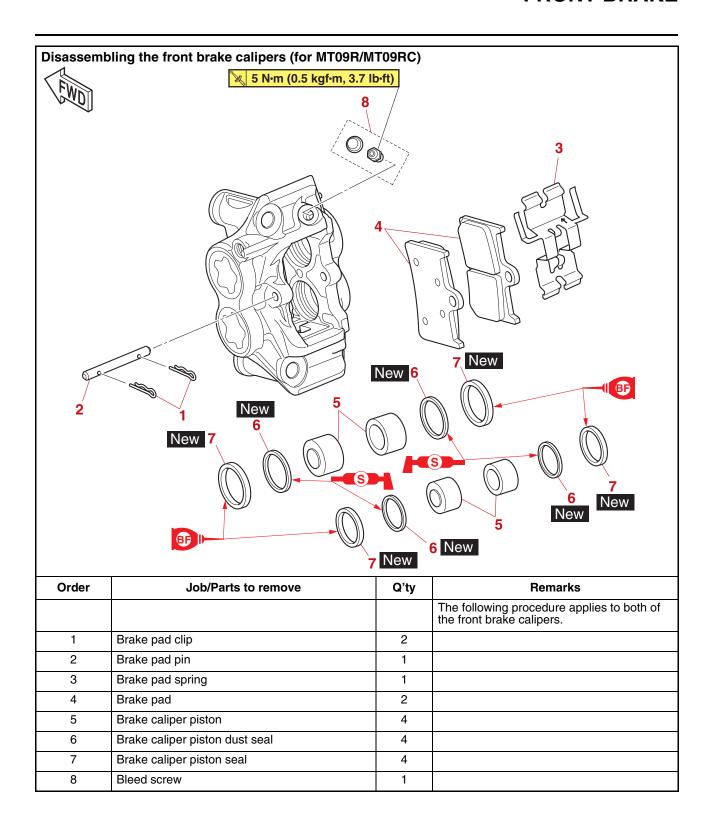

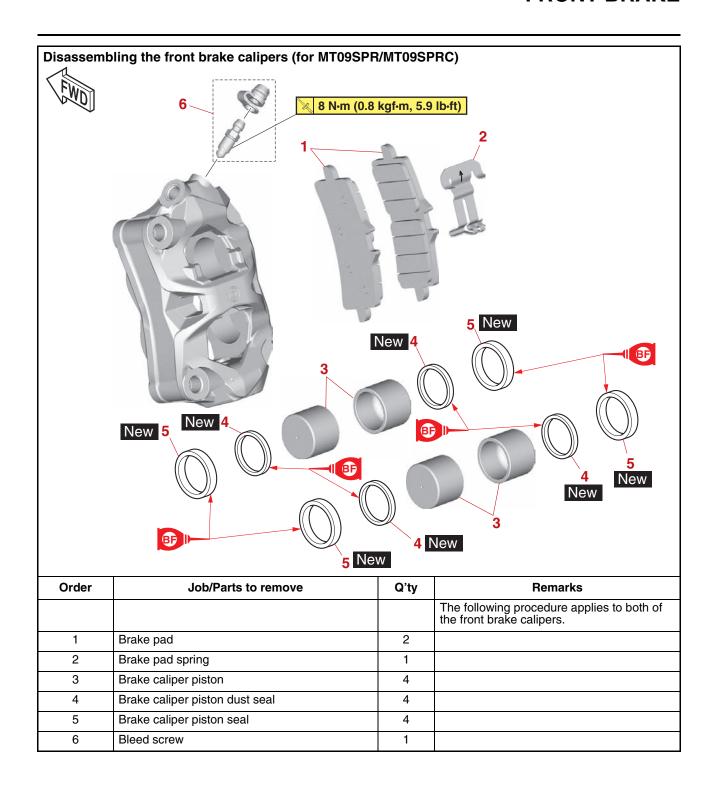

INTRODUCTION

EWA14101

WARNING

Disc brake components rarely require disassembly. Therefore, always follow these preventive measures:

- Never disassemble brake components unless absolutely necessary.
- If any connection on the hydraulic brake system is disconnected, the entire brake system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal brake components.
- Use only clean or new brake fluid for cleaning brake components.
- Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.
- Avoid brake fluid coming into contact with the eyes as it can cause serious injury.
 FIRST AID FOR BRAKE FLUID ENTERING THE EYES:
- Flush with water for 15 minutes and get immediate medical attention.

EAS30169

CHECKING THE FRONT BRAKE DISCS


The following procedure applies to both brake discs.

- 1. Check:
- Front brake disc
 Damage/galling → Replace.
- 2. Measure:
- Brake disc runout
 Out of specification → Replace.



Brake disc runout limit (as measured on wheel)
0.10 mm (0.0039 in)

- a. Place the vehicle on a maintenance stand so that the front wheel is elevated.
- b. Remove the brake caliper.
- c. Hold the dial gauge at a right angle against the brake disc surface.
- d. Measure the runout 1.5 mm (0.06 in) below the edge of the brake disc.

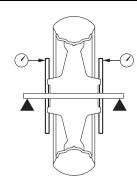

G088908

3. Measure:

ferent locations.

Brake disc thickness
 Measure the brake disc thickness at a few dif-

Out of specification \rightarrow Replace.



Brake disc thickness limit 4.0 mm (0.16 in)

- 4. Replace:
 - Brake disc Refer to "FRONT WHEEL" on page 4-16.



Front brake disc bolt 18 N·m (1.8 kgf·m, 13 lb·ft) LOCTITE®

ECA19150

NOTICE

Replace the brake disc bolts with new ones.

TIP

Tighten the brake disc bolts in stages and in a crisscross pattern.

EAS3017


REPLACING THE FRONT BRAKE PADS (for MT09R/MT09RC)

The following procedure applies to both brake calipers.


TIP_

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

- 1. Remove:
- Brake pad clip "1"
- Brake pad pin "2"
- Brake pad spring "3"

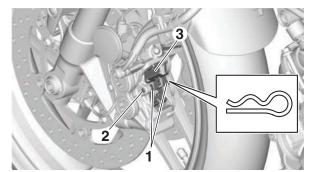

- 2. Remove:
 - Brake pad "1"

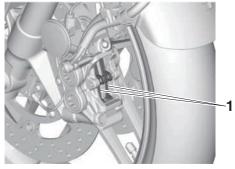

- 3. Measure:
 - Brake pad wear limit "a"
 Out of specification → Replace the brake pads as a set.



Brake pad lining thickness limit 0.5 mm (0.02 in) (MT09R/MT09RC)




- 4. Remove:
 - Brake caliper bolt
- 5. Install:
 - Brake pad
 - Brake pad spring

TIP

Always install new brake pads and new brake pad spring as a set.

a. Connect a clear plastic hose "1" tightly to the bleed screw "2". Put the other end of the hose into an open container. Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.

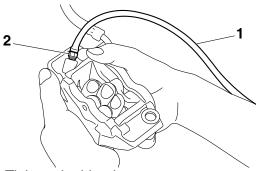

c. Tighten the bleed screw.




Front brake caliper bleed screw (MT09R/MT09RC) 5 N·m (0.5 kgf·m, 3.7 lb·ft)

d. Install the brake pads and brake pad spring.

TIF

The arrow mark "a" on the brake pad spring must point in the direction of disc rotation.

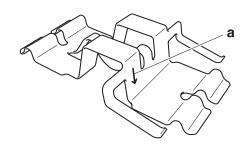

- 6. Install:
 - Brake pad pin
 - Brake pad clip
 - Front brake caliper



Front brake caliper bolt 35 N·m (3.5 kgf·m, 26 lb·ft)

- 7. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 8. Check:
 - Brake lever operation
 Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.


REPLACING THE FRONT BRAKE PADS (for MT09SPR/MT09SPRC)

The following procedure applies to both brake calipers.


TIP

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.


- 1. Remove:
- Brake caliper bolt "1"
- Brake caliper "2"

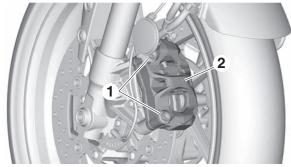

- 2. Remove:
 - Brake pad "1"

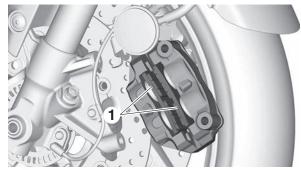


- Remove:
- Brake pad spring "1"

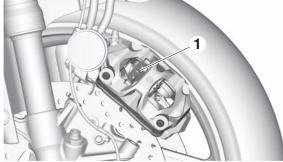

- 4. Measure:
- Brake pad wear limit "a"
 Out of specification → Replace the brake pads as a set.



Brake pad lining thickness limit 1.0 mm (0.04 in) (MT09SPR/ MT09SPRC)

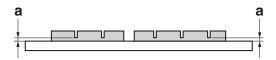


- 5. Install:
- · Brake pad spring
- Brake pad

TIP

Always install new brake spring and new brake pads as a set.

- a. Connect a clear plastic hose "1" tightly to the bleed screw "2". Put the other end of the hose into an open container.
- b. Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.

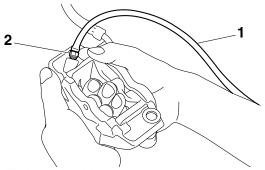

c. Tighten the bleed screw.




Front brake caliper bleed screw (MT09SPR/MT09SPRC) 8 N·m (0.8 kgf·m, 5.9 lb·ft)

d. Install the brake spring and brake pads.

TIP

The arrow mark "a" on the brake pad spring must point in the direction of disc rotation.

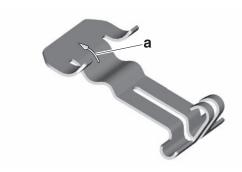

- 6. Install:
 - Front brake caliper



Front brake caliper bolt 35 N·m (3.5 kgf·m, 26 lb·ft)

- 7. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 8. Check:
 - Brake lever operation
 Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.

EAS30724

REMOVING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the brake calipers.

TIP_

Before removing the brake caliper, drain the brake fluid from the entire brake system.

- 1. Remove:
- Brake hose union bolt
- Brake hose gasket
- Brake hose

TIP

Put the end of the brake hose into a container and pump out the brake fluid carefully.

EAS30172

DISASSEMBLING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the brake calipers.

- 1. Remove:
- Brake caliper piston
- Brake caliper piston dust seal
- Brake caliper piston seal


- a. Secure the right side brake caliper pistons with a piece of wood "a".
- b. Blow compressed air into the brake hose joint opening "b" to force out the left side pistons from the brake caliper.

EWA17060

WARNING

- Never try to pry out the brake caliper pistons.
- Do not loosen the bolts "4".

Bolts "4": for MT09R/MT09RC

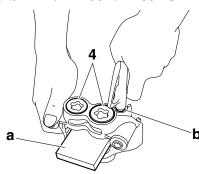

- c. Remove the brake caliper piston dust seals and brake caliper piston seals.
- d. Repeat the previous steps to force out the right side pistons from the brake caliper.

EAS30173

CHECKING THE FRONT BRAKE CALIPERS

The following procedure applies to both of the brake calipers.

Recommended brake component replacement schedule			
Brake pads	If necessary		
Piston seals	Every two years		
Piston dust seals	Every two years		
Brake hoses	Every four years		
Brake fluid	Every two years and whenever the brake is disassembled		

- 1. Check:
- Brake caliper piston
 Rust/scratches/wear → Replace the brake
 caliper pistons.
- Brake caliper cylinder Scratches/wear → Replace the brake caliper assembly.

- Brake caliper body Cracks/damage → Replace the brake caliper assembly.
- Brake fluid delivery passages (brake caliper body)
 Obstruction → Blow out with compressed air.

WARNING

Whenever a brake caliper is disassembled, replace the brake caliper piston dust seals and brake caliper piston seals.

EAS30174

ASSEMBLING THE FRONT BRAKE CALIPERS

EWA16560

WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components as they will cause the brake caliper piston dust seals and brake caliper piston seals to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston dust seals and brake caliper piston seals.



Specified brake fluid DOT 4

EAS20175

INSTALLING THE FRONT BRAKE CALIPERS (for MT09R/MT09RC)

The following procedure applies to both of the brake calipers.

- 1. Install:
- Front brake caliper "1" (temporarily)
- Brake hose gasket New
- Brake hose "2"
- Brake hose union bolt "3"



Front brake hose union bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

EWA13531


WARNING


Proper brake hose routing is essential to insure safe vehicle operation.

ECA21410

NOTICE

- When installing the brake hose onto the brake caliper "1", make sure the brake pipe "a" touches the projection "b" on the brake caliper.
- Install the brake pipe "c" so that it is aligned with the brake pipe "a".

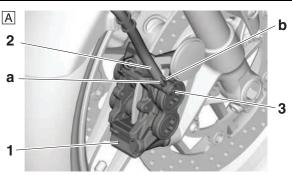

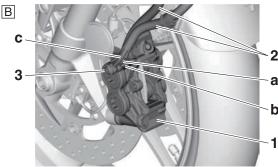

- A. Right side
- B. Left side
- 2. Remove:
- Front brake caliper
- 3. Install:
 - Brake pad
 - Brake pad spring
 - Brake pad pin
 - Brake pad clip
 - Front brake caliper



Front brake caliper bolt 35 N·m (3.5 kgf·m, 26 lb·ft)

Refer to "REPLACING THE FRONT BRAKE PADS (for MT09R/MT09RC)" on page 4-40.

- 4. Fill:
- Brake master cylinder reservoir (with the specified amount of the specified brake fluid)



Specified brake fluid DOT 4

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

- 5. Bleed:
 - Brake system Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.
- 6. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 7. Check:
 - \bullet Brake lever operation Soft or spongy feeling \to Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.

EAS34057

INSTALLING THE FRONT BRAKE CALIPERS (for MT09SPR/MT09SPRC)

The following procedure applies to both of the brake calipers.

- 1. Install:
- Brake pad spring
- Brake pad
 Refer to "REPLACING THE FRONT BRAKE
 PADS (for MT09SPR/MT09SPRC)" on
 page 4-42.
- 2. Install:
 - Front brake caliper "1"
 - Brake hose gasket New
 - Brake hose (hydraulic unit to front brake caliper (left)) "2"

- Brake hose (front brake caliper (left) to front brake caliper (right)) "3"
- Brake hose union bolt "4"



Front brake caliper bolt 35 N·m (3.5 kgf·m, 26 lb·ft) Front brake hose union bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

EWA13531


WARNING


Proper brake hose routing is essential to insure safe vehicle operation.

ECA28620

NOTICE

- When installing the brake hose to the brake caliper, make sure that the projection "a" of the brake hose (front brake caliper (left) to front brake caliper (right)) "3" is in contact with the brake hose (hydraulic unit to front brake caliper (left)) "2" as shown. (Left side only)
- When installing the brake hose to the brake caliper, view at the brake hose union bolt from top side and make sure that the brake caliper bolt and brake hose are parallel "b" as shown.

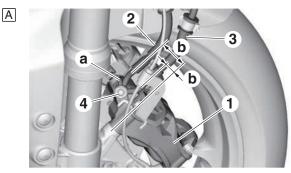

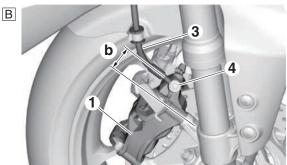

- A. Left side
- B. Right side
- 3. Fill:
- Brake master cylinder reservoir (with the specified amount of the specified brake fluid)



Specified brake fluid DOT 4

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

- 4. Bleed:
 - Brake system Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.
- 5. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 6. Check:
 - Brake lever operation
 Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.

EAS30179

REMOVING THE FRONT BRAKE MASTER CYLINDER

TIP_

Before removing the front brake master cylinder, drain the brake fluid from the entire brake system.

- 1. Disconnect:
- Brake light switch connector (from the front brake light switch)

- 2. Remove:
 - Brake hose union bolt
 - · Brake hose gasket
 - Brake hose

TIP

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

EAS3072

CHECKING THE FRONT BRAKE MASTER CYLINDER

- 1. Check:
 - Brake master cylinder
 Damage/scratches/wear → Replace.
 - Brake fluid delivery passages (brake master cylinder body)
 Obstruction → Blow out with compressed air.
- 2. Check:
 - Brake master cylinder kit Damage/scratches/wear → Replace.
- 3. Check:
 - Brake master cylinder reservoir
 - Brake master cylinder reservoir diaphragm holder
 - Cracks/damage \rightarrow Replace.
- Brake master cylinder reservoir diaphragm Damage/wear → Replace.
- 4. Check:
- Brake hose Cracks/damage/wear → Replace.

EAS3018

ASSEMBLING THE FRONT BRAKE MASTER CYLINDER

EWA13520

WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.




Specified brake fluid DOT 4


- 1. Install:
- Cylinder cup "1" New
- Master cylinder piston "2"
 Use the cylinder cup installer "3" for the installation.



Cylinder cup installer 90890-01996

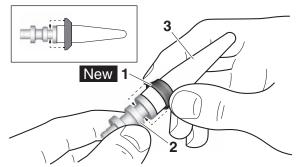

- 2. Install:
 - Master cylinder piston
 - Circlip "1" New
 - Dust boot "2" New
 - Push rod "3"

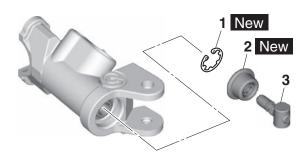

EAS30182

INSTALLING THE FRONT BRAKE MASTER CYLINDER


- 1. Install:
- Front brake master cylinder "1"
- Front brake master cylinder holder "2"




Front brake master cylinder holder bolt 16 N·m (1.6 kgf·m, 12 lb·ft)

TIP

- Align the end of the front brake master cylinder "1" with the punch mark "a" on the handlebar.
- First, tighten the upper bolt, then the lower bolt.
- Align the pin "b" of the front brake master cylinder holder with the groove "c" of the brake fluid reservoir bracket.

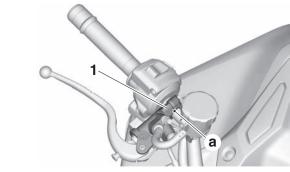

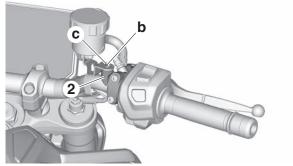

- 2. Install:
 - Brake hose gasket New
 - Brake hose
- Brake hose union bolt



Front brake hose union bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

EWA13531

WARNING

Proper brake hose routing is essential to insure safe vehicle operation.


ECA14160

NOTICE

When installing the brake hose onto the brake master cylinder, make sure the brake pipe touches the projection "a" as shown.

TIP

Turn the handlebar to the left and right to make sure the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.

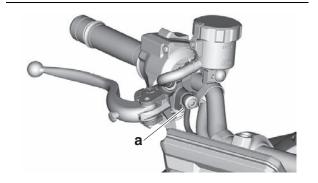

- 3. Fill:
 - Brake master cylinder reservoir (with the specified amount of the specified brake fluid)



Specified brake fluid DOT 4

EWA13540

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake master cylinder reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.


ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.


- 4. Bleed:
 - Brake system Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.
- 5. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 6. Check:
 - Brake lever operation
 Soft or spongy feeling → Bleed the brake system.
 Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.


REAR BRAKE

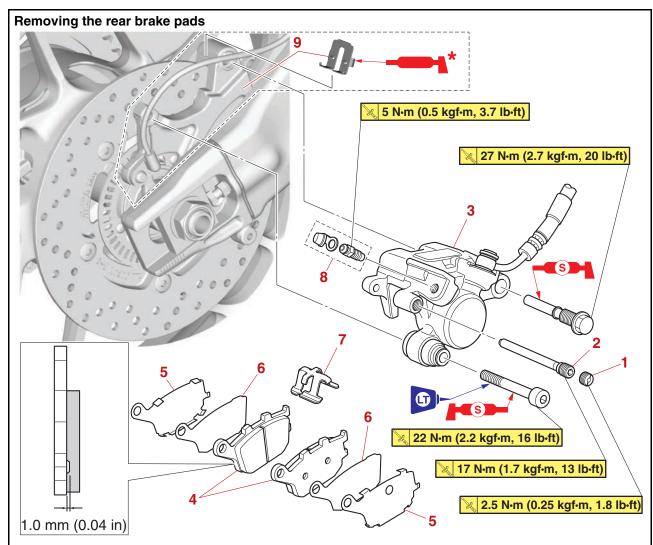



* Three Bond No. 1521.


Order	Job/Parts to remove	Q'ty	Remarks
1	Screw plug	1	
2	Brake pad retaining bolt	1	
3	Rear brake caliper	1	
4	Brake pad	2	
5	Brake pad shim	2	
6	Brake pad insulator	2	
7	Brake pad spring	1	
8	Bleed screw	1	
9	Brake caliper bracket assembly	1	

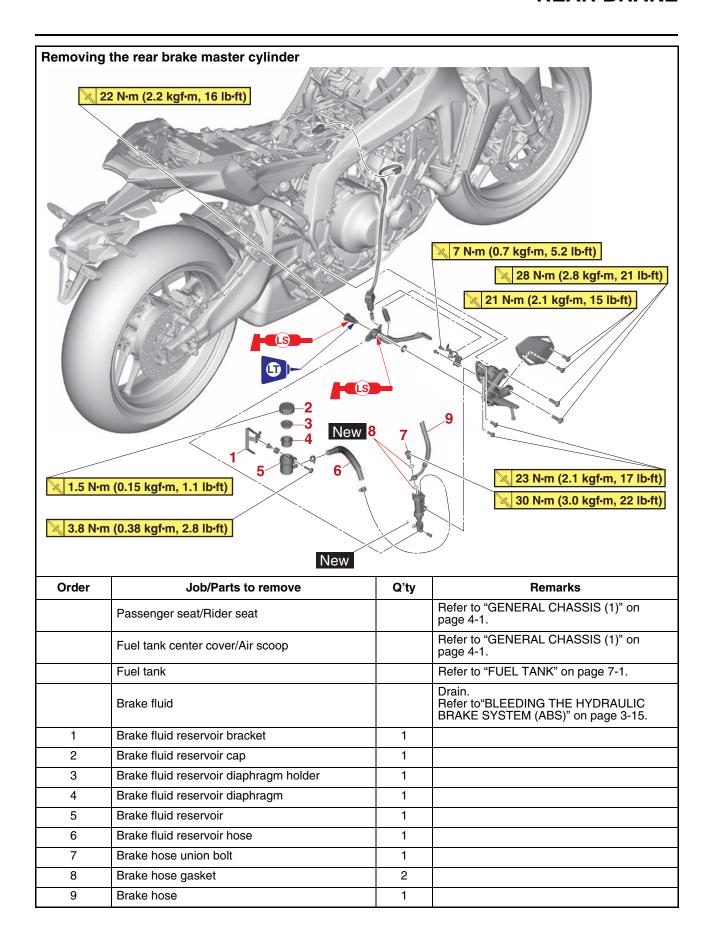


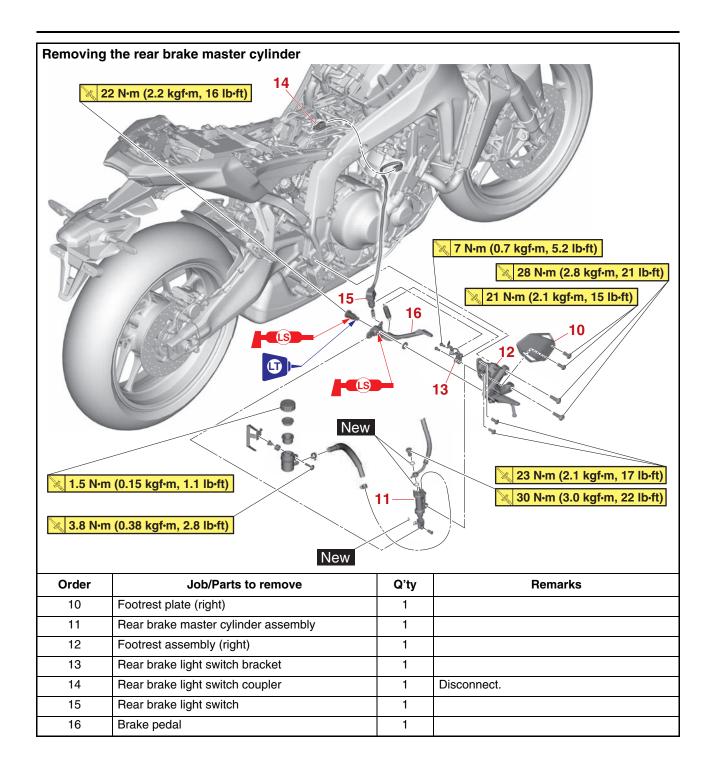

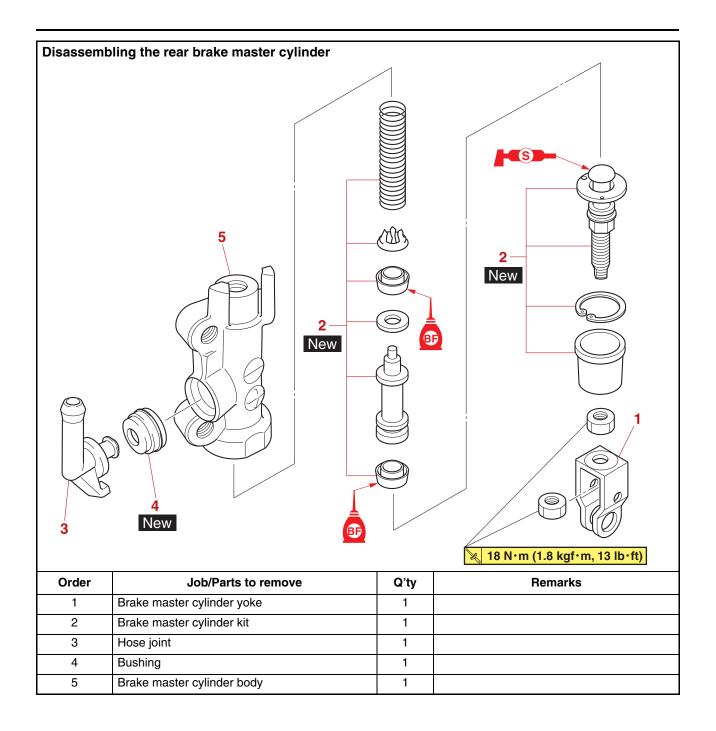

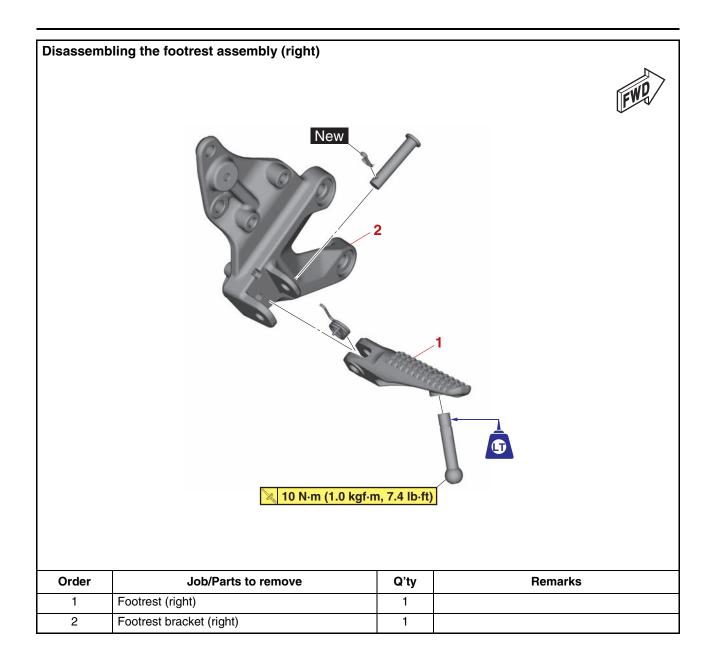

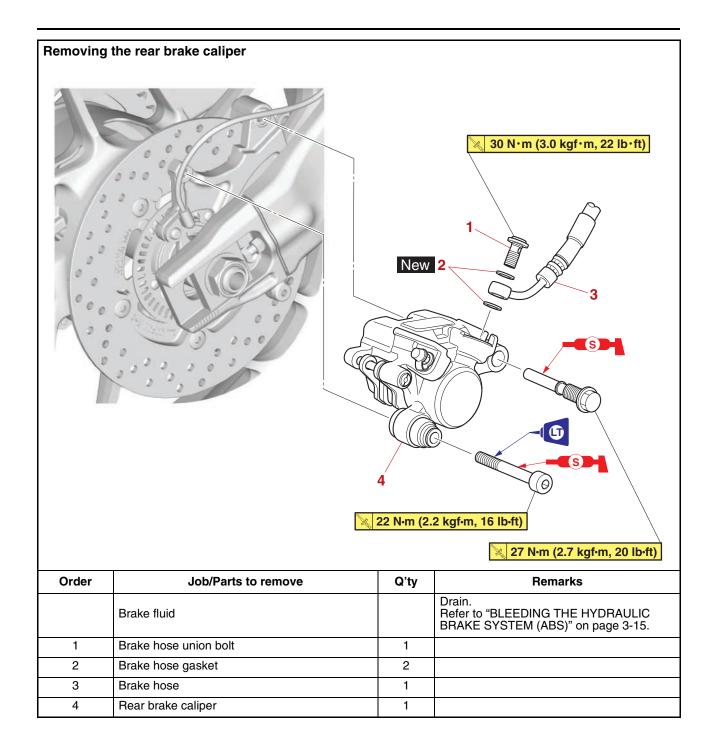

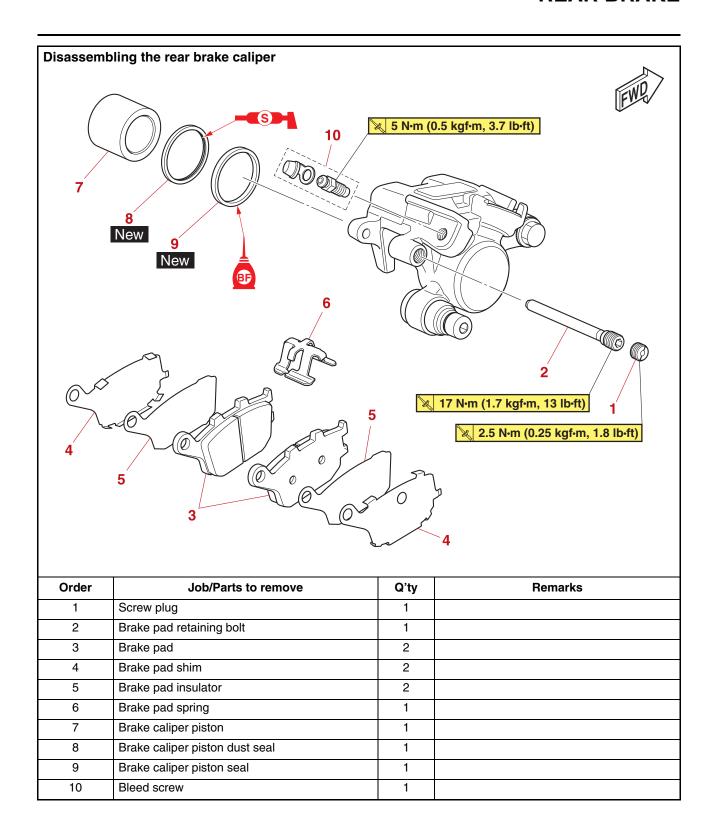

ADJUSTING THE FOOTREST POSITION

- 1. Check:
- Footrest position

TIP


The rider footrests can be adjusted to one of two positions. From the factory, the footrests are in the low position.

2. Adjust:

- a. Remove the footrest assembly (left and right) "1".
- Adjust the footrest position (low or high position).
- c. Install the footrest assembly (left and right).



Footrest assembly bolt 28 N·m (2.8 kgf·m, 21 lb·ft)

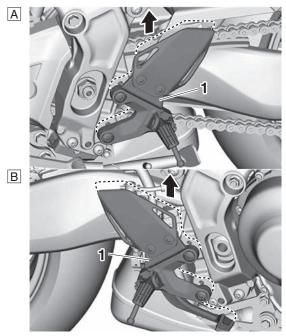

- A. Left side
- B. Right side

EAS30183

INTRODUCTION

EWA14101



Disc brake components rarely require disassembly. Therefore, always follow these preventive measures:

- Never disassemble brake components unless absolutely necessary.
- If any connection on the hydraulic brake system is disconnected, the entire brake system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal brake components.
- Use only clean or new brake fluid for cleaning brake components.
- Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.
- Avoid brake fluid coming into contact with the eyes as it can cause serious injury.
 FIRST AID FOR BRAKE FLUID ENTERING THE EYES:
- Flush with water for 15 minutes and get immediate medical attention.

EAS3018

CHECKING THE REAR BRAKE DISC

- 1. Check:
 - Rear brake disc Damage/galling → Replace.
- 2. Measure:
 - Brake disc runout
 Out of specification → Replace.
 Refer to "CHECKING THE FRONT BRAKE
 DISCS" on page 4-40.



Brake disc runout limit (as measured on wheel)
0.15 mm (0.0059 in)

- Measure:
- Brake disc thickness

Measure the brake disc thickness at a few different locations.

Out of specification \rightarrow Replace.

Refer to "CHECKING THE FRONT BRAKE DISCS" on page 4-40.



Brake disc thickness limit 4.5 mm (0.18 in)

- 4. Replace:
 - Brake disc Refer to "REAR WHEEL" on page 4-23.



Rear brake disc bolt 30 N·m (3.0 kgf·m, 22 lb·ft) LOCTITE®

EAS30185

REPLACING THE REAR BRAKE PADS


TIP

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

- 1. Measure:
- Brake pad wear limit "a"
 Out of specification → Replace the brake pads as a set.



Brake pad lining thickness limit 1.0 mm (0.04 in)

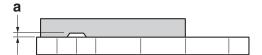


- 2. Install:
 - Brake pad insulator
 - Brake pad shim (onto the brake pad)
 - Brake pad spring (into the rear brake caliper)
 - Brake pad

TIF

Always install new brake pads, brake pad insulators, brake pad shims, and brake pad spring as a set.

- a. Connect a clear plastic hose "1" tightly to the bleed screw "2". Put the other end of the hose into an open container.
- b. Loosen the bleed screw and push the brake caliper piston into the brake caliper with your finger.

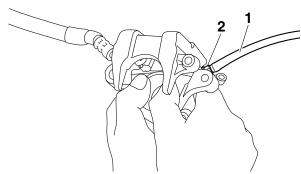

c. Tighten the bleed screw.



Rear brake caliper bleed screw 5 N·m (0.5 kgf·m, 3.7 lb·ft)

d. Install the brake pad insulators and brake pad shims onto each brake pads.

TIP

Apply silicone grease between the brake pad insulator and brake pad shim.


ECA14150

NOTICE

- Do not allow grease to contact the brake pads.
- Remove any excess grease.
 - e. Install the brake pads and brake pad spring.

TIF

The longer tangs "a" of the brake pad spring must point in the direction of the brake caliper piston.

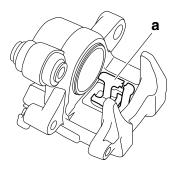

- 3. Lubricate:
- Rear brake caliper bolt



Recommended lubricant Silicone grease

ECA14150

NOTICE

- Do not allow grease to contact the brake pads.
- Remove any excess grease.

- 4. Install:
- Rear brake caliper
- Brake pad retaining bolt
- Screw plug



Rear brake caliper bolt (front) 27 N·m (2.7 kgf·m, 20 lb·ft) Rear brake caliper bolt (rear) 22 N·m (2.2 kgf·m, 16 lb·ft) LOCTITE®

Rear brake pad retaining bolt 17 N·m (1.7 kgf·m, 13 lb·ft) Rear brake caliper screw plug 2.5 N·m (0.25 kgf·m, 1.8 lb·ft)

- 5. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 6. Check:
 - Brake pedal operation
 Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.

EAS30186

REMOVING THE REAR BRAKE CALIPER TIP

Before disassembling the brake caliper, drain the brake fluid from the entire brake system.

- 1. Remove:
- Brake hose union bolt
- Brake hose gasket
- Brake hose

TIP

Put the end of the brake hose into a container and pump out the brake fluid carefully.


EAS30187

DISASSEMBLING THE REAR BRAKE CALIPER

- 1. Remove:
- Brake caliper piston
- Brake caliper piston dust seal
- Brake caliper piston seal
- a. Blow compressed air into the brake hose joint opening "a" to force out the piston from the brake caliper.

WARNING

- Cover the brake caliper piston with a rag.
 Be careful not to get injured when the piston is expelled from the brake caliper.
- Never try to pry out the brake caliper piston.

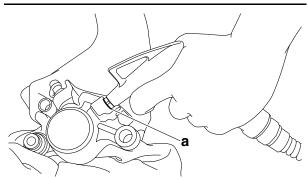

b. Remove the brake caliper piston dust seal and brake caliper piston seal.

EAS30188

CHECKING THE REAR BRAKE CALIPER

Recommended brake component replacement schedule			
Brake pads	If necessary		
Piston seal	Every two years		
Piston dust seal	Every two years		
Brake hoses	Every four years		
Brake fluid	Every two years and whenever the brake is disassembled		

- 1. Check:
- Brake caliper piston
 Rust/scratches/wear → Replace the brake
 caliper piston.
- Brake caliper cylinder Scratches/wear → Replace the brake caliper assembly.
- Brake caliper body Cracks/damage → Replace the brake caliper assembly.
- Brake fluid delivery passages (brake caliper body)
 Obstruction → Blow out with compressed air.

WARNING

Whenever a brake caliper is disassembled, replace the brake caliper piston dust seal and brake caliper piston seal.

- 2. Check:
 - Rear brake caliper bracket
 - Rear brake caliper bracket retainer Cracks/damage → Replace the rear brake caliper bracket assembly.

Refer to "REAR WHEEL" on page 4-23.

EAS30189

ASSEMBLING THE REAR BRAKE CALIPER

WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components as they will cause the brake caliper piston dust seal and brake caliper piston seal to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston dust seal and brake caliper piston seal.



Specified brake fluid DOT 4

EAS30190

INSTALLING THE REAR BRAKE CALIPER

- 1. Install:
- Brake caliper bracket retainer
- Rear brake caliper (temporarily)
- Brake hose gasket New
- Brake hose
- Brake hose union bolt



Rear brake hose union bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

EWA1353

WARNING

Proper brake hose routing is essential to insure safe vehicle operation.


ECA19080

NOTICE

When installing the brake hose onto the brake caliper "1", make sure the brake pipe "a" passes between the projections "b" on the brake caliper.

TIP

Apply Three Bond No. 1521 onto the mating surfaces of the brake caliper bracket and brake caliper bracket retainer.

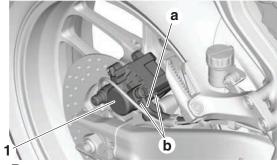

- 2. Remove:
- Rear brake caliper
- Install:
- Brake pad insulator
- Brake pad shim (onto the brake pad)
- Brake pad spring (into the rear brake caliper)
- Brake pad
- Rear brake caliper Refer to "REPLACING THE REAR BRAKE PADS" on page 4-57.



Rear brake caliper bolt (front) 27 N·m (2.7 kgf·m, 20 lb·ft) Rear brake caliper bolt (rear) 22 N·m (2.2 kgf·m, 16 lb·ft) LOCTITE®

Rear brake pad retaining bolt 17 N·m (1.7 kgf·m, 13 lb·ft) Rear brake caliper screw plug 2.5 N·m (0.25 kgf·m, 1.8 lb·ft)

- 4 Fill:
 - Brake fluid reservoir (with the specified amount of the specified brake fluid)



Specified brake fluid DOT 4

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

- 5. Bleed:
 - Brake system Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.
- 6. Check:
 - Brake fluid level Below the minimum level mark → Add the specified brake fluid to the proper level. Refer to "CHECKING THE BRAKE FLUID LEVEL" on page 3-13.
- 7. Check:
 - Brake pedal operation Soft or spongy feeling \rightarrow Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.

REMOVING THE REAR BRAKE MASTER **CYLINDER**

- 1. Remove:
- Brake hose union bolt
- Brake hose gasket
- Brake hose

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

CHECKING THE REAR BRAKE MASTER CYLINDER

- 1. Check:
 - Brake master cylinder Damage/scratches/wear \rightarrow Replace.
 - Brake fluid delivery passages (brake master cylinder body) Obstruction \rightarrow Blow out with compressed air.
- 2. Check:
 - Brake master cylinder kit Damage/scratches/wear \rightarrow Replace.
- 3. Check:
- Brake fluid reservoir
- Brake fluid reservoir diaphragm holder Cracks/damage \rightarrow Replace.
- Brake fluid reservoir diaphragm Damage/wear \rightarrow Replace.
- 4. Check:
 - Brake hose
- Brake fluid reservoir hose Cracks/damage/wear \rightarrow Replace.

ASSEMBLING THE REAR BRAKE MASTER **CYLINDER**

EWA13520

WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.



Specified brake fluid DOT 4

- 1. Install:
- Brake master cylinder kit New

INSTALLING THE REAR BRAKE MASTER **CYLINDER**

- 1. Install:
- Brake hose gasket New
- Brake hose
- Brake fluid reservoir hose
- Brake hose union bolt



Rear brake hose union bolt 30 N·m (3.0 kgf·m, 22 lb·ft) EWA13531


WARNING

Proper brake hose routing is essential to insure safe vehicle operation.

ECA14160

NOTICE

When installing the brake hose onto the brake master cylinder, make sure the brake pipe touches the projection "a" as shown.

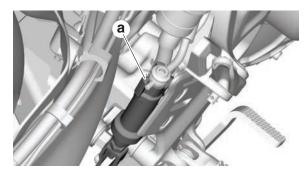

- 2. Fill:
 - Brake fluid reservoir (with the specified amount of the specified brake fluid)



Specified brake fluid DOT 4

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540


NOTICE


Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

- 3. Bleed:
 - Brake system Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.

- 4. Check:
 - Brake fluid level
 Below the minimum level mark → Add the
 specified brake fluid to the proper level.
 Refer to "CHECKING THE BRAKE FLUID
 LEVEL" on page 3-13.
- 5. Adjust:
 - Brake pedal position Refer to "ADJUSTING THE REAR DISC BRAKE" on page 3-14.
- 6. Adjust:
- Rear brake light operation timing Refer to "ADJUSTING THE REAR BRAKE LIGHT SWITCH" on page 3-34.

ABS (ANTI-LOCK BRAKE SYSTEM)

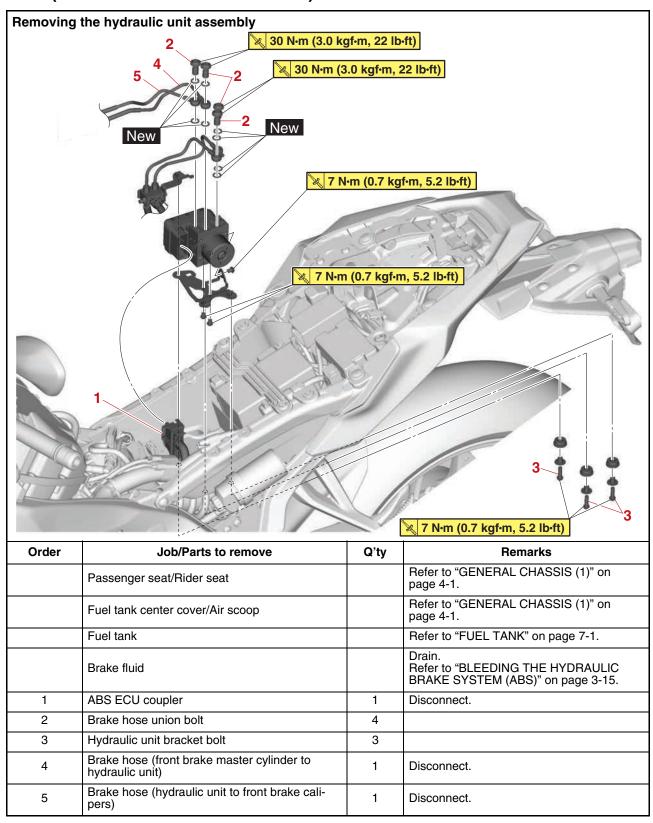

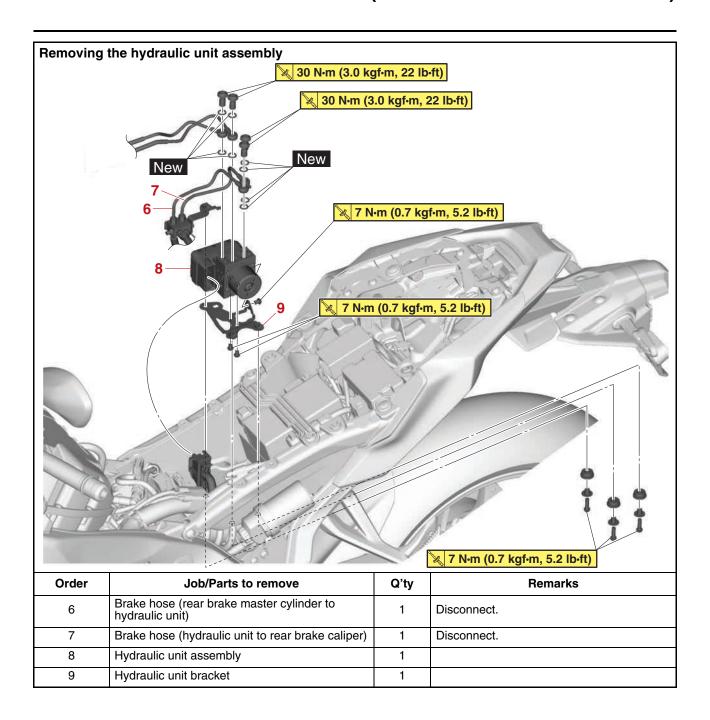

EAS30197

REMOVING THE HYDRAULIC UNIT ASSEMBLY

ECA21091

NOTICE

Unless necessary, avoid removing and installing the brake hoses of the hydraulic unit assembly.

EWA13930

WARNING

Refill with the same type of brake fluid that is already in the system. Mixing fluids may result in a harmful chemical reaction, leading to poor braking performance.


ECA18241

NOTICE

- Handle the ABS components with care since they have been accurately adjusted.
 Keep them away from dirt and do not subject them to shocks.
- Do not turn the main switch to "ON" when removing the hydraulic unit assembly.
- Do not clean with compressed air.
- · Do not reuse the brake fluid.
- Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.
- Do not allow any brake fluid to contact the couplers. Brake fluid may damage the couplers and cause bad contacts.
- If the union bolts for the hydraulic unit assembly have been removed, be sure to tighten them to the specified torque and bleed the brake system.
- 1. Disconnect:
- ABS ECU coupler "1"

TIP

While pushing the portion "a" of the ABS ECU coupler, pull the lock lever "2" up to release the lock.

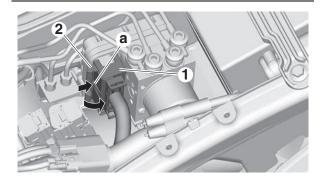

- 2. Remove:
 - Brake hose union bolt "1
- Brake hose

ECA28600

NOTICE


Loosen the brake hose union bolts while holding the hydraulic unit assembly with the HU holder.

TIP

- Use the HU holder attachment A.
- Do not operate the brake lever and brake pedal while removing the brake hose union bolts.
- Do not bend the brake pipe when loosening the brake hose union bolts.



HU holder 90890-01912

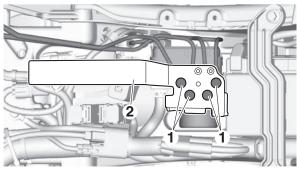

2. HU holder

ECA19800

NOTICE


- When removing the brake hoses and brake pipes, cover the area around the hydraulic unit assembly to catch any spilt brake fluid. Do not allow the brake fluid to contact other parts.
- Before disconnecting the brake pipes from the hydraulic unit assembly, do not lift up or move the brake pipes.
- 3. Remove:
- Hydraulic unit assembly "1"

TIP

To avoid brake fluid leakage and to prevent foreign materials from entering the hydraulic unit assembly, insert a rubber plug "a" or a bolt (M10 \times 1.25) into each brake hose union bolt hole. ECA19810

NOTICE

When using a bolt, do not tighten the bolt until the bolt head touches the hydraulic unit. Otherwise, the brake pipe seating surface could be deformed.

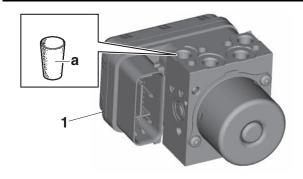

EAS30198

CHECKING THE HYDRAULIC UNIT ASSEMBLY

- 1. Check:
- Hydraulic unit assembly Cracks/damage → Replace the hydraulic unit assembly and the brake pipes that are connected to the assembly as a set.

EAS30200

INSTALLING THE HYDRAULIC UNIT

- 1. Install:
- Hydraulic unit assembly

ECA21110

NOTICE

Do not remove the rubber plugs or bolts (M10 \times 1.25) installed in the brake hose union bolt holes before installing the hydraulic unit assembly.

TIP

Do not allow any foreign materials to enter the hydraulic unit assembly and brake hoses when installing the hydraulic unit assembly.



Hydraulic unit assembly bolt 7 N·m (0.7 kgf·m, 5.2 lb·ft) Hydraulic unit bracket bolt 7 N·m (0.7 kgf·m, 5.2 lb·ft)

- 2. Remove:
 - Rubber plugs or bolt (M10 × 1.25)

- 3. Install:
 - Gasket New
 - Brake hose union bolt "1"
- Brake hose Refer to "CABLE ROUTING" on page 2-15.

NOTICE

If the brake hose union bolt does not turn easily, replace the hydraulic unit assembly, brake hoses, and related parts as a set.



Brake hose union bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

ECA28610

NOTICE


Tighten the brake hose union bolts while holding the hydraulic unit assembly with the HU holder.

TIP

Use the HU holder attachment A.




HU holder 90890-01912

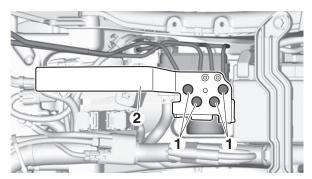

- 2. HU holder
- 4. Connect:
- ABS ECU coupler "1"

TIP.

Connect the ABS ECU coupler, and then push the lock lever "a" of the coupler in the direction of the arrow shown.

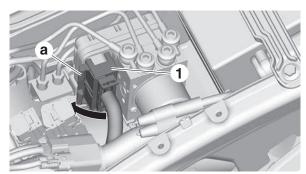

5. Fill:

 Brake fluid reservoir (with the specified amount of the specified brake fluid)



Specified brake fluid DOT 4

EWA17280

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake master cylinder reservoir or brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

- 6. Bleed:
 - Brake system Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM (ABS)" on page 3-15.
- Check the operation of the hydraulic unit according to the brake lever and the brake pedal response.

Refer to "HYDRAULIC UNIT OPERATION TESTS" on page 4-66.

ECA14770

NOTICE

Always check the operation of the hydraulic unit according to the brake lever and the brake pedal response.

- 8. Delete the DTC.
 Refer to "SELF-DIAGNOSTIC FUNCTION
 AND DIAGNOSTIC CODE TABLE" on
 page 9-41.
- 9. Perform a trial run. Refer to "CHECKING THE ABS WARNING LIGHT" on page 4-69.

EAS3093

HYDRAULIC UNIT OPERATION TESTS

The reaction-force pulsating action generated in the brake lever and brake pedal when the ABS is activated can be tested when the vehicle is stopped.

The hydraulic unit operation can be tested using the following two methods.

- Brake line routing confirmation: this test checks the function of the ABS after the system was disassembled, adjusted, or serviced.
- ABS reaction-force confirmation: this test generates the same reaction-force pulsating action
 that is generated in the brake lever and brake
 pedal when the ABS is activated.

Brake line routing confirmation

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP

- For the brake line routing confirmation, use the diagnosis of function of the YDT.
- Before performing the brake line routing confirmation, make sure that no malfunctions have been detected in the ABS ECU and that the wheels are not rotating.
- 1. Place the vehicle on a maintenance stand.
- 2. Turn the main switch to "OFF".
- Remove:
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 4. Check:
- Battery voltage Lower than 12.8 V → Charge or replace the battery.



Battery voltage Higher than 12.8 V

TIP

If the battery voltage is lower than 12.8 V, charge the battery, and then perform brake line routing confirmation.

5. Removing the protective cap, and then connect the YDT to the YDT coupler (6P).



Yamaha diagnostic tool USB (US) 90890-03275 Yamaha diagnostic tool (A/I) 90890-03273

TIP

- Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).
- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.

Refer to "YDT" on page 9-3.


- 6. Start the YDT and display the diagnosis of function screen.
- 7. Select code No. 2, "Brake line routing confirmation".
- 8. Click "Actuator Check", and then operate the brake lever "1" and brake pedal "2" simultaneously.

TIP_

- The hydraulic unit operates 1 second after the brake lever and brake pedal are operated simultaneously and continues for approximately 5 seconds.
- The operation of the hydraulic unit can be confirmed using the indicator.


On: The hydraulic unit is operating. Flashing: The conditions for operating the hydraulic unit have not been met.

Off: The brake lever and brake pedal are not being operated.

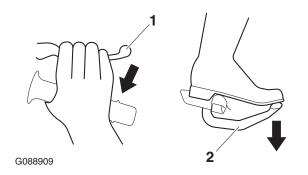

9. Check:

Hydraulic unit operation
 Click "Actuator Check", a single pulse will be generated in the brake lever "1", brake pedal "2", and again in the brake lever "1", in this order.

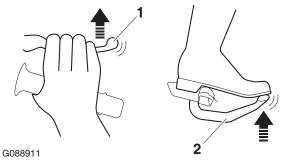

TIP_

"ON" and "OFF" on the tool screen indicate when the brakes are being applied and released respectively.

ECA17371

NOTICE

- Check that the pulse is felt in the brake lever, brake pedal, and again in the brake lever, in this order.
- If the pulse is felt in the brake pedal before it is felt in the brake lever, check that the brake hoses and brake pipes are connected correctly to the hydraulic unit assembly.
- If the pulse is hardly felt in either the brake lever or brake pedal, check that the brake hoses and brake pipes are connected correctly to the hydraulic unit assembly.
- 10.If the operation of the hydraulic unit is normal, delete all of the DTC.

ABS reaction-force confirmation

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP_

- For the ABS reaction-force confirmation, use the diagnosis of function of the YDT. For more information, refer to the operation manual of the YDT.
- Before performing the ABS reaction-force confirmation, make sure that no malfunctions have been detected in the ABS ECU and that the wheels are not rotating.

- 1. Place the vehicle on a maintenance stand.
- 2. Turn the main switch to "OFF".
- 3. Remove:
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 4. Check:
- Battery voltage Lower than 12.8 V → Charge or replace the battery.



Battery voltage Higher than 12.8 V

TIP

If the battery voltage is lower than 12.8 V, charge the battery, and then perform ABS reactionforce confirmation.

5. Removing the protective cap, and then connect the YDT to the YDT coupler (6P).



Yamaha diagnostic tool USB (US) 90890-03275

Yamaha diagnostic tool (A/I) 90890-03273

TIP.

- Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).
- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.

Refer to "YDT" on page 9-3.

- 6. Start the YDT and display the diagnosis of function screen.
- 7. Select code No. 1, "ABS reaction-force confirmation".
- 8. Click "Actuator Check", and then operate the brake lever "1" and brake pedal "2" simultaneously.


TIP_

- The hydraulic unit operates 1 second after the brake lever and brake pedal are operated simultaneously and continues for approximately 5 seconds.
- The operation of the hydraulic unit can be confirmed using the indicator.

On: The hydraulic unit is operating.

Flashing: The conditions for operating the hydraulic unit have not been met.


Off: The brake lever and brake pedal are not being operated.

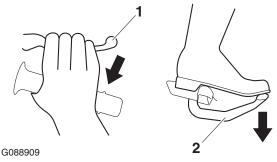

A reaction-force pulsating action is generated in the brake lever "1" and continues for a few seconds.

TIP

- The reaction-force pulsating action consists of quick pulses.
- Be sure to continue operating the brake lever and brake pedal even after the pulsating action has stopped.
- "ON" and "OFF" on the tool screen indicate when the brakes are being applied and released respectively.

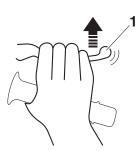

G088913

10. After the pulsating action has stopped in the brake lever, it is generated in the brake pedal "1" and continues for a few seconds.

TIF

- The reaction-force pulsating action consists of quick pulses.
- Be sure to continue operating the brake lever and brake pedal even after the pulsating action has stopped.
- "ON" and "OFF" on the tool screen indicate when the brakes are being applied and released respectively.



G088914

11.After the pulsating action has stopped in the brake pedal, it is generated in the brake lever and continues for a few seconds.

TIP

- The reaction-force pulsating action consists of quick pulses.
- "ON" and "OFF" on the tool screen indicate when the brakes are being applied and released respectively.

ECA17371

NOTICE

- Check that the pulse is felt in the brake lever, brake pedal, and again in the brake lever, in this order.
- If the pulse is felt in the brake pedal before it is felt in the brake lever, check that the brake hoses and brake pipes are connected correctly to the hydraulic unit assembly.
- If the pulse is hardly felt in either the brake lever or brake pedal, check that the brake hoses and brake pipes are connected correctly to the hydraulic unit assembly.
- 12. Turn the main switch to "OFF".
- 13.Remove the YDT from the YDT coupler, and then install the protective cap.
- 14. Turn the main switch to "ON".
- 15.Set the stop/run/start switch to "○".
- 16.Check for brake fluid leakage around the hydraulic unit.

Brake fluid leakage \rightarrow Replace the hydraulic unit, brake pipes, and related parts as a set.

17. If the operation of the hydraulic unit is normal, delete all of the DTC.


EAS302

CHECKING THE ABS WARNING LIGHT

After all checks and servicing are completed, ensure that the ABS warning light goes off by walking the vehicle at a speed of faster than 5 km/h (3 mi/h) or performing a trial run.


FAS20033


HANDLEBAR

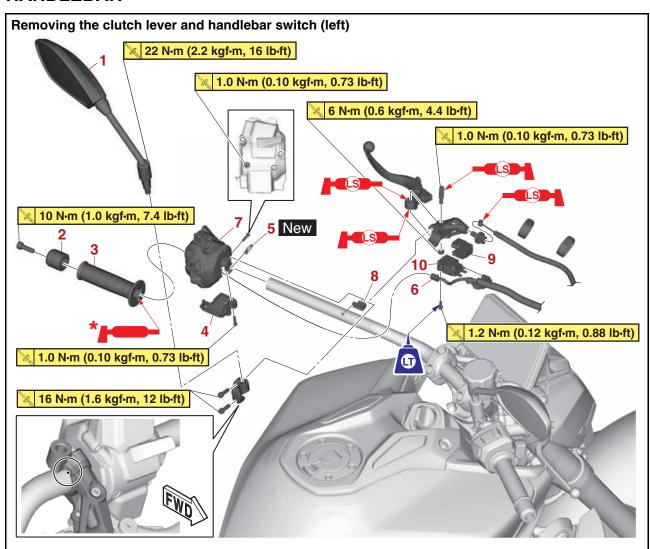

* Rubber adhesive

Order	Job/Parts to remove	Q'ty	Remarks
1	Rearview mirror (left)	1	
2	Grip end (left)	1	
3	Handlebar grip	1	
4	Handlebar switch cover	1	
5	Plastic locking tie	1	
6	Handlebar switch coupler (left)	1	Disconnect.
7	Handlebar switch (left)	1	
8	Handlebar switch clip	1	
9	Clutch switch cover	1	
10	Clutch switch	1	

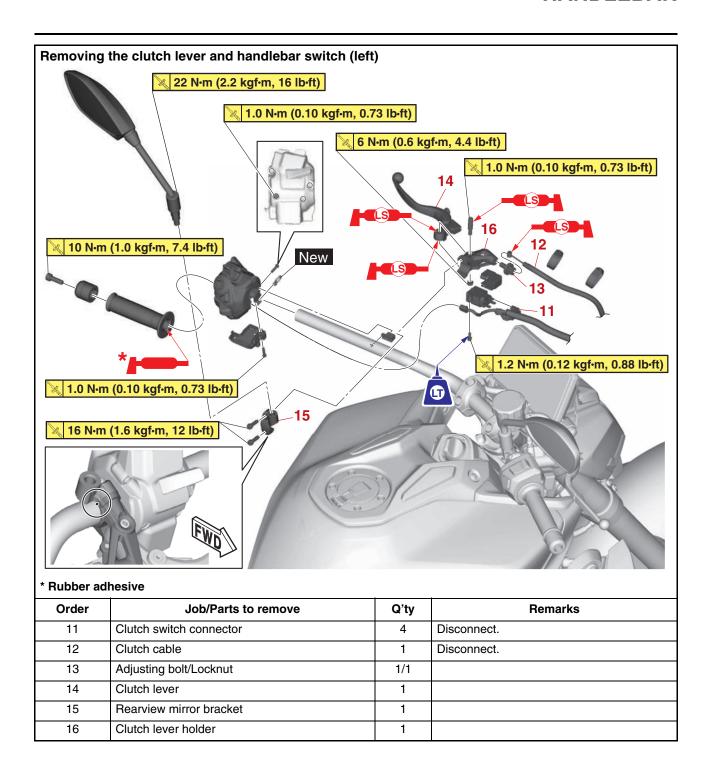

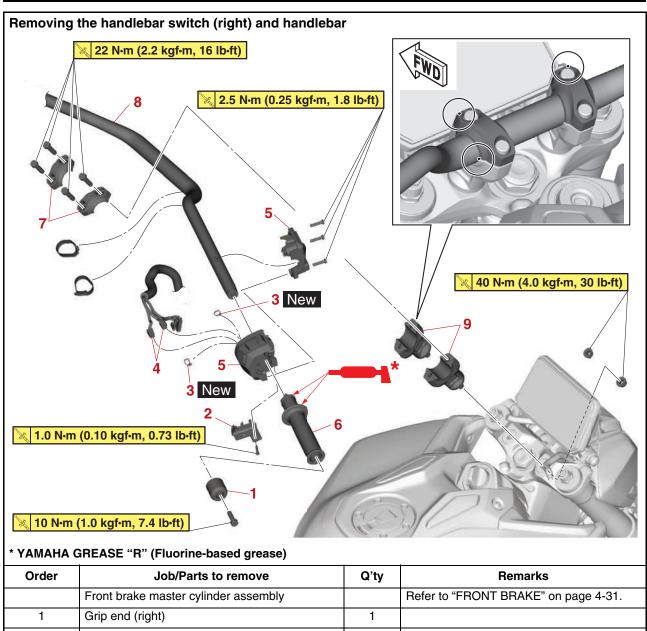


Order	Job/Parts to remove	Q'ty	Remarks
	Front brake master cylinder assembly		Refer to "FRONT BRAKE" on page 4-31.
1	Grip end (right)	1	
2	Handlebar switch cover	1	
3	Plastic locking tie	2	
4	Handlebar switch coupler	2	Disconnect.
5	Handlebar switch (right)	1	
6	Throttle grip	1	
7	Upper handlebar holder	2	
8	Handlebar	1	
9	Lower handlebar holder	2	

ADJUSTING THE HANDLEBAR POSITION


- 1. Check:
- Handlebar position

TIP


The handlebar position can be adjusted in two positions to suit the rider's preference.

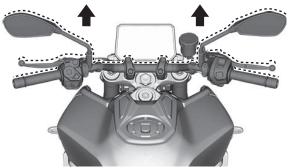

- 2. Remove:
 - Air scoop (left and right) Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 3. Adjust:
 - Handlebar position
 - a. Remove the upper handlebar holders "1" and handlebar "2".

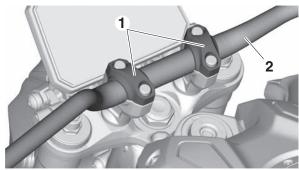

- b. Loosen the lower handlebar holder nuts.
- c. Adjust the handlebar position by rotating both of the lower handlebar holders "1" in 180°.

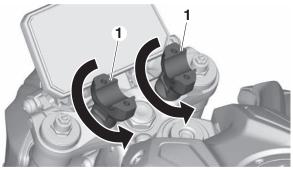

d. Install the handlebar "1" and upper handlebar holders "2".



Upper handlebar holder bolt 22 N·m (2.2 kgf·m, 16 lb·ft)


FCA18300

NOTICE

First, tighten the bolts on the front side of the handlebar holder, and then on the rear side.

TIP_

- Align the punch mark "a" on the handlebar with the left side upper surface of the lower handlebar holder (left) "3".
- The upper handlebar holders should be installed with the punch marks "b" facing forward.

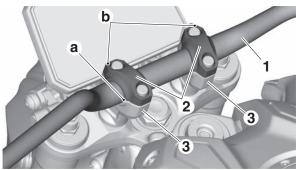

e. Tighten the lower handlebar holder nuts.



Lower handlebar holder nut 40 N·m (4.0 kgf·m, 30 lb·ft)

REMOVING THE HANDLEBAR


1. Stand the vehicle on a level surface.

WARNING

Securely support the vehicle so that there is no danger of it falling over.

- 2. Remove:
 - Handlebar grip "1"

Blow compressed air between the handlebar and the handlebar grip, and gradually pull the grip off the handlebar.

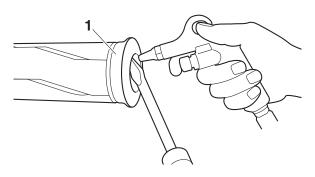

CHECKING THE HANDLEBAR

- 1. Check:
- Handlebar Bends/cracks/damage → Replace.

EWA13690

WARNING

Do not attempt to straighten a bent handlebar as this may dangerously weaken it.

EAS30205

INSTALLING THE HANDLEBAR

1. Stand the vehicle on a level surface.

EWA1312

WARNING

Securely support the vehicle so that there is no danger of it falling over.

- 2. Install:
 - Lower handlebar holder (temporarily)
 - Handlebar "1"
 - Upper handlebar holder "2"



Upper handlebar holder bolt 22 N⋅m (2.2 kgf⋅m, 16 lb⋅ft)


ECA18300

NOTICE

First, tighten the bolts on the front side of the handlebar holder, and then on the rear side.

TIP

- Align the punch mark "a" on the handlebar with the left side upper surface of the lower handlebar holder (left) "3".
- The upper handlebar holders should be installed with the punch marks "b" facing forward.

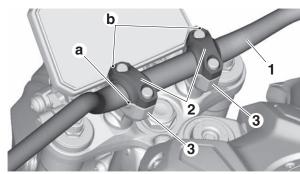

- 3. Tighten:
- Lower handlebar holder nut




Lower handlebar holder nut 40 N·m (4.0 kgf·m, 30 lb·ft)


- 4. Lubricate:
 - Throttle grip Refer to "LUBRICATING THE THROTTLE GRIP" on page 3-34.
- 5. Install:
 - Throttle grip "1"
 - Handlebar switch (right)



Handlebar switch screw 2.5 N·m (0.25 kgf·m, 1.8 lb·ft)

a. Face the groove "a" in the throttle grip to the rear side of the vehicle, and then fit the flange "b" on the throttle grip into the groove "c" in the handlebar switch (right, front side) "2" and the throttle grip onto the handlebar "3".

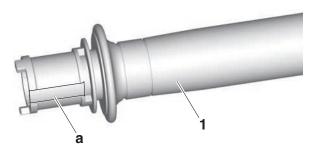


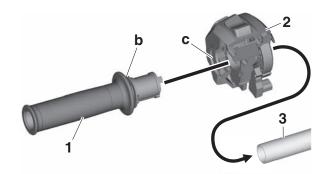

b. Install the handlebar switch (right, rear side) "4".

TIP

Align the projection "d" on the handlebar switch (right, rear side) with the hole "e" in the handlebar "3".

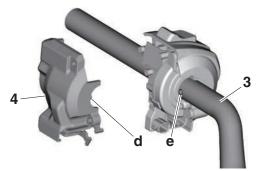


- c. Make sure that the throttle grip turns smoothly.
- 6. Install:
 - Grip end (right) "1"
 - Grip end bolt



Grip end bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP

There should be 1–3 mm (0.04–0.12 in) of clearance "a" between the throttle grip and the grip end.

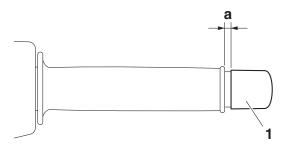


- 7. Install:
- Front brake master cylinder assembly Refer to "INSTALLING THE FRONT BRAKE MASTER CYLINDER" on page 4-47.
- 8. Install:
 - Handlebar switch clip "1"
 - Handlebar switch (left) "2"
- Handlebar switch screw "3"



Handlebar switch screw
1.0 N·m (0.10 kgf·m, 4.4 lb·ft)

- a. Align the projection "a" on the handlebar switch clip with the hole "b" in the handlebar
- b. Insert the handlebar switch (left) into the handlebar switch clip, and tighten the handlebar switch screw to the specified torque.

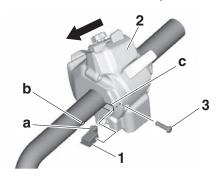


- 9. Install:
 - Clutch lever holder "1"
 - Rearview mirror bracket "2"
 - Clutch cable



Rearview mirror bracket bolt 16 N·m (1.6 kgf·m, 12 lb·ft)

TIP

- Align the mating surfaces of the rearview mirror bracket and clutch lever holder with the punch mark "a" on the handlebar.
- First, tighten the upper bolt, and then the lower bolt.

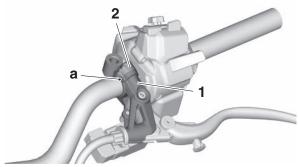

10.Install:

- Handlebar grip
- Grip end (left) "1"



Grip end bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

- a. Degrease the adhesive surfaces of the handlebar grip and handlebar.
- b. Apply a thin coat of rubber adhesive onto the end of the handlebar (left).

- c. Slide the handlebar grip over the end of the handlebar (left).
- d. Wipe off any excess rubber adhesive with a clean rag.


EWA13700

WARNING

Do not touch the handlebar grip until the rubber adhesive has fully dried.

TIP_

There should be 1–3 mm (0.04–0.12 in) of clearance "a" between the handlebar grip and the grip end.

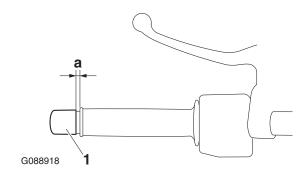


11.Adjust:


 Clutch lever free play Refer to "ADJUSTING THE CLUTCH LEVER FREE PLAY" on page 3-12.




Clutch lever free play 5.0-10.0 mm (0.20-0.39 in)

FRONT FORK

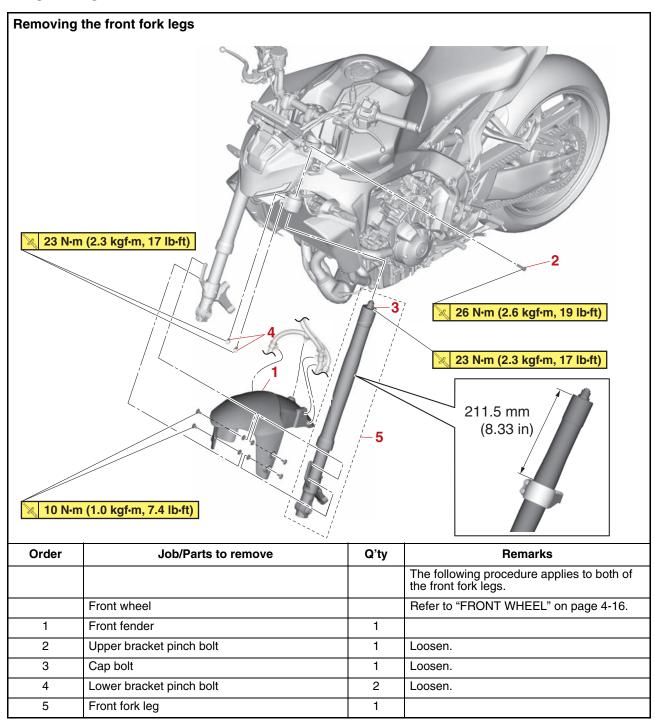

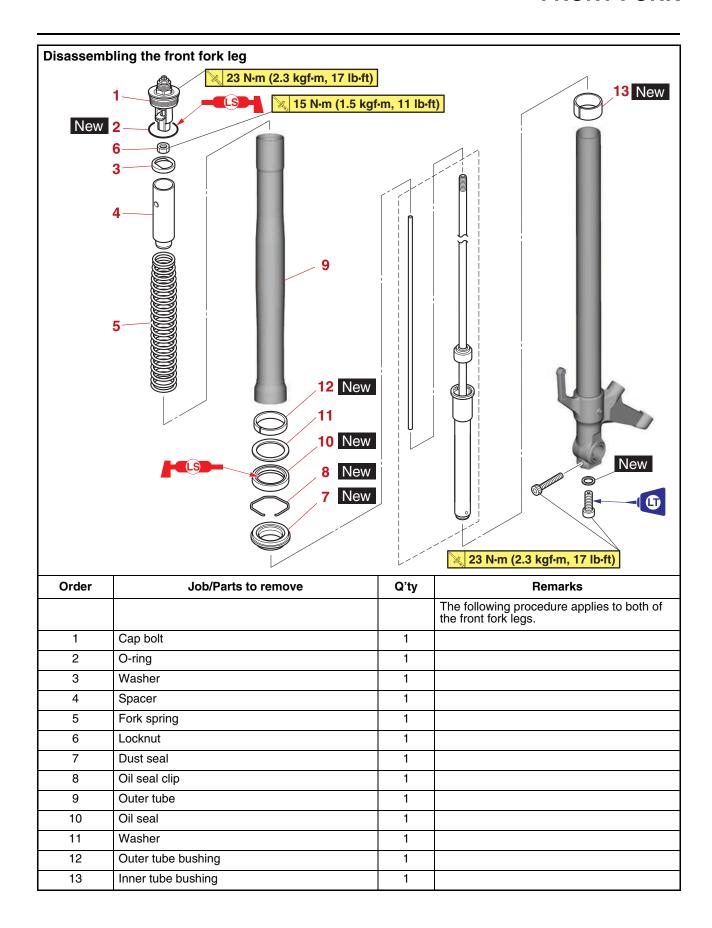

FRONT FORK

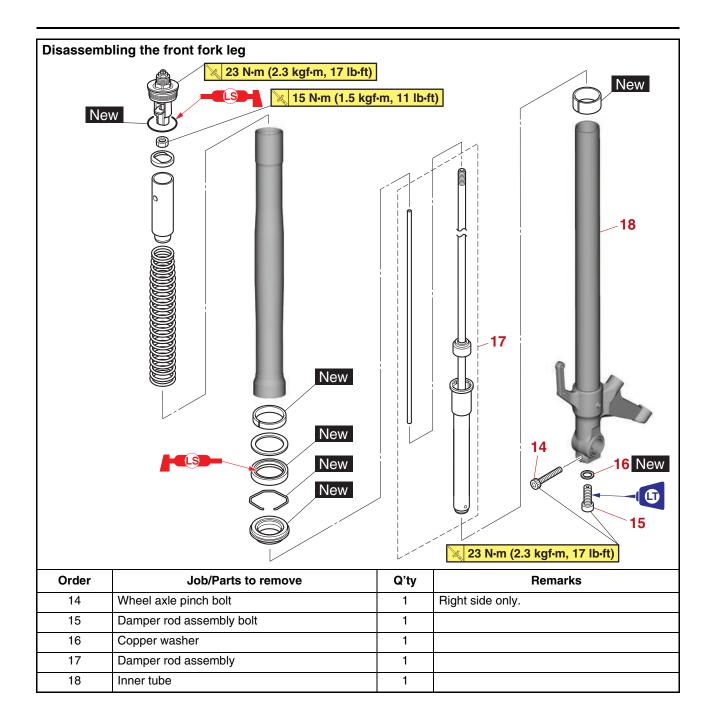

REMOVING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

TIP_

For MT09R/MT09RC:

Each front fork leg is equipped with a spring preload adjusting bolt, the fork leg (right) is equipped with a rebound damping force adjusting screw, the fork leg (left) is equipped with a compression damping force adjusting screw. Pay attention not to mistake the right and left.

1. Stand the vehicle on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP_


Place the vehicle on a maintenance stand so that the front wheel is elevated.

- 2. Remove:
- Front brake caliper Refer to "FRONT BRAKE" on page 4-31.
- Front wheel Refer to "FRONT WHEEL" on page 4-16.
- 3. Loosen:
 - Upper bracket pinch bolt "1"
 - Cap bolt "2"
- Lower bracket pinch bolt "3"

WA1364

WARNING

Before loosening the upper and lower bracket pinch bolts, support the front fork leg.

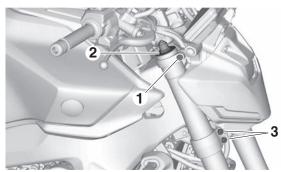

- 4. Remove:
- Front fork leg

EAS3020

DISASSEMBLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.


- 1. Remove:
- Cap bolt "1" (from the damper rod assembly)
- Washer "2"
- Spacer "3"
- Locknut "4"
- a. Press down on the spacer with the fork spring compressor "5".
- b. Install the rod holder "6" between the locknut "4" and the washer "2".



Fork spring compressor 90890-01441 Fork spring compressor YM-01441 Rod holder 90890-01434 Damper rod holder double ended YM-01434

TIP


Use the side of the rod holder that is marked "B".

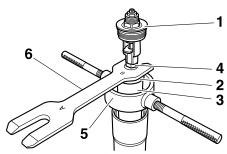

- c. Hold the cap bolt and loosen the locknut.
- d. Remove the cap bolt.
- e. Remove the rod holder and fork spring compressor.
- f. Remove the washer, spacer and locknut.
- 2. Drain:
- Fork oil

TIP

Stroke the damper rod assembly "1" several times while draining the fork oil.

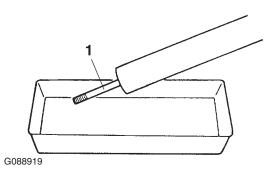


- 3. Remove:
 - Dust seal "1"
- Oil seal clip "2" (with a flat-head screwdriver)

ECA19100

NOTICE

Do not scratch the outer tube.

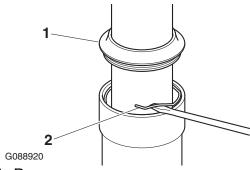


- 4. Remove:
 - Outer tube
 - a. Hold the front fork leg horizontally.
 - b. Securely clamp the brake caliper bracket in a vise with soft jaws.
 - c. Separate the outer tube from the inner tube by pulling the outer tube forcefully but carefully.

ECA19880

NOTICE

Excessive force will damage the bushings. Damaged bushings must be replaced.

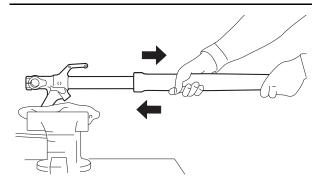


- 5. Remove:
- Damper rod assembly bolt
- Damper rod assembly

TIP_{-}

While holding the damper rod with the damper rod holder "1", loosen the damper rod assembly bolt.



Damper rod holder (ø27) 90890-01582 Damper rod holder YM-01582

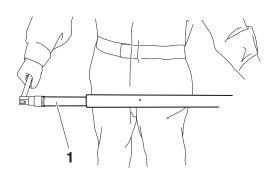

EAS30208

CHECKING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

- 1. Check:
- Inner tube
- Outer tube
 Bends/damage/scratches → Replace.

EWA13650


WARNING

Do not attempt to straighten a bent inner tube as this may dangerously weaken it.

- 2. Measure:
 - Fork spring free length "a"
 Out of specification → Replace.



Fork spring free length limit 251.4 mm (9.90 in) (MT09R, MT09RC) 261.7 mm (10.31 in) (MT09SPR, MT09SPRC)

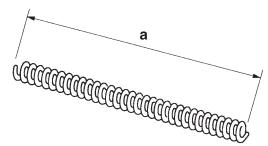

G088921

- 3. Check:
- Damper rod


Damage/wear \rightarrow Replace.

Obstruction \rightarrow Blow out all of the oil passages with compressed air.

ECA19110

NOTICE

- The front fork leg has a very sophisticated internal construction, which are particularly sensitive to foreign material.
- When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.
- 4. Check:
- Cap bolt "1"
 Cracks/damage → Replace.

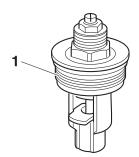

EAS30209

ASSEMBLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

For MT09R/MT09RC:

EWA17090

WARNING

- Note that the amount of the fork oil is different in the left and right front fork legs. Make sure to fill each of the left and right front fork legs with the specified amount of the fork oil.
- If both front fork legs are not filled with the specified amount of the fork oil, it may cause poor handling and a loss of stability.

For MT09SPR/MT09SPRC:

EWA18360

WARNING

If both front fork legs are not filled with the specified amount of the fork oil, it may cause poor handling and a loss of stability.

TIP_

- When assembling the front fork leg, be sure to replace the following parts:
 - Inner tube bushing
 - Outer tube bushing
 - Oil seal
 - Oil seal clip
 - Dust seal
 - Copper washer
 - O-ring
- Before assembling the front fork leg, make sure all of the components are clean.
- 1. Install:
- Damper rod assembly

ECA22560

NOTICE

Allow the damper rod assembly to slide slowly down the inner tube. Be careful not to damage the inner tube.

- 2. Tighten:
 - Damper rod assembly bolt

 (along with the copper washer
 New



Front fork damper rod assembly bolt


23 N·m (2.3 kgf·m, 17 lb·ft) LOCTITE®

TIP

While holding the damper rod assembly with the damper rod holder "1", tighten the damper rod assembly bolt.



Damper rod holder (ø27) 90890-01582 Damper rod holder YM-01582

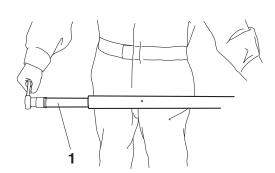

- 3. Lubricate:
 - Inner tube's outer surface



Recommended oil Yamaha Suspension Oil 01

- 4. Install:
- Dust seal "1" New
- Oil seal clip "2" New
- Oil seal "3" New
- Washer "4"
- Outer tube bushing "5" New
- Inner tube bushing "6" New


ECA19170

NOTICE

Make sure the numbered side of the oil seal faces bottom side.

TIP.

- Before installing the oil seal, lubricate its lips with lithium-soap-based grease.
- Lubricate the outer surface of the inner tube with fork oil.
- Before installing the oil seal, cover the top of the front fork leg with a plastic bag to protect the oil seal during installation.

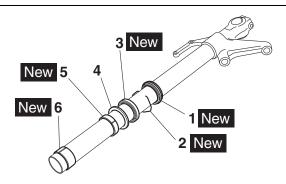




G088922

- 5. Install:
- Outer tube (to the inner tube)
- 6. Install:
 - Outer tube bushing "1"
 - Washer "2" (with the fork seal driver "3")




Fork seal driver 90890-01442 Adjustable fork seal driver (36– 46 mm) YM-01442

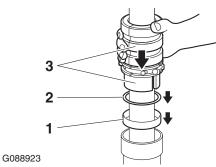

- 7. Install:
- Oil seal "1" (with the fork seal driver "2")




Fork seal driver 90890-01442 Adjustable fork seal driver (36– 46 mm) YM-01442

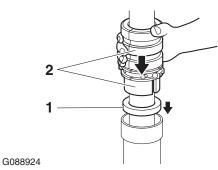

- 8. Install:
 - Oil seal clip "1"

TID

Adjust the oil seal clip so that it fits into the outer tube's groove.

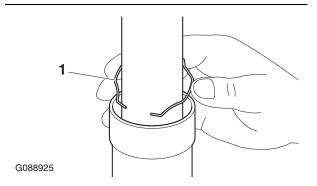


9. Install:

• Dust seal "1" (with the fork seal driver "2")



Fork seal driver 90890-01442 Adjustable fork seal driver (36– 46 mm) YM-01442

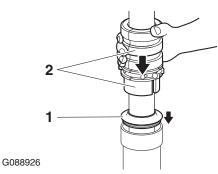


10.Install:

- Rod puller "1"
- Rod puller attachment (M10) "2" (onto the damper rod "3")



Rod puller 90890-01437 Universal damping rod bleeding tool set YM-A8703 Rod puller attachment (M10 long) 90890-01578 Universal damping rod bleeding tool set YM-A8703

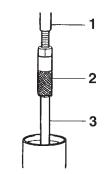

G088927

 Front fork leg (with the specified amount of the recommended fork oil)



Recommended oil
Yamaha Suspension Oil 01
Quantity (left)
456.0 cm³ (15.42 US oz, 16.08 Imp.oz) (MT09R, MT09RC)
466.0 cm³ (15.76 US oz, 16.44 Imp.oz) (MT09SPR, MT09SPRC)
Quantity (right)
460.0 cm³ (15.55 US oz, 16.22 Imp.oz) (MT09R, MT09RC)
466.0 cm³ (15.76 US oz, 16.44 Imp.oz) (MT09SPR, MT09SPRC)


ECA14230

NOTICE

- Be sure to use the recommended fork oil.
 Other oils may have an adverse effect on front fork performance.
- When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.
- 12. After filling the front fork leg, slowly stroke the damper rod "1" up and down (at least ten times) to distribute the fork oil.

TIP

Be sure to stroke the damper rod slowly because the fork oil may spurt out.

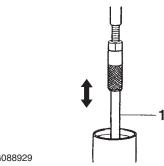

13.Before measuring the fork oil level, wait ten minutes until the oil has settled and the air bubbles have dispersed.

TIE

Be sure to bleed the front fork leg of any residual air.


14.Measure:

 Front fork leg oil level "a" (from the top of the outer tube, with the outer tube fully compressed and without the fork spring)

Out of specification \rightarrow Correct.



Level (left)
105 mm (4.1 in) (MT09SPR,
MT09SPRC)
109 mm (4.3 in) (MT09R,
MT09RC)
Level (right)
105 mm (4.1 in) (MT09SPR,
MT09SPRC)
109 mm (4.3 in) (MT09R,

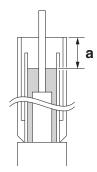

G088930

15.Install:

- Fork spring
- Spacer
- Locknut
- Damper adjusting rod (damper rod assembly)
- Washer
- Cap bolt


(along with the O-ring New)

MT09RC)

- a. Remove the rod puller and rod puller attachment.
- b. Install the fork spring.

TIP

Install the fork spring with the smaller diameter "a" facing up "A".

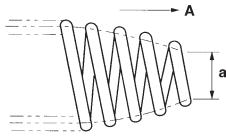

G088931

- c. Install the locknut all the way onto the damper rod assembly.
- d. Install the rod puller and rod puller attachment.
- e. Install the spacer and washer.
- f. Install the fork spring compressor.

- g. Press down on the spacer with the fork spring compressor "1".
- h. Pull up the rod puller and install the rod holder "2" between the locknut "3" and the washer "4".



Rod puller 90890-01437

Universal damping rod bleeding tool set

YM-A8703

Rod puller attachment (M10 long) 90890-01578

Universal damping rod bleeding tool set

YM-A8703

Fork spring compressor 90890-01441

Fork spring compressor YM-01441


Rod holder

90890-01434

Damper rod holder double ended YM-01434

TIP


Use the side of the rod holder that is marked "B".

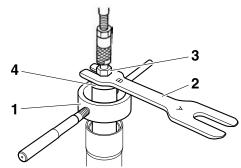

- i. Remove the rod puller and rod puller attachment.
- j. Position the locknut "3" as distance "b".




Distance "b" 12 mm (0.47 in)

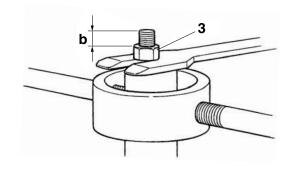

k. Set the cap bolt distance "c" to specification.



Distance "c" 13 mm (0.51 in)

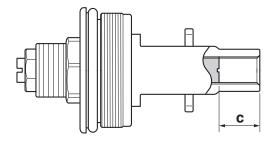

I. Install the damper adjusting rod and cap bolt, and then finger tighten the cap bolt.


WARNING

Always use a new cap bolt O-ring.

m. Hold the cap bolt "5" and tighten the locknut "3" to specification.



Front fork cap bolt locknut 15 N·m (1.5 kgf·m, 11 lb·ft)

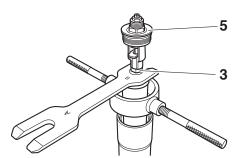

n. Remove the rod holder and fork spring compressor.

16.Install:

 Cap bolt (to the outer tube)

TIP

- Temporarily tighten the cap bolt.
- When to tighten the cap bolt to the specified torque is after installing the front fork leg to the vehicle and tightening the lower bracket pinch bolts.

EAS30210

INSTALLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

- 1. Install:
- Front fork leg
 Temporarily tighten the upper and lower bracket pinch bolts.



Installed length (from the top of the outer tube) "a" 211.5 mm (8.33 in)


EWA13680

WARNING

Make sure the brake hoses are routed properly.

TIP

When installing the front fork, set the outer tube with the specified length "a" from the top of the outer tube to the top of the lower bracket.

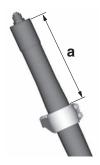

- 2. Tighten:
 - Lower bracket pinch bolt "1"



Lower bracket pinch bolt 23 N·m (2.3 kgf·m, 17 lb·ft)

Cap bolt "2"




Front fork cap bolt 23 N·m (2.3 kgf·m, 17 lb·ft)

Upper bracket pinch bolt "3"




Upper bracket pinch bolt 26 N·m (2.6 kgf·m, 19 lb·ft)

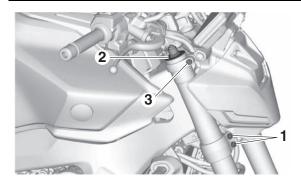

TIP_

For MT09SPR/MT09SPRC:

When installing the front fork legs, make sure that the letters on the cap bolts are positioned within the angle range shown in the illustration.

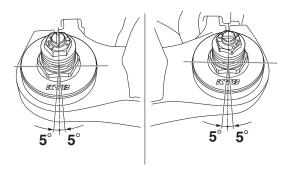

3. Check:

Cable routing


TIP

Make sure the brake hoses, clutch cable, and handlebar switch leads are routed properly. Refer to "CABLE ROUTING" on page 2-15.

4. Adjust:


- Spring preload
- Rebound damping
- Compression damping Refer to "ADJUSTING THE FRONT FORK LEGS (for MT09R/MT09RC)" on page 3-21 and "ADJUSTING THE FRONT FORK LEGS (for MT09SPR/MT09SPRC)" on page 3-23.

STEERING HEAD

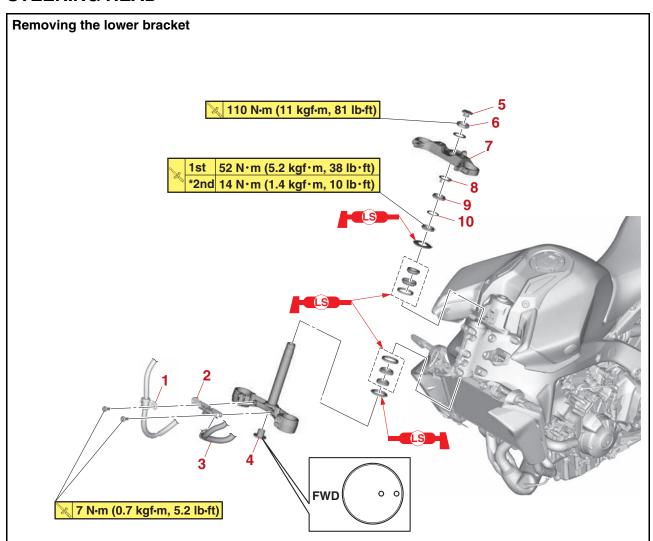

* Loosen the lower ring nut completely, and then tighten it to specification.

Order	Job/Parts to remove	Q'ty	Remarks
	Meter assembly bracket		Refer to "GENERAL CHASSIS (1)" on page 4-1.
	Handlebar		Refer to "HANDLEBAR" on page 4-70.
	Front fork legs		Refer to "FRONT FORK" on page 4-77.
1	Front brake hose bracket	1	
2	Headlight bracket	1	
3	Wire harness	1	Disconnect.
4	Lower bracket cap	1	
5	Steering stem nut cap	1	
6	Steering stem nut	1	
7	Upper bracket	1	
8	Lock washer	1	
9	Upper ring nut	1	
10	Rubber washer	1	

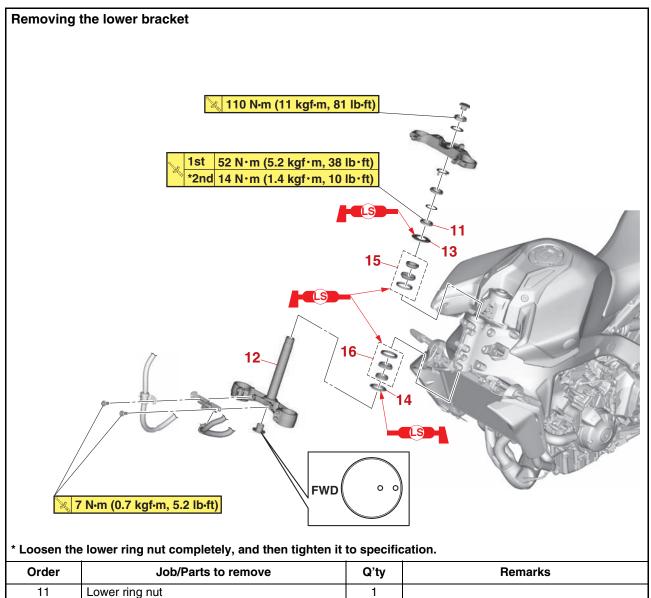

Order	Job/Parts to remove	Q'ty	Remarks
11	Lower ring nut	1	
12	Lower bracket	1	
13	Bearing cover	1	
14	Lower bearing dust seal	1	
15	Upper bearing	1	
16	Lower bearing	1	

FAS30213

REMOVING THE LOWER BRACKET

1. Stand the vehicle on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

- 2. Remove:
 - Upper ring nut "1"
 - Rubber washer
 - Lower ring nut "2"
 - Lower bracket

EWA13730

MARNING


Securely support the lower bracket so that there is no danger of it falling.

TIP

- Hold the lower ring nut with ring nut wrench "3", and then remove the upper ring nut with the steering nut wrench "4".
- Remove the lower ring nut with the steering nut wrench.



Ring nut wrench
90890-01268
Spanner wrench
YU-01268
Steering nut wrench
90890-01403
Exhaust flange nut wrench
YU-A9472

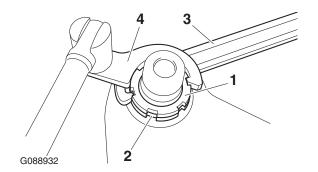

EAS30214

CHECKING THE STEERING HEAD

- 1. Wash:
- Bearing
- Bearing race



Recommended cleaning solvent Kerosene

- 2. Check:
- Bearing
- Bearing race
 Damage/pitting → Replace the bearings and bearing races as a set.
- 3. Replace:
- Bearing
- · Bearing race
- Remove the bearing races from the steering head pipe "1" with a long rod "2" and hammer.
- b. Remove the bearing race "3" from the lower bracket with a floor chisel "4" and hammer.
- c. Install a new dust seal and new bearing races.


ECA14270

NOTICE

If the bearing race is not installed properly, the steering head pipe could be damaged.

TIP

- Always replace the bearings and bearing races as a set.
- Whenever the steering head is disassembled, replace the dust seal.

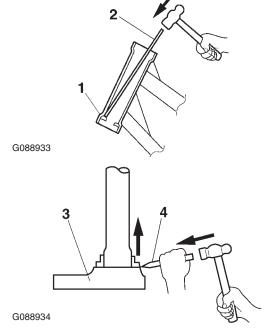

- 4. Check:
 - Upper bracket
 - Lower bracket (along with the steering stem)
 Bends/cracks/damage → Replace.

INSTALLING THE STEERING HEAD


- 1. Lubricate:
- Upper bearing
- Lower bearing



Recommended lubricant Lithium-soap-based grease

- 2. Install:
 - Lower ring nut "1"
- Rubber washer "2"
- Upper ring nut "3"
- Lock washer "4"

Refer to "CHECKING AND ADJUSTING THE STEERING HEAD" on page 3-20.

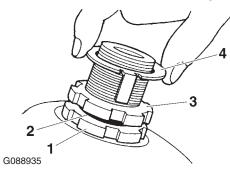

- 3. Install:
 - Upper bracket
 - Steering stem nut

TIP

Temporarily tighten the steering stem nut.

- 4. Install:
- Front fork legs Refer to "FRONT FORK" on page 4-77.

TIF

Temporarily tighten the upper and lower bracket pinch bolts.

- 5. Tighten:
 - Steering stem nut



Steering stem nut 110 N⋅m (11 kgf⋅m, 81 lb⋅ft)

- 6. Tighten:
 - Lower bracket pinch bolt




Lower bracket pinch bolt 23 N·m (2.3 kgf·m, 17 lb·ft)

• Upper bracket pinch bolt




Upper bracket pinch bolt 26 N·m (2.6 kgf·m, 19 lb·ft)

REAR SHOCK ABSORBER ASSEMBLY

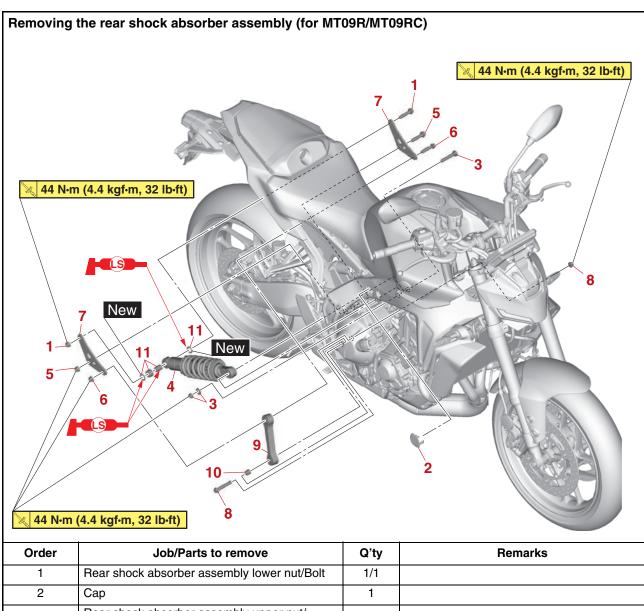


Order	Job/Parts to remove	Q'ty	Remarks
1	Rear shock absorber assembly lower nut/Bolt	1/1	
2	Сар	1	
3	Rear shock absorber assembly upper nut/ Washer/Bolt	1/1/1	
4	Rear shock absorber assembly	1	
5	Relay arm nut/Bolt	1/1	
6	Connecting arm upper nut/Bolt	1/1	
7	Relay arm	2	
8	Connecting arm lower nut/Bolt	1/1	
9	Connecting arm	1	
10	Collar	1	
11	Collar/Oil seal/Bearing	1/2/1	

REAR SHOCK ABSORBER ASSEMBLY

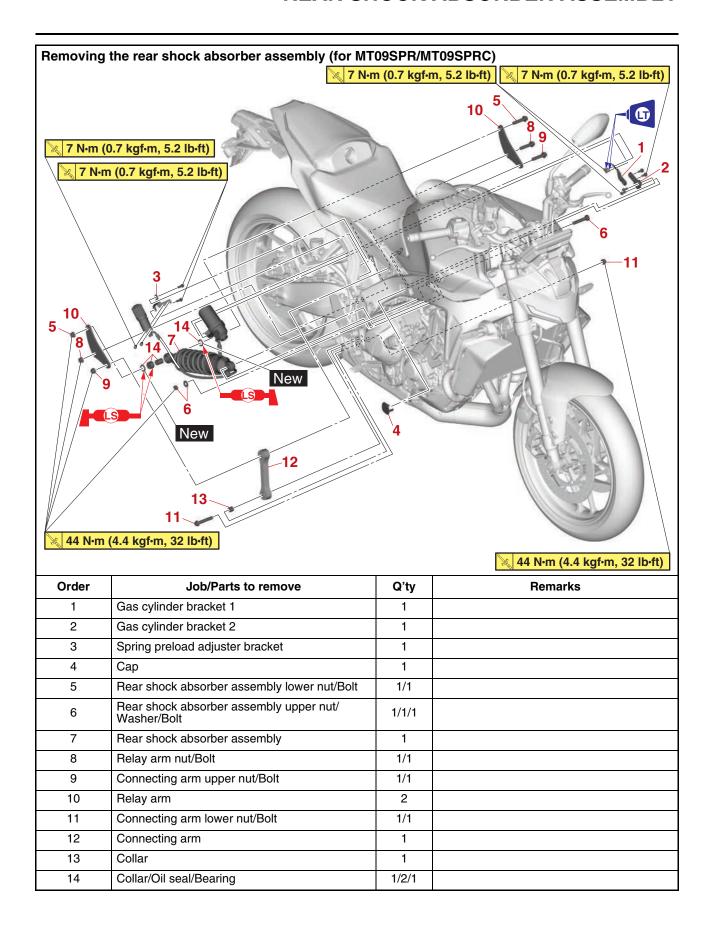

REAR SHOCK ABSORBER ASSEMBLY

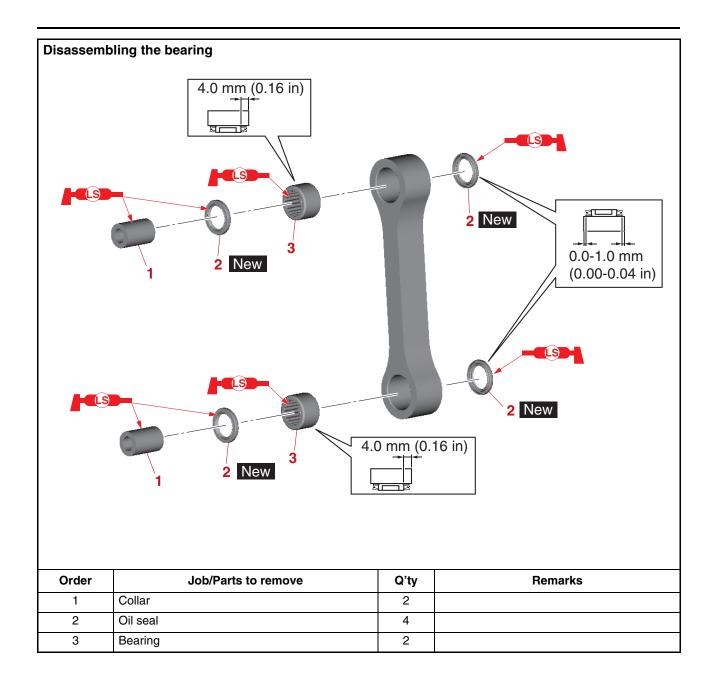

HANDLING THE REAR SHOCK ABSORBER

EWA13740

WARNING

This rear shock absorber contains highly compressed nitrogen gas. Before handling the rear shock absorber, read and make sure you understand the following information. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling of the rear shock absorber.

- Do not tamper or attempt to open the rear shock absorber.
- Do not subject the rear shock absorber to an open flame or any other source of high heat. High heat can cause an explosion due to excessive gas pressure.
- Do not deform or damage the rear shock absorber in any way. Rear shock absorber damage will result in poor damping performance.

EAS3355


DISPOSING OF A REAR SHOCK ABSORBER (for MT09R/MT09RC)

Gas pressure must be released before disposing of a rear shock absorber. To release the gas pressure, drill a 2–3 mm (0.08–0.12 in) hole through the rear shock absorber at a point 20–25 mm (0.79–0.98 in) from its end as shown.

EWA13760

WARNING

Wear eye protection to prevent eye damage from released gas or metal chips.

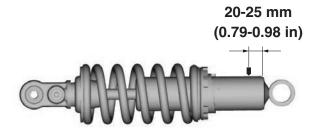


EAS30729

DISPOSING OF A REAR SHOCK ABSORBER (for MT09SPR/MT09SPRC)

Gas pressure must be released before disposing of a rear shock absorber. To release the gas pressure, drill a 2–3 mm (0.08–0.12 in) hole through the flat portion of the gas cylinder as shown.

WARNING

Wear eye protection to prevent eye damage from released gas or metal chips.

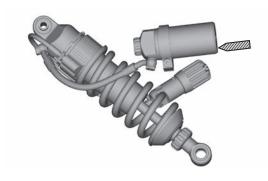

EAS3021

REMOVING THE REAR SHOCK ABSORBER ASSEMBLY

1. Stand the vehicle on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP__

- Place the vehicle on a maintenance stand so that the rear wheel is elevated.
- When removing the bolt, hold the swingarm so that it does not drop down.

EAS3022

CHECKING THE REAR SHOCK ABSORBER ASSEMBLY

- 1. Check:
 - Rear shock absorber rod Bends/damage → Replace the rear shock absorber assembly.
 - Rear shock absorber assembly
 Gas leaks/oil leaks → Replace the rear shock absorber assembly.
 - Spring
- Bushing
 - Damage/wear \rightarrow Replace the rear shock absorber assembly.
- Hose (for MT09SPR/MT09SPRC)
 Cracks/damage/wear → Replace the rear shock absorber assembly.
- Bolt

Bends/damage/wear \rightarrow Replace.

REAR SHOCK ABSORBER ASSEMBLY

EAS3022

CHECKING THE CONNECTING ARM AND RELAY ARM

- 1. Check:
- Connecting arm
- Relay arm
 Damage/wear → Replace.
- 2. Check:
- Bearing
 Damage/pitting → Replace.
- 3. Check:
- Collar

Damage/scratches \rightarrow Replace.

EAS30222

INSTALLING THE RELAY ARM

- 1. Lubricate:
- Collar
- Oil seal New



Recommended lubricant Lithium-soap-based grease


- 2. Install:
 - Bearing "1" (to the connecting arm and swingarm)
- Oil seal "2" New (connecting arm and swingarm)



Installed depth "a" 4.0 mm (0.16 in) Installed depth "b" 0-1.0 mm (0-0.04 in)

TIP

- When installing the oil seals "2" to the relay arm, face the character stamp of the oil seals outside.
- Install the connecting arm upper bolt and relay arm bolt from the left.

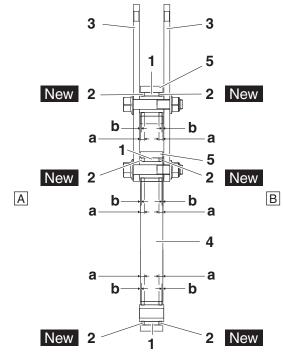

- 3. Relay arm
- 4. Connecting arm
- 5. Swingarm
- A. Left side
- B. Right side
- 3. Tighten:
- Connecting arm upper nut
- Relay arm nut



Connecting arm upper nut 44 N·m (4.4 kgf·m, 32 lb·ft) Relay arm nut 44 N·m (4.4 kgf·m, 32 lb·ft)

EAS302

INSTALLING THE REAR SHOCK ABSORBER ASSEMBLY

- 1. Install:
- Gas cylinder bracket 1 and 2 bolt (for MT09SPR/MT09SPRC)
- Gas cylinder bolt (for MT09SPR/ MT09SPRC)
- Rear shock absorber assembly
- Spring preload adjuster bracket bolt (for MT09SPR/MT09SPRC)
- Spring preload adjuster bolt (for MT09SPR/ MT09SPRC)
- Rear shock absorber assembly upper bolt
- Rear shock absorber assembly upper nut
- · Rear shock absorber assembly lower bolt
- Rear shock absorber assembly lower nut

REAR SHOCK ABSORBER ASSEMBLY

TIP_

- Install the rear shock absorber assembly upper bolt and rear shock absorber assembly lower bolt from the left.
- When installing the rear shock absorber assembly, lift up the swingarm.

2. Tighten:


- Gas cylinder bracket 1 and 2 bolt (for MT09SPR/MT09SPRC)
- Gas cylinder bolt (for MT09SPR/ MT09SPRC)
- Spring preload adjuster bracket bolt (for MT09SPR/MT09SPRC)
- Spring preload adjuster bolt (for MT09SPR/ MT09SPRC)
- Rear shock absorber assembly upper nut
- Rear shock absorber assembly lower nut




Gas cylinder bracket 1 bolt (for MT09SPR/MT09SPRC) 7 N·m (0.7 kgf·m, 5.2 lb·ft) Gas cylinder bracket 2 bolt (for MT09SPR/MT09SPRC) 7 N·m (0.7 kgf·m, 5.2 lb·ft) **LOCTITE®** Gas cylinder bolt (for MT09SPR/ MT09SPRC) 7 N·m (0.7 kgf·m, 5.2 lb·ft) Spring preload adjuster bracket bolt (for MT09SPR/MT09SPRC) 7 N·m (0.7 kgf·m, 5.2 lb·ft) Spring preload adjuster bolt (for MT09SPR/MT09SPRC) 7 N·m (0.7 kgf·m, 5.2 lb·ft) Rear shock absorber assembly upper nut 44 N·m (4.4 kgf·m, 32 lb·ft) Rear shock absorber assembly lower nut

44 N·m (4.4 kgf·m, 32 lb·ft)

SWINGARM

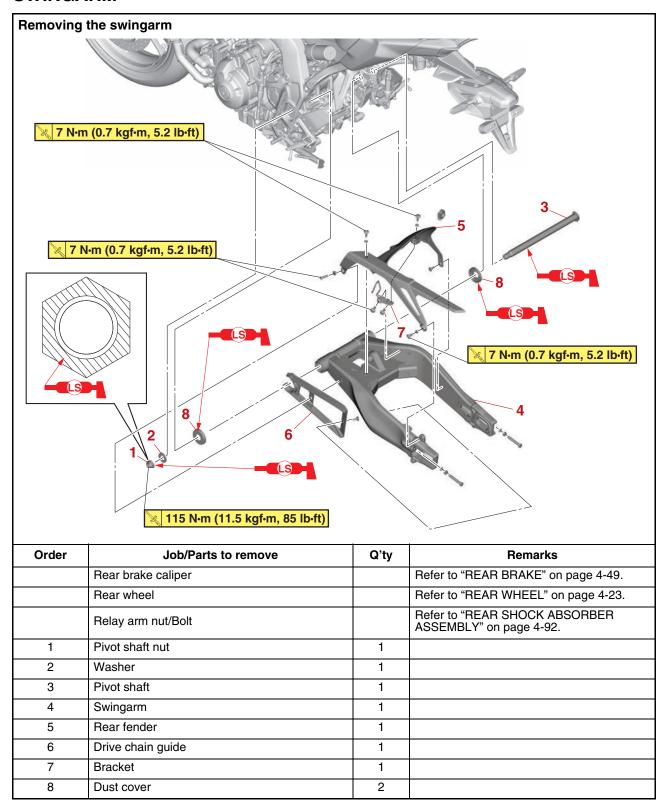

SWINGARM

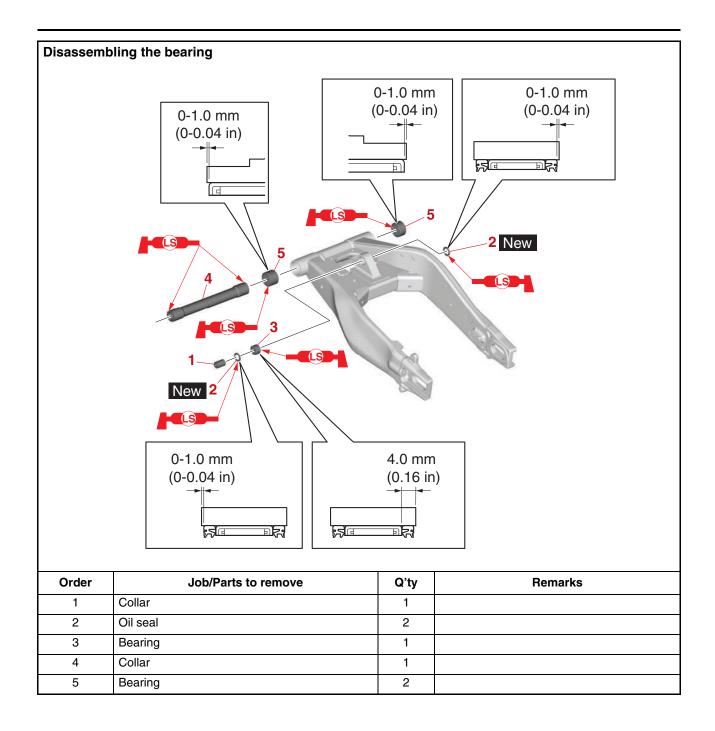

REMOVING THE SWINGARM

1. Stand the vehicle on a level surface.

WA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP


Place the vehicle on a maintenance stand so that the rear wheel is elevated.

- 2. Measure:
 - Swingarm side play
 - Swingarm vertical movement
 - a. Measure the tightening torque of the pivot shaft nut.



Pivot shaft nut 115 N⋅m (11.5 kgf⋅m, 85 lb⋅ft)

- b. Check the swingarm side play "A" by moving the swingarm from side to side.
 If the swingarm has side-to-side play, check the collars, bearings, and dust covers.
- c. Check the swingarm vertical movement "B" by moving the swingarm up and down. If the swingarm vertical movement is not smooth or if there is binding, check the pivot shaft, collar, bearings, and dust covers.

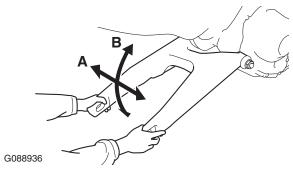

- 3. Remove:
 - Swingarm

FAS30227

CHECKING THE SWINGARM

- 1. Check:
- Swingarm Bends/cracks/damage → Replace.
- 2. Check:
- Pivot shaft
 Roll the pivot shaft on a flat surface.

 Bends → Replace.

EWA13770

WARNING

Do not attempt to straighten a bent pivot shaft.

- 3. Wash:
- Pivot shaft
- Dust cover
- Collar




Recommended cleaning solvent Kerosene

- 4. Check:
 - Dust cover "1"
 - Oil seal "2"
 Damage/wear → Replace.

• Collar "3"

Damage/scratches \rightarrow Replace.

- Bearing "4"
 Damage/pitting → Replace.
- Collar "5"
 Damage/scratches → Replace.

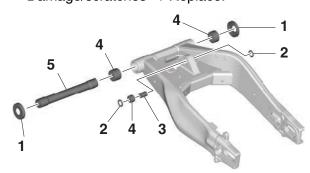

EAS3022

INSTALLING THE SWINGARM

- 1. Lubricate:
- Dust cover
- Pivot shaft
- Bearing
- Oil seal New
- Collar



Recommended lubricant Lithium-soap-based grease


- 2. Install:
- Bearing "1" (to the swingarm)
- Oil seal "2" New (to the swingarm)



Installed depth "a" 0-1.0 mm (0-0.04 in)

TIP__

When installing the oil seals to the swingarm, face the character stamp of the oil seals outside.

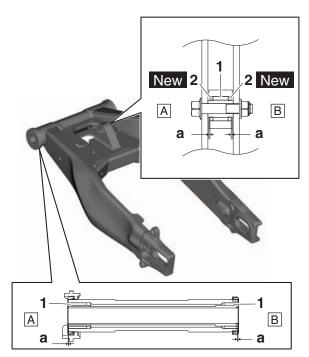

- A. Left side
- B. Right side
- 3. Install:
 - Swingarm
 - Pivot shaft



Relay arm nut 44 N·m (4.4 kgf·m, 32 lb·ft)

- 4. Install:
 - Pivot shaft nut
 - a. Lubricate the pivot shaft nut mating surface with lithium-soap-based grease, and then tighten it to specification.



Pivot shaft nut 115 N·m (11.5 kgf·m, 85 lb·ft)

TIP_

Do not allow grease to contact the pivot shaft nut threads.

- 5. Install:
- Rear wheel Refer to "REAR WHEEL" on page 4-23.

6. Adjust:


 Drive chain slack Refer to "DRIVE CHAIN SLACK" on page 3-18.



Drive chain slack (Maintenance Stand)

36.0-41.0 mm (1.42-1.61 in) Drive chain slack (Sidestand) 36.0-41.0 mm (1.42-1.61 in) Drive chain slack limit 46.0 mm (1.81 in)

CHAIN DRIVE

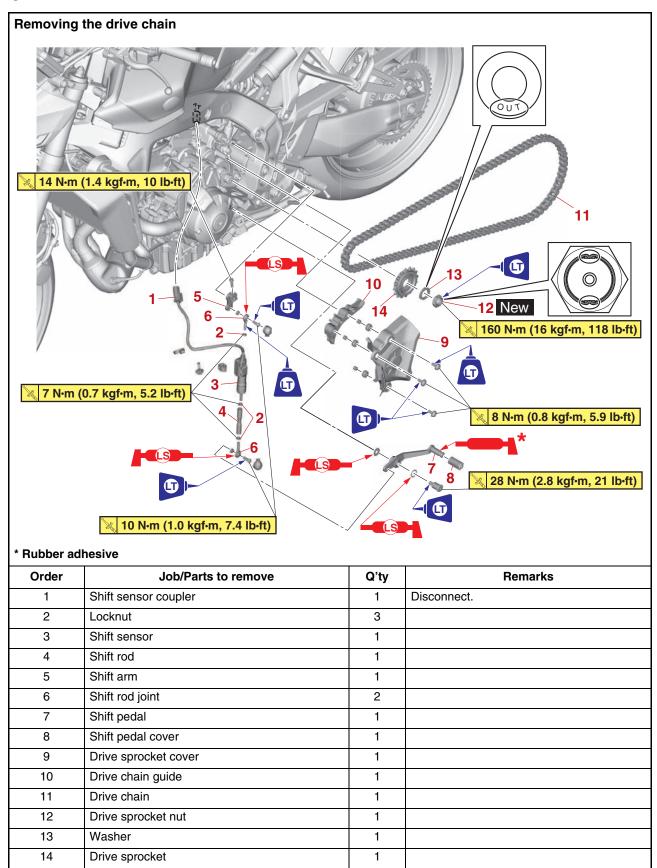

REMOVING THE DRIVE CHAIN


1. Stand the vehicle on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Straighten the drive sprocket nut ribs "a".

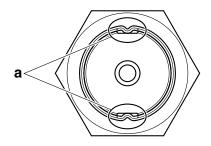

- 3. Loosen:
 - Drive sprocket nut

TIP

Loosen the drive sprocket nut while pressing the brake pedal.

- 4. Remove:
 - Drive chain

ECA17410

NOTICE

Be sure to put on safety goggles when working.

TIP_

Cut the drive chain with the drive chain cut & rivet tool.



Drive chain cut & rivet tool 90890-01550 Drive chain cut & rivet tool YM-01550

EAS30230

CHECKING THE DRIVE CHAIN

- 1. Measure:
- 15-link section length "c" of the drive chain Out of specification → Replace the drive chain.




15-link length limit 239.3 mm (9.42 in)


- a. Measure the length "a" between the inner sides of the pins and the length "b" between the outer sides of the pins on a 15-link section of the drive chain as shown in the illustration.
- b. Calculate the 15-link section length "c" of the 15-link section of the drive chain using the following formula.
 Drive chain 15-link section length "c" = (length "a" between pin inner sides + length "b" between pin outer sides)/2

TIF

- When measuring a 15-link section of the drive chain, make sure that the drive chain is taut.
- Perform this procedure 2–3 times, at a different location each time.

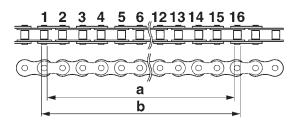

G088937

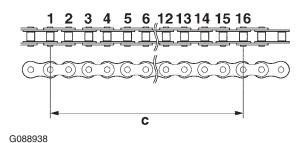

2. Check:

 Drive chain Stiffness → Clean and lubricate or replace.




G088939


- 3. Clean:
 - Drive chain
 - a. Wipe the drive chain with a clean cloth.
 - b. Put the drive chain in kerosene and remove any remaining dirt.
 - c. Remove the drive chain from the kerosene and completely dry it.

ECA19090

NOTICE

- This vehicle has a drive chain with small rubber O-rings "1" between the drive chain side plates. Never use high-pressure water or air, steam, gasoline, certain solvents (e.g., benzine), or a coarse brush to clean the drive chain. High-pressure methods could force dirt or water into the drive chain's internals, and solvents will deteriorate the O-rings. A coarse brush can also damage the O-rings. Therefore, use only kerosene to clean the drive chain.
- Do not soak the drive chain in kerosene for more than ten minutes, otherwise the Orings can be damaged.

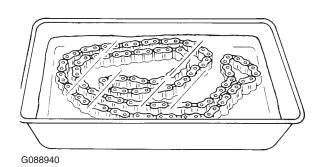

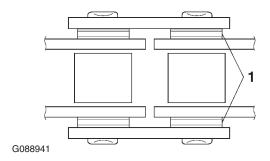


- 4. Check:
 - O-ring "1"

Damage \rightarrow Replace the drive chain.

• Drive chain roller "2"

Damage/wear \rightarrow Replace the drive chain.

Drive chain side plate "3"
 Damage/wear/cracks → Replace the drive chain.

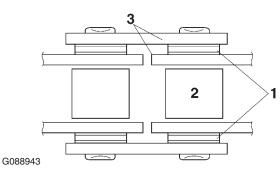

- Lubricate:
- Drive chain



Recommended lubricant Chain lubricant suitable for Oring chains


FAS30231

CHECKING THE DRIVE SPROCKET

- 1. Check:
- Drive sprocket

More than 1/4 tooth "a" wear \rightarrow Replace the drive sprocket, the rear wheel sprocket and the drive chain as a set.

Bent teeth \rightarrow Replace the drive sprocket, the rear wheel sprocket and the drive chain as a set.

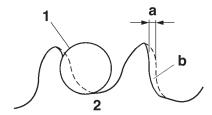

G088904

- b. Correct
- 1. Drive chain roller
- 2. Drive sprocket

FAS3023

CHECKING THE REAR WHEEL SPROCKET Refer to "CHECKING AND REPLACING THE REAR WHEEL SPROCKET" on page 4-27.

EAS3023

CHECKING THE REAR WHEEL DRIVE HUB
Refer to "CHECKING THE REAR WHEEL
DRIVE HUB" on page 4-26.

INSTALLING THE DRIVE CHAIN

- 1. Install:
- Drive chain

ECA17410

NOTICE

Be sure to put on safety goggles when working.


TIP.

Install the drive chain joint with the drive chain cut & rivet tool.




Drive chain cut & rivet tool 90890-01550 Drive chain cut & rivet tool YM-01550


a. When press fitting the connecting plate "1", make sure the space "a" between the end of the connecting pin "2" and the connecting plate is 1.2–1.4 mm (0.05–0.06 in).

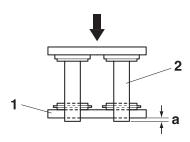

b. After riveting, make sure the diameter between the edges "b" of the connecting pin "2" is 5.7–6.0 mm (0.22–0.24 in).

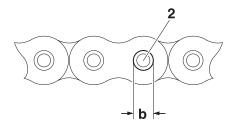

c. After riveting, make sure the space "c", which is inside of the connecting link "3" and inside of the connecting plate "1", is 14.35—14.55 mm (0.565–0.573 in).

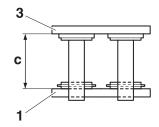

- 2. Lubricate:
 - Drive chain



Recommended lubricant
Chain lubricant suitable for Oring chains


- 3. Install:
- Drive sprocket
- Washer "1"
- Drive sprocket nut "2" New




Drive sprocket nut 160 N·m (16 kgf·m, 118 lb·ft) LOCTITE®

TIP

- Thoroughly clean all the drive sprocket nut seat and threads of drive axle.
- While applying the rear brake, tighten the drive sprocket nut.
- Install washer "1" with the "OUT" mark "a" facing out.
- Stake the drive sprocket nut "2" at cutouts "b" in the drive axle securely.

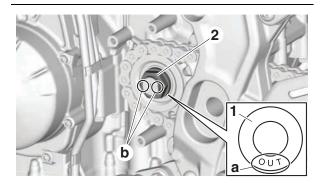

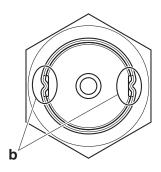


- 4. Install:
 - Shift arm "1"

TIP

Before installing, make sure to align the mark "a" of the shift shaft with the punch mark "b" of the shift arm.



Shift arm bolt 14 N·m (1.4 kgf·m, 10 lb·ft)

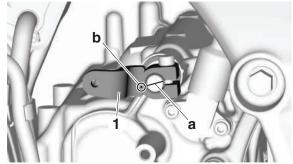


- 5. Install:
 - Shift rod joint "1"
 - Shift sensor "2"
 - Shift rod "3"

TIP_

- Install the shift rod joint and shift sensor in the direction shown in the illustration.
- The allowable twist of the shift rod joint and shift sensor is ±5°.
- Install the shift rod so that the side "c" faces upward as shown in the illustration.



Shift rod joint bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft) LOCTITE® Shift sensor locknut 7 N·m (0.7 kgf·m, 5.2 lb·ft)

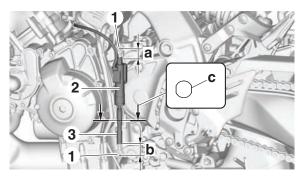

- a. 24 mm (0.94 in)
- b. 24.4 mm (0.96 in)

6. Adjust:

- Installed shift rod length Refer to "ADJUSTING THE SHIFT PEDAL" on page 4-106.
- 7. Adjust:
 - Drive chain slack
 Refer to "DRIVE CHAIN SLACK" on page 3-18.



Drive chain slack (Maintenance Stand)

36.0-41.0 mm (1.42-1.61 in) Drive chain slack (Sidestand) 36.0-41.0 mm (1.42-1.61 in) Drive chain slack limit 46.0 mm (1.81 in)

ECA13550

NOTICE

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

-ΔS31720

ADJUSTING THE SHIFT PEDAL


TI

The shift pedal position is determined by the installed shift rod length.


- 1. Measure:
- Installed shift rod length "a" Incorrect → Adjust.



Installed shift rod length 236.4–238.4 mm (9.31–9.39 in)

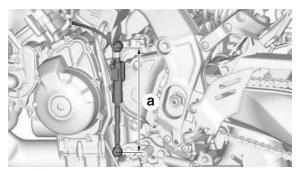

- 2. Adjust:
 - Installed shift rod length
 - a. Loosen both locknuts "1".
 - b. Turn the shift rod "2" until the specified installed shift rod length is obtained.

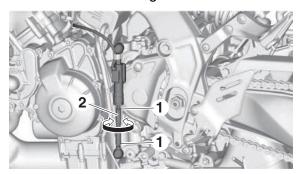

c. Tighten both locknuts.

TIP_

Be sure to place the shift rod joints in parallel. The allowable twist of the shift rod joints is $\pm 5^{\circ}$.




Shift rod locknut 7 N·m (0.7 kgf·m, 5.2 lb·ft)

d. Make sure the installed shift rod length is within specification.


EAS34071

INSTALLING THE SHIFT PEDAL COVER

- 1. Install:
- Shift pedal cover "1"
- a. Degrease the adhesive surfaces of the shift pedal cover and shift pedal.
- b. Apply a thin coat of rubber adhesive "a" to the top and bottom surfaces of the shift pedal "2" as shown.

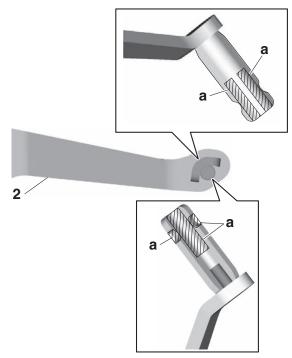

c. Insert the shift pedal cover into the shift pedal, align the projections "b" of the shift pedal cover with the grooves "c" of the shift pedal.

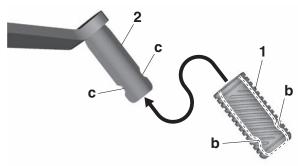

d. Wipe off any excess rubber adhesive with a clean rag.

ENGINE

LUBRICATION SYSTEM CHART AND DIAGRAMS	_
ENGINE OIL LUBRICATION CHART	
LUBRICATION DIAGRAMS	5-2
ENGINE INSPECTION	5-7
MEASURE THE COMPRESSION PRESSURE	
WEASONE THE COWIFTESSION PRESSONE	3-7
ENGINE REMOVAL	
REMOVING THE ENGINE	
INSTALLING THE ENGINE	5-14
CAMSHAFTS	5-16
REMOVING THE CAMSHAFTS	5-19
CHECKING THE CAMSHAFTS	
CHECKING THE TIMING CHAIN AND CAMSHAFT SPROCKET	
CHECKING THE TIMING CHAIN GUIDES	
CHECKING THE TIMING CHAIN TENSIONER	
INSTALLING THE CAMSHAFTS	
CYLINDER HEAD	5-26
REMOVING THE CYLINDER HEAD	
CHECKING THE TIMING CHAIN GUIDE (EXHAUST SIDE)	
CHECKING THE CYLINDER HEAD	
INSTALLING THE CYLINDER HEAD	
INOTALEING THE OTEMBERTHEND	0 27
VALVES AND VALVE SPRINGS	
VALVES AND VALVE SPRINGS	
REMOVING THE VALVES	
CHECKING THE VALVES AND VALVE GUIDES	
CHECKING THE VALVE SEATS	
CHECKING THE VALVE LIFTERS	
CHECKING THE VALVE LIFTERSINSTALLING THE VALVES	
INSTALLING THE VALVES	5-34
GENERATOR AND STARTER CLUTCH	
REMOVING THE GENERATOR	
REMOVING THE STARTER CLUTCH	
CHECKING THE STARTER CLUTCH	
INSTALLING THE STARTER CLUTCH	
INSTALLING THE GENERATOR	5-39
ELECTRIC STARTER	
CHECKING THE STARTER MOTOR	
ASSEMBLING THE STARTER MOTOR	
INSTALLING THE STARTER MOTOR	5-11

CLUTCH	5-45
REMOVING THE CLUTCH	
CHECKING THE FRICTION PLATES	5-50
CHECKING THE CLUTCH PLATES	5-50
CHECKING THE CLUTCH SPRINGS	5-51
CHECKING THE CLUTCH HOUSING	5-51
CHECKING THE CLUTCH BOSS	
CHECKING THE PRESSURE PLATE	5-52
CHECKING THE PRIMARY DRIVE GEAR	5-52
CHECKING THE PRIMARY DRIVEN GEAR	5-52
CHECKING THE PULL LEVER SHAFT AND PULL ROD	5-52
INSTALLING THE CLUTCH	5-52
SHIFT SHAFT	
CHECKING THE SHIFT SHAFT	5-56
CHECKING THE STOPPER LEVER	5-56
INSTALLING THE SHIFT SHAFT	5-56
OIL PUMP	5-57
CHECKING THE SPROCKET AND CHAIN	5-59
CHECKING THE OIL PUMP	5-59
CHECKING THE RELIEF VALVE	5-59
ASSEMBLING THE OIL PUMP	5-59
INSTALLING THE OIL PUMP	5-60
OIL PAN	5-61
REMOVING THE OIL PAN	
CHECKING THE OIL STRAINER	5-62
INSTALLING THE OIL PAN	5-62
CRANKCASE	
DISASSEMBLING THE CRANKCASE	
CHECKING THE CRANKCASE	
ASSEMBLING THE CRANKCASE	
INSTALLING THE OIL PRESSURE SWITCH	
INSTALLING THE GEAR POSITION SENSOR	5-67
CONNECTING RODS AND PISTONS	5-69
REMOVING THE CONNECTING RODS AND PISTONS	
CHECKING THE CYLINDER AND PISTON	
CHECKING THE PISTON RINGS	
CHECKING THE PISTON PIN	
CHECKING THE CONNECTING RODS	
INSTALLING THE CONNECTING ROD AND PISTON	5-75


CRANKSHAFT AND BALANCER SHAFT	5-80
REMOVING THE CRANKSHAFT AND BALANCER SHAFT	5-81
CHECKING THE OIL NOZZLES	5-81
CHECKING THE CRANKSHAFT	5-81
CHECKING THE BALANCER SHAFT	5-83
INSTALLING THE CRANKSHAFT	5-84
INSTALLING THE BALANCER ASSEMBLY	5-85
TRANSMISSION	5-86
REMOVING THE TRANSMISSION	
CHECKING THE SHIFT FORKS	5-91
CHECKING THE SHIFT DRUM ASSEMBLY	5-92
CHECKING THE TRANSMISSION	5-92
ASSEMBLING THE MAIN AXLE AND DRIVE AXLE	5-92

FAS20298

LUBRICATION SYSTEM CHART AND DIAGRAMS

EAS32362


ENGINE OIL LUBRICATION CHART

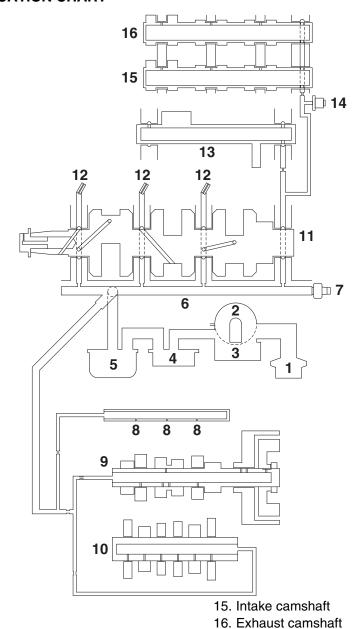


- 1. Oil strainer
- 2. Oil pump
- 3. Relief valve
- 4. Oil cooler
- 5. Oil filter cartridge
- 6. Main gallery
- 7. Oil pressure switch
- 8. Mission shower
- 9. Main axle
- 10. Drive axle
- 11. Crankshaft
- 12. Oil nozzle
- 13. Balancer shaft
- 14. Timing chain tensioner

EAS32363


LUBRICATION DIAGRAMS

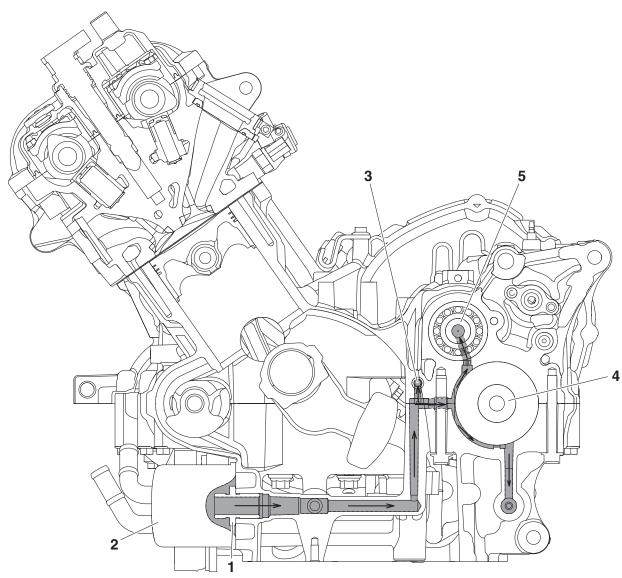


- 1. Oil filter cartridge union bolt
- 2. Oil filter cartridge
- 3. Oil delivery pipe
- 4. Drive axle
- 5. Main axle

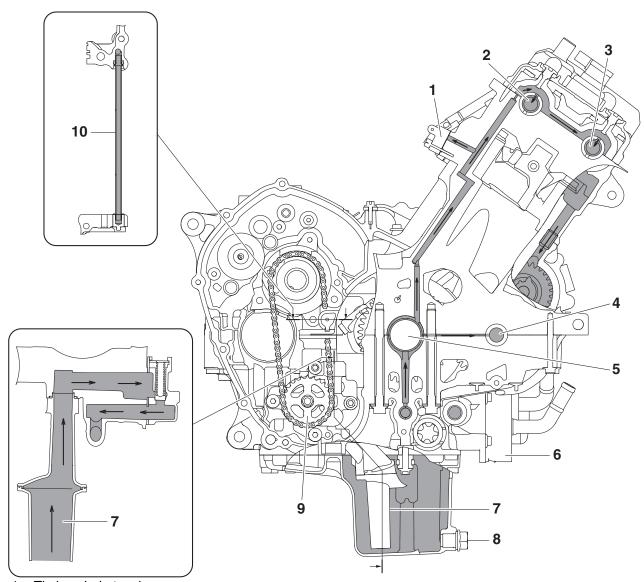


- 1. Timing chain tensioner
- 2. Intake camshaft
- 3. Exhaust camshaft
- 4. Balancer shaft
- 5. Crankshaft
- 6. Oil cooler
- 7. Oil strainer
- 8. Oil drain bolt
- 9. Oil pump driven sprocket
- 10. Oil delivery pipe

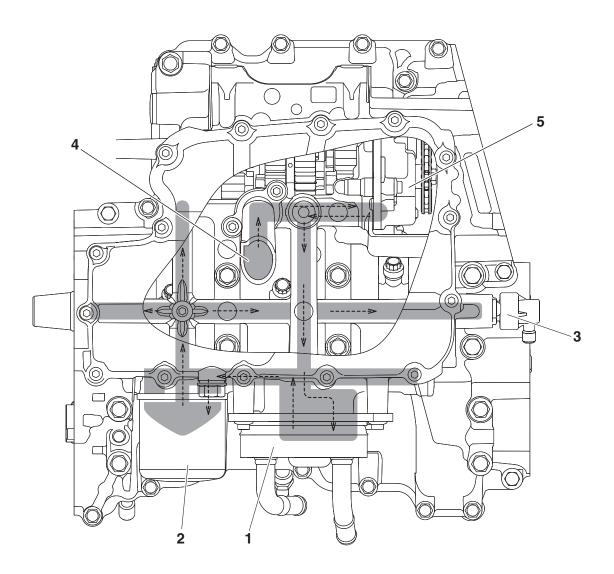

- 1. Oil cooler
- 2. Oil filter cartridge
- 3. Oil pressure switch
- 4. Oil strainer
- 5. Oil pump

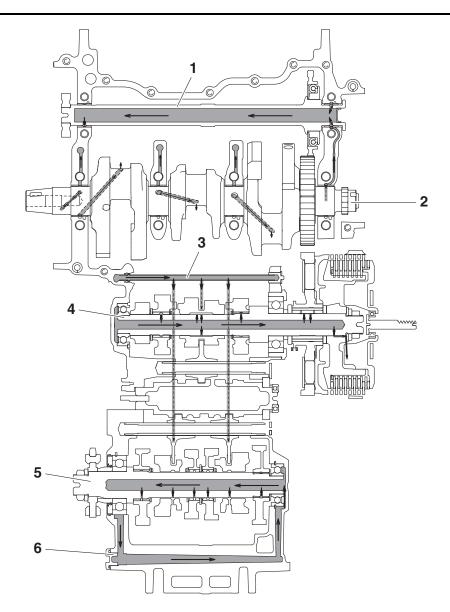

- 1. Balancer shaft
- 2. Crankshaft
- 3. Oil delivery pipe
- 4. Main axle
- 5. Drive axle
- 6. Oil gallery bolt

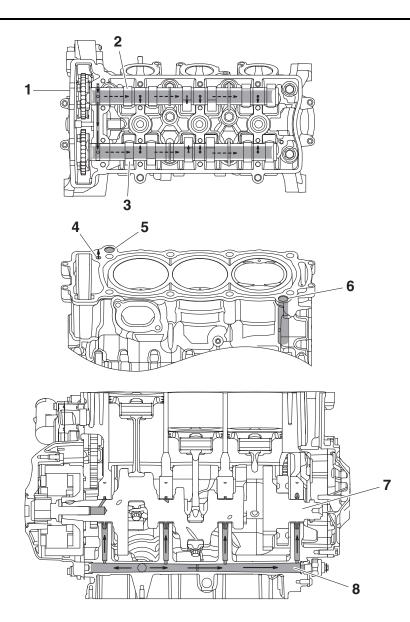

- 1. Cylinder head
- 2. Intake camshaft
- 3. Exhaust camshaft
- 4. Oil passage to the cylinder head
- 5. Oil passage to the clutch chamber
- 6. Oil return passage from the cylinder head
- 7. Crankshaft
- 8. Main gallery

ENGINE INSPECTION

EAS30249

MEASURE THE COMPRESSION PRESSURE

The following procedure applies to all of the cylinders.

TIP

Insufficient compression pressure will result in a loss of performance.

- 1. Measure:
- Valve clearance
 Out of specification → Adjust.
 Refer to "ADJUSTING THE VALVE CLEAR-ANCE" on page 3-5.
- 2. Start the engine, warm it up for several minutes, and then turn it off.
- 3. Remove:
 - Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Fuel tank
 Refer to "FUEL TANK" on page 7-1.
 - Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
 - Ignition coil
 - Spark plug Refer to "CAMSHAFTS" on page 5-16.

ECA13340

NOTICE

Before removing the spark plugs, use compressed air to blow away any dirt accumulated in the spark plug wells to prevent it from falling into the cylinders.


- 4. Install:
- Compression gauge "1"
- Extension "2"



Compression gauge
90890-03081
Engine compression tester
YU-33223
Compression gauge extension
122mm
90890-04136
Compression gauge extension

Compression gauge extension 122mm

YM-04136

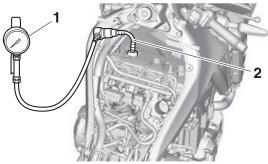

- 5. Measure:
- Compression pressure
 Out of specification → Refer to steps (c) and (d).



Compression pressure 1392–1792 kPa/425 r/min (13.9– 17.9 kgf/cm²/425 r/min, 198.0– 254.9 psi/425 r/min)

- a. Set the main switch to "ON".
- b. With the throttle wide open, crank the engine until the reading on the compression gauge stabilizes.

EWA17100

WARNING

To prevent sparking the plug, remove all ignition coil couplers and fuel injector couplers before cranking the engine.

TIP

The difference in compression pressure between cylinders should not exceed 100 kPa (1 kg/cm², 15 psi).

- c. If the compression pressure is above the maximum specification, check the cylinder head, valve surfaces and piston crown for carbon deposits.
 - Carbon deposits \rightarrow Eliminate.
- d. If the compression pressure is below the minimum specification, pour a teaspoonful of engine oil into the spark plug bore and measure again.

Refer to the following table.

Compression pressure the cylinder)	(with oil applied into
Reading	Diagnosis
Higher than without oil	Piston ring(s) wear or damage \rightarrow Repair.
Same as without oil	Piston, valves, cylinder head gasket possibly defective → Repair.

6. Install:

• Spark plug




Spark plug 13 N·m (1.3 kgf·m, 9.6 lb·ft)


7. Install:

- Ignition coil Refer to "CAMSHAFTS" on page 5-16.
- Air filter case Refer to "GENERAL CHASSIS (2)" on page 4-14.
- Fuel tank
 Refer to "FUEL TANK" on page 7-1.
- Fuel tank center cover Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.


ENGINE REMOVAL

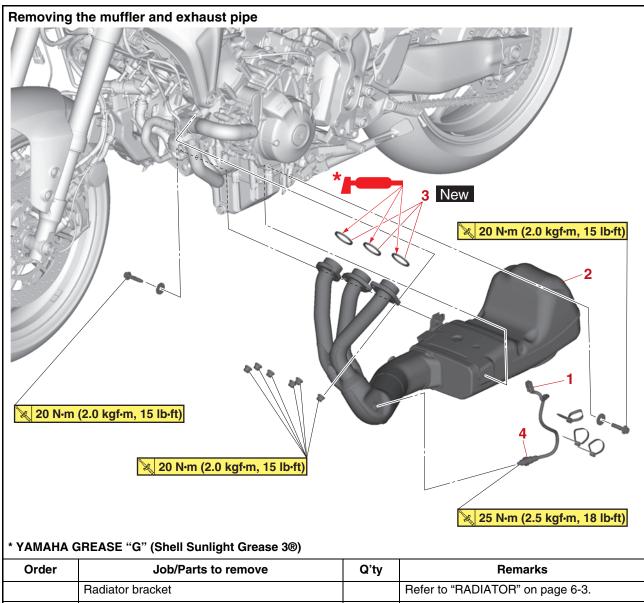


Order	Job/Parts to remove	Q'ty	Remarks
	Radiator bracket		Refer to "RADIATOR" on page 6-3.
1	O ₂ sensor coupler	1	Disconnect.
2	Muffler assembly	1	
3	Exhaust gasket	3	
4	O ₂ sensor	1	Remove the O ₂ sensor only when necessary.

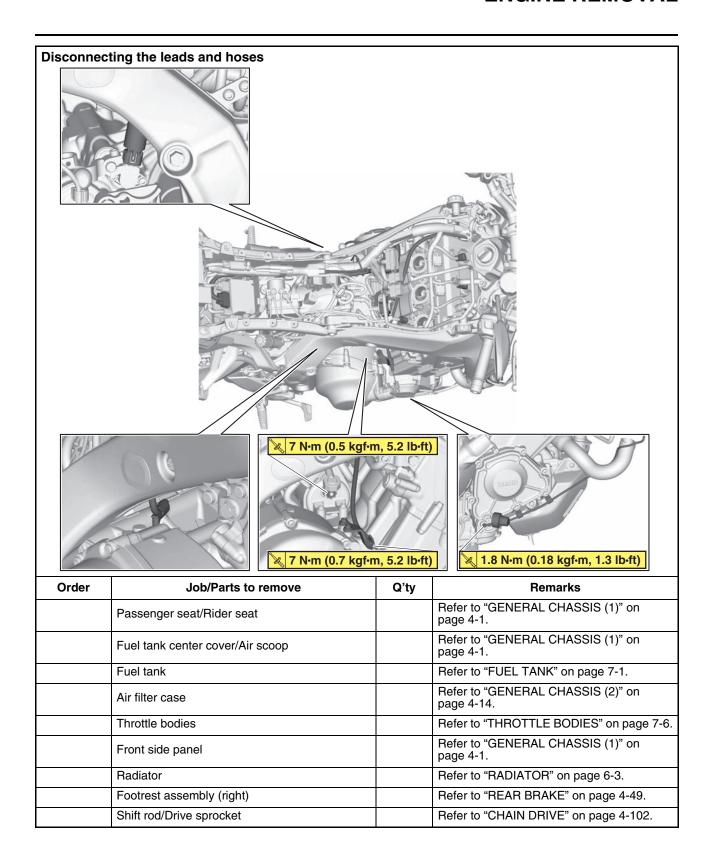


ENGINE REMOVAL

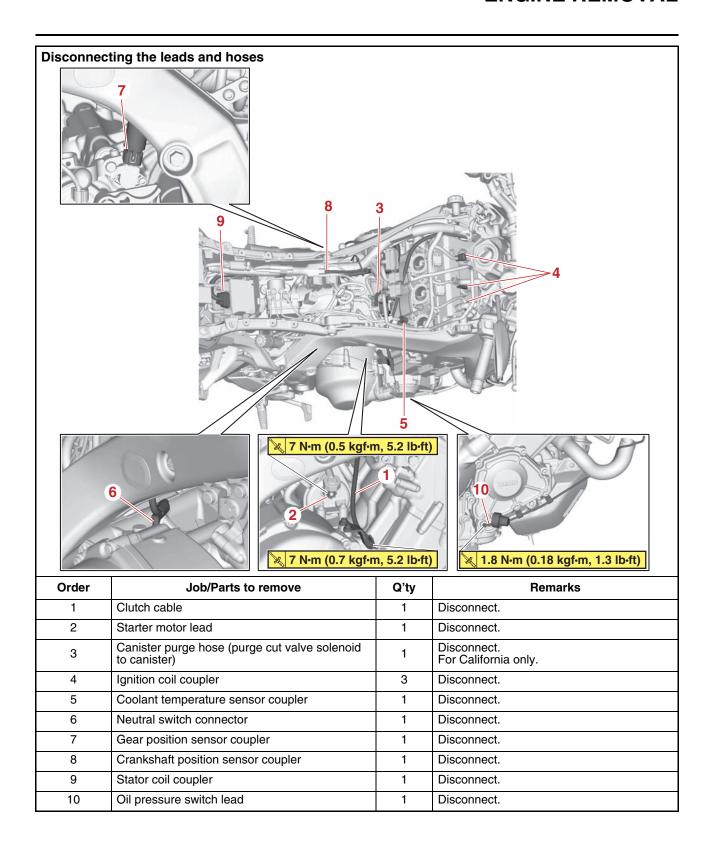

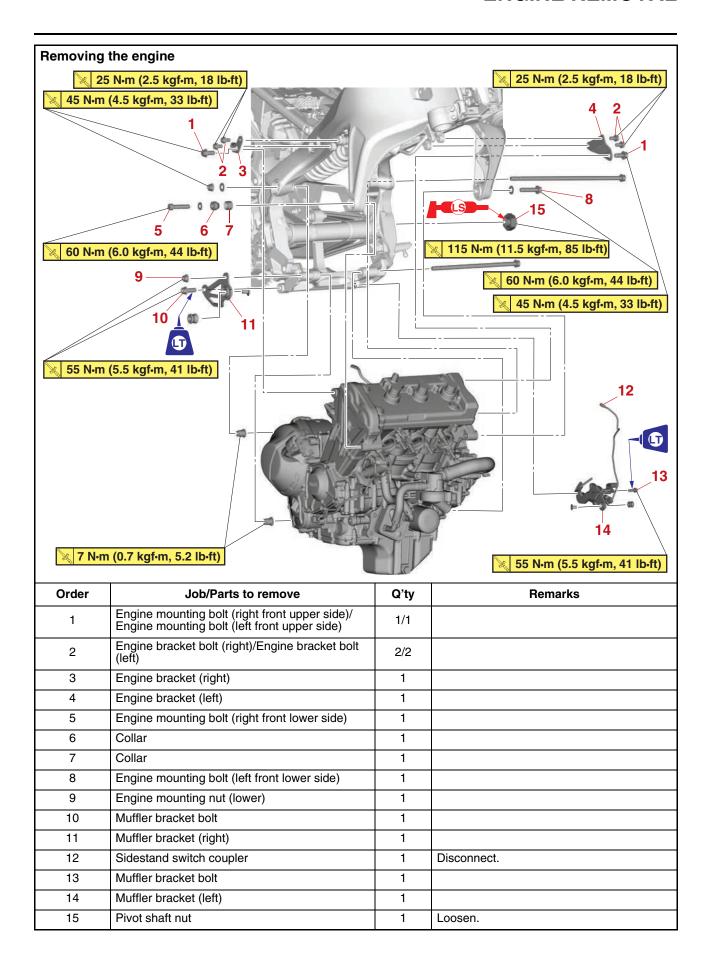

ENGINE REMOVAL

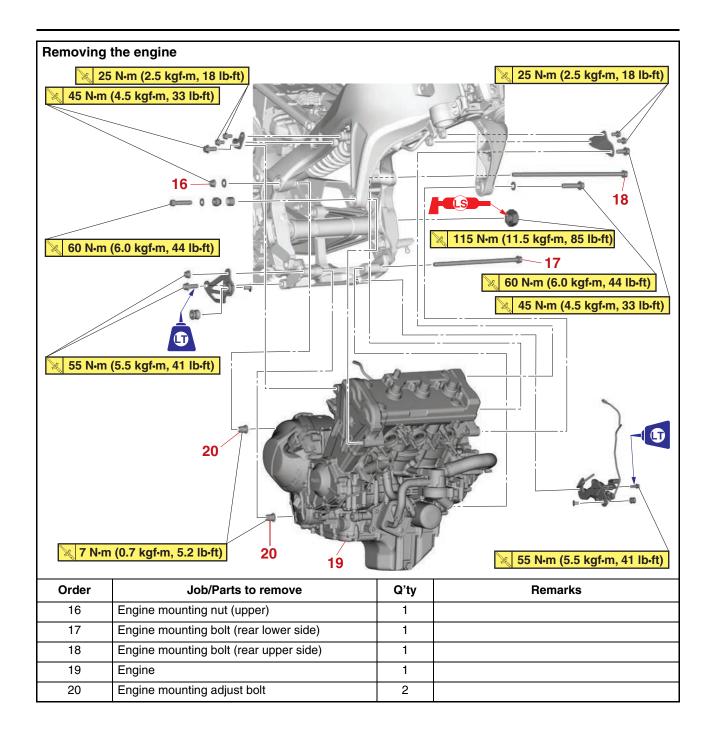

REMOVING THE ENGINE


- 1. Loosen:
- Engine mounting adjust bolt (rear)


TIP

Loosen the engine mounting adjust bolts with the pivot shaft wrench "1" and pivot shaft wrench adapter "2".



Pivot shaft wrench 90890-01518 Frame spanner socket YM-01518 Pivot shaft wrench adapter 90890-01476

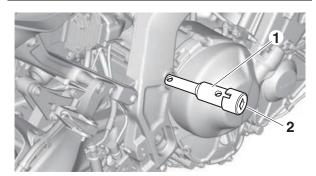

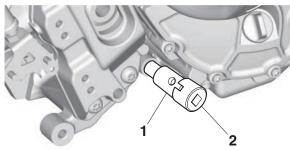

EAS30251

INSTALLING THE ENGINE

- 1. Install:
- Engine mounting adjust bolt (lower) "1" (temporarily tighten)
- Engine mounting adjust bolt (upper) "2" (temporarily tighten)
- 2. Install:
 - Muffler bracket "3"
 - Muffler bracket bolt "4" (temporarily tighten)
- 3. Install:
 - Engine

- 4. Install:
 - Engine mounting bolt (rear lower side) "5"
- Engine mounting bolt (rear upper side) "6"
- 5. Install:
- Engine mounting bolt (left front lower side) "7" (temporarily tighten)
- 6. Install:
 - Collar "8"
 - Collar "9"
 - Engine mounting bolt (right front lower side)
 "10"
 - (temporarily tighten)
- 7. Tighten:
- Engine mounting adjust bolt (lower) "1"

TIP

- Tighten the engine mounting adjust bolt to specification with the pivot shaft wrench and pivot shaft wrench adapter.
- Make sure that the flange on the engine mounting adjust bolt contacts the engine.



Engine mounting adjust bolt (lower)
7 N·m (0.7 kgf·m, 5.2 lb·ft)



Pivot shaft wrench 90890-01518 Frame spanner socket YM-01518 Pivot shaft wrench adapter 90890-01476

- 8. Install:
- Muffler bracket "11"
- Muffler bracket bolt "12" (temporarily tighten)
- 9. Tighten:
 - Engine mounting nut (lower) "13"
- Muffler bracket bolt "4", "12"



Engine mounting nut (lower) 55 N·m (5.5 kgf·m, 41 lb·ft) Muffler bracket bolt 55 N·m (5.5 kgf·m, 41 lb·ft) LOCTITE®

10.Tighten:

- Engine mounting bolt (left front lower side) "7"
- Engine mounting bolt (right front lower side) "10"



Engine mounting bolt (left front lower side)

60 N·m (6.0 kgf·m, 44 lb·ft)
Engine mounting bolt (right front lower side)
60 N·m (6.0 kgf·m, 44 lb·ft)

11.Tighten:

• Pivot shaft nut "14"



Pivot shaft nut 115 N·m (11.5 kgf·m, 85 lb·ft)

12.Tighten:

• Engine mounting adjust bolt (upper) "2"

TIP

- Tighten the engine mounting adjust bolt to specification with the pivot shaft wrench and pivot shaft wrench adapter.
- Make sure that the flange on the engine mounting adjust bolt contacts the engine.



Engine mounting adjust bolt (upper)
7 N·m (0.7 kgf·m, 5.2 lb·ft)



Pivot shaft wrench 90890-01518 Frame spanner socket YM-01518 Pivot shaft wrench adapter 90890-01476

13.Tighten:

• Engine mounting nut (upper) "15"



Engine mounting nut (upper) 45 N·m (4.5 kgf·m, 33 lb·ft)

14.Install:

- Engine bracket (left) "16"
- Engine bracket bolt (left) "17" (temporarily tighten)
- Engine mounting bolt (left front upper side) "18" (temporarily tighten)

15.Install:

- Engine bracket (right) "19"
- Engine bracket bolt (right) "20" (temporarily tighten)
- Engine mounting bolt (right front upper side) "21"

(temporarily tighten)

16. Tighten:


- Engine bracket bolt (left) "17"
- Engine mounting bolt (left front upper side) "18"
- Engine bracket bolt (right) "20"
- Engine mounting bolt (right front upper side) "21"



Engine bracket bolt (left)
25 N·m (2.5 kgf·m, 18 lb·ft)
Engine mounting bolt (left front upper side)
45 N·m (4.5 kgf·m, 33 lb·ft)


45 N·m (4.5 kgf·m, 33 lb·ft)
Engine bracket bolt (right)
25 N·m (2.5 kgf·m, 18 lb·ft)
Engine mounting bolt (right front upper side)

45 N·m (4.5 kgf·m, 33 lb·ft)

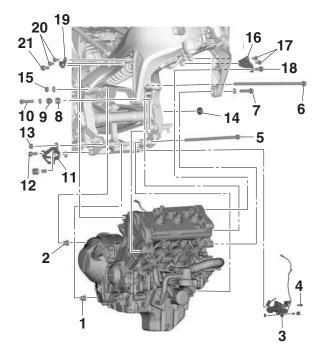


FAS20043

CAMSHAFTS

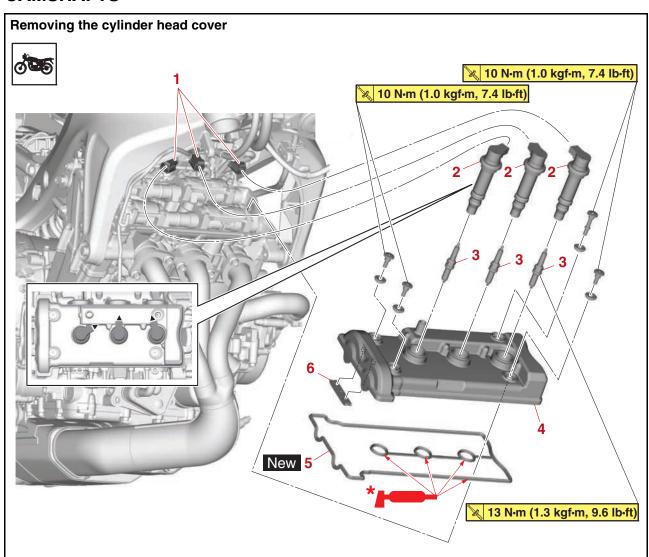


* Three Bond No. 1541C®

Order	Job/Parts to remove	Q'ty	Remarks
	Rider seat		Refer to "GENERAL CHASSIS (1)" on page 4-1.
	Fuel tank center cover		Refer to "GENERAL CHASSIS (1)" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
	Air filter case		Refer to "GENERAL CHASSIS (2)" on page 4-14.
	Front side panel		Refer to "GENERAL CHASSIS (1)" on page 4-1.
	Radiator		Refer to "RADIATOR" on page 6-3.
1	Ignition coil coupler	3	Disconnect.
2	Ignition coil	3	
3	Spark plug	3	
4	Cylinder head cover	1	
5	Cylinder head cover gasket	1	
6	Timing chain guide (top side)	1	

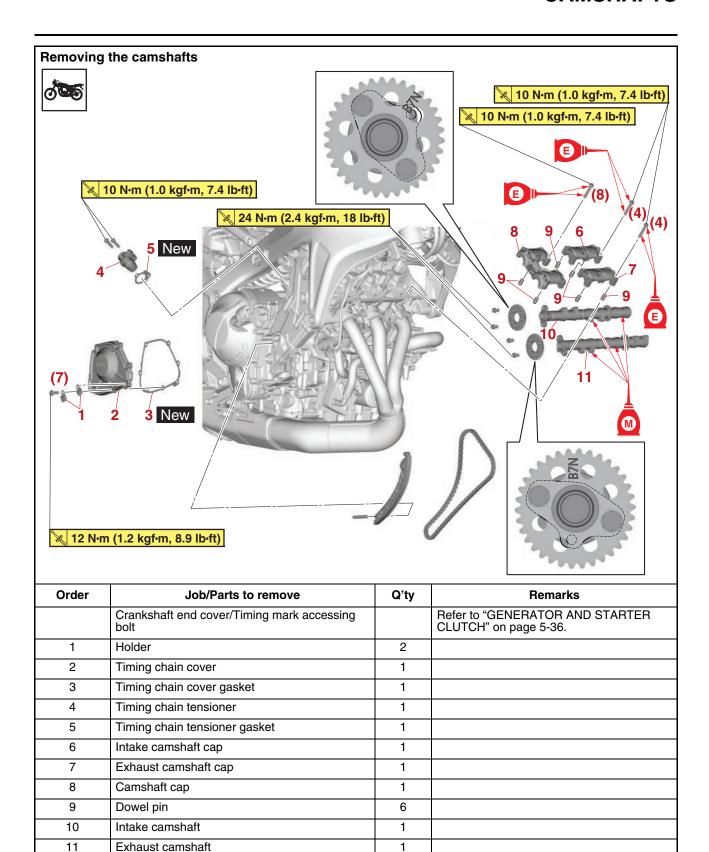


CAMSHAFTS

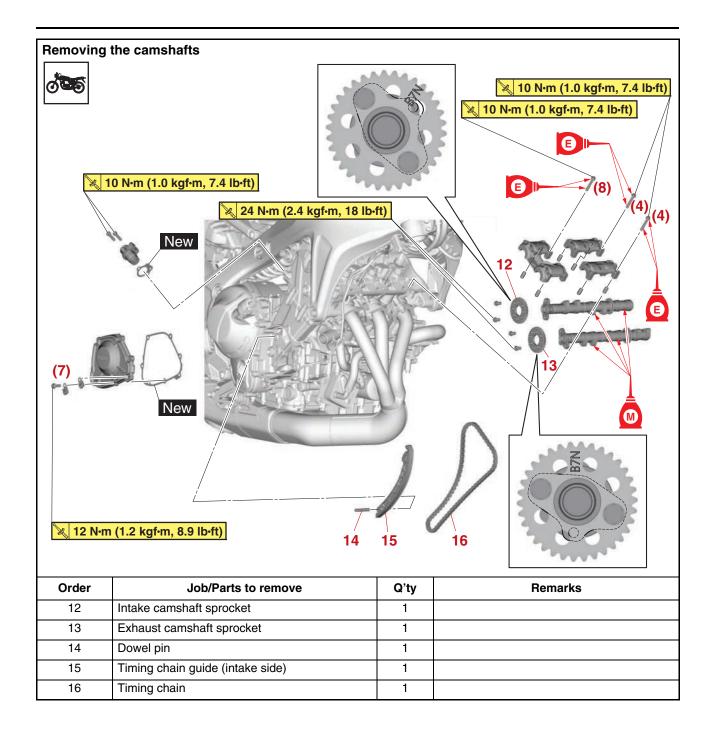

REMOVING THE CAMSHAFTS


- 1. Remove:
- Timing mark accessing bolt "1"
- Crankshaft end cover "2"

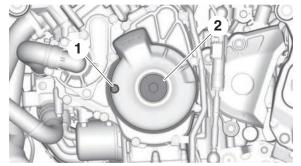


- 2. Align:
 - Mark "a" on the generator rotor (with the generator rotor cover mark "b")
 - a. Turn the crankshaft counterclockwise.
 - b. When piston #1 is at BTDC125° on the compression stroke, align the BTDC125° mark "a" on the generator rotor with the generator rotor cover mark "b".

TIP

BTDC125° on the compression stroke can be found when the camshaft lobes are turned away from each other.

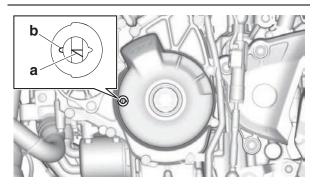

- 3. Remove:
 - Timing chain tensioner "1"
 - Timing chain tensioner gasket

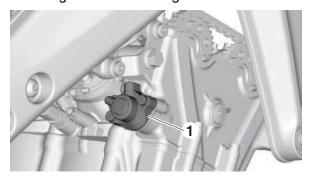

- 4. Remove:
 - · Camshaft cap
 - Intake camshaft cap
- Exhaust camshaft cap

ECA13720

NOTICE


To prevent damage to the cylinder head, camshafts or camshaft caps, loosen the camshaft cap bolts in stages and in a criss-cross pattern, working from the outside in.

5. Remove:

- Intake camshaft "1"
- Exhaust camshaft "2"

TIP

To prevent the timing chain from falling into the crankcase, fasten it with a wire "3".

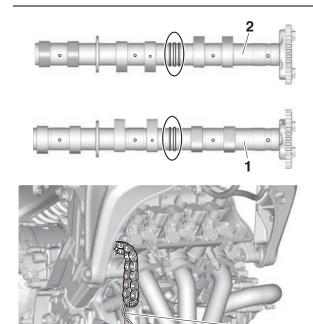


- 6. Remove:
- Camshaft sprocket "1"

TIP

Use the camshaft wrench "2" and loosen the camshaft sprocket bolt.



Camshaft wrench 90890-04162 Camshaft wrench YM-04162

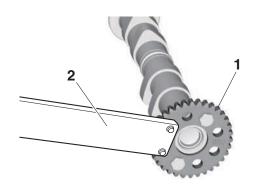


CHECKING THE CAMSHAFTS

- 1. Check:
- Camshaft lobes
 Blue discoloration/pitting/scratches → Replace the camshaft.
- 2. Measure:
 - Camshaft lobe dimensions "a"
 Out of specification → Replace the camshaft.



Camshaft lobe dimensions Lobe height limit (Intake) 35.590 mm (1.4012 in) Lobe height limit (Exhaust) 35.620 mm (1.4024 in)

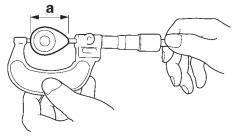


G088946

- 3. Measure:
 - Camshaft runout
 Out of specification → Replace.



Camshaft runout limit 0.030 mm (0.0012 in)

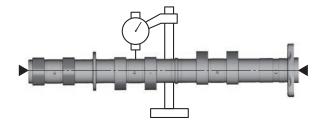


4. Measure:

 Camshaft-journal-to-camshaft-cap clearance Out of specification → Measure the camshaft journal diameter.



Camshaft-journal-to-camshaftcap clearance limit 0.080 mm (0.0032 in)

- a. Install the camshaft into the cylinder head (without the camshaft caps).
- b. Position strip of Plastigauge® "1" onto the camshaft journal as shown.

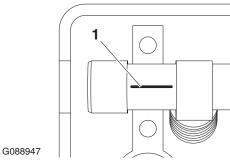


 c. Install the dowel pins and camshaft caps.
 Refer to "INSTALLING THE CAMSHAFTS" on page 5-22.

TIP

Do not turn the camshaft when measuring the camshaft journal-to-camshaft cap clearance with the Plastigauge®.

d. Remove the camshaft caps, and then measure the width of the Plastigauge® "1".

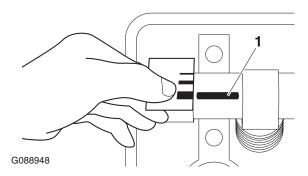


5. Measure:

Camshaft journal diameter "a"
 Out of specification → Replace the camshaft.
 Within specification → Replace the cylinder head and the camshaft caps as a set.




Camshaft journal diameter 24.459-24.472 mm (0.9630-0.9635 in)

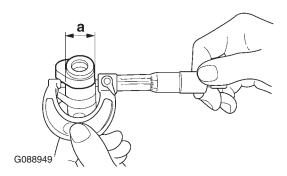

CHECKING THE TIMING CHAIN AND CAMSHAFT SPROCKET

- 1. Check:
- Timing chain
 Damage/stiffness → Replace the timing
 chain and camshaft and camshaft sprocket
 as a set.
- 2. Check:
 - Camshaft sprocket
 More than 1/4 tooth wear "a" → Replace the
 camshaft sprockets and the timing chain as a
 set.

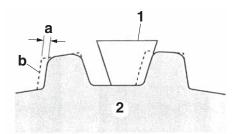

G088950

- a. 1/4 tooth
- b. Correct
- 1. Timing chain
- 2. Camshaft sprocket

EAS30265

CHECKING THE TIMING CHAIN GUIDES

- 1. Check:
- Timing chain guide (intake side)
- Timing chain guide (top side)
 Damage/wear → Replace the defective part(s).

EAS30266


CHECKING THE TIMING CHAIN TENSIONER

- 1. Check:
- Timing chain tensioner
 Cracks/damage/rough movement → Replace.


a. Using the valve spring compressor "1",
 push and insert timing chain tensioner rod
 "2" into the timing chain tensioner housing.

TIP


Push the timing chain tensioner rod in direction "a", and turn the timing chain tensioner body "3" in direction "b" until the circlip fits into the groove.

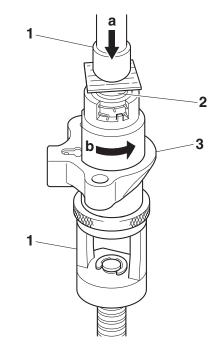

b. Lock the timing chain tensioner rod by setting the circlip "4" to groove "5" while pushing the timing chain tensioner rod.

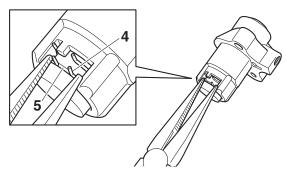


- c. Push the timing chain tensioner rod "c".
- d. If the circlip does not unlock even though you press the timing chain tensioner rod in the "c" direction, rotate the timing chain tensioner rod clockwise.
- e. Make sure that the timing chain tensioner rod comes out "d" of the timing chain tensioner housing smoothly. If there is rough movement, replace the timing chain tensioner.

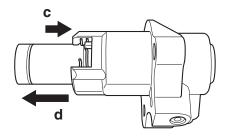


INSTALLING THE CAMSHAFTS

- 1. Remove:
- Timing mark accessing bolt "1"
- Crankshaft end cover "2"

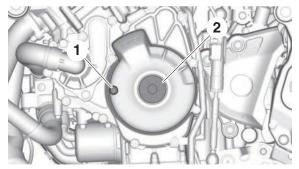

- 2. Align:
 - Mark "a" on the generator rotor (with the generator rotor cover mark "b")
 - a. Turn the crankshaft counterclockwise.
 - b. When piston #1 is at BTDC125°, align the mark "a" on the generator rotor with the generator rotor cover mark "b".

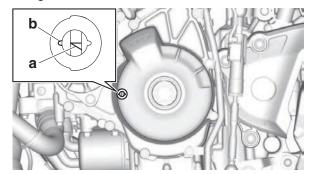

- 3. Install:
 - Intake camshaft sprocket "1"
 - Exhaust camshaft sprocket "2"




Camshaft sprocket bolt 24 N·m (2.4 kgf·m, 18 lb·ft)

TIP_

- Install the camshaft projection "a" at the position shown in the illustration.
- Tighten the camshaft sprocket bolt with the camshaft wrench "3".




Camshaft wrench 90890-04162 Camshaft wrench YM-04162

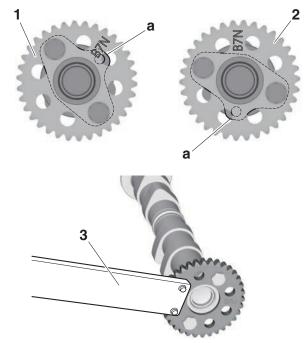

- 4. Install:
 - Exhaust camshaft "1"
- Intake camshaft "2"

TIP_

Make sure the punch mark "a" on each camshaft faces up.

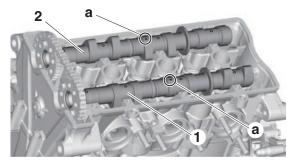


- 5. Install:
 - · Camshaft cap
- Intake camshaft cap
- Exhaust camshaft cap

TIP_

 Make sure each camshaft cap is installed in its original place. Refer to the identification marks as follows:

"IL": Intake left side camshaft cap mark
"EL": Exhaust left side camshaft cap mark

 Make sure the arrow mark "a" on each camshaft points toward the right side of the engine.

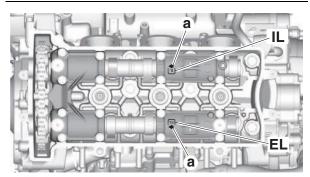

6. Tighten:

Camshaft cap bolt



Camshaft cap bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)


TIP

Tighten the camshaft cap bolts in the tightening sequence as shown.

ECA17430

NOTICE

- Lubricate the camshaft cap bolts with the engine oil.
- The camshaft cap bolts must be tightened evenly or damage to the cylinder head, camshaft caps, and camshafts will result.
- Do not turn the crankshaft when installing the camshaft to avoid damage or improper valve timing.

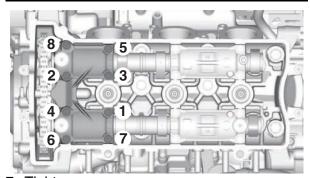

7. Tighten:

Camshaft cap bolt "1"



Camshaft cap bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)


TIP_

Tighten the camshaft cap bolts in stage and in a crisscross pattern, working from the inner caps out.

ECA17430


NOTICE

- Lubricate the camshaft cap bolts with the engine oil.
- The camshaft cap bolts must be tightened evenly or damage to the cylinder head, camshaft caps, and camshafts will result.
- Do not turn the crankshaft when installing the camshaft to avoid damage or improper valve timing.

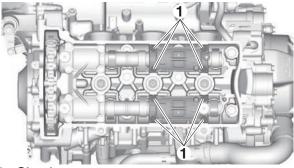

8. Check:

Camshaft punch mark "a"
 Make sure the camshaft punch mark "a" on the camshaft is aligned with the camshaft cap alignment mark "b".

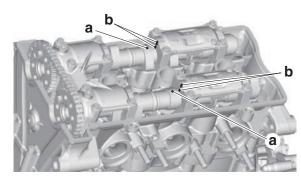


9. Install:


- Timing chain tensioner gasket New
- Timing chain tensioner
- a. Using the valve spring compressor "1",
 push and insert timing chain tensioner rod
 "2" into the timing chain tensioner housing.

TIP

Push the timing chain tensioner rod in direction "a", and turn the timing chain tensioner body "3" in direction "b" until the circlip fits into the groove.

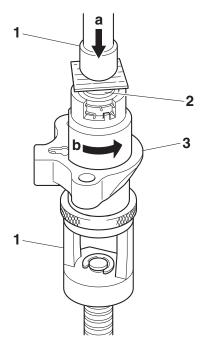

b. Lock the timing chain tensioner rod by setting the circlip "4" into groove "5" while pushing the timing chain tensioner rod.

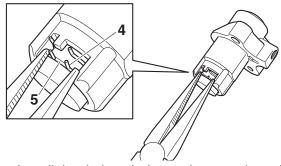

c. Install the timing chain tensioner to the cylinder block.

TIP

Always use a new gasket.



Timing chain tensioner bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

d. Turn the crankshaft clockwise several times to release the timing chain tensioner rod.

10.Turn:

• Crankshaft (several turns counterclockwise)

11. Confirm the timing chain tension properly.

12.Check:


Mark "a"


Make sure the mark "a" on the generator rotor is aligned with the generator rotor cover mark "b".

Camshaft punch mark "c"
 Make sure the camshaft punch mark "c" on

the camshaft is aligned with the camshaft cap alignment mark "d".

Out of alignment \rightarrow Adjust. Refer to the installation steps above.

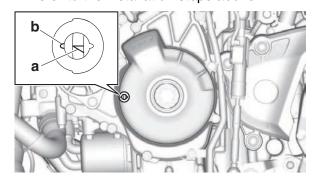

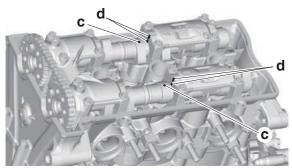

13.Measure:

Valve clearance
 Out of specification → Adjust.
 Refer to "ADJUSTING THE VALVE CLEAR-ANCE" on page 3-5.

14.Install:

• Timing mark accessing bolt "1"




Timing mark accessing bolt 15 N·m (1.5 kgf·m, 11 lb·ft)

Crankshaft end cover "2"



Crankshaft end cover 10 N·m (1.0 kgf·m, 7.4 lb·ft)

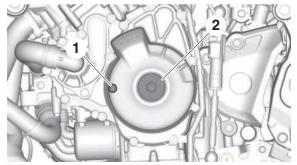

15.Install:


- Timing chain guide (top side)
- Cylinder head cover gasket "1" New
- Cylinder head cover



Cylinder head cover bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP

- Apply Three Bond No. 1541C® onto the mating surfaces of the cylinder head cover and cylinder head cover gasket.
- After installing the cylinder head cover gasket "1" to the cylinder head cover, cut off the "a" section.

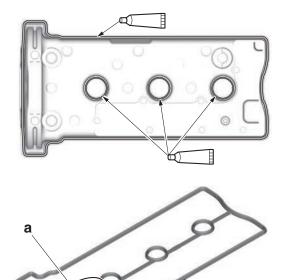

16.Install:


- Spark plug
- Ignition coil "1"



Spark plug 13 N⋅m (1.3 kgf⋅m, 9.6 lb⋅ft)


TIP

Install the ignition coils "1" in the direction shown in the illustration.

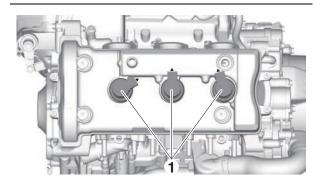

1 New

CYLINDER HEAD

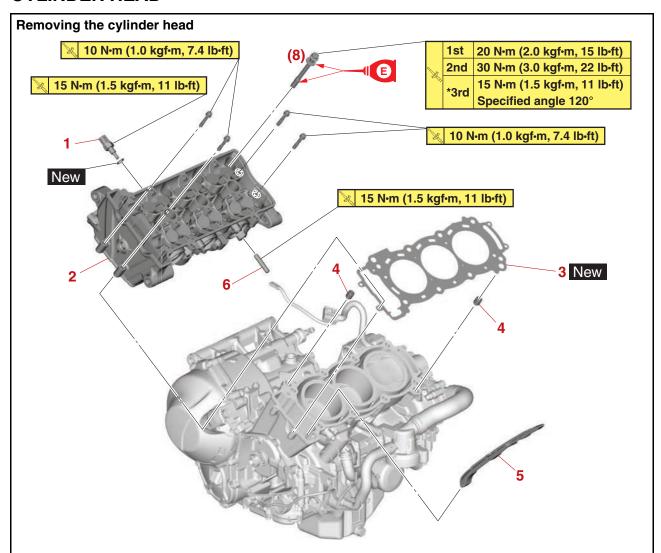

* Following the tightening order, loosen the bolt one by one, and then retighten it to the specific torque and the specified angle.


Order	Job/Parts to remove	Q'ty	Remarks
	Engine		Refer to "ENGINE REMOVAL" on page 5-9.
	Intake camshaft		Refer to "CAMSHAFTS" on page 5-16.
	Exhaust camshaft		Refer to "CAMSHAFTS" on page 5-16.
	Timing chain		Refer to "CAMSHAFTS" on page 5-16.
1	Coolant temperature sensor	1	
2	Cylinder head	1	
3	Cylinder head gasket	1	
4	Dowel pin	2	
5	Timing chain guide (exhaust side)	1	
6	Stud bolt	6	

REMOVING THE CYLINDER HEAD

- 1. Remove:
- Intake camshaft
- Exhaust camshaft Refer to "REMOVING THE CAMSHAFTS" on page 5-19.
- 2. Remove:
 - Cylinder head bolt (M6) (×4)
- Cylinder head bolt (M9) (×8)

TIP

- Loosen the bolts in the proper sequence as shown.
- Loosen each bolt 1/2 of a turn at a time. After all of the bolts are fully loosened, remove them.

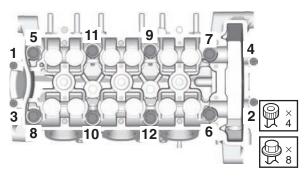

EAS30278

CHECKING THE TIMING CHAIN GUIDE (EXHAUST SIDE)

- 1. Check:
- Timing chain guide (exhaust side)
 Damage/wear → Replace.

EAS30277

CHECKING THE CYLINDER HEAD

- 1. Eliminate:
- Combustion chamber carbon deposits (with a rounded scraper)

TIP

Do not use a sharp instrument to avoid damaging or scratching:


- · Spark plug bore threads
- Valve seats
- 2. Check:
 - $\begin{tabular}{ll} \bullet & Cylinder head \\ & Damage/scratches \rightarrow Replace. \\ \end{tabular}$
- Cylinder head water jacket
 Mineral deposits/rust → Eliminate.

3. Measure:

Cylinder head warpage
 Out of specification → Resurface the cylinder head.



Warpage limit 0.10 mm (0.0039 in)

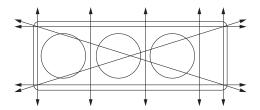


G088955

a. Place a straightedge "1" and a thickness gauge "2" across the cylinder head.



Thickness gauge 90890-03268 Feeler gauge set YU-26900-9

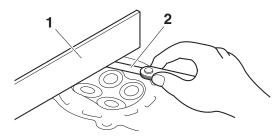

G088957

- b. Measure the warpage.
- c. If the limit is exceeded, resurface the cylinder head as follows.
- d. Place a 400–600 grit wet sandpaper on the surface plate and resurface the cylinder head using a figure-eight sanding pattern.


TIP

To ensure an even surface, rotate the cylinder head several times.

EAS3028

INSTALLING THE CYLINDER HEAD

- 1. Install:
- Timing chain guide (exhaust side) "1"
- Cylinder head gasket "2" New
- Dowel pin "3"

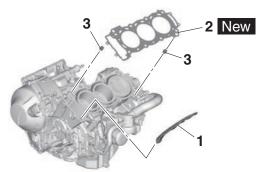

2. Install:

- Cylinder head
- Cylinder head bolt (M6) (×4)
- Cylinder head bolt (M9) (×8)

TIE

- Pass the timing chain through the timing chain cavity.
- Lubricate the cylinder head bolt (M9) thread and mating surface with engine oil.

3. Tighten:

- Cylinder head bolt "1"-"8"
- Cylinder head bolt "9"-"12"



Cylinder head bolt "1"-"8"

1st: 20 N·m (2.0 kgf·m, 15 lb·ft)

2nd: 30 N·m (3.0 kgf·m, 22 lb·ft)

*3rd: 15 N·m (1.5 kgf·m, 11 lb·ft)

Specified angle 120°


Cylinder head bolt "9"-"12"

10 N·m (1.0 kgf·m, 7.4 lb·ft)

* Following the tightening order, loosen the bolt one by one and then retighten it to the specified torque and the specified angle.

TIP

Tighten the cylinder head bolts "1"—"8" in the tightening sequence as shown and torque them in 3 stages.

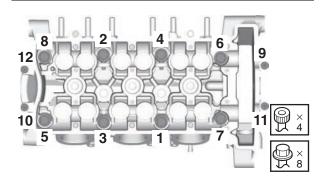


4. Install:

- Exhaust camshaft
- Intake camshaft
 Refer to "INSTALLING THE CAMSHAFTS"
 on page 5-22.

14


Exhaust valve spring

VALVES AND VALVE SPRINGS

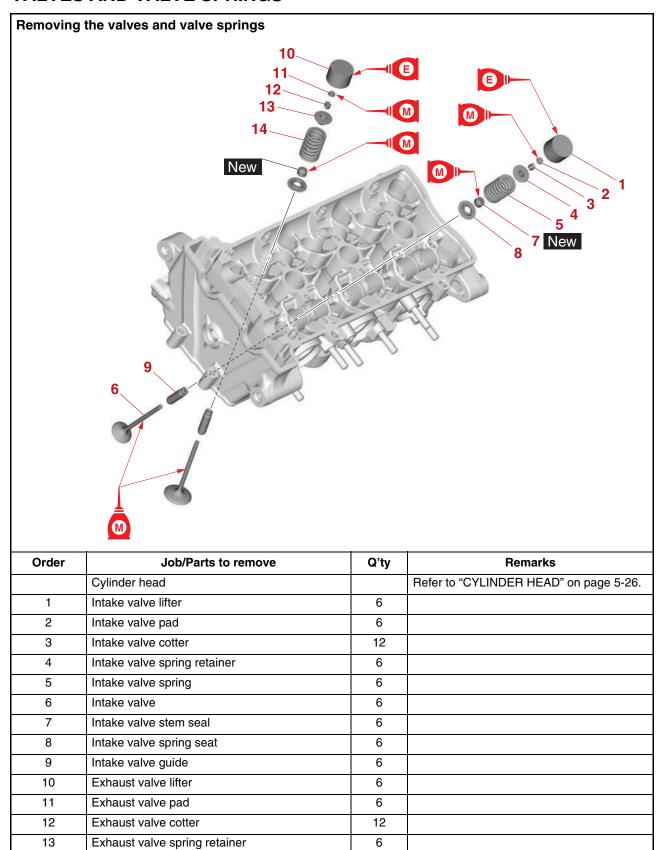

6

VALVES AND VALVE SPRINGS

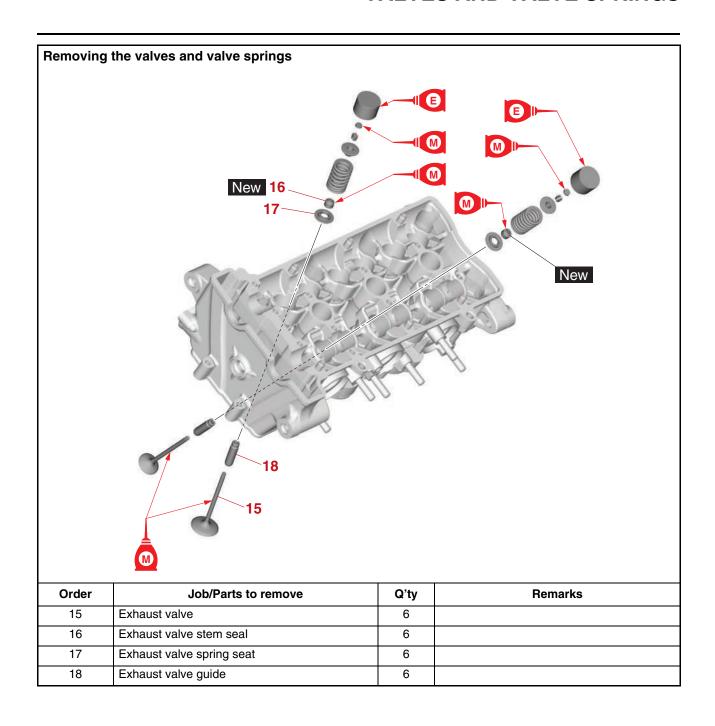

REMOVING THE VALVES

The following procedure applies to all of the valves and related components.

TIP

Before removing the internal parts of the cylinder head (e.g., valves, valve springs, valve seats), make sure the valves properly seal.

- 1. Remove:
- Valve lifter
- Valve pad

TIP

Make a note of the position of each valve lifter and valve pad so that they can be reinstalled in their original place.

2. Check:


Valve sealing

Leakage at the valve seat \rightarrow Check the valve face, valve seat, and valve seat width. Refer to "CHECKING THE VALVE SEATS" on page 5-33.

- a. Pour a clean solvent "a" into the intake and exhaust ports.
- b. Check that the valves properly seal.

TIP

There should be no leakage at the valve seat "1".

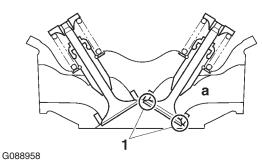

3. Remove:

Valve cotter

TIP_

Remove the valve cotters by compressing the valve spring with the valve spring compressor "1" and the valve spring compressor attachment "2".




Valve spring compressor 90890-04200 Valve spring compressor YM-04019

Valve spring compressor attachment (ø23) 90890-04179

Valve spring compressor adapter (ø23)

YM-04179

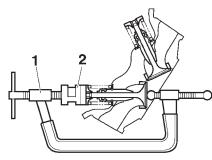

G088959

- 4. Remove:
- Valve spring retainer
- Valve spring
- Valve
- Valve stem seal
- Valve spring seat

TIP

Identify the position of each part very carefully so that it can be reinstalled in its original place.

EAS30284

CHECKING THE VALVES AND VALVE GUIDES


The following procedure applies to all of the valves and valve guides.

- 1. Measure:
- Valve-stem-to-valve-guide clearance
 Out of specification → Replace the valve guide.
- Valve-stem-to-valve-guide clearance = Valve guide inside diameter "a" -Valve stem diameter "b"



Valve-stem-to-valve-guide clearance limit (intake) 0.080 mm (0.0032 in) Valve-stem-to-valve-guide clearance limit (exhaust) 0.100 mm (0.0039 in)

VALVES AND VALVE SPRINGS

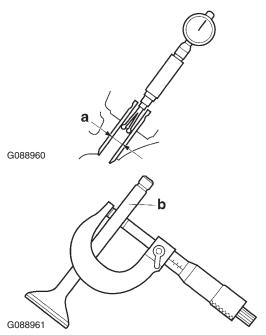


- 2. Replace:
 - Valve guide

TIP

To ease valve guide removal and installation, and to maintain the correct fit, heat the cylinder head to 100 °C (212 °F) in an oven.


a. Remove the valve guide with the valve guide remover "1".

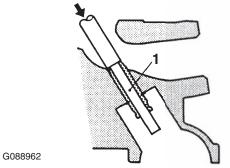


b. Install the new valve guide with the valve guide installer "2" and valve guide remover "1".



Valve guide position 13.3–13.7 mm (0.52–0.54 in)

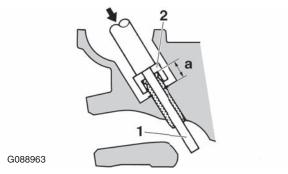

- a. Valve guide position
- After installing the valve guide, bore the valve guide with the valve guide reamer "3" to obtain the proper valve-stem-to-valveguide clearance.

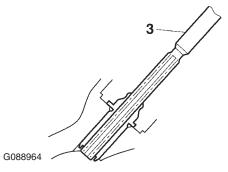

TIP

After replacing the valve guide, reface the valve seat.



Valve guide remover (ø4.5) 90890-04116

Valve guide remover (4.5 mm) YM-04116

Valve guide installer (ø4.5) 90890-04117

Valve guide installer (4.5 mm) YM-04117

Valve guide reamer (ø4.5) 90890-04118

Valve guide reamer (4.5 mm) YM-04118

- 3. Eliminate:
 - Carbon deposits
 (from the valve face and valve seat)
- 4. Check:
 - Valve face
 Pitting/wear → Grind the valve face.
 - Valve stem end Mushroom shape or diameter larger than the body of the valve stem → Replace the valve.

VALVES AND VALVE SPRINGS


- 5. Measure:
- Valve stem runout
 Out of specification → Replace the valve.

TIP

- When installing a new valve, always replace the valve guide.
- If the valve is removed or replaced, always replace the valve stem seal.



Valve stem runout 0.020 mm (0.0008 in)

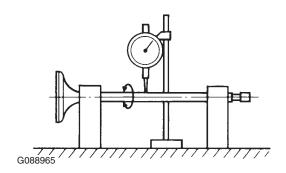

EAS30285

CHECKING THE VALVE SEATS

The following procedure applies to all of the valves and valve seats.


- 1. Eliminate:
- Carbon deposits (from the valve face and valve seat)
- 2. Check:
 - Valve seat
 Pitting/wear → Replace the cylinder head.
- 3. Measure:
 - Valve seat contact width "a"
 Out of specification → Replace the cylinder head.




Valve seat contact width limit (intake)

1.6 mm (0.06 in)
Valve seat contact width limit (exhaust)

1.8 mm (0.07 in)

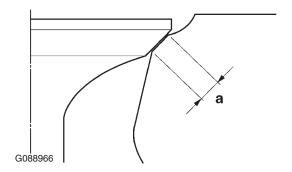

a. Apply blue layout fluid "b" onto the valve face.

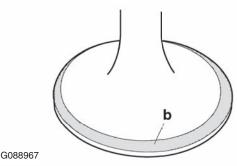

- b. Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear impression.
- d. Measure the valve seat contact width.

TIF

Where the valve seat and valve face contacted one another, the blue layout fluid will have been removed.

- 4. Lap:
 - Valve face
 - Valve seat

TIP


After replacing the cylinder head or replacing the valve and valve guide, the valve seat and valve face should be lapped.

a. Apply a coarse lapping compound "a" to the valve face.

ECA13790

NOTICE

Do not let the lapping compound enter the gap between the valve stem and the valve guide.

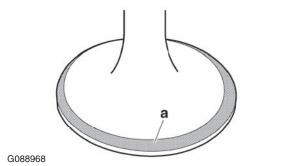


- b. Apply molybdenum disulfide oil onto the valve stem.
- c. Install the valve into the cylinder head.


d. Turn the valve until the valve face and valve seat are evenly polished, then clean off all of the lapping compound.

TIP_


For the best lapping results, lightly tap the valve seat while rotating the valve back and forth between your hands.

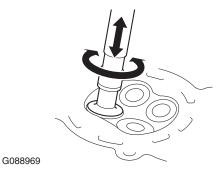

- e. Apply a fine lapping compound to the valve face and repeat the above steps.
- f. After every lapping procedure, be sure to clean off all of the lapping compound from the valve face and valve seat.
- g. Apply blue layout fluid "b" onto the valve face.

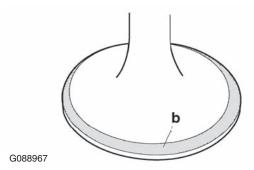

- h. Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear impression.
- j. Measure the valve seat contact width "c" again. If the valve seat width is out of specification, reface and lap the valve seat.

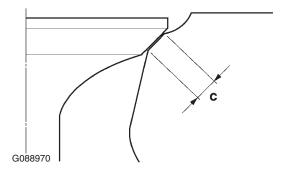

EAS3028

CHECKING THE VALVE SPRINGS

The following procedure applies to all of the valve springs.

- 1. Measure:
- Valve spring free length "a"
 Out of specification → Replace the valve spring.


ECA27780

NOTICE

When replacing even one light green exhaust valve spring, replace all six exhaust valve springs as a set.



Free length limit (intake) 39.18 mm (1.54 in) Free length limit (exhaust) 38.58 mm (1.52 in)

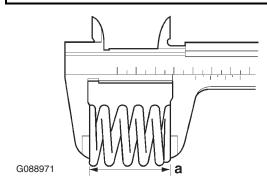

EAS30287

CHECKING THE VALVE LIFTERS

The following procedure applies to all of the valve lifters.


- 1. Check:
- Valve lifter Damage/scratches → Replace the valve lifters and cylinder head.

EAS3028

INSTALLING THE VALVES

The following procedure applies to all of the valves and related components.

- 1. Deburr:
- Valve stem end (with an oil stone)

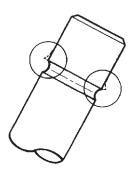

G088972

VALVES AND VALVE SPRINGS

- 2. Lubricate:
 - Valve stem
 - Valve stem seal (with the recommended lubricant)




Recommended lubricant Molybdenum disulfide oil

- 3. Install:
- Valve spring seat "1"
- Valve stem seal "2" New
- Valve "3"
- Valve spring "4"
- Valve spring retainer "5" (into the cylinder head)

TIP

- Make sure each valve is installed in its original place.
- Install the valve springs with the larger pitch "a" facing up.

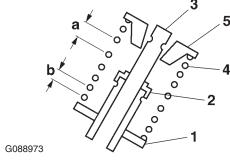

- b. Smaller pitch
- 4. Install:
 - Valve cotter

TIP

Install the valve cotters by compressing the valve spring with the valve spring compressor "1" and the valve spring compressor attachment "2".




Valve spring compressor 90890-04200

Valve spring compressor YM-04019

Valve spring compressor attachment (ø23) 90890-04179

Valve spring compressor adapter (ø23) YM-04179

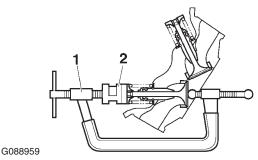


5. To secure the valve cotters onto the valve stem, lightly tap the valve tip with a soft-face hammer.

ECA13800

NOTICE

Hitting the valve tip with excessive force could damage the valve.

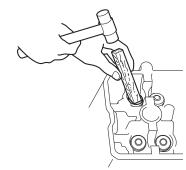

G088975

- 6. Lubricate:
 - Valve pad (with the recommended lubricant)



Recommended lubricant Molybdenum disulfide oil

 Valve lifter (with the recommended lubricant)




Recommended lubricant Engine oil


- 7. Install:
- Valve pad
- Valve lifter

TIP

- The valve lifter must move smoothly when rotated with a finger.
- Each valve lifter and valve pad must be reinstalled in its original position.

GENERATOR AND STARTER CLUTCH

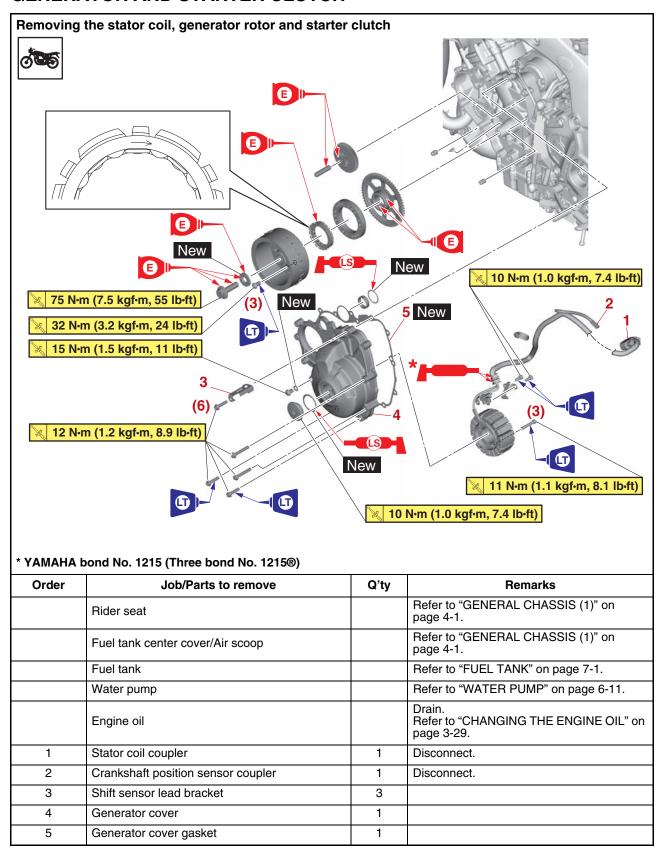

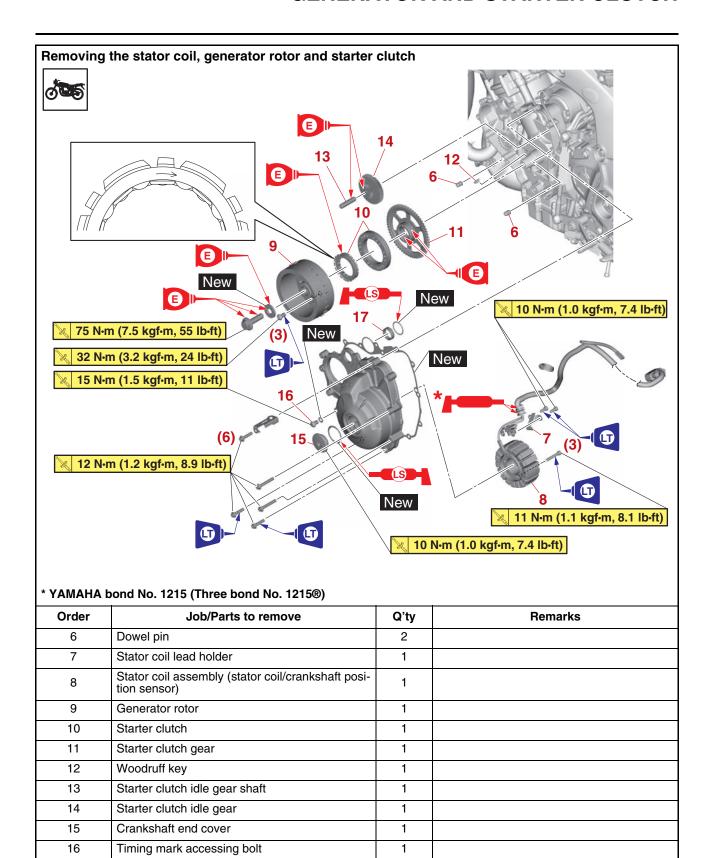

1

17

Water pump outlet pipe

EAS30867

REMOVING THE GENERATOR


- 1. Remove:
- Generator rotor bolt "1"
- Washer

TIP

While holding the generator rotor "2" with the sheave holder "3", loosen the generator rotor bolt.



Sheave holder 90890-01903 Primary clutch holder YS-01880-A

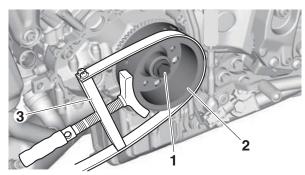

- 2. Remove:
 - Generator rotor "1" (with the flywheel puller "2")
 - Woodruff key

ECA13880

NOTICE


To protect the end of the crankshaft, place an appropriate sized socket between the flywheel puller set center bolt and the crankshaft.

TIP

- Install the flywheel puller bolts to the threaded holes of the starter clutch.
- Make sure the flywheel puller is centered over the generator rotor.



Flywheel puller 90890-01362 Heavy duty puller YU-33270-B

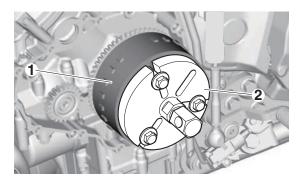

EAS3086

REMOVING THE STARTER CLUTCH


- 1. Remove:
- Starter clutch bolt
- Starter clutch

TIP

While holding the generator rotor "1" with the sheave holder "2", loosen the starter clutch bolts.



Sheave holder 90890-01903 Primary clutch holder YS-01880-A

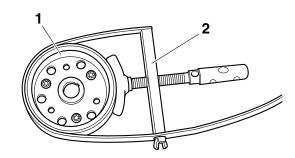


FAS3086

CHECKING THE STARTER CLUTCH

- 1. Check:
- Starter clutch roller Damage/wear → Replace.
- 2. Check:
- Starter clutch idle gear
- Starter clutch gear Burrs/chips/roughness/wear → Replace the defective part(s).
- 3. Check:
- Starter clutch gear contact surfaces
 Damage/pitting/wear → Replace the starter clutch gear.

4. Check:

- Starter clutch operation
- a. Install the starter clutch gear "1" onto the generator rotor "2" and hold the generator rotor.
- When turning the starter clutch gear clockwise "A", the starter clutch and the starter clutch gear should engage, otherwise the starter clutch is faulty and must be replaced.
- When turning the starter clutch gear counterclockwise "B", it should turn freely, otherwise the starter clutch is faulty and must be replaced.

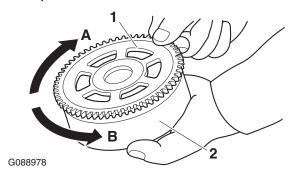

EAS30871

INSTALLING THE STARTER CLUTCH

- 1. Install:
- Starter clutch "1"




Starter clutch bolt 32 N·m (3.2 kgf·m, 24 lb·ft) LOCTITE®


TIP

- Install the starter clutch so that the side of the starter clutch roller assembly with the arrow mark "a" is toward the generator rotor "2".
- While holding the generator rotor with the sheave holder "3", tighten the starter clutch bolts.



Sheave holder 90890-01903 Primary clutch holder YS-01880-A

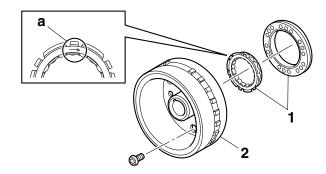

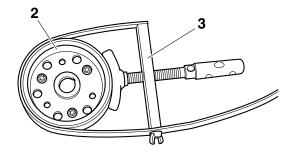

EAS30872

INSTALLING THE GENERATOR

- 1. Install:
- Woodruff key
- Generator rotor
- Washer New
- Generator rotor bolt

TIP

- Clean the tapered portion of the crankshaft and the generator rotor hub.
- When installing the generator rotor, make sure the woodruff key is properly seated in the keyway of the crankshaft.
- Lubricate the washer with engine oil.
- Lubricate the generator rotor bolt threads and washer mating surfaces with engine oil.
- 2. Tighten:
- Generator rotor bolt "1"




Generator rotor bolt 75 N·m (7.5 kgf·m, 55 lb·ft)

TIP_

While holding the generator rotor "2" with the sheave holder "3", tighten the generator rotor bolt.




Sheave holder 90890-01903 Primary clutch holder YS-01880-A

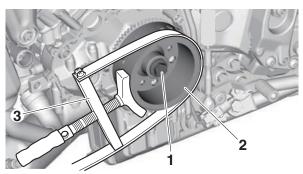

- 3. Apply:
- Sealant (onto the stator coil assembly lead grommet)



Yamaha bond No. 1215 90890-85505 Three bond No. 1215®

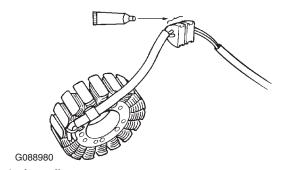


- 4. Install:
 - Generator cover gasket New
- Generator cover



Generator cover bolt "1"
12 N·m (1.2 kgf·m, 8.9 lb·ft)
LOCTITE®
Generator cover bolt "2"
12 N·m (1.2 kgf·m, 8.9 lb·ft)

TIP_

Tighten the generator cover bolts in stages and in a crisscross pattern.

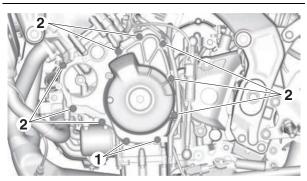


- 5. Connect:
- Stator coil coupler
- Crankshaft position sensor coupler


TIP

To route the stator coil lead, refer to "CABLE ROUTING" on page 2-15.

ELECTRIC STARTER

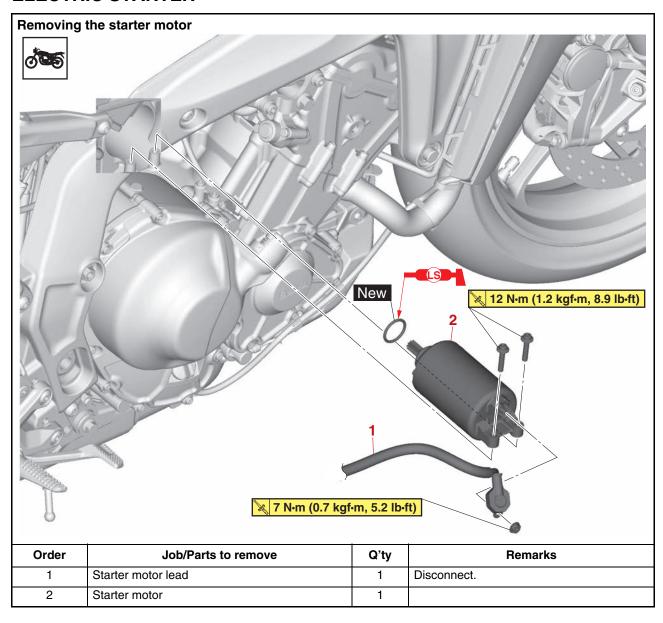

ELECTRIC STARTER

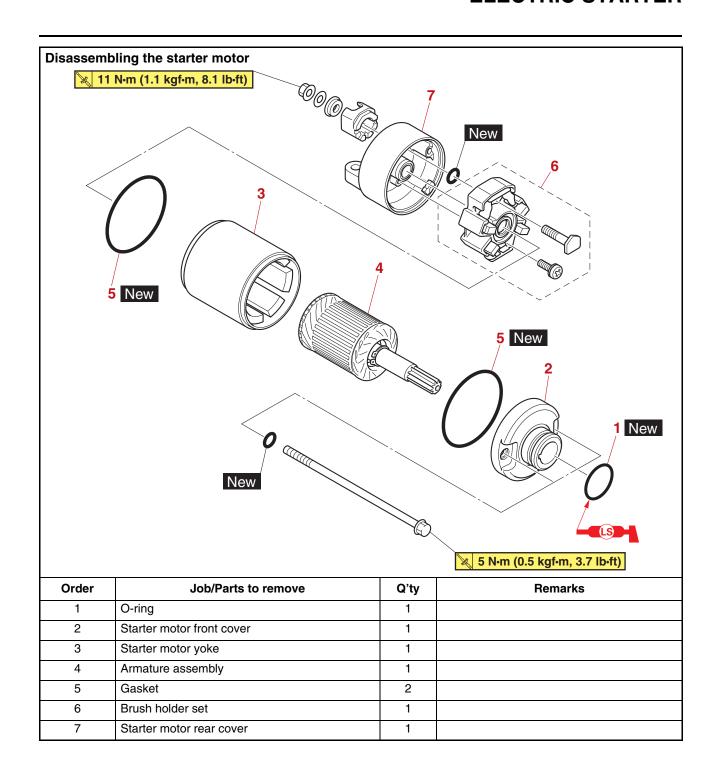

CHECKING THE STARTER MOTOR


- 1. Check:
- Commutator
 Dirt → Clean with 600 grit sandpaper.
- 2. Measure:
 - Mica undercut "a"
 Out of specification → Scrape the mica to the proper measurement with a hacksaw blade that has been grounded to fit the commutator.



Mica undercut (depth) 0.70 mm (0.03 in)

TIP

The mica of the commutator must be undercut to ensure proper operation of the commutator.

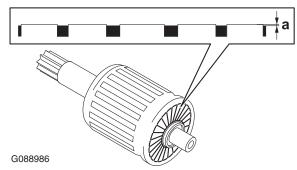


- 3. Check:
- · Armature assembly
- a. Connect the digital circuit tester and check the continuity.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927


b. If there is no continuity, replace the starter motor.

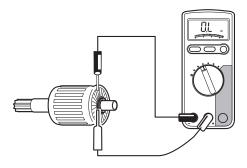

- 4. Measure:
 - Brush length "a"
 Out of specification → Replace the brush holder set.



Brush overall length limit 6.5 mm (0.26 in)

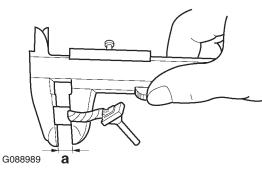

- 5. Check:
 - Gear teeth
 Damage/wear → Replace the starter motor assembly.
- 6. Check:
 - Bearing
- Oil seal Damage/wear → Replace the starter motor assembly.


EAS30326

ASSEMBLING THE STARTER MOTOR

- 1. Install:
- Brush holder set
- Insulator "1"

TIP


Install the insulator as shown in the illustration.

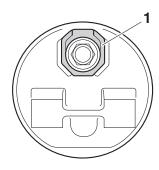

- 2. Install:
 - Starter motor rear cover "1"
 - Starter motor yoke "2"
 - Starter motor front cover "3"

TIP

Align the match marks "a" on the starter motor yoke with the match marks "b" on the front and rear cover.

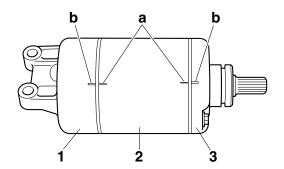

EAS30327 INSTALLING THE STARTER MOTOR


- 1. Install:
- Starter motor
- Starter motor bolt

TIP_

Tighten the starter motor bolts in the tightening sequence as shown.



Starter motor bolt 12 N·m (1.2 kgf·m, 8.9 lb·ft)

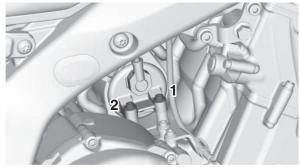



- 2. Connect:
 - Starter motor lead





Starter motor lead nut 7 N·m (0.7 kgf·m, 5.2 lb·ft)

CLUTCH

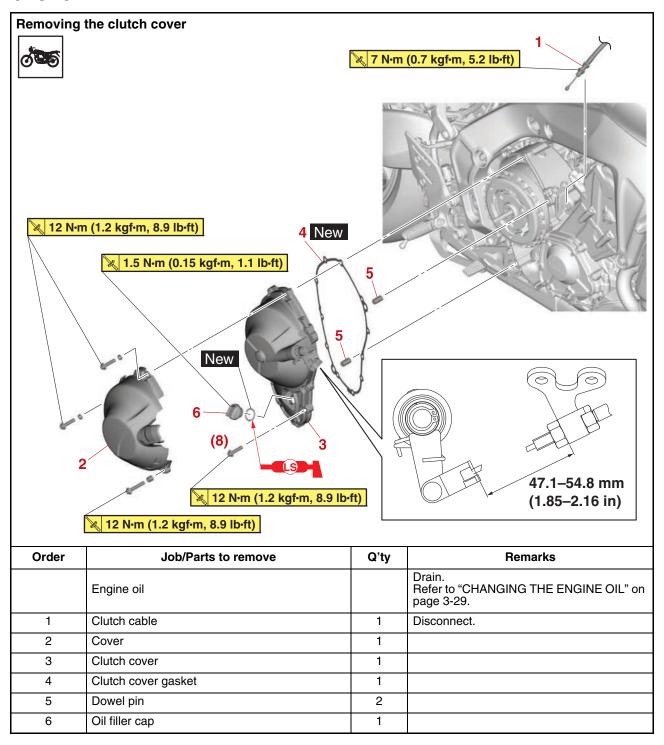

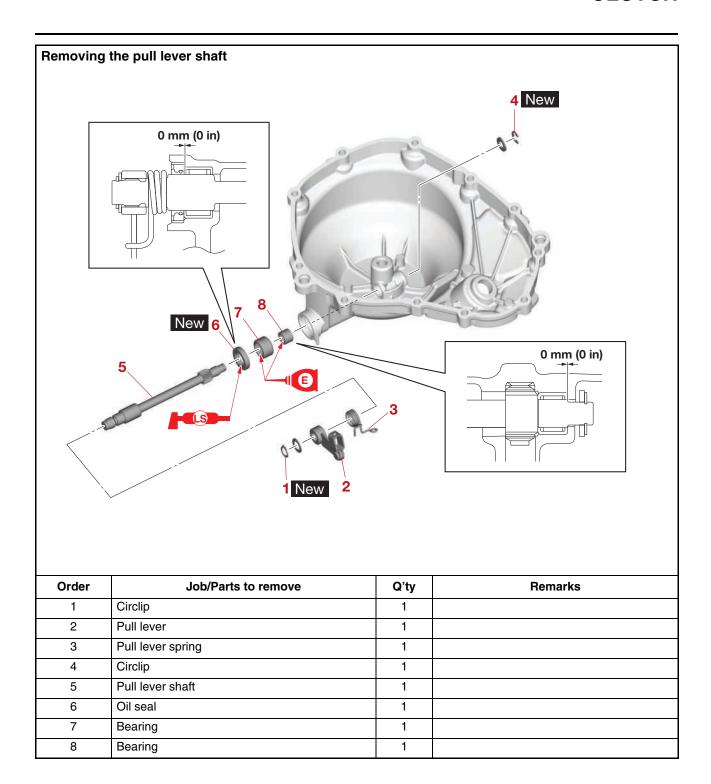

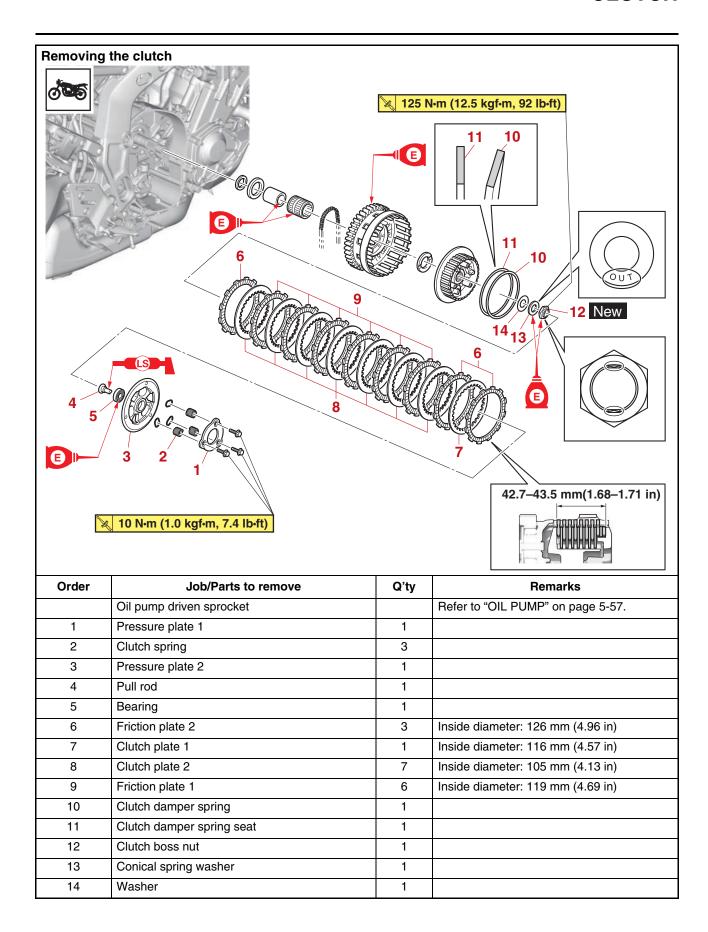

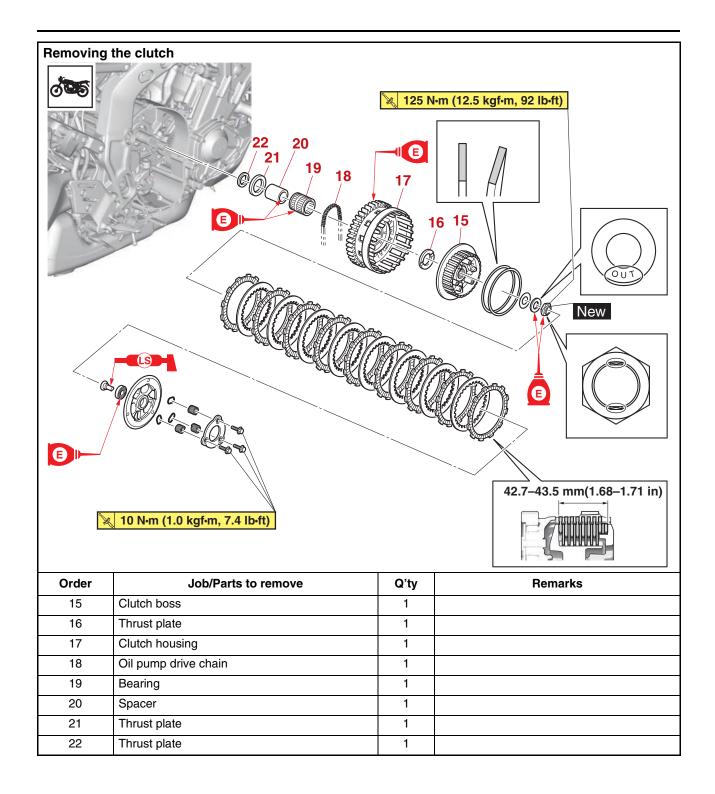


REMOVING THE CLUTCH

- 1. Remove:
- Cover "1"
- Clutch cover "2"
- Gasket


TIP_

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern.


After all of the bolts are fully loosened, remove them.

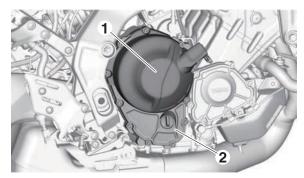

- 2. Remove:
 - Oil pump driven sprocket "1" Refer to "OIL PUMP" on page 5-57.

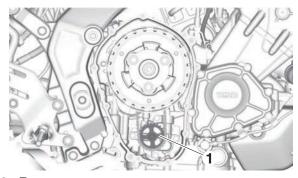


- 3. Remove:
 - Clutch spring bolt "1"
 - Pressure plate 1 "2"
 - Clutch spring
 - Pressure plate 2 "3"
 - Pull rod "4"

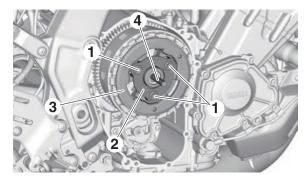


- 4. Remove:
 - Friction plate 2 "1"



- 5. Remove:
 - Clutch plate 1 "1"
 - Clutch plate 2
 - Friction plate 1
 - Clutch damper spring
 - Clutch damper spring seat

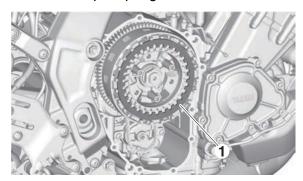

6. Straighten the clutch boss nut rib "a".

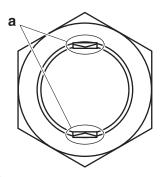


- G088992 7. Loosen:
- Clutch boss nut "1"

TIP

While holding the clutch boss "2" with the universal clutch holder "3", loosen the clutch boss nut.



Clutch holder 90890-04199 Universal clutch holder YM-91042

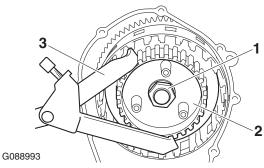

- 8. Remove:
- Clutch boss nut
- Conical spring washer
- Washer
- Clutch boss
- Thrust plate
- Clutch housing
- Oil pump drive chain

CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.


- 1. Check:
- Friction plate 1, 2
 Damage/wear → Replace the friction plates as a set.
- 2. Measure:
 - Friction plate 1, 2 thickness
 Out of specification → Replace the friction plates as a set.

TIP_

Measure the friction plate at four places.



Friction plate 1 thickness 2.92–3.08 mm (0.115–0.121 in)
Wear limit 2.82 mm (0.111 in)
Friction plate 2 thickness 2.92–3.08 mm (0.115–0.121 in)
Wear limit 2.82 mm (0.111 in)

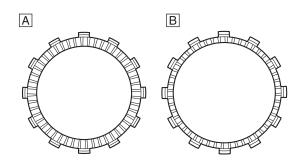

- A. Friction plate 1
- B. Friction plate 2

EAS3034

CHECKING THE CLUTCH PLATES

The following procedure applies to all of the clutch plates.

- 1. Check:
- Clutch plate 1, 2
 Damage → Replace the clutch plates as a set.
- 2. Measure:
 - Clutch plate 1, 2 thickness (with a surface plate and thickness gauge)
 Out of specification → Replace the clutch plates as a set.



Thickness gauge 90890-03268 Feeler gauge set YU-26900-9



Clutch plate 1 thickness 2.18–2.42 mm (0.086–0.095 in) Warpage limit 0.10 mm (0.004 in) Clutch plate 2 thickness 1.90–2.10 mm (0.075–0.083 in) Warpage limit 0.10 mm (0.004 in)

- 3. Measure:
 - Assembly width "a" of the friction plates and clutch plates


Out of specification \rightarrow Adjust.



Assembly width 42.7–43.5 mm (1.68–1.71 in)

TIP.

- Perform the thickness measurement without applying the oil.
- This step should be performed only if the friction plates and clutch plates were replaced.
- To measure the total width of the friction plates and clutch plates, combine 9 friction plates and 8 clutch plates as shown.

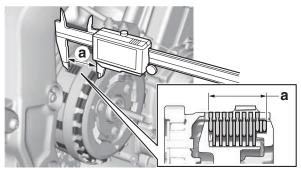

- a. Assembly width adjusted by clutch plate 2 "1" and "2".
- Select the clutch plate 2 from the following table.


Clutch plate 2 "1"				
BR9-16324-00	1.6 mm (0.063 in)			
5VY-16325-00	2.0 mm (0.079 in)	STD		
4B1-16325-00	2.3 mm (0.091 in)			

Clutch plate 2 "2"				
BR9-16324-00	1.6 mm (0.063 in)			
5VY-16325-00	2.0 mm (0.079 in)	STD		
4B1-16325-00	2.3 mm (0.091 in)			

TIP

When adjusting the clutch assembly width [by replacing the clutch plate(s)], be sure to replace the clutch plate 2 "1" first.

After replacing the clutch plate 2 "1", if specifications cannot be met, replace the clutch plate 2 "2".

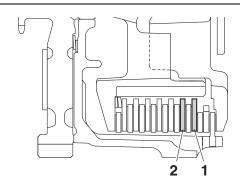

EAS30351

CHECKING THE CLUTCH SPRINGS

The following procedure applies to all of the clutch springs.

- 1. Check:
- Clutch spring
 Damage → Replace the clutch springs as a set.

2. Measure:

Clutch spring free length
 Out of specification → Replace the clutch
 springs as a set.



Clutch spring free length limit 42.53 mm (1.67 in)


EAS30352

CHECKING THE CLUTCH HOUSING

- 1. Check:
 - Clutch housing dogs
 Damage/pitting/wear → Deburr the clutch
 housing dogs or replace the clutch housing.

TIP_


Pitting on the clutch housing dogs will cause erratic clutch operation.

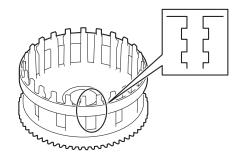

G088994

2. Check:

Oil pump drive sprocket "1"
 Cracks/damage/wear → Replace the oil pump drive chain and clutch housing as a set.

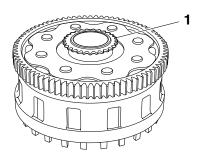

3. Check:

Bearing
 Damage/wear → Replace the bearing and clutch housing.


EAS3035

CHECKING THE CLUTCH BOSS

- 1. Check:
- Clutch boss splines
 Damage/pitting/wear → Replace the clutch boss.

TIP

Pitting on the clutch boss splines will cause erratic clutch operation.

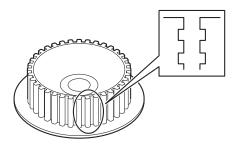

G088995

FAS30354

CHECKING THE PRESSURE PLATE

- 1. Check:
- Pressure plate 1
- Pressure plate 2 Cracks/damage → Replace.
- Bearing Damage/wear → Replace.

EAS30356

CHECKING THE PRIMARY DRIVE GEAR

- 1. Check:
- Primary drive gear

Damage/wear \rightarrow Replace the crankshaft and clutch housing as a set.

Excessive noise during operation \rightarrow Replace the crankshaft and clutch housing as a set.

EAS3035

CHECKING THE PRIMARY DRIVEN GEAR

- 1. Check:
- Primary driven gear

Damage/wear \rightarrow Replace the clutch housing and crankshaft as a set.

Excessive noise during operation \rightarrow Replace the clutch housing and crankshaft as a set.

EAS30358

CHECKING THE PULL LEVER SHAFT AND PULL ROD

- 1. Check:
- Pull lever shaft pinion gear teeth
- Pull rod teeth
 Damage/wear → Replace the pull rod and pull lever shaft as a set.
- 2. Check:
 - Pull rod bearing
 Damage/wear → Replace.


EAS3036

INSTALLING THE CLUTCH

- 1. Install:
- Oil pump drive chain "1"
- Clutch housing "2"

TIP

Install the oil pump drive chain onto the oil pump drive sprocket "a".

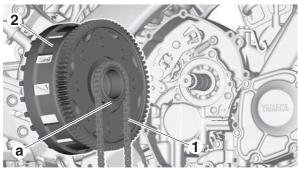

- 2. Install:
- Thrust plate
- Clutch boss "1"
- Washer
- Conical spring washer "2"
- Clutch boss nut "3" New




Clutch boss nut 125 N·m (12.5 kgf·m, 92 lb·ft)


TIP

- Install the conical spring washer on the main axle with the "OUT" mark "a" facing away from the vehicle.
- While holding the clutch boss "1" with the universal clutch holder "4", tighten the clutch boss nut.
- Stake the clutch boss nut at cutouts "b" in the main axle.



Clutch holder 90890-04199 Universal clutch holder YM-91042

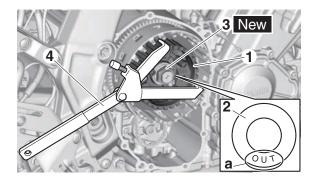

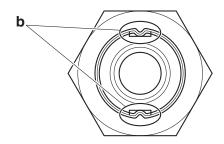

3. Install:

- Clutch damper spring seat
- Clutch damper spring
- Friction plate 2
- Clutch plate 2
- Friction plate 1
- Clutch plate 1

TIP_

- First, install a friction plate and then alternate between a clutch plate and a friction plate.
- Install the last friction plate "1" offset from the other friction plates "2", making sure to align a projection on the friction plate with the punch mark "a" on the clutch housing.



- 4. Install:
 - Pull rod
 - Pressure plate 2
 - Clutch spring
 - Pressure plate 1
 - Clutch spring bolt "1"



Clutch spring bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)


• Oil pump driven sprocket "2"




Oil pump driven sprocket bolt 15 N·m (1.5 kgf·m, 11 lb·ft) LOCTITE®

TIP.

- Tighten the clutch spring bolts in stages and in a crisscross pattern.
- Apply lithium-soap-based grease onto the pull rod.
- Position the pull rod so that the teeth "a" face towards the hole "b". Then, install the clutch cover.

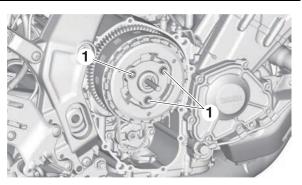

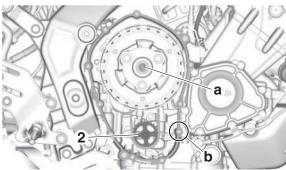

- 5. Install:
- Dowel pin
- Clutch cover gasket New
- Clutch cover
- Cover



Clutch cover bolt 12 N·m (1.2 kgf·m, 8.9 lb·ft)

TIP


- Apply engine oil onto the bearing.
- Tighten the clutch cover bolts in stages and in a crisscross pattern.


6. Install:

• Pull lever

TIP

- Install the pull lever with the "O" mark "a" facing toward lower side.
- When installing the pull lever, push the pull lever and check that the punch mark "a" on the pull lever aligns with the mark "b" on the clutch cover. Make sure that the pull rod teeth and pull lever shaft pinion gear are engaged.

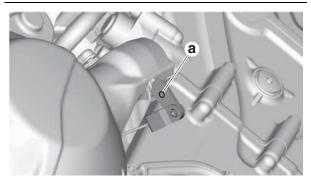

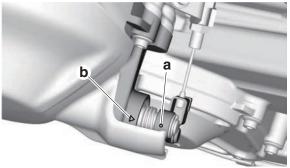


7. Connect:

• Clutch cable "1"

TIP

- For the clutch cable "1", turn the nut "2" in fully and then adjust the length "a" by using the nut "3" so that the cable length is 47.1–54.8 mm (1.85–2.16 in).
- Measure the length while keeping the measuring surface "b" parallel.
- After installing the clutch cable, bend the projection "c" on the pull lever.

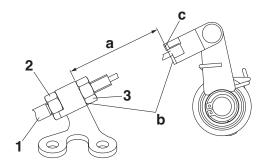

8. Adjust:


 Clutch lever free play Refer to "ADJUSTING THE CLUTCH LEVER FREE PLAY" on page 3-12.



Clutch lever free play 5.0-10.0 mm (0.20-0.39 in)

FAS2005

SHIFT SHAFT

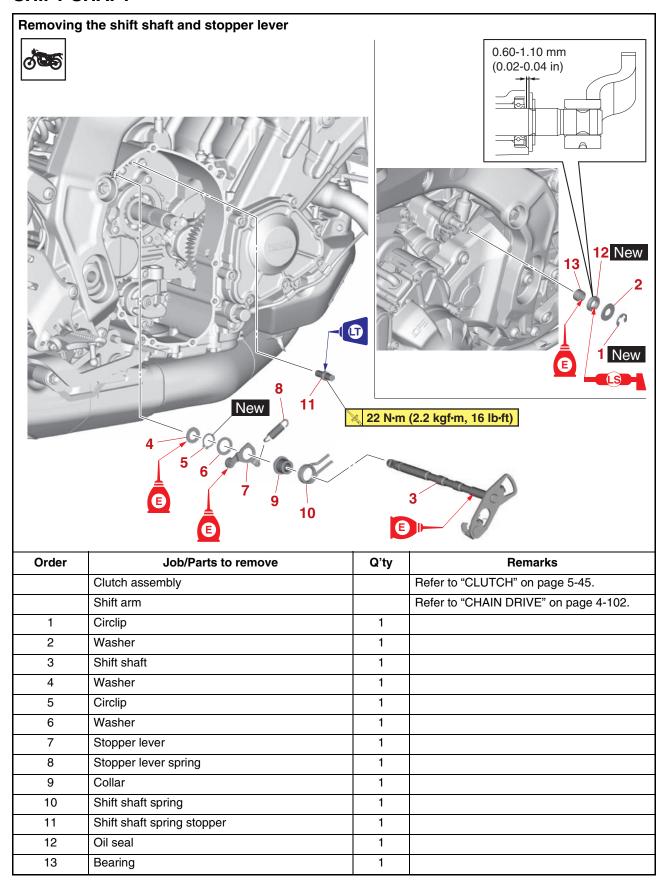

CHECKING THE SHIFT SHAFT

- 1. Check:
- Shift shaft Bends/damage/wear → Replace.
- · Shift shaft spring
- Collar Damage/wear → Replace.

EAS30378

CHECKING THE STOPPER LEVER

- 1. Check:
- Stopper lever Bends/damage → Replace.
 Roller turns roughly → Replace the stopper lever.

EAS30381

INSTALLING THE SHIFT SHAFT


- 1. Install:
- Shift shaft spring stopper "1"
- Shift shaft assembly
- Stopper lever spring "2"



Shift shaft spring stopper 22 N·m (2.2 kgf·m, 16 lb·ft) LOCTITE®

TIP


- Hook the end of the shift shaft spring "3" onto the shift shaft spring stopper "1".
- Hook the ends of the stopper lever spring "2" onto the stopper lever "4" and the crankcase boss "5".
- Mesh the stopper lever with the shift drum segment assembly.

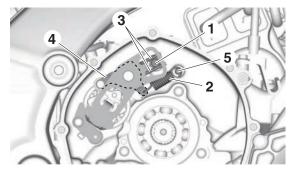


- 2. Install:
 - Bearing
 - Oil seal New
 - Washer "1"
 - Circlip "2" New


TIP_

Lubricate the oil seal lips with lithium-soapbased grease.

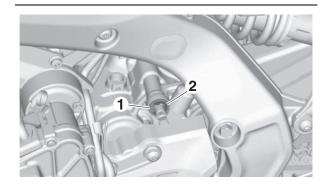

OIL PUMP

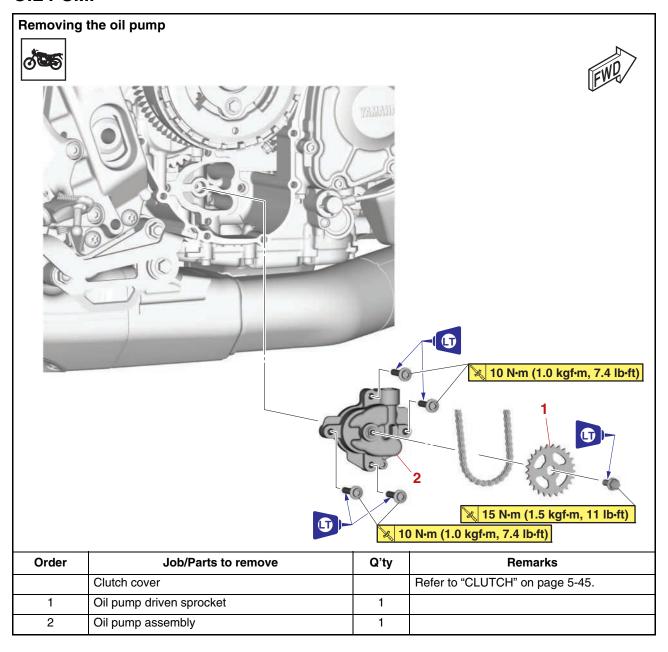

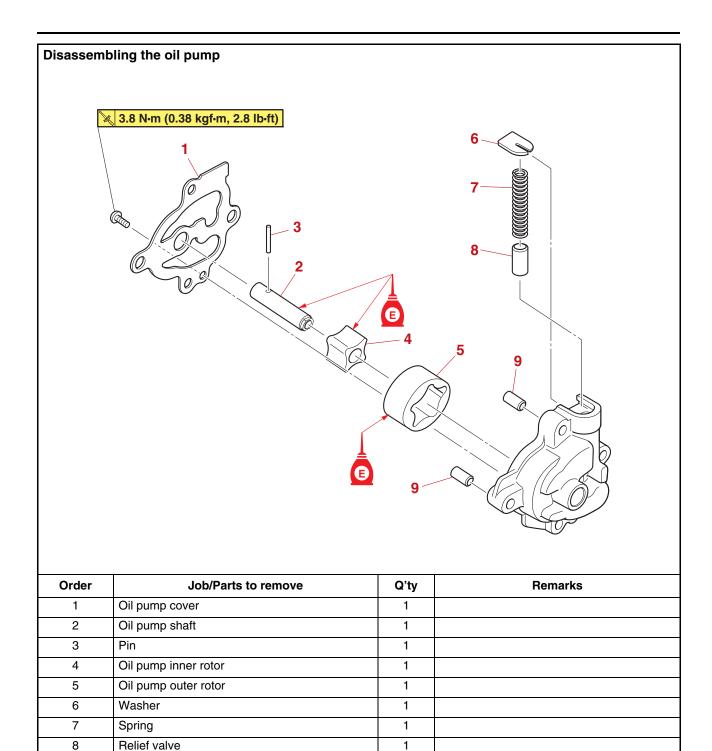

2

9

Dowel pin


CHECKING THE SPROCKET AND CHAIN

- 1. Check:
- Oil pump drive sprocket Refer to "CHECKING THE CLUTCH HOUS-ING" on page 5-51.
- 2. Check:
 - Oil pump drive chain Damage/stiffness → Replace the oil pump drive chain and oil pump drive sprocket (clutch housing) as a set.

EAS30337

CHECKING THE OIL PUMP


- 1. Check:
- Oil pump driven sprocket Cracks/damage/wear → Replace the oil pump drive chain and oil pump driven sprocket as a set.
- Oil pump housing
- Oil pump cover
- Oil pump shaft
- Oil pump inner rotor
- Oil pump outer rotor Cracks/damage/wear → Replace the oil pump assembly.
- 2. Check:
 - Oil pump operation Rough movement → Replace the oil pump assembly.

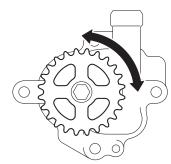

G088997

CHECKING THE RELIEF VALVE

- 1. Check:
- Relief valve "1"
- Spring "2"
 Damage/wear → Replace the oil pump assembly.

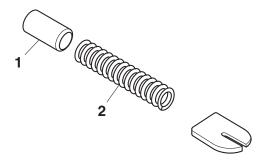

EAS30342

ASSEMBLING THE OIL PUMP

- 1. Lubricate:
 - Inner rotor
 - Outer rotor
- Oil pump shaft



Recommended lubricant Engine oil


- 2. Install:
- Outer rotor "1"
- Inner rotor "2"
- Pin "3"
- Oil pump cover "4"
- Oil pump cover screw



Oil pump cover screw 3.8 N·m (0.38 kgf·m, 2.8 lb·ft)

TIP.

Align the pin "3" in the oil pump shaft with the groove in the inner rotor "2".

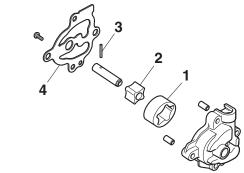

- 3. Check:
- Oil pump operation Refer to "CHECKING THE OIL PUMP" on page 5-59.

INSTALLING THE OIL PUMP

- 1. Install:
- Oil pump "1"
- Oil pump bolt "2"



Oil pump bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

• Oil pump driven sprocket "3"



Oil pump driven sprocket bolt 15 N·m (1.5 kgf·m, 11 lb·ft) LOCTITE®


ECA20940

NOTICE


After installing the oil pump drive chain and driven sprocket, make sure the oil pump turns smoothly.

TIP_

- 1RC mark of the oil pump driven sprocket is installed at oil pump side.
- Install the oil pump drive chain onto the oil pump driven sprocket.

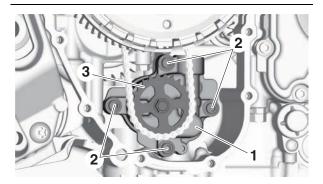

OIL PAN

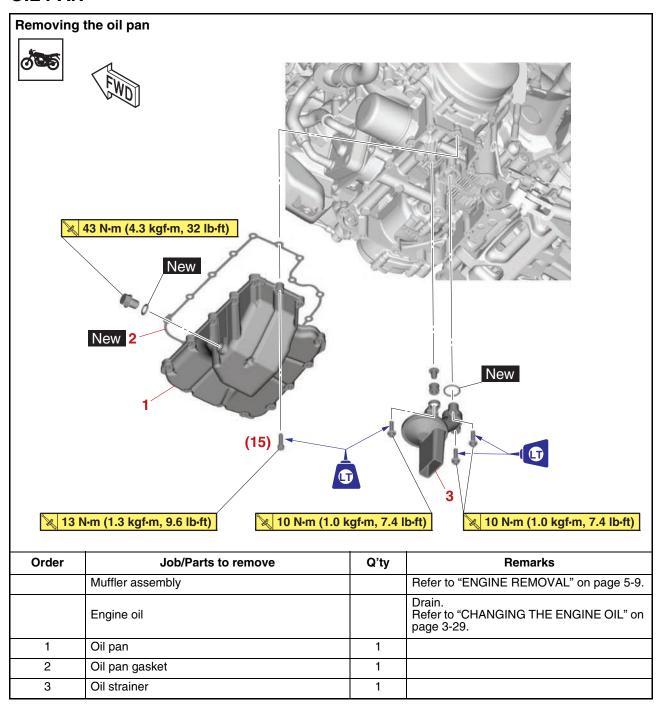

REMOVING THE OIL PAN

- 1. Remove:
- Oil pan
- Oil pan gasket

TIP

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

EAS31069

CHECKING THE OIL STRAINER

- 1. Check:
- Oil strainer

Damage \rightarrow Replace.

Contaminants \rightarrow Clean with solvent.

EAS31070

INSTALLING THE OIL PAN

- 1. Install:
- Oil pan gasket New
- Oil pan



Oil pan bolt 13 N·m (1.3 kgf·m, 9.6 lb·ft) LOCTITE®

TIP


Tighten the oil pan bolts in stages and in a crisscross pattern.

- 2. Install:
 - Gasket New
 - Engine oil drain bolt



Engine oil drain bolt 43 N·m (4.3 kgf·m, 32 lb·ft)


CRANKCASE

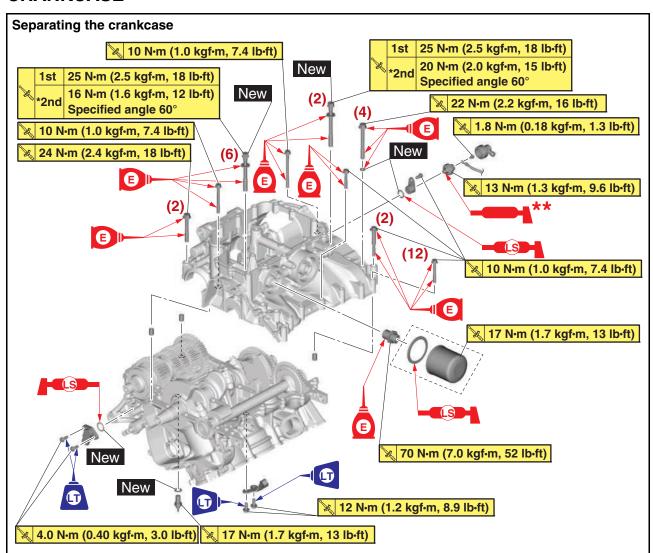

^{*} Following the tightening order, loosen the bolt one by one, and then retighten it to the specific torque and the specified angle.

**	YAI	MAHA	Bond	No.	1215B®
----	-----	------	------	-----	--------

Order	Job/Parts to remove	Q'ty	Remarks
	Engine		Refer to "ENGINE REMOVAL" on page 5-9
	Cylinder head		Refer to "CYLINDER HEAD" on page 5-26.
	Water pump		Refer to "WATER PUMP" on page 6-11.
	Oil cooler		Refer to "OIL COOLER" on page 6-7.
	Water jacket joint		Refer to "OIL COOLER" on page 6-7.
	Thermostat assembly		Refer to "THERMOSTAT" on page 6-9.
	Starter clutch		Refer to "GENERATOR AND STARTER CLUTCH" on page 5-36.
	Starter motor		Refer to "ELECTRIC STARTER" on page 5-41.
	Clutch housing		Refer to "CLUTCH" on page 5-45.
	Oil strainer		Refer to "OIL PAN" on page 5-61.

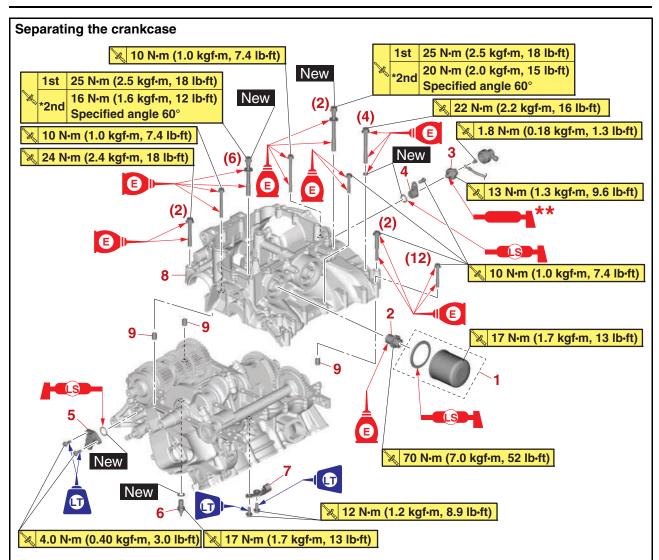

^{*} Following the tightening order, loosen the bolt one by one, and then retighten it to the specific torque and the specified angle.
** YAMAHA Bond No. 1215B®


Order	Job/Parts to remove	Q'ty	Remarks
1	Oil filter cartridge	1	
2	Oil filter cartridge union bolt	1	
3	Oil pressure switch	1	
4	Oil pressure switch joint	1	
5	Gear position sensor	1	
6	Neutral switch	1	
7	Clutch cable holder	1	
8	Lower crankcase	1	
9	Dowel pin	3	

DISASSEMBLING THE CRANKCASE

- 1. Place the engine upside down.
- 2. Remove:
 - Crankcase bolt (×31)

TIP

- Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.
- Loosen the bolts in the proper sequence as shown.
- The numbers embossed on the crankcase indicate the crankcase tightening sequence.

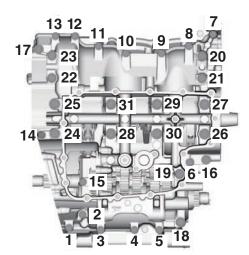



- 3. Remove:
- Lower crankcase

ECA13900

NOTICE

Tap on one side of the crankcase with a softface hammer. Tap only on reinforced portions of the crankcase, not on the crankcase mating surfaces. Work slowly and carefully and make sure the crankcase halves separate evenly.

- 4. Remove:
- Dowel pin
- 5. Remove:
 - Crankshaft journal lower bearing
 - Balancer shaft journal bearing (from the lower crankcase)

TIP

Identify the position of each part very carefully so that it can be reinstalled in its original place.

EAS3039

CHECKING THE CRANKCASE

- 1. Thoroughly wash the crankcase halves in a mild solvent.
- 2. Thoroughly clean all the gasket surfaces and crankcase mating surfaces.
- 3. Check:
- Crankcase
 Cracks/damage → Replace.
- Oil delivery passages
 Obstruction → Blow out with compressed air.

EAS3039

ASSEMBLING THE CRANKCASE

- 1. Lubricate:
- Crankshaft journal bearing inner surface (with the recommended lubricant)



Recommended lubricant Engine oil


- 2. Apply:
- Sealant (onto the crankcase mating surfaces)



Yamaha bond No. 1215 90890-85505 Three bond No. 1215®

TIP


- Do not allow any sealant to come into contact with the oil gallery or crankshaft journal bearings, or balancer shaft journal bearings.
- Make sure that the sealant does not get into the groove "a" in the crankcase.

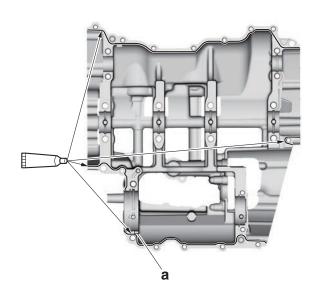

- 3. Install:
 - Dowel pin
- 4. Set the shift drum assembly and transmission gears in the neutral position.
- 5. Install:
- Lower crankcase "1" (onto the upper crankcase "2")

NOTICE


Before tightening the crankcase bolts, make sure the transmission gears shift correctly when the shift drum assembly is turned by hand.

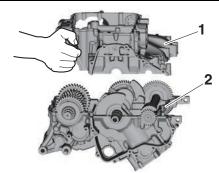

- 6. Install:
 - Crankcase bolt (×31)

TIF

- Lubricate the bolts "1"—"8" thread, mating surfaces and washers with engine oil.
- Lubricate the bolts "9"—"12" thread, mating surfaces and O-rings with engine oil.
- Lubricate the bolts "13"—"31" thread and mating surfaces with engine oil.
- M9 \times 100 mm (3.94 in) bolt with washer: "7", "8" New
- M9 × 85 mm (3.35 in) bolt with washer: "1"—
 "6" New
- M8 × 78 mm (3.07 in) bolt with new O-ring: "9"—"12"
- M8 × 60 mm (2.36 in) bolt: "13", "14"
- M6 × 85 mm (3.35 in) bolt: "18"
- M6 × 65 mm (2.56 in) bolt: "15", "16"
- M6 × 65 mm (2.56 in) bolt: "26"
- M6 × 50 mm (1.97 in) bolt: "17", "19"—"21", "23"—"25", "27"—"31"
- M6 × 40 mm (1.57 in) bolt: "22"

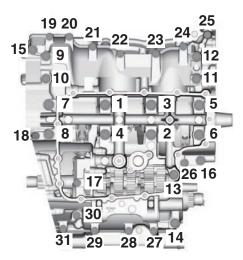



7. Tighten:

• Crankcase bolt "1"-"8"



Crankcase bolts "1"-"6"
1st: 25 N·m (2.5 kgf·m, 18 lb·ft)
*2nd: 16 N·m (1.6 kgf·m, 12 lb·ft)
Specified angle 60°
Crankcase bolts "7"-"8"
1st: 25 N·m (2.5 kgf·m, 18 lb·ft)
*2nd: 20 N·m (2.0 kgf·m, 15 lb·ft)
Specified angle 60°

* Following the tightening order, loosen the bolt one by one and then retighten it to the specified torque and the specified angle.

WARNING


If the bolt is tightened more than the specified angle, do not loosen the bolt and then retighten it. Instead, replace the bolt with a new one and perform the procedure again.

ECA20890
NOTICE

Do not use a torque wrench to tighten the bolt to the specified angle.

TIP_

Tighten the bolts in the tightening sequence cast on the crankcase.

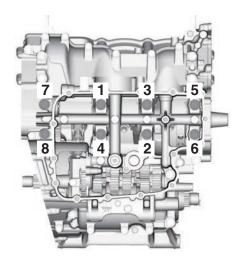



8. Tighten:


• Crankcase bolt "9"-"31"



Crankcase bolts "9"-"12"
22 N·m (2.2 kgf·m, 16 lb·ft)
Crankcase bolts "13"-"14"
24 N·m (2.4 kgf·m, 18 lb·ft)
Crankcase bolts "15"-"31"
10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIF

Tighten the bolts in the tightening sequence cast on the crankcase.

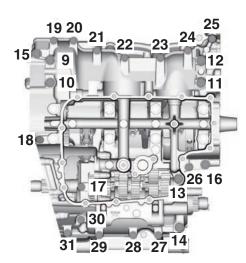



EAS31071

INSTALLING THE OIL PRESSURE SWITCH


- 1. Install:
- Oil pressure switch "1"
- Oil pressure switch lead "2"




Oil pressure switch 13 N·m (1.3 kgf·m, 9.6 lb·ft) Oil pressure switch lead bolt 1.8 N·m (0.18 kgf·m, 1.3 lb·ft)

TIP

- Apply Three Bond No. 1215B® to the threads "a" of the oil pressure switch. However, do not apply Three Bond No. 1215B® to the portion "b" of the oil pressure switch.
- Install the oil pressure switch lead so that it is routed within the range shown in the illustration.

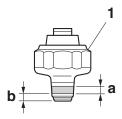

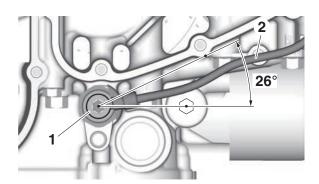

EAS31658

INSTALLING THE GEAR POSITION SENSOR

ECA22630

NOTICE

To prevent damage to the gear position sensor, keep magnets (including any pickup tool with a magnet, magnetized screwdrivers, etc.) away from the gear position sensor.


- 1. Install:
- O-ring New
- Gear position sensor "1"



Gear position sensor bolt 4.0 N⋅m (0.40 kgf⋅m, 3.0 lb⋅ft) LOCTITE®


TIP_

- Lubricate the O-ring with lithium-soap-based grease.
- Fit the end "a" of the shift drum assembly into the opening "b" in the gear position sensor "1".

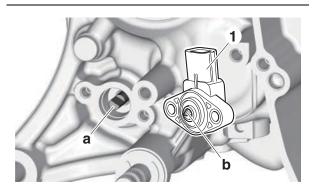

FAS20132

CONNECTING RODS AND PISTONS

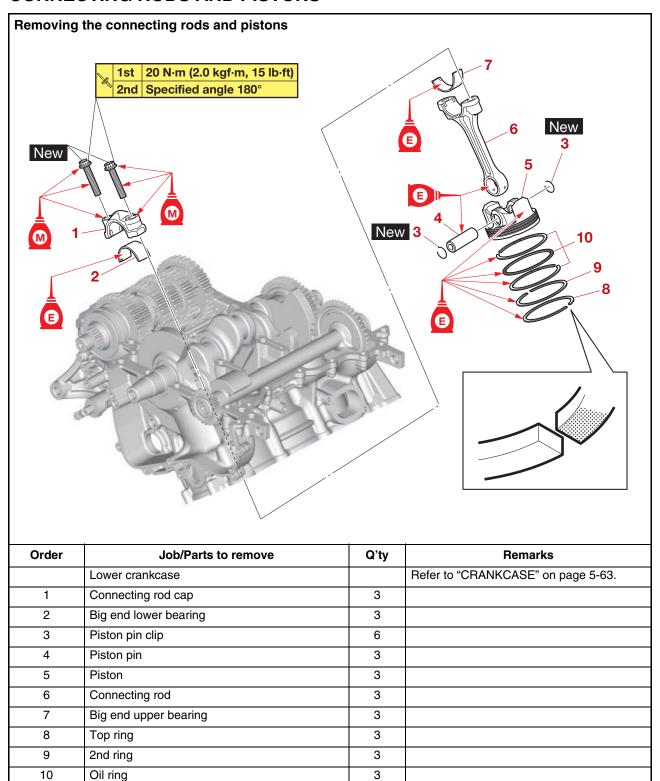

FAS3074

REMOVING THE CONNECTING RODS AND PISTONS

The following procedure applies to all of the connecting rods and pistons.

- 1. Remove:
- Connecting rod cap
- Connecting rod
- · Big end bearing

TIP_

- Identify the position of each big end bearing so that it can be reinstalled in its original place.
- After removing the connecting rods and connecting rod caps, care should be taken not to damage the mating surfaces of the connecting rods and connecting rod caps.
- 2. Remove:
 - Piston pin clip
 - Piston pin "1"
 - Piston "2"

ECA13810

NOTICE


Do not use a hammer to drive the piston pin out.

TIP

- For reference during installation, put identification marks on the piston crown.
- Before removing the piston pin, deburr the piston pin clip groove and the piston pin bore area. If both areas are deburred and the piston pin is still difficult to remove, remove it with the piston pin puller set "3".




Piston pin puller set 90890-01304 Piston pin puller YU-01304

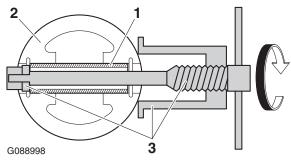

- 3. Remove:
- Top ring
- 2nd ring
- Oil ring

TIP__

When removing a piston ring, open the end gap with your fingers and lift the other side of the ring over the piston crown.

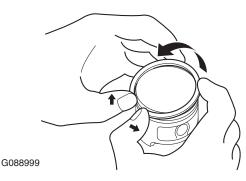

EAS30747

CHECKING THE CYLINDER AND PISTON

- 1. Check:
 - Piston wall
- Cylinder wall
 Vertical scratches → Replace the cylinder,
 and replace the piston and piston rings as a
 set.
- 2. Measure:
 - Piston-to-cylinder clearance
 - a. Measure cylinder bore "C" with the cylinder bore gauge.


TIP_

Measure cylinder bore "C" by taking side-to-side and front-to-back measurements of the cylinder.



Bore 78.000–78.010 mm (3.0709– 3.0713 in) Wear limit 78.060 mm (3.0732 in)

"C" = maximum of D_1 , D_2 , D_3 , D_4 , D_5 , D_6

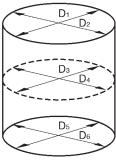


G089000

b. If out of specification, replace the cylinder, and replace the piston and piston rings as a set.

c. Measure piston skirt diameter "b" with the micrometer.



Piston
Diameter
77.975–77.990 mm (3.0699–3.0705 in)

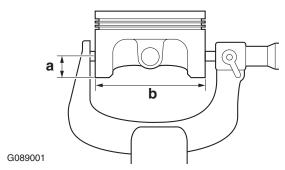

- a. 9.0 mm (0.35 in) from the bottom edge of the piston
- d. If out of specification, replace the piston and piston rings as a set.
- e. Calculate the piston-to-cylinder clearance with the following formula.

Piston-to-cylinder clearance = Cylinder bore "C" - Piston skirt diameter "b"



Piston-to-cylinder clearance 0.010-0.035 mm (0.0004-0.0014 in)

f. If out of specification, replace the cylinder, and replace the piston and piston rings as a set.

EAS30748

CHECKING THE PISTON RINGS


- 1. Measure:
- Piston ring side clearance
 Out of specification → Replace the piston and piston rings as a set.

TIP_

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.



Top ring
Side clearance limit
0.115 mm (0.0045 in)
2nd ring
Side clearance limit
0.115 mm (0.0045 in)

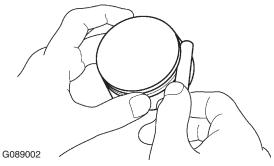

- 2. Install:
 - Piston ring (into the cylinder)

TIP_

Use the piston crown to level the piston ring near bottom of cylinder, where cylinder wear is lowest.


- 3. Measure:
 - Piston ring end gap
 Out of specification → Replace the piston ring.

TIP_

The oil ring expander spacer's end gap cannot be measured. If the oil ring rail's gap is excessive, replace all three piston rings.



Top ring
End gap limit
0.50 mm (0.0197 in)
2nd ring
End gap limit
1.15 mm (0.0453 in)

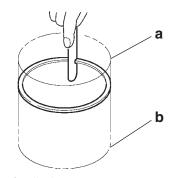

a. Bottom of cylinder

G089003

b. Upper of cylinder


CHECKING THE PISTON PIN

The following procedure applies to all of the piston pins.

- 1. Check:
- Piston pin Blue discoloration/grooves → Replace the piston pin and then check the lubrication system.
- 2. Measure:
 - Piston pin outside diameter "a"
 Out of specification → Replace the piston pin.



Piston pin outside diameter limit 16.970 mm (0.6681 in)

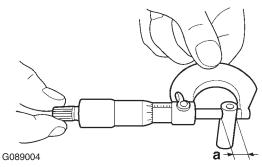


- Measure:
- Piston pin bore inside diameter "b"
 Out of specification → Replace the piston.



Piston pin bore inside diameter limit

17.043 mm (0.6710 in)

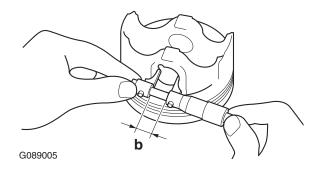

EAS30750

CHECKING THE CONNECTING RODS

- 1. Measure:
- Crankshaft-pin-to-big-end-bearing clearance Out of specification → Replace the big end bearings.



Oil clearance 0.027-0.051 mm (0.0011-0.0020 in) The following procedure applies to all of the connecting rods.

ECA13930

NOTICE

Do not interchange the big end bearings and connecting rods. To obtain the correct crankshaft-pin-to-big-end-bearing clearance and prevent engine damage, the big end bearings must be installed in their original positions.


- a. Clean the big end bearings, crankshaft pins, and the inside of the connecting rods halves.
- b. Install the big end upper bearing into the connecting rod and the big end lower bearing into the connecting rod cap with the connecting rod big end metal installer "1".


TIP_


- From the 3 types, choose the connecting rod big end metal installer "1" that fits exactly, and install it to the connecting rod and connecting rod cap as shown in the illustration.
- Align the projections "a" on the big end bearings with the notches "b" in the connecting rod and connecting rod cap.
- Push the big end bearing "2" down and install it to the connecting rod and connecting rod cap.




Connecting rod big end bearing installer 90890-04193
Connecting rod big end bearing installer YM-04193

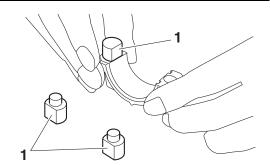

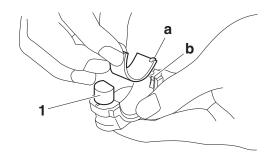

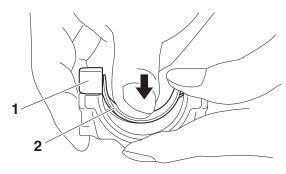

c. Put a piece of Plastigauge® "1" on the crankshaft pin.

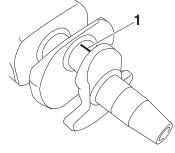

d. Assemble the connecting rod halves.


NOTICE

G089008

Tighten the connecting rod bolts using the plastic-region tightening angle method. Always install new bolts.

TIP.

- Clean the connecting rod bolts and lubricate the bolt threads and seats with molybdenum disulfide oil.
- Make sure that the projection "a" on the connecting rod cap faces the same direction as the "Y" mark "b" on the connecting rod.
- After installing the big end bearing, assemble the connecting rod and connecting rod cap without installing them onto the crankshaft.

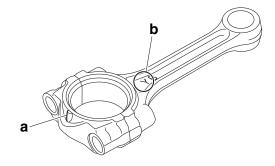

TIP

Install by carrying out the following procedures in order to assemble in the most suitable condition.


e. Tighten the connecting rod bolt while checking that the sections shown "a" and "b" are flush with each other by touching the surface.



Connecting rod bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

TIP


To install the big end bearing, care should be taken not to install it at an angle and the position should not be out of alignment.

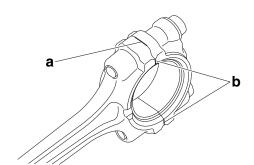

- a. Side machined face
- b. Thrusting faces
- f. Loosen the connecting rod bolt, remove the connecting rod and connecting rod cap and install these parts to the crankshaft with the big end bearing kept in the current condition.

TIP

- Do not move the connecting rod or crankshaft until the clearance measurement has been completed.
- Make sure that the projection "a" on the connecting rod cap faces the same direction as the "Y" mark "b" on the connecting rod.
- Make sure the "Y" marks "b" on the connecting rods face towards the left side of the crankshaft.

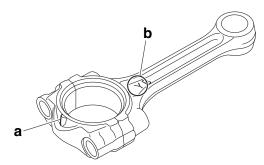


g. Tighten the connecting rod bolts with a torque wrench.



Connecting rod bolt (1st) 20 N·m (2.0 kgf·m, 15 lb·ft)


h. Put a mark "1" on the corner of the connecting rod bolt "2" and the connecting rod cap "3".

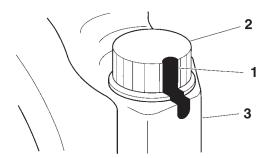

i. Tighten the connecting rod bolts further to reach the specified angle 180°.



Connecting rod bolt (final)
Specified angle 180°

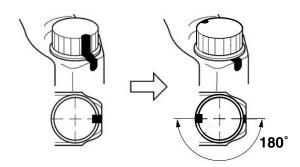

EWA16610

WARNING


If the bolt is tightened more than the specified angle, do not loosen the bolt and then retighten it. Instead, replace the bolt with a new one and perform the procedure again.

ECA20890


NOTICE

Do not use a torque wrench to tighten the bolt to the specified angle.

j. After the installation, check that the section shown "a" is flush with each other by touching the surface.

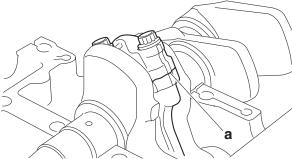

- k. Remove the connecting rod and big end bearings.
- Measure the compressed Plastigauge® width "e" on the crankshaft pin. If the crankshaft-pin-to-big-end-bearing clearance is out of specification, select replacement big end bearings.

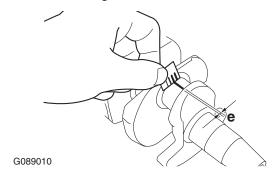

- 2. Select:
- Big end bearing (P₁–P₃)

TIP

- The numbers "A" stamped into the crankshaft web and the numbers "1" on the connecting rods are used to determine the replacement big end bearings sizes.
- "P₁"-"P₃" refer to the bearings shown in the crankshaft illustration.

For example, if the connecting rod "P₁" and the crankshaft web "P₁" numbers are 5 and 2 respectively, then the bearing size for "P₁" is:

" P_1 " (connecting rod) - " P_1 " (crankshaft) = 5 - 2 = 3 (brown)



Bearing color code

Code 1

Blue

Code 2


Black


Code 3


Brown

Code 4

Yellow green

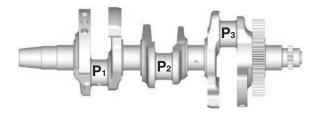

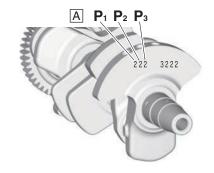

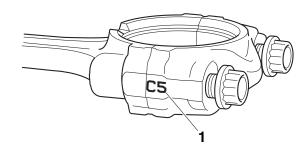

EAS3075

INSTALLING THE CONNECTING ROD AND PISTON

The following procedure applies to all of the connecting rods and pistons.


- 1. Install:
- Big end bearing
- Connecting rod cap (onto the connecting rod)


TIP

- Be sure to reinstall each big end bearing in its original place.
- From the 3 types, choose the connecting rod big end metal installer "1" that fits exactly, and install it to the connecting rod and connecting rod cap as shown in the illustration.
- Align the projections "a" on the big end bearings with the notches "b" in the connecting rods and connecting rod caps.
- Push the big end bearing "2" down and install it to the connecting rod and connecting rod cap.
- Make sure that the projection "c" on the connecting rod cap faces the same direction as the "Y" mark "d" on the connecting rod.



Connecting rod big end bearing installer 90890-04193
Connecting rod big end bearing installer YM-04193

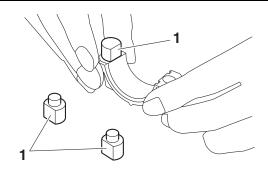

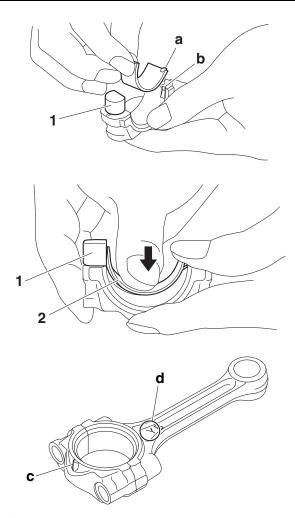

2. Tighten:

Connecting rod bolt New

ECA18390

NOTICE

Tighten the connecting rod bolts using the plastic-region tightening angle method. Always install new bolts.

TIP_

Install by carrying out the following procedures in order to assemble in the most suitable condition.

- a. Replace the connecting rod bolts with new ones.
- b. Clean the connecting rod bolts and lubricate the bolt threads and seats with molybdenum disulfide oil.
- c. After installing the big end bearing, assemble the connecting rod and connecting rod cap without installing them onto the crankshaft.


d. Tighten the connecting rod bolt while checking that the sections shown "a" and "b" are flush with each other by touching the surface.



Connecting rod bolt 30 N·m (3.0 kgf·m, 22 lb·ft)

TIP


To install the big end bearing, care should be taken not to install it at an angle and the position should not be out of alignment.

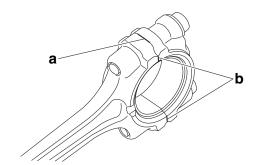

- a. Side machined face
- b. Thrusting faces
- Loosen the connecting rod bolt, remove the connecting rod and connecting rod cap and install these parts to the crankshaft with the big end bearing kept in the current condition.
- 3. Install:
 - Oil ring expander "1"
 - Lower oil ring rail "2"
 - Upper oil ring rail "3"
 - 2nd ring "4"
 - Top ring "5" (into the piston)

TIP_


Be sure to install the piston rings so that the manufacturer's marks or numbers "a" face up.

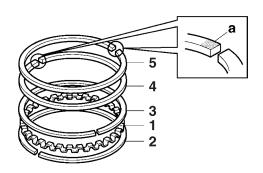


- 4. Install:
- Piston "1" (onto the respective connecting rod "2")
- Piston pin "3"
- Piston pin clip "4" New

TIP

- Apply engine oil onto the piston pin.
- Make sure that the "Y" mark "a" on the connecting rod faces left when the punch mark "b" on the piston is pointing up as shown.
- Make sure that the clip ends "c" are positioned away from the cutout "d" in the piston as shown in the illustration.
- Reinstall each piston into its original cylinder.

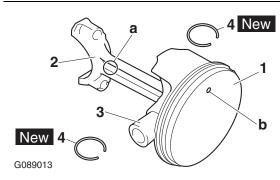

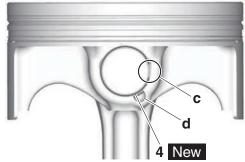


- 5. Lubricate:
 - Piston
 - Piston ring
- Cylinder
 (with the recommended lubricant)



Recommended lubricant Engine oil

6. Offset:

Piston ring end gap

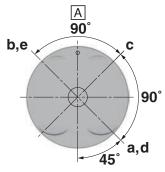

- a. Top ring
- b. 2nd ring
- c. Upper oil ring rail
- d. Oil ring expander
- e. Lower oil ring rail
- A. Exhaust side
- 7. Lubricate:
 - Crankshaft pin
 - Connecting rod big end bearing inner surface (with the recommended lubricant)



Recommended lubricant Engine oil

8. Install:

 Piston assembly "1" (into the cylinder "2" and onto the crankshaft pin)



Piston installing tool 90890-04161 Piston installing tool YM-04161


ECA21490

NOTICE

If the projection "a" of the piston installing tool damages, you cannot use it. Please handle with care.

TIP


Fit the projection "a" of the piston installing tool "3" and blunt-edged part "b" of the cylinder, fix the position of the piston installing tool, and then push the piston up to the cylinder.

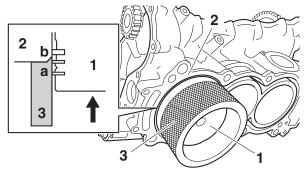

- 9. Install:
 - · Connecting rod cap
 - Connecting rod bolt

TIP

- Make sure the "Y" marks "a" on the connecting rods face towards the left side of the crankshaft.
- Make sure that the projection "b" on the connecting rod cap faces the same direction as the "Y" mark "a" on the connecting rod.
- Apply Molybdenum disulfide oil to the bolt threads and seats.

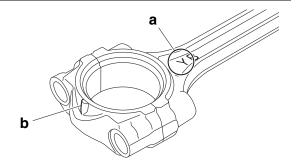

10.Tighten:

• Connecting rod bolt

TIP


Tighten the connecting rod bolts using the following procedure.

a. Tighten the connecting rod bolts with a torque wrench.



Connecting rod bolt (1st) 20 N·m (2.0 kgf·m, 15 lb·ft)


b. Put a mark "1" on the corner of the connecting rod bolt "2" and the connecting rod cap "3".

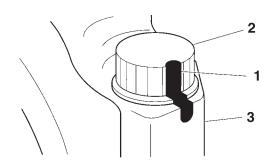

c. Tighten the connecting rod bolts further to reach the specified angle 180°.



Connecting rod bolt (final) Specified angle 180°

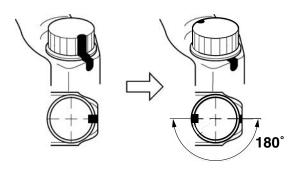

EWA16610

WARNING

If the bolt is tightened more than the specified angle, do not loosen the bolt and then retighten it. Instead, replace the bolt with a new one and perform the procedure again.

ECA20890

NOTICE


Do not use a torque wrench to tighten the bolt to the specified angle.

d. After the installation, check that the section shown "a" is flush with each other by touching the surface.

EWA17120


WARNING

If the connecting rod and cap are not flush with each other, remove the connecting rod bolts and big end bearing and restart from step (1). In this case, make sure to replace the connecting rod bolts.

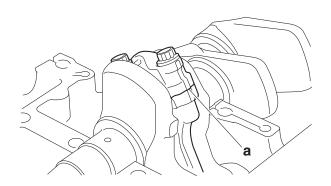

FAS20178

CRANKSHAFT AND BALANCER SHAFT

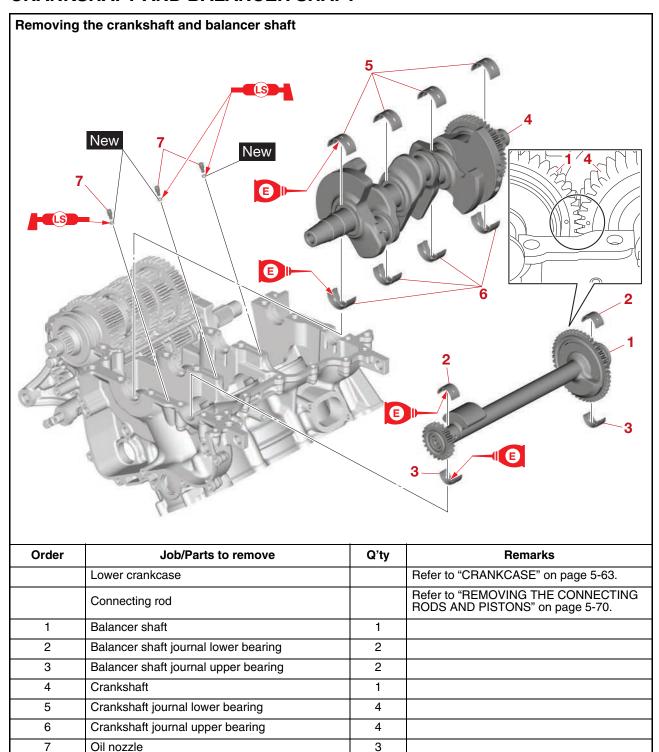


EAS3117

REMOVING THE CRANKSHAFT AND BALANCER SHAFT

- 1. Remove:
- Balancer shaft "1"
- Balancer shaft journal bearing
- Crankshaft assembly "2"
- · Crankshaft journal bearing

TIP

Identify the position of each balancer shaft journal bearings and crankshaft journal bearings so that it can be reinstalled in its original place.

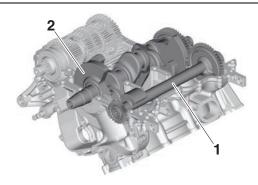

EAS3117

CHECKING THE OIL NOZZLES

The following procedure applies to all of the oil nozzles.

- 1. Check:
- Oil nozzle

Damage/wear \rightarrow Replace the oil nozzle.

 Oil passage Obstruction → Blow out with compressed air.


EAS31075

CHECKING THE CRANKSHAFT

- 1. Measure:
- Crankshaft runout
 Out of specification → Replace the crankshaft.



Runout limit 0.030 mm (0.0012 in)

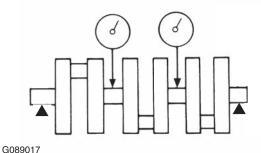

2. Check:

- Crankshaft journal surfaces
- Crankshaft pin surfaces
- Bearing surfaces
 Scratches/wear → Replace the crankshaft.
- 3. Measure:
 - Crankshaft-journal-to-crankshaft-journalbearing clearance
 Out of specification → Replace the crankshaft journal bearings.



Journal oil clearance 0.013-0.037 mm (0.0005-0.0015 in)

ECA13920


NOTICE

Do not interchange the crankshaft journal bearings. To obtain the correct crankshaft-journal-to-crankshaft-journal-bearing clearance and prevent engine damage, the crankshaft journal bearings must be installed in their original positions.

- a. Clean the crankshaft journal bearings, crankshaft journals, and bearing portions of the crankcase.
- b. Place the upper crankcase upside down on a bench.
- c. Install the crankshaft journal upper bearings "1" and the crankshaft into the upper crankcase.

TIP


Align the projections "a" on the crankshaft journal upper bearings with the notches "b" in the upper crankcase.

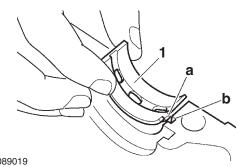

d. Put a piece of Plastigauge® "1" on each crankshaft journal.

TID


Do not put the Plastigauge® over the oil hole in the crankshaft journal.

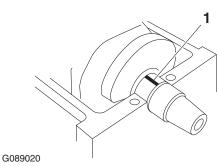


e. Install the crankshaft journal lower bearings "1" into the lower crankcase and assemble the crankcase halves.

TIP_

- Align the projections "a" of the crankshaft journal lower bearings with the notches "b" in the lower crankcase.
- Do not move the crankshaft until the clearance measurement has been completed.

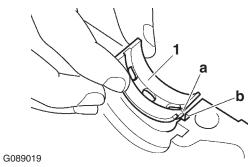

- f. Tighten the bolts to specification in the tightening sequence cast on the crankcase. Refer to "CRANKCASE" on page 5-63.
- g. Remove the lower crankcase and the crankshaft journal lower bearings.
- h. Measure the compressed Plastigauge® width "a" on each crankshaft journal.
 If the crankshaft-journal-to-crankshaft-journal-bearing clearance is out of specification, select replacement crankshaft journal bearings.

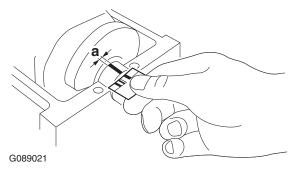

4. Select:


• Crankshaft journal bearing (J₁–J₄)


TIP


- The numbers "A" stamped into the crankshaft web and the numbers "B" stamped into the lower crankcase are used to determine the replacement crankshaft journal bearing sizes.
- "J₁"-"J₄" refer to the bearings shown in the crankshaft and lower crankcase illustration.


For example, if the crankcase " J_1 " and crankshaft web " J_1 " numbers are 6 and 2 respectively, then the bearing size for " J_1 " is:

" J_1 " (crankcase) - " J_1 " (crankshaft web) -1 = 6 - 2 - 1 = 3 (Brown)

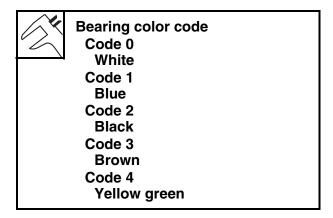

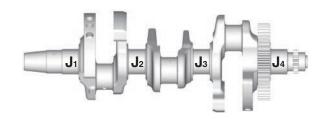

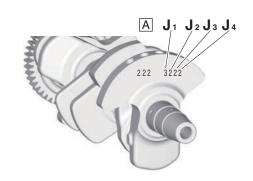

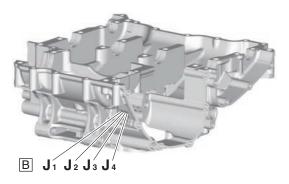


EAS31076

CHECKING THE BALANCER SHAFT

- Measure:
- Balancer shaft runout
 Out of specification → Replace the balancer shaft.



Balancer shaft runout limit 0.030 mm (0.0012 in)

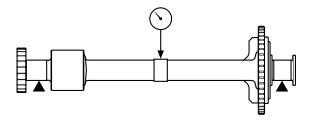

- 2. Check:
 - Balancer shaft journal surfaces
- Bearing surfaces
 Scratches/wear → Replace the balancer shaft.
- 3. Measure:
 - Balancer shaft journal-to-balancer shaft bearing clearance
 - Out of specification \rightarrow Replace the balancer shaft journal bearings.



Balancer shaft journal to balancer shaft bearing clearance 0.023-0.047 mm (0.0009-0.0019 in)

ECA18400


NOTICE

Do not interchange the balancer shaft journal bearings. To obtain the correct balancer shaft-journal-to-balancer shaft-journal-bearing clearance and prevent engine damage, the balancer shaft journal bearings must be installed in their original positions.

- a. Clean the balancer shaft journal bearings, balancer shaft journals, and bearing portions of the crankcase.
- b. Place the upper crankcase upside down on a bench.
- c. Install the balancer shaft journal upper bearings "1" and the balancer shaft into the upper crankcase.

TIP


Align the projections "a" on the balancer shaft journal upper bearings with the notches "b" in the upper crankcase.

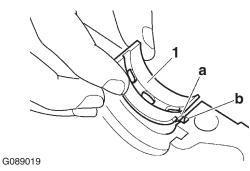

d. Put a piece of Plastigauge® "1" on each balancer shaft journal.

TIP


Do not put the Plastigauge® over the oil hole in the balancer shaft journal.

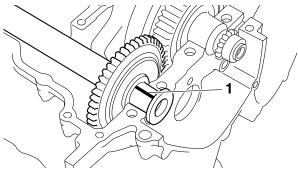


e. Install the balancer shaft journal lower bearings "1" into the lower crankcase and assemble the crankcase halves.

TIP

- Align the projections "a" of the balancer shaft journal lower bearings with the notches "b" in the crankcase.
- Do not move the balancer shaft until the clearance measurement has been completed.

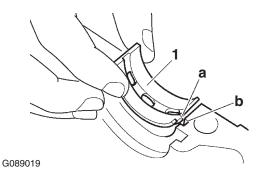

- f. Tighten the bolts to specification in the tightening sequence cast on the crankcase. Refer to "CRANKCASE" on page 5-63.
- g. Remove the lower crankcase and the balancer shaft journal lower bearings.
- h. Measure the compressed Plastigauge® width "a" on each balancer shaft journal. If the balancer shaft-journal-to-balancer shaft-journal-bearing clearance is out of specification, select replacement balancer shaft journal bearings.

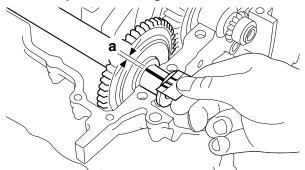


- 4. Select:
 - Balancer shaft journal bearing (J₁-J₂)


TIF


- The numbers "A" stamped into the balancer shaft web and the numbers "B" stamped into the lower crankcase are used to determine the replacement balancer shaft journal bearing sizes.
- "J₁"-"J₂" refer to the bearings shown in the balancer shaft and lower crankcase illustration.


For example, if the crankcase " J_1 " and balancer shaft web " J_1 " numbers are 5 and 2 respectively, then the bearing size for " J_1 " is:

" J_1 " (crankcase) - " J_1 " (balancer shaft web) = 5 - 2 = 3 (brown)

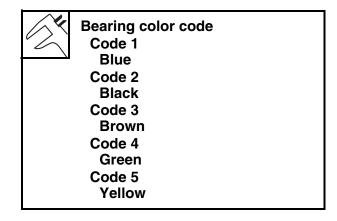

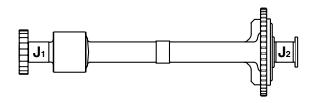

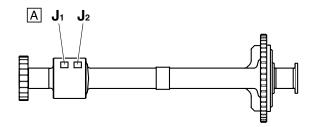

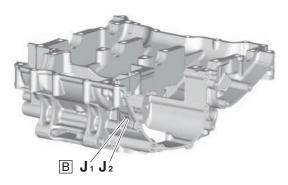


EAS31077


INSTALLING THE CRANKSHAFT

- 1. Install:
- Crankshaft journal upper bearing (into the upper crankcase)
- Crankshaft journal lower bearing (into the lower crankcase)
- Crankshaft

TIP_

- Align the projections "a" on the crankshaft journal bearings "1" with the notches "b" in the crankcase.
- Be sure to install each crankshaft journal bearings in its original place.

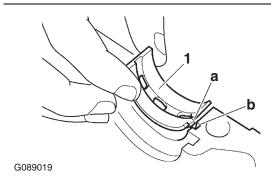

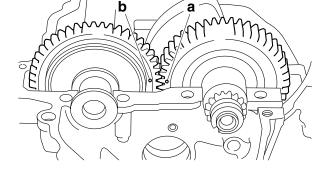


EAS31172

INSTALLING THE BALANCER ASSEMBLY

- 1. Install:
- Balancer shaft journal upper bearing (into the upper crankcase)
- Balancer shaft journal lower bearing (into the lower crankcase)

TIP

- Align the projections "a" on the balancer shaft journal bearings "1" with the notches "b" in the crankcases.
- Be sure to install each balancer shaft journal bearing in its original place.

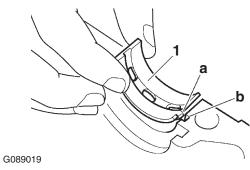



- 2. Install:
- Balancer shaft


TIP


Install by aligning the crankshaft match mark "a" and the balancer shaft match mark "b".

TRANSMISSION

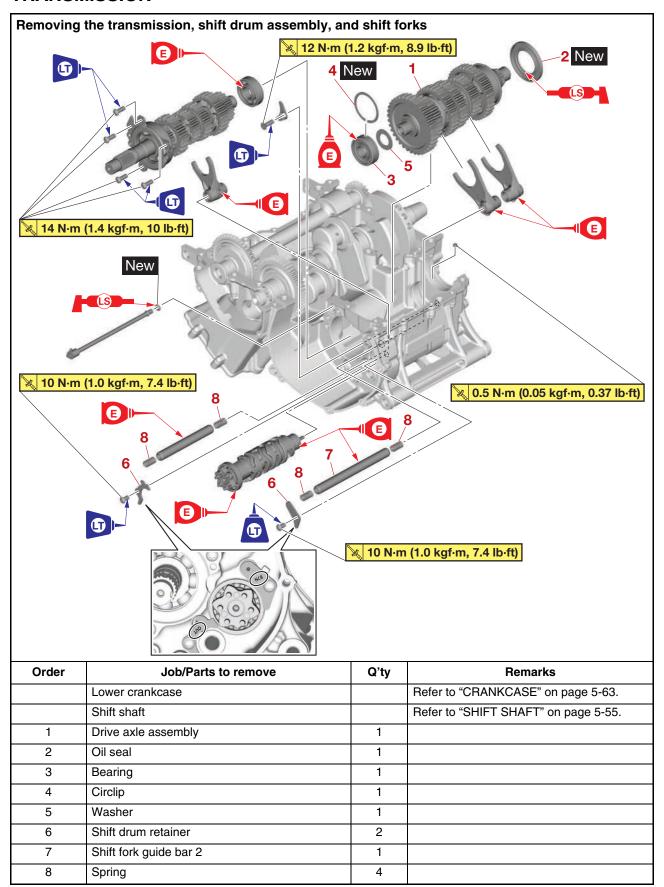


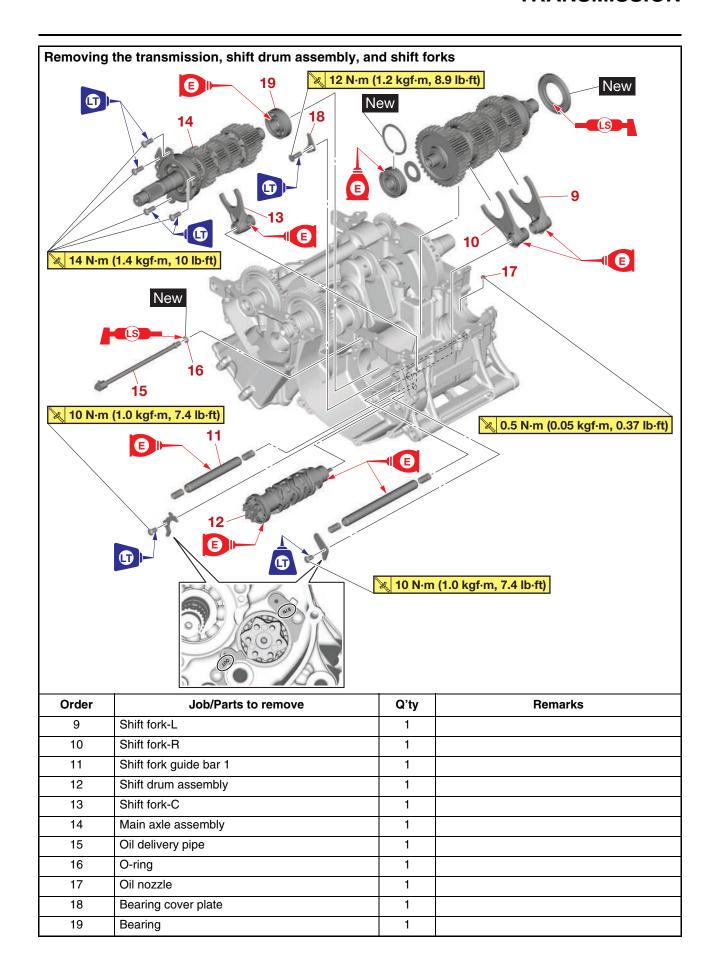

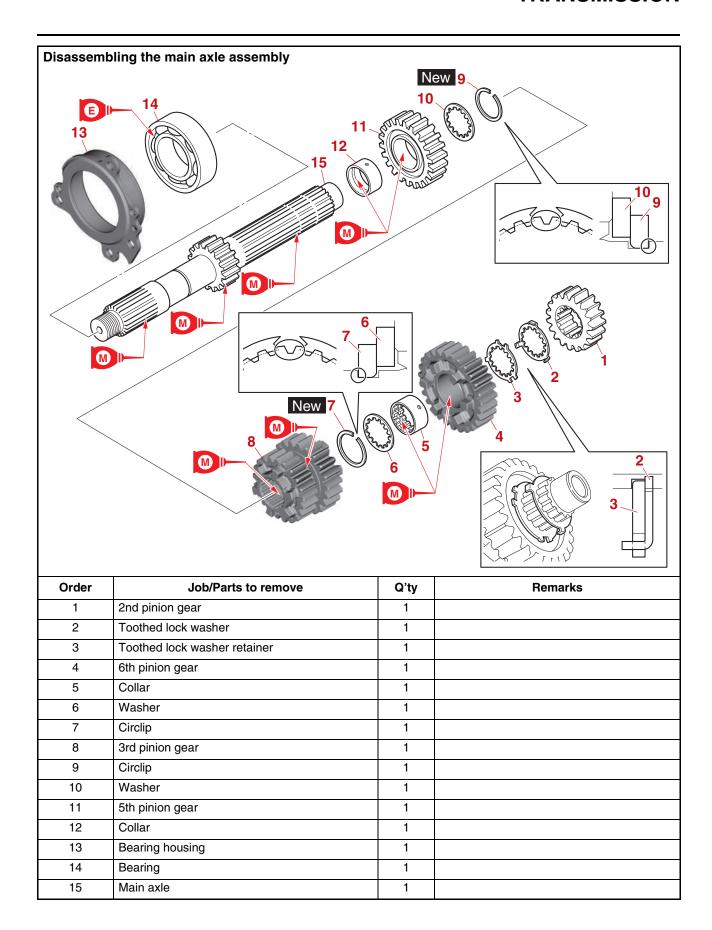

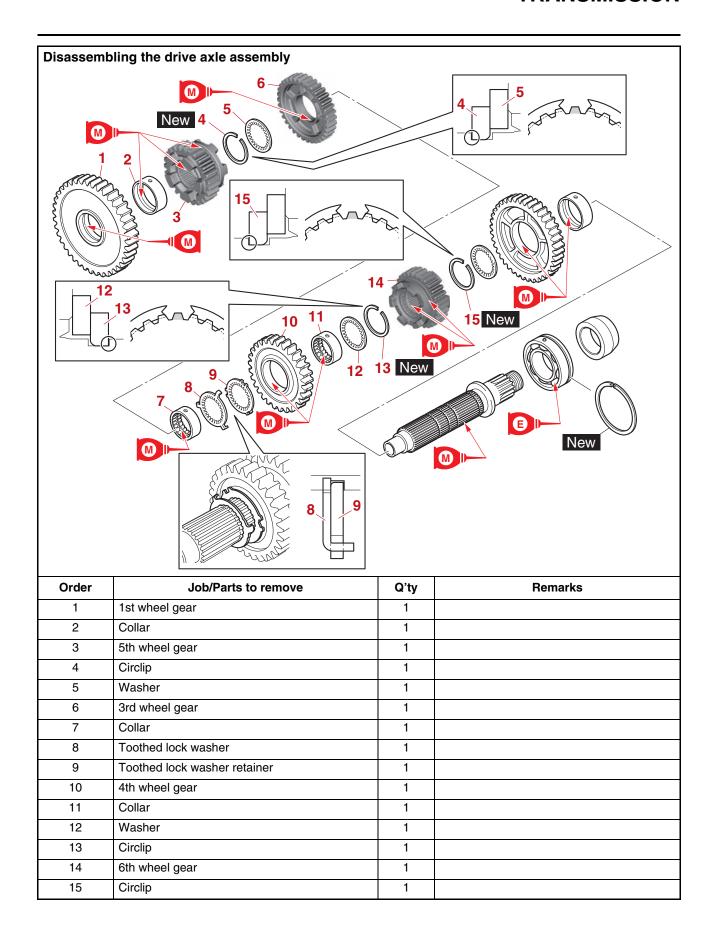


TRANSMISSION

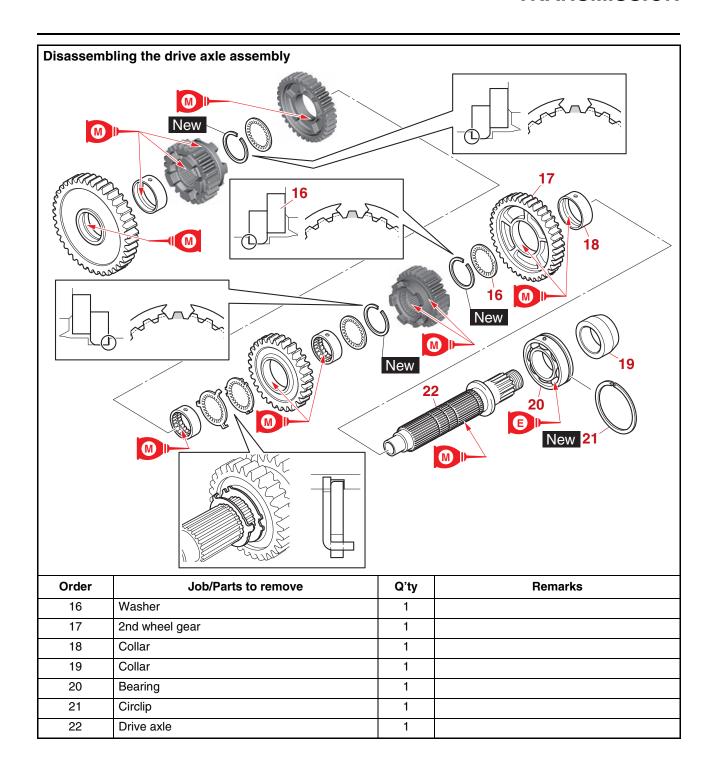


REMOVING THE TRANSMISSION


- 1. Remove:
- Drive axle assembly "1"
- Shift drum retainer "2"
- Shift fork guide bar 2
- Spring
- Shift fork-L
- Shift fork-R
- Shift fork guide bar 1
- Spring
- Shift drum assembly
- Shift fork-C

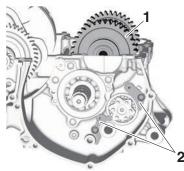

- 2. Remove:
 - Bearing housing "1"
 - Main axle assembly "2"
 - a. Insert two bolts "3" of the proper size, as shown in the illustration, into the main axle assembly bearing housing.

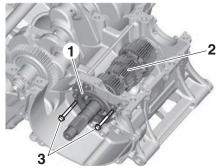

- b. Tighten the bolts until they contact the crankcase surface.
- c. Continue tightening the bolts until the main axle assembly comes free from the upper crankcase.
- 3. Remove:
 - Oil delivery pipe "1"
 - Oil nozzle "2"
 - Bearing cover plate "3"
 - Bearing "4"

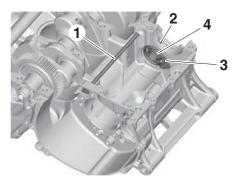


EAS30431

CHECKING THE SHIFT FORKS

The following procedure applies to all of the shift forks.

- 1. Check:
- Shift fork cam follower "1"
- Shift fork pawl "2" Bends/damage/scoring/wear → Replace the shift fork.

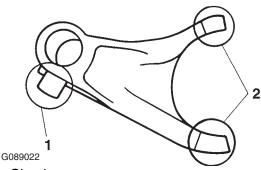

- 2. Check:
 - Shift fork guide bar 1
- Shift fork guide bar 2
 Roll the shift fork guide bar on a flat surface.

 Bends → Replace.

EWA1

WARNING


Do not attempt to straighten a bent shift fork guide bar.

- 3. Check:
- Shift fork movement
 (along the shift fork guide bar)
 Rough movement → Replace the shift forks
 and shift fork guide bar as a set.



CHECKING THE SHIFT DRUM ASSEMBLY

- 1. Check:
- Shift drum groove Damage/scratches/wear → Replace the shift drum assembly.
- Shift drum segment "1"
 Damage/wear → Replace the shift drum assembly.
- Shift drum bearing "2"
 Damage/pitting → Replace the shift drum assembly.

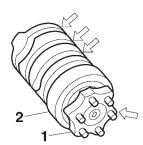

G089024


EAS30433

CHECKING THE TRANSMISSION

- 1. Measure:
 - Main axle runout (with a centering device and dial gauge "1")
 Out of specification → Replace the main axle.




Main axle runout limit 0.08 mm (0.0032 in)

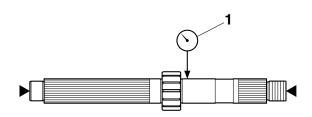


- 2. Measure:
 - Drive axle runout (with a centering device and dial gauge "1")
 Out of specification → Replace the drive axle.



Drive axle runout limit 0.08 mm (0.0032 in)

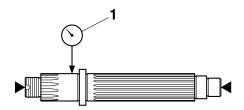

- 3. Check:
 - Transmission gear
 Blue discoloration/pitting/wear → Replace the defective gear(s).
 - Transmission gear dogs
 Cracks/damage/rounded edges → Replace the defective gear(s).

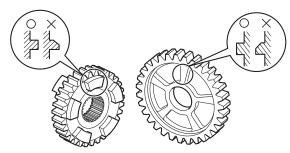

G089025

- 4. Check:
 - Transmission gear engagement (each pinion gear to its respective wheel gear)

Incorrect \rightarrow Reassemble the transmission axle assemblies.

- 5. Check:
 - Transmission gear movement
 Rough movement → Replace the defective part(s).
- 6. Check:
 - Circlip Bends/damage/looseness → Replace.


EAS3043


ASSEMBLING THE MAIN AXLE AND DRIVE AXLE


- 1. Install:
- Toothed washer "1"
- Circlip "2" New

TIP_

- Be sure the circlip sharp-edged corner "a" is positioned opposite side to the toothed washer and gear.
- Align the opening between the ends "b" of the circlip with a groove "c" in the axle.
- Install the circlip so that a spline "d" is in the center of the gap between the circlip ends "e" as shown.

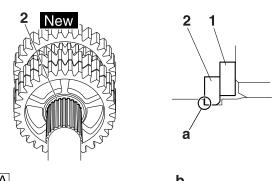

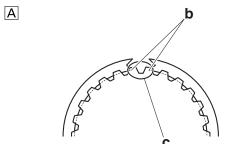


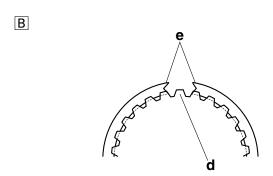


- A. Main axle
- B. Drive axle
- 2. Install:
 - Toothed lock washer retainer "1"
 - Toothed lock washer "2"

TIP_

- With the toothed lock washer retainer in the groove "a" in the axle, align the projection on the retainer with an axle spline, and then install the toothed lock washer.
- Be sure to align the projection on the toothed lock washer that is between the alignment marks "b" with the alignment mark "c" on the retainer.

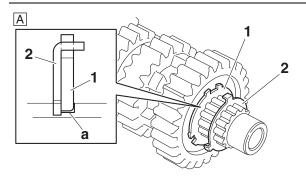

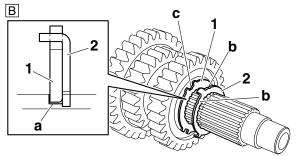

- A. Main axle
- B. Drive axle

EAS3043

INSTALLING THE TRANSMISSION


- 1. Install:
- Bearing "1"
- Bearing cover plate "2"
- Oil nozzle "3"
- Oil delivery pipe "4"

TIP

- Face the seal side of bearing to the outside.
- Install bearing cover plate "2" with the "OUT" mark "a" facing out.




Bearing cover plate screw
12 N·m (1.2 kgf·m, 8.9 lb·ft)
LOCTITE®
Oil nozzle
0.5 N·m (0.05 kgf·m, 0.37 lb·ft)

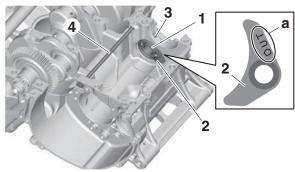

- 2. Install:
 - Main axle assembly "1"
 - Bearing housing "2"




Main axle bearing housing bolt 14 N⋅m (1.4 kgf⋅m, 10 lb⋅ft) LOCTITE®

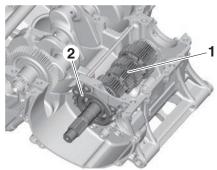

- 3. Install:
 - Shift fork-C "1"
 - Shift drum assembly "2"
 - Spring
 - Shift fork guide bar 1 "3"

TIE

- The embossed marks on the shift forks should face towards the right side of the engine and be in the following sequence: "R", "C", "L".
- Carefully position the shift forks so that they are installed correctly into the transmission gears.
- Install shift fork-C into the groove "a" in the 3rd pinion gear on the main axle.

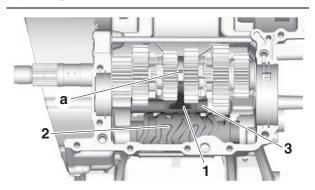

4. Install:


- Shift fork-R "1"
- Shift fork-L "2"
- Spring
- Shift fork guide bar 2
- Shift drum retainer "3"
- Bearing "4"
- Circlip "5" New
- Oil seal New
- Drive axle assembly "6"



Shift drum retainer bolt 10 N⋅m (1.0 kgf⋅m, 7.4 lb⋅ft) LOCTITE®

TIP

- Install shift fork-R into the groove "a" in the 5th wheel gear and shift fork-L into the groove "b" in the 6th wheel gear on the drive axle.
- Face the seal side of bearing "4" to the outside.
- Install the shift drum retainer with its "OUT" mark "c" facing outward.
- Make sure that the projection "d" on the drive axle assembly is inserted into the slot in the crankcase.
- Make sure that the drive axle bearing circlips
 "5" is inserted into the grooves "e" in the upper crankcase.

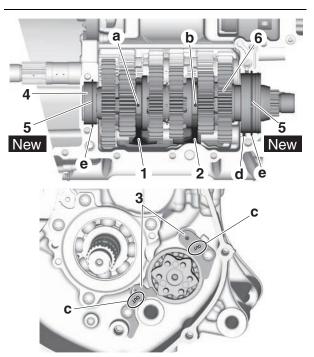

TRANSMISSION

5.	\sim	he	_		
^		റമ	n		
J. '	v	ıc	u	٦.	

 $\begin{tabular}{ll} \bullet & Transmission \\ & Rough & movement \rightarrow Repair. \\ \end{tabular}$


TIP

Oil each gear, shaft, and bearing thoroughly.

COOLING SYSTEM


COOLING SYSTEM DIAGRAMS	6-1
RADIATOR	6-3
CHECKING THE RADIATOR	6-5
INSTALLING THE RADIATOR	
OIL COOLER	6-7
CHECKING THE OIL COOLER	
INSTALLING THE OIL COOLER	
THERMOSTAT	6-9
CHECKING THE THERMOSTAT ASSEMBLY	6-10
INSTALLING THE THERMOSTAT ASSEMBLY	6-10
WATER PUMP	6-11
DISASSEMBLING THE WATER PUMP	
CHECKING THE WATER PUMP	6-13
ASSEMBLING THE WATER PUMP	6-13

COOLING SYSTEM DIAGRAMS

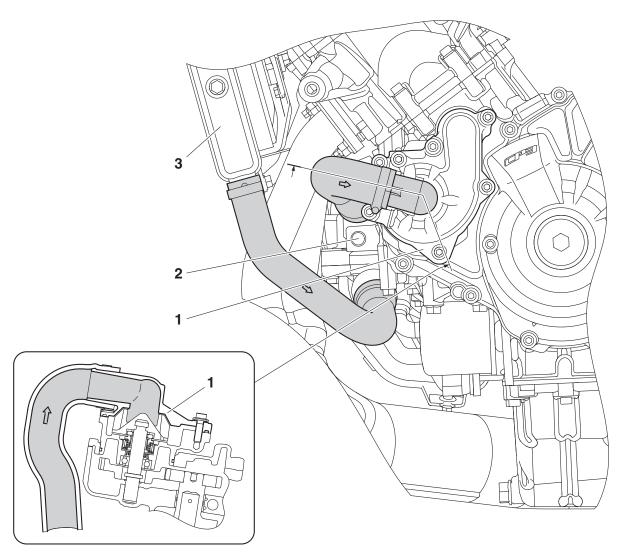


- 1. Water pump
- 2. Thermostat
- 3. Radiator


COOLING SYSTEM DIAGRAMS

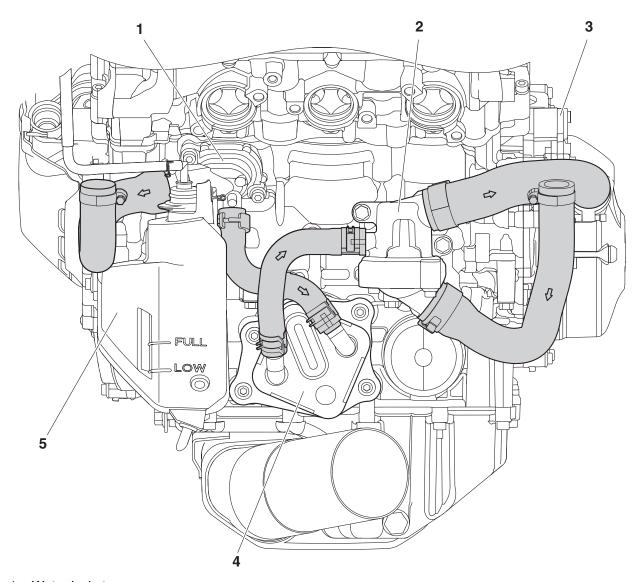

- 1. Water jacket
- 2. Thermostat
- 3. Water pump
- 4. Oil cooler
- 5. Coolant reservoir

RADIATOR

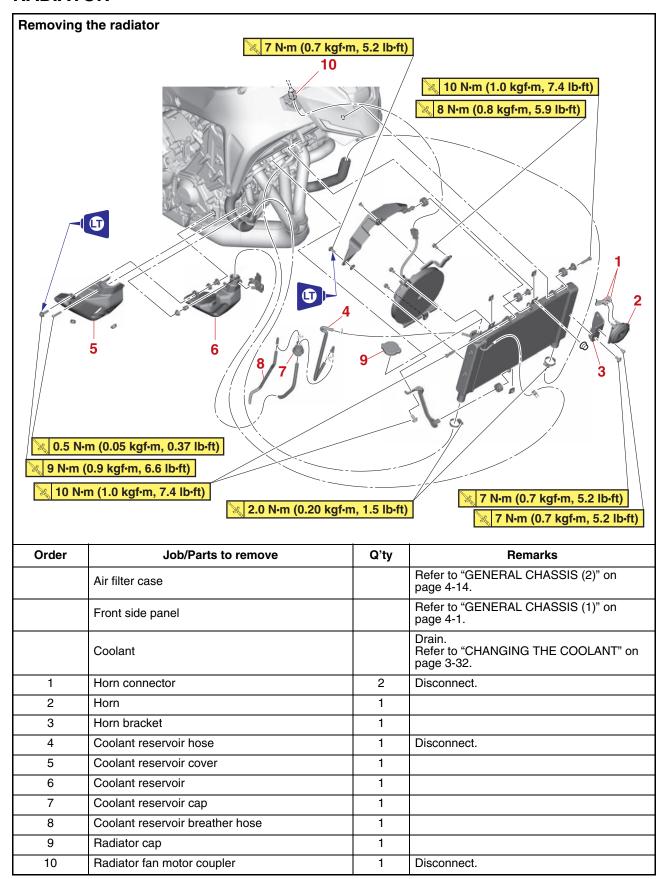

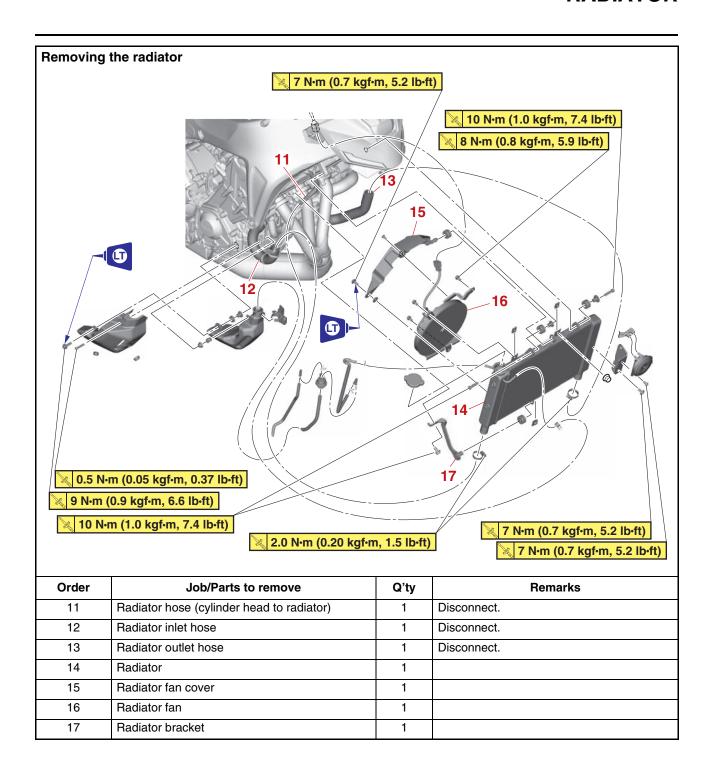

CHECKING THE RADIATOR

- 1. Check:
- Radiator fin


Obstruction \rightarrow Clean.

Apply compressed air to the rear of the radiator.

Damage \rightarrow Repair or replace.

TIE

Straighten any flattened fins with a thin, flat-head screwdriver.

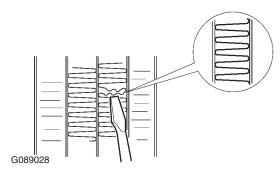

- 2. Check:
- Radiator hose Cracks/damage → Replace.
- 3. Measure:
 - Radiator cap valve opening pressure
 Below the specified pressure → Replace the
 radiator cap.




Radiator cap valve opening pressure 107.9–137.3 kPa (1.08–1.37 kgf/

cm², 15.6–19.9 psi)

a. Install the radiator cap tester "1" and radiator cap tester adapter "2" to the radiator cap "3".



Radiator cap tester 90890-01325 Mityvac cooling system tester kit YU-24460-A Radiator cap tester adapter 90890-01352 Pressure tester adapter YU-33984

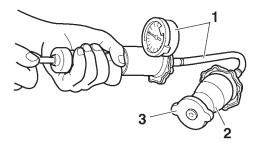

G089029

- b. Apply specified pressure to the radiator cap and then, make sure to check the specified pressure for at least 10 seconds. If it is not keep the pressure, replace it.
- 4. Check:
 - Radiator fan
 Damage → Replace.
 Malfunction → Check and repair.
 Refer to "COOLING SYSTEM" on page 8-39.

EAS30440

INSTALLING THE RADIATOR


- 1. Install:
- · All removed parts
- 2. Fill:
 - Cooling system (with the specified amount of the recommended coolant)
 Refer to "CHANGING THE COOLANT" on page 3-32.
- 3. Check:
 - Cooling system Leaks → Repair or replace any faulty part.
 - a. Attach the radiator cap tester "1" and radiator cap tester adapter "2" to the radiator.



Radiator cap tester 90890-01325 Mityvac cooling system tester kit YU-24460-A

Radiator cap tester adapter 90890-01352

Pressure tester adapter YU-33984

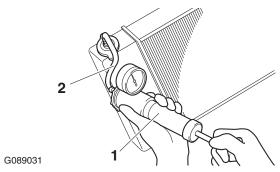

b. Apply the specified pressure.



Cooling system leak test pressure

137.3 kPa (1.37 kgf/cm², 19.9 psi)

ECA24270

NOTICE

- Do not apply such a high pressure as exceeds the test pressure.
- Make sure that a checkup after the cylinder head gasket is replaced is made after 3 minutes of warm-up.
- Make sure that coolant is filled up to the upper level beforehand.

4. Check:


- Pressure value
 No stay for 5 to 10 seconds at the test pressure value → Repair.
- Radiator
- Radiator hose connections
 Coolant leaks → Repair or replace.
- Radiator hose Bulges → Replace.

EWA19090

MARNING

When the radiator cap tester is removed, coolant will spout; therefore, cover it with a cloth beforehand.

OIL COOLER

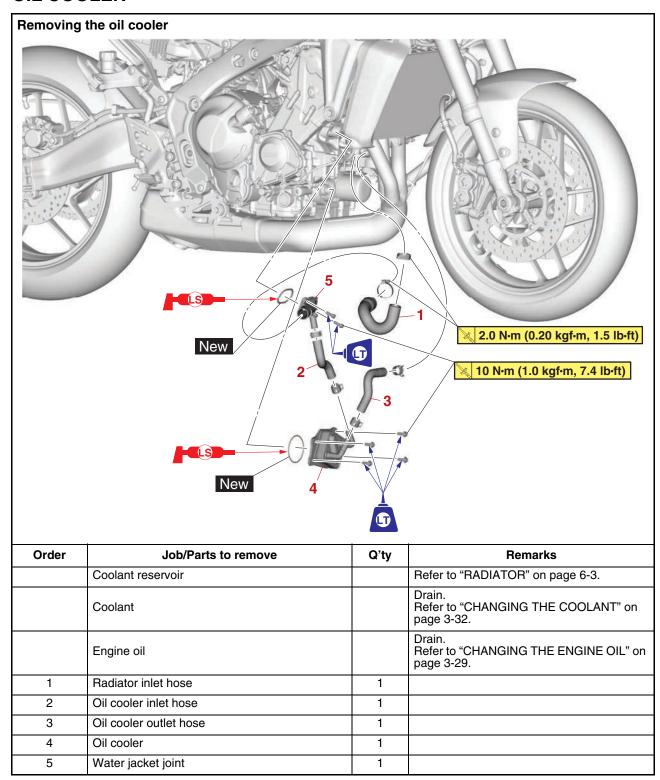

CHECKING THE OIL COOLER

- 1. Check:
- Oil cooler
 Cracks/damage → Replace.
- 2. Check:
 - Oil cooler inlet hose
 - Oil cooler outlet hose Cracks/damage/wear → Replace.

EAS30442

INSTALLING THE OIL COOLER


- 1. Clean:
- Mating surfaces of the oil cooler and the crankcase (with a cloth dampened with lacquer thinner)
- 2. Install:
 - O-ring New
 - Oil cooler
 - Oil cooler bolt "1"



Oil cooler bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP_

- Before installing the oil cooler, apply lithiumsoap-based grease to the O-ring.
- Make sure the O-ring is positioned properly.

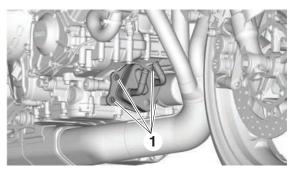

- 3. Fill:
 - Cooling system (with the specified amount of the recommended coolant) Refer to "CHANGING THE COOLANT" on page 3-32.
 - Crankcase


 (with the specified amount of the recommended engine oil)
 Refer to "CHANGING THE ENGINE OIL" on page 3-29.
- 4. Check:
 - Cooling system
 Leaks → Repair or replace any faulty part.
 Refer to "INSTALLING THE RADIATOR" on page 6-5.

5. Measure:

Radiator cap valve opening pressure
 Below the specified pressure → Replace the
 radiator cap.
 Refer to "CHECKING THE RADIATOR" on
 page 6-5.

FAS20065

THERMOSTAT

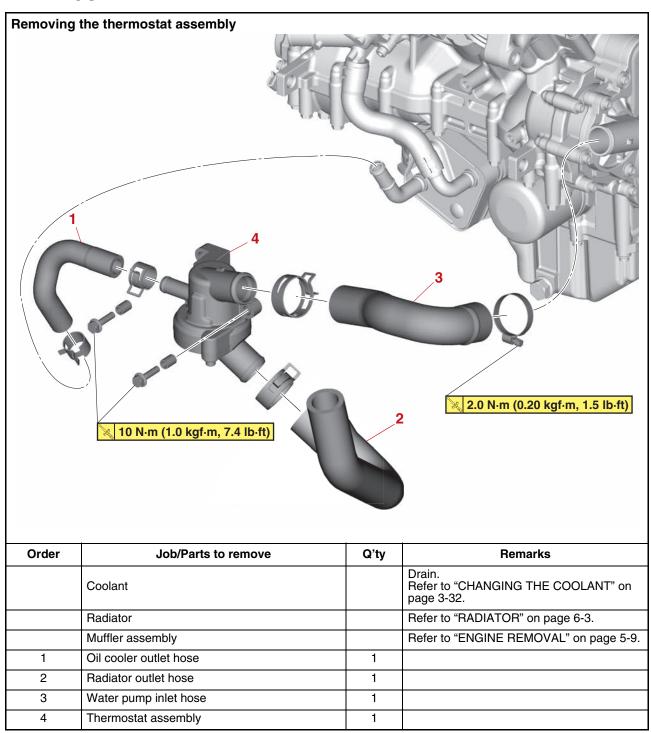

CHECKING THE THERMOSTAT ASSEMBLY

- 1. Check:
- Thermostat assembly "1" Cracks/damage → Replace.





EAS30445

INSTALLING THE THERMOSTAT ASSEMBLY

- 1. Install:
- Thermostat assembly
- 2. Fill:
- Cooling system (with the specified amount of the recommended coolant)
 Refer to "CHANGING THE COOLANT" on page 3-32.
- 3. Check:
 - Cooling system
 Leaks → Repair or replace any faulty part.
 Refer to "INSTALLING THE RADIATOR" on page 6-5.
- 4. Measure:
 - Radiator cap valve opening pressure
 Below the specified pressure → Replace the
 radiator cap.
 Refer to "CHECKING THE RADIATOR" on
 page 6-5.

WATER PUMP

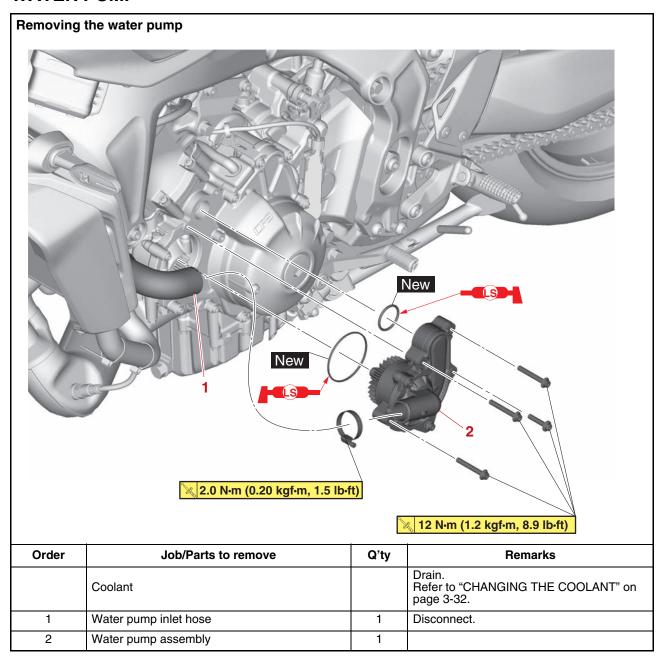

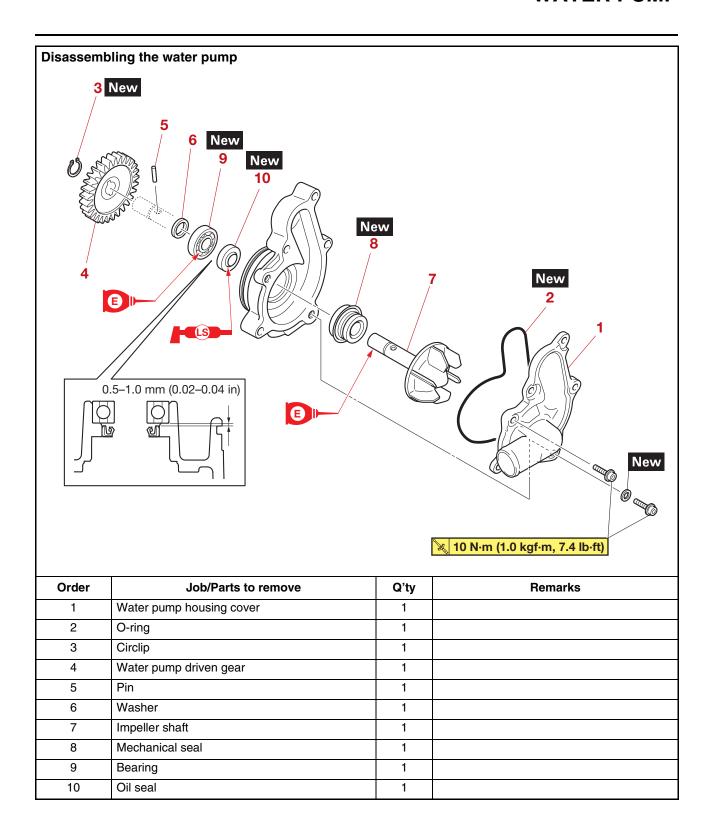


DISASSEMBLING THE WATER PUMP

- 1. Remove:
- Mechanical seal (housing side) "1"

TIP


Remove the mechanical seal (housing side) from the inside of the water pump housing "2".

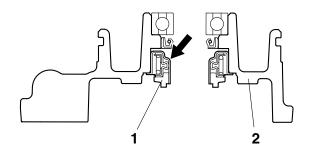

- 2. Remove:
 - Bearing "1"
- Oil seal "2"

TIP

Remove the oil seal and bearing from the outside of the water pump housing "3".

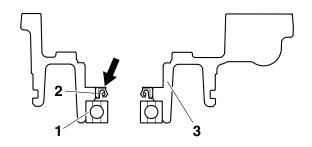


- 3. Remove:
 - Mechanical seal (impeller side) "1" (from the impeller, with a thin, flat-head screwdriver)

TIP_

G089034


Do not scratch the impeller shaft.

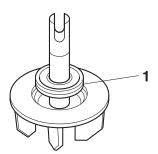

EAS3044

CHECKING THE WATER PUMP

- 1. Check:
- Water pump housing cover "1"
- Impeller shaft "2"
 Cracks/damage/wear → Replace.
- Water pump housing "3"
 Cracks/damage/wear → Replace the water pump assembly.

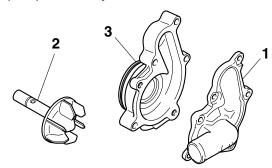

- 2. Check:
 - Bearing Rough movement \rightarrow Replace.
- 3. Check:
- Water pump inlet hose Cracks/damage/wear → Replace.

EAS30448

ASSEMBLING THE WATER PUMP


- 1. Install:
 - Oil seal "1" New
 - Bearing "2" New (into the water pump housing "3")



Installed depth "a" 0.5-1.0 mm (0.02-0.04 in)

TIP

Install the oil seal with a socket that matches its outside diameter.

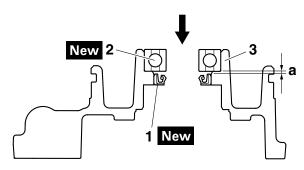

- 2. Install:
- Mechanical seal (housing side) "1" New

ECA20330

NOTICE


Never lubricate the mechanical seal (housing side) surface with oil or grease.

TIP_

Use the special tools and a press to press the mechanical seal (housing side) straight in until it touches the water pump housing.



Mechanical seal installer 90890-04078 Water pump seal installer YM-33221-A Middle driven shaft bearing driver 90890-04058 Middle drive bearing installer 40 & 50 mm YM-04058

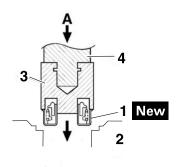


- 2. Water pump housing
- 3. Mechanical seal installer
- 4. Middle driven shaft bearing driver
- A. Push down
- 3. Install:
- Mechanical seal (impeller side) "1" New

NOTICE

Make sure the mechanical seal (impeller side) is flush with the impeller.

TIP_

- Before installing the mechanical seal (impeller side), apply tap water or coolant onto its outer surface.
- If the top of the mechanical seal is dirty, clean it.

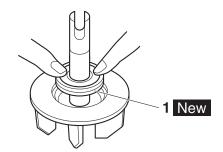

G089035

FUEL SYSTEM

FUEL TANK	
REMOVING THE FUEL TANK	
REMOVING THE FUEL PUMP	7-4
CHECKING THE FUEL PUMP BODY	7-4
CHECKING THE FUEL PUMP OPERATION	7-4
CHECKING THE PURGE CUT VALVE SOLENOID	
(for California only)	7-5
INSTALLING THE CANISTER (for California only)	7-5
INSTALLING THE FUEL PUMP	
INSTALLING THE FUEL TANK	7-5
THROTTLE BODIES	7-6
CHECKING THE INJECTORS (BEFORE REMOVING)	7-8
REMOVING THE FUEL HOSE (FUEL RAIL SIDE)	7-8
REMOVING THE INJECTORS	7-8
CHECKING THE INJECTORS	7-8
CHECKING AND CLEANING THE THROTTLE BODIES	7-8
REPLACING THE THROTTLE BODIES	7-10
INSTALLING THE INJECTORS	
CHECKING THE INJECTOR PRESSURE	
CHECKING THE FUEL PRESSURE	7-11
INSTALLING THE FUEL HOSE (FUEL RAIL SIDE)	7-12
ADJUSTING THE THROTTLE POSITION SENSOR	7-12

FAS20067


FUEL TANK

12

13


Fitting plate (rear) (right)


Fuel tank cap

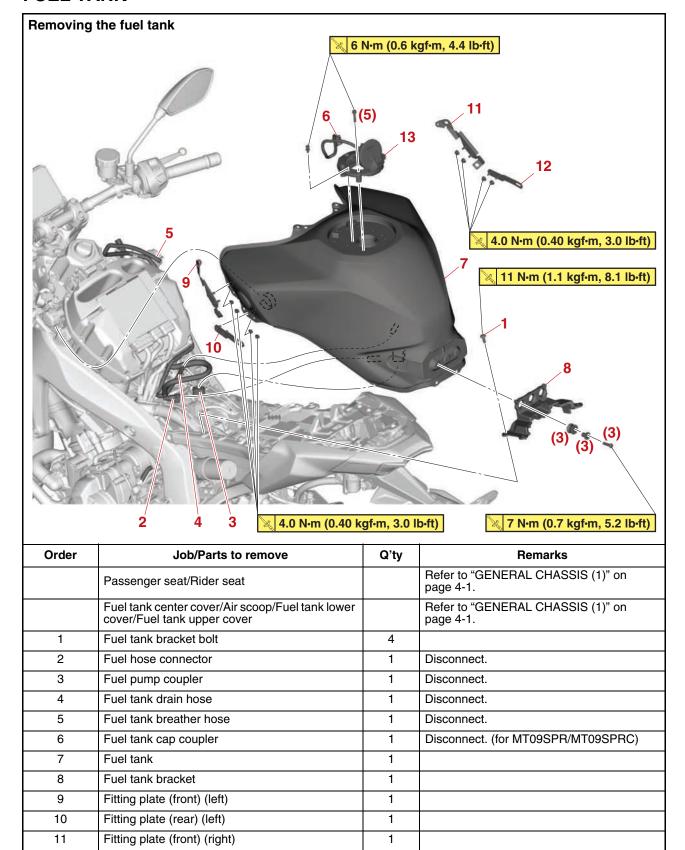

1

1

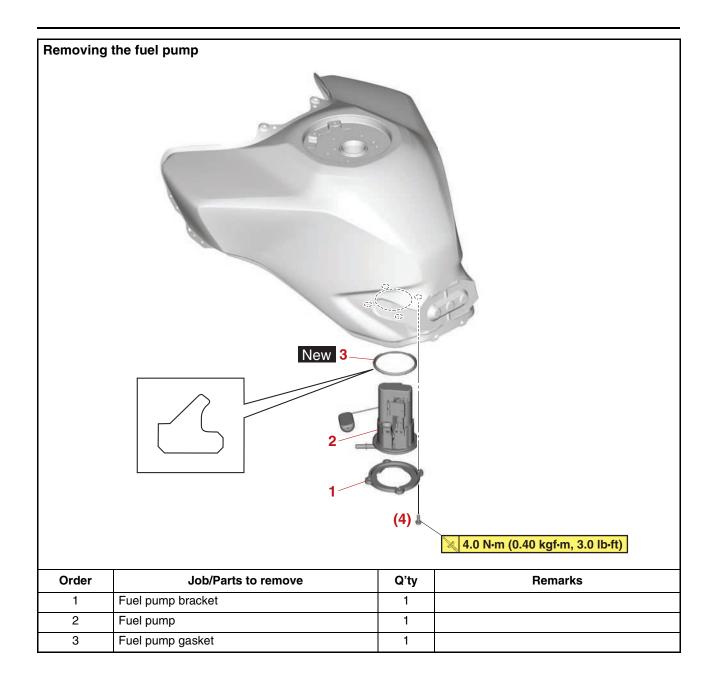


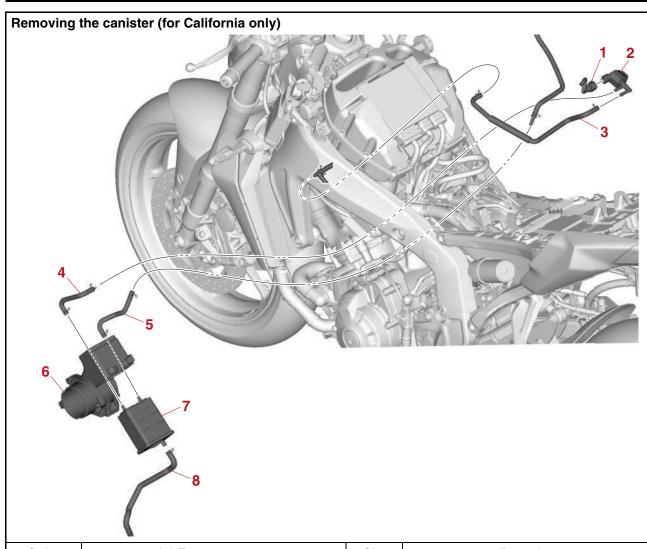

Order	Job/Parts to remove	Q'ty	Remarks
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
	Starter motor		Refer to "ELECTRIC STARTER" on page 5-41.
1	Purge cut valve solenoid coupler	1	Disconnect.
2	Purge cut valve solenoid	1	
3	Canister purge hose (purge cut valve solenoid to hose joint)	1	
4	Canister purge hose (purge cut valve solenoid to canister)	1	
5	Fuel tank breather hose (fuel tank cap to canister)	1	
6	Canister holder	1	
7	Canister	1	
8	Canister breather hose	1	

REMOVING THE FUEL TANK

- 1. Extract the fuel in the fuel tank through the fuel tank cap with a pump.
- 2. Remove:
 - Passenger seat
 - Rider seat
 - Fuel tank center cover
- Air scoop Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Bracket bolt
- 3. Disconnect:
- Fuel hose (fuel tank side) "1"
- Fuel pump coupler "2"
- Fuel tank breather hose "3"
- Fuel tank drain hose "4"

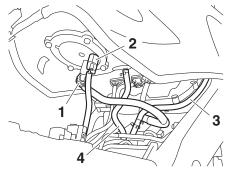

WARNING

Cover fuel hose connections with a cloth when disconnecting them. Residual pressure in the fuel lines could cause fuel to spurt out when removing the hose.


ECA17490

NOTICE

Be sure to disconnect the fuel hose by hand. Do not forcefully disconnect the hose with tools.

TIP

- While pushing the ends "a" of the fuel hose connector cover "1" in direction "b", slide the fuel hose connector cover in direction "c", and then remove the hose from the fuel pump.
- Before removing the hose, place a few rags in the area under where it will be removed.
- It is prohibited to wear the cotton work gloves or equivalent coverings.

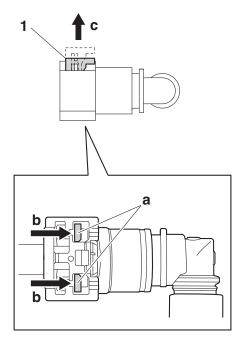

- 4. Remove:
 - Fuel tank

TIP

Do not set the fuel tank down so that the installation surface of the fuel pump is directly under the tank. Be sure to lean the fuel tank in an upright position.

EAS3045

REMOVING THE FUEL PUMP

- 1. Remove:
- Fuel pump

FCA14721

NOTICE

- Do not drop the fuel pump or give it a strong shock.
- Do not touch the base section of the fuel sender.

EAS30454

CHECKING THE FUEL PUMP BODY

- 1. Check:
 - Fuel pump body
 Obstruction → Clean.
 Cracks/damage → Replace fuel pump assembly.

EAS3045

CHECKING THE FUEL PUMP OPERATION

- 1. Check:
- Fuel pump operation Refer to "CHECKING THE FUEL PRES-SURE" on page 7-11.

CHECKING THE PURGE CUT VALVE SOLENOID (for California only)

- 1. Check:
- Canister purge hose Loose connection → Connect properly. Cracks/damage/wear → Replace.
- 2. Check:
 - Purge cut valve solenoid resistance Refer to "CHECKING THE PURGE CUT VALVE SOLENOID (for California only)" on page 8-83.

EAS31330

INSTALLING THE CANISTER (for California only)

- 1. Install:
- Canister
- Canister holder
- Canister purge hose
- Canister breather hose
- Fuel tank breather hose Refer to "CABLE ROUTING" on page 2-15.

EAS30456

INSTALLING THE FUEL PUMP


- 1. Install:
- Fuel pump gasket "1" New
- Fuel pump "2"
- Fuel pump bracket
- Fuel pump bolt



Fuel pump bolt 4.0 N·m (0.40 kgf·m, 3.0 lb·ft)

TIP

- Do not damage the installation surfaces of the fuel tank when installing the fuel pump.
- Always use a new fuel pump gasket.
- When installing the fuel pump gasket, make sure that there is no foreign material between the gasket and the surrounding parts.
- The gasket lip "a" shall face toward the fuel tank.
- Align the projection "b" on the fuel pump with the slot in the fuel pump bracket.
- Align the projection "b" on the fuel pump with the punch mark "c" on the fuel tank.
- Tighten the fuel pump bolts in stages and in a crisscross pattern.

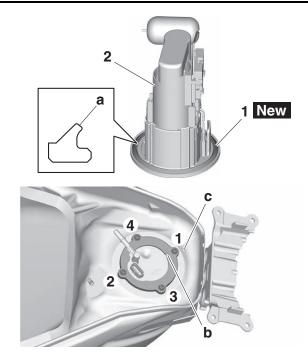

EAS30457

INSTALLING THE FUEL TANK

- 1. Connect:
 - Fuel hose (fuel tank side)


ECA1750

NOTICE

When installing the fuel hose, make sure that it is securely connected, and that the fuel hose connector cover on the fuel hose is in the correct position, otherwise the fuel hose will not be properly installed.

TIP


- Install the fuel hose onto the fuel pump securely, and slide the fuel hose connector cover "1" in the direction shown in the illustration.
- It is prohibited to wear the cotton work gloves or equivalent coverings.

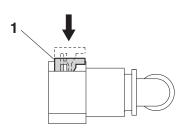

2. Connect:


- Fuel tank drain hose
- Fuel tank breather hose
- Fuel pump coupler

THROTTLE BODIES

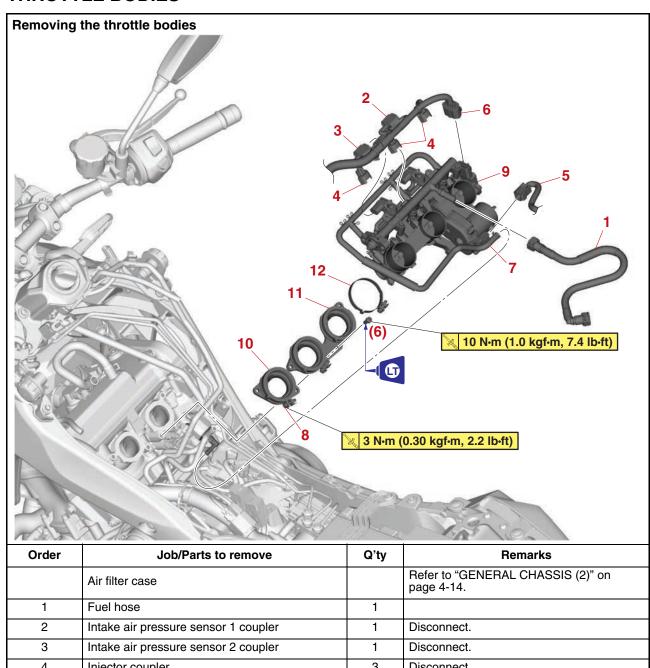

Order	OOD/I dits to remove	G ty	Hemaiks
	Air filter case		Refer to "GENERAL CHASSIS (2)" on page 4-14.
1	Fuel hose	1	
2	Intake air pressure sensor 1 coupler	1	Disconnect.
3	Intake air pressure sensor 2 coupler	1	Disconnect.
4	Injector coupler	3	Disconnect.
5	Throttle servo motor coupler	1	Disconnect.
6	Throttle position sensor coupler	1	Disconnect.
7	Canister purge hose (purge cut valve solenoid to hose joint)	1	Disconnect. For California only.
8	Throttle body joint clamp screw	3	Loosen.
9	Throttle body assembly	1	
10	Throttle body joint	1	
11	Throttle body joint	1	
12	Throttle body joint clamp	3	

THROTTLE BODIES

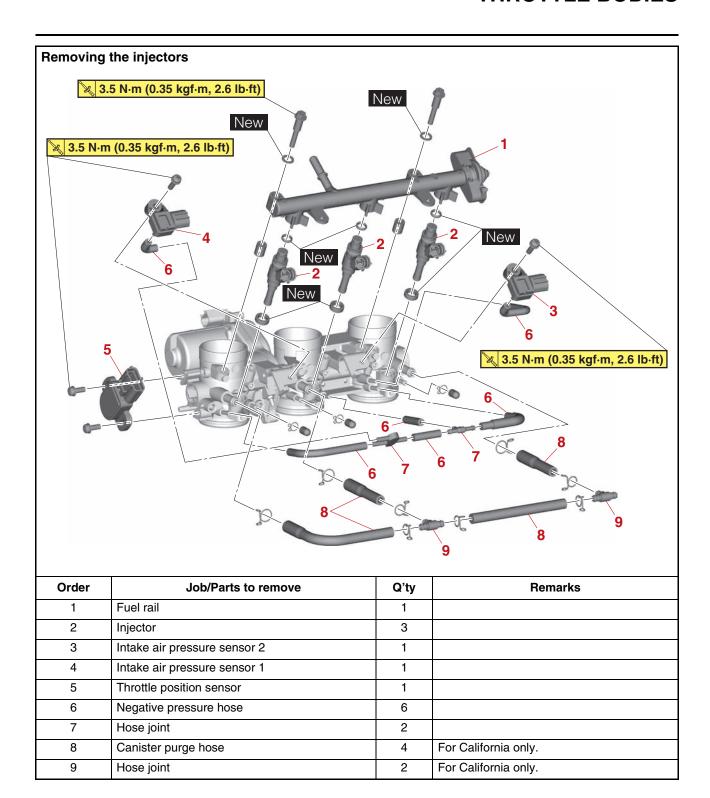

CHECKING THE INJECTORS (BEFORE REMOVING)

- 1. Check:
- Injector

Use the diagnostic code numbers "36"—"38". Refer to "DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE" on page 9-70.

EAS31158

REMOVING THE FUEL HOSE (FUEL RAIL SIDE)

- 1. Remove:
 - Fuel tank
 Refer to "REMOVING THE FUEL TANK" on page 7-4.
- 2. Remove:
- Fuel hose (fuel rail side)


ECA17490

NOTICE

Be sure to disconnect the fuel hose by hand. Do not forcefully disconnect the hose with tools.

TIP

- While pushing the ends "a" of the fuel hose connector cover "1" in direction "b", slide the fuel hose connector cover in direction "c", and then remove the hose from the fuel pump.
- Before removing the hose, place a few rags in the area under where it will be removed.
- It is prohibited to wear the cotton work gloves or equivalent coverings.

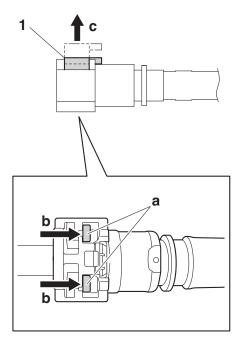

EAS3047

REMOVING THE INJECTORS

EWA17330

WARNING

- Check the injectors in a well-ventilated area free of combustible materials. Make sure that there is no smoking or use of electric tools in the vicinity of the injectors.
- Be careful when disconnecting the fuel hose. Any remaining pressure in the fuel hose may cause the fuel to spray out. Place a container or rag under the hose to catch any fuel that spills. Always clean up any spilt fuel immediately.
- Turn the main switch to "OFF" and disconnect the negative battery lead from the battery terminal before removing the injectors.
- 1. Remove:
 - Fuel rail
 - a. Remove the fuel rail bolts.

FAS30477

CHECKING THE INJECTORS

- 1. Check:
- Injector

Obstruction → Replace and check the fuel pump/fuel supply system.

Deposit \rightarrow Replace.

Damage \rightarrow Replace.

- 2. Check:
- Injector resistance Refer to "CHECKING THE FUEL INJECTORS" on page 8-83.

EAS30769

CHECKING AND CLEANING THE THROTTLE BODIES

TIP

Clean the throttle bodies only if they cannot be synchronized using the bypass air screws. Before cleaning the throttle bodies, check the following items:

- Valve clearance
- Spark plug
- · Air filter element
- Throttle body joint
- Fuel hose
- Exhaust system
- Cylinder head breather hose

EWA17340

WARNING

If the throttle bodies are subjected to strong shocks or dropped during cleaning, replace them as a set.

- 1. Check:
- Throttle bodies
 Cracks/damage → Replace the throttle bodies as a set.
- 2. Clean:
 - Throttle bodies


ECA21540

NOTICE


- Observe the following precautions; otherwise, the throttle bodies may not operate properly.
- Do not subject the throttle bodies to excessive force.
- Clean the throttle bodies in the recommended cleaning solvent.
- Do not use any caustic carburetor cleaning solution.
- Do not apply cleaning solvent directly to any plastic parts, sensors, or seals.
- Be careful not to remove the white paint mark that identifies the standard throttle body.
- Do not turn the bypass air screws "a"; otherwise, the throttle body synchronization will be affected.




Recommended cleaning solvent Yamaha Oil & Brake Cleaner

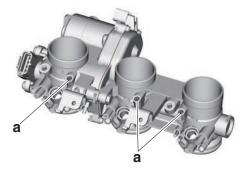

- a. Place the throttle bodies on a flat surface with the air filter case side facing up.
- b. Install the caps (895-14169-00) onto the hose fittings "a".

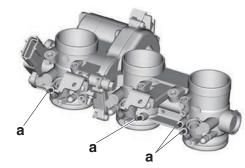

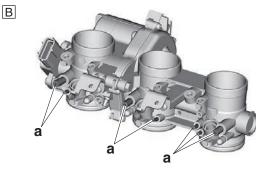

- A. Except for California
- B. For California
- c. Hold the throttle valves in the open position.

WARNING


Α

When cleaning the throttle bodies, be careful not to injure yourself on the throttle valves or other components of the throttle bodies.

ECA20380

NOTICE

- Do not open the throttle valves by supplying electrical power to the throttle bodies.
- Do not use tools to open the throttle valves or to keep them in the open position.
- Do not open the throttle valves quickly.

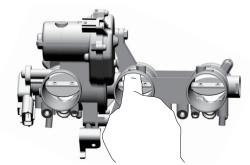

d. Apply the recommended cleaning solvent to the throttle valves and the inside of the throttle bodies to remove any carbon deposits.


TIF

- Do not allow any cleaning solvent to enter the opening for the injectors.
- Do not apply any cleaning solvent to the portions of the throttle valve shafts between the throttle bodies.
 - Remove the carbon deposits from the inside of each throttle body in a downward direction, from the air filter case side of the throttle body to the engine side.

ECA17590

NOTICE

- Do not use a tool, such as a wire brush, to remove the carbon deposits; otherwise, the inside of the throttle bodies may be damaged.
- Do not allow carbon deposits or other foreign materials to enter any of the passages in each throttle body or in the space between the throttle valve shaft and the throttle body.
 - f. After removing the carbon deposits, clean the inside of the throttle bodies with the recommended cleaning solvent, and then dry the throttle bodies using compressed air.
 - g. Make sure that there are no carbon deposits or other foreign materials in any of the passages "a" in each throttle body or in the space "b" between the throttle valve shaft and the throttle body.

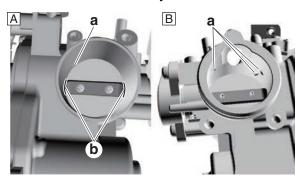

- A. Air filter case side
- B. Throttle body joint side
- 3. Install the throttle bodies.
- 4. Reset:
 - ISC (idle speed control) learning values
 Use the diagnostic code number "67".
 Refer to "DIAGNOSTIC CODE: SENSOR
 OPERATION TABLE" on page 9-66.

- 5. Adjust:
- Throttle bodies synchronizing
 Out of specification → Replace the throttle bodies.
 - Refer to "SYNCHRONIZING THE THROT-TLE BODIES" on page 3-8.

EAS31160

REPLACING THE THROTTLE BODIES

- 1. Remove the throttle bodies from the vehicle.
- 2. Install a new throttle bodies to the vehicle.
- 3. Reset:
 - ISC (idle speed control) learning values
 Use the diagnostic code number "67".
 Refer to "DIAGNOSTIC CODE: SENSOR
 OPERATION TABLE" on page 9-66.
 - A/F control learning value
 Use the diagnostic code number "87".
 Refer to "DIAGNOSTIC CODE: SENSOR
 OPERATION TABLE" on page 9-66.
- 4. Adjust:
- Throttle bodies synchronizing Refer to "SYNCHRONIZING THE THROT-TLE BODIES" on page 3-8.
- 5. Place the vehicle on a maintenance stand so that the rear wheel is elevated.
- 6. Check:
 - Engine idling speed
 Start the engine, warm it up, and then measure the engine idling speed.



Engine idling speed 1200–1400 r/min

EAS30480

INSTALLING THE INJECTORS

ECA1940

NOTICE

- Always use new O-rings.
- When installing the injectors, do not allow any foreign material to enter or adhere to the injectors, fuel rails, or O-rings.
- Be careful not to twist or pinch the O-rings when installing the injectors.
- When installing the injector, install it at the same position as the removed cylinder.
- If an injector is subject to strong shocks or excessive force, replace it.
- 1. Install a new seal onto the end of each injector.
- 2. Install the injectors to the fuel rail, making sure to install them in the correct direction.
- 3. Install the injector assemblies to the throttle bodies.



Fuel rail bolt 3.5 N·m (0.35 kgf·m, 2.6 lb·ft)

4. Check the injector pressure after the injectors are installed.

Refer to "CHECKING THE INJECTOR PRESSURE" on page 7-11.

EAS30481


CHECKING THE INJECTOR PRESSURE

TIP

- After installing the injectors, perform the following steps to check the injector pressure.
- Do not allow any foreign materials to enter the fuel lines.
- 1. Check:
- Injector pressure
- a. Connect the fuel injector pressure adapter "1" to the fuel rail joint "2", and then connect an air compressor "3" to the adapter.
- b. Connect the pressure gauge "4" to the fuel injector pressure adapter "1".



Pressure gauge
90890-03153
Pressure gauge
YU-03153
Fuel injector pressure adapter
90890-03210
Fuel injector pressure adapter
YU-03210

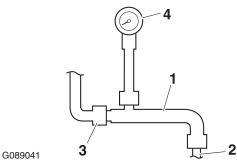

- c. Close the valve on the fuel injector pressure adapter.
- d. Apply air pressure with the air compressor.
- e. Open the valve on the fuel injector pressure adapter until the specified air pressure is reached.



Specified air pressure 490 kPa (5.0 kgf/cm², 71.1 psi) ECA17600

NOTICE

Never exceed the specified air pressure or damage could occur.

- f. Close the valve on the fuel injector pressure adapter.
- g. Check that the specified air pressure is held at least one minute.

Pressure drops \rightarrow Check the pressure gauge and adapter.

Check the seals and O-rings and then reinstall

Out of specification \rightarrow Replace the fuel injectors.

EAS30482

CHECKING THE FUEL PRESSURE

- 1. Check:
 - Fuel pressure
 - a. Remove the passenger seat, rider seat, fuel tank center cover and air scoops.
 Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - b. Remove the fuel bracket bolt and hold up the fuel tank.
 - c. Disconnect the fuel hose "1" from the fuel pump.

Refer to "REMOVING THE FUEL TANK" on page 7-4.

EWA17320


WARNING

Cover fuel hose connections with a cloth when disconnecting them. Residual pressure in the fuel lines could cause fuel to spurt out when removing the hose.

ECA17490

NOTICE


Be sure to disconnect the fuel hose by hand. Do not forcefully disconnect the hose with tools.

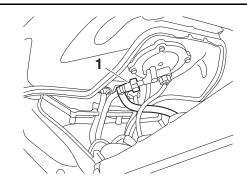

d. Connect the pressure gauge "2" and fuel pressure adapter "3" to the fuel hose.



Pressure gauge 90890-03153 Pressure gauge YU-03153 Fuel pressure adapter 90890-03176 Fuel pressure adapter YM-03176

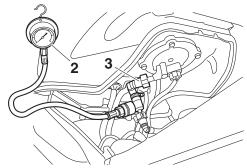

- e. Start the engine.
- f. Measure the fuel line pressure.
 Faulty → Replace the fuel pump.



Fuel line pressure (at idle) 300–390 kPa (3.0–3.9 kgf/cm², 43.5–56.6 psi)

EAS31159

INSTALLING THE FUEL HOSE (FUEL RAIL SIDE)

- 1. Connect:
- Fuel hose (fuel rail side)


ECA17500

NOTICE

When installing the fuel hose, make sure that it is securely connected, and that the fuel hose connector cover on the fuel hose is in the correct position, otherwise the fuel hose will not be properly installed.

TIP

- Install the fuel hose onto the fuel pump securely, and slide the fuel hose connector cover "1" in the direction shown in the illustration.
- It is prohibited to wear the cotton work gloves or equivalent coverings.

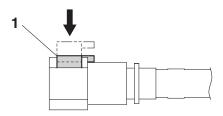

EAS3048

ADJUSTING THE THROTTLE POSITION SENSOR

ECA17540

NOTICE

- Handle the throttle position sensor with special care.
- Never subject the throttle position sensor to strong shocks. If the throttle position sensor is dropped, replace it.
- 1. Check:
 - Throttle position sensor Refer to "DIAGNOSTIC CODE: SENSOR OPERATION TABLE" on page 9-66.
- 2. Adjust:
 - Throttle position sensor angle

TIE

Before adjusting the throttle position sensor, the throttle bodies must be removed.

- a. Temporary tighten the throttle position sensor screws "1".
- b. Check that the throttle valves are fully closed.
- c. Connect the throttle position sensor to the wire harness.
- d. Remove the protective cap, and then connect the YDT to coupler.



Yamaha diagnostic tool USB (US) 90890-03275

Yamaha diagnostic tool (A/I) 90890-03273


TIP

- Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).
- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.
 - e. Diagnostic code number "01" is selected.

- f. Adjust the position of the throttle position sensor angle so that 11–21 can appear in the YDT screen.
- g. After adjusting the throttle position sensor angle, tighten the throttle position sensor screws.



Throttle position sensor screw 3.5 N·m (0.35 kgf·m, 2.6 lb·ft)

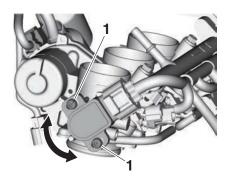

ELECTRICAL SYSTEM

IGNITION SYSTEM	8-1
CIRCUIT DIAGRAM	8-1
ENGINE STOPPING DUE TO SIDESTAND OPERATION	8-5
TROUBLESHOOTING	8-6
ELECTRIC STARTING SYSTEM	9.0
CIRCUIT DIAGRAM	
STARTING CIRCUIT CUT-OFF SYSTEM OPERATION	2-1≎ 2-1≎
TROUBLESHOOTING	
CHARGING SYSTEM	8-17
CIRCUIT DIAGRAM	
TROUBLESHOOTING	
LIGHTING SYSTEM	8-23
CIRCUIT DIAGRAM	
TROUBLESHOOTING	
SIGNALING SYSTEM	8-20
CIRCUIT DIAGRAM	
TROUBLESHOOTING	
COOLING SYSTEM	8-39
CIRCUIT DIAGRAM	
TROUBLESHOOTING	
FUEL PUMP SYSTEM	8-45
CIRCUIT DIAGRAM	
TROUBLESHOOTING	8-49
SMART KEY SYSTEM (for MT09SPR/MT09SPRC)	8-51
CIRCUIT DIAGRAM	
TROUBLESHOOTING	
SMART KEY SYSTEM SELF-DIAGNOSIS	8-56
SMART KEY SYSTEM EMERGENCY MODE	
REGISTERING A SMART KEY	
DISABLING A SMART KEY	
DISABLING THE POWER-ON ALARM	
REPLACING THE REMOTE CONTROL UNIT AND ECU	
REPLACING THE REMOTE CONTROL UNIT	
REPLACING THE ECU	
REPLACEMENT PARTS ITS!	Ψ_ <i>L</i> .'-


ELECTRICAL COMPONENTS	8-65
RELAY LOCATION CHART	8-67
CHECKING THE SWITCHES	
CHECKING THE HANDLEBAR SWITCH (LEFT)	8-70
CHECKING THE HANDLEBAR SWITCH (RIGHT)	8-72
CHECKING THE FUSES	
REPLACING THE ECU (Engine Control Unit)	8-74
CHECKING AND CHARGING THE BATTERY	8-75
CHECKING THE RELAYS	
CHECKING THE RELAY UNIT (DIODE)	
CHECKING THE IGNITION COILS	
CHECKING THE IGNITION SPARK GAP	
CHECKING THE CRANKSHAFT POSITION SENSOR	
CHECKING THE STARTER MOTOR OPERATION	
CHECKING THE STATOR COIL	
CHECKING THE GCU (Generator Control Unit)	
CHECKING THE HORN	
CHECKING THE FUEL SENDER	
CHECKING THE FUEL LEVEL WARNING LIGHT	
CHECKING THE RADIATOR FAN MOTOR	
CHECKING THE COOLANT TEMPERATURE SENSOR	
CHECKING THE THROTTLE SERVO MOTOR	
CHECKING THE INTAKE AIR TEMPERATURE SENSOR	
CHECKING THE FUEL INJECTORS	8-83
CHECKING THE PURGE CUT VALVE SOLENOID	
(for California only)	8-83
CHECKING THE SMART KEY BATTERY	
(for MT09SPR/MT09SPRC)	
CHECKING THE BUZZER (for MT09SPR/MT09SPRC)	
CHECKING THE FUEL TANK CAP (for MT09SPR/MT09SPRC)	8-84
CHECKING THE MAIN SWITCH SOLENOID	
(for MT09SPR/MT09SPRC)	8-85

IGNITION SYSTEM

EAS30490

CIRCUIT DIAGRAM


MT09R/MT09RC

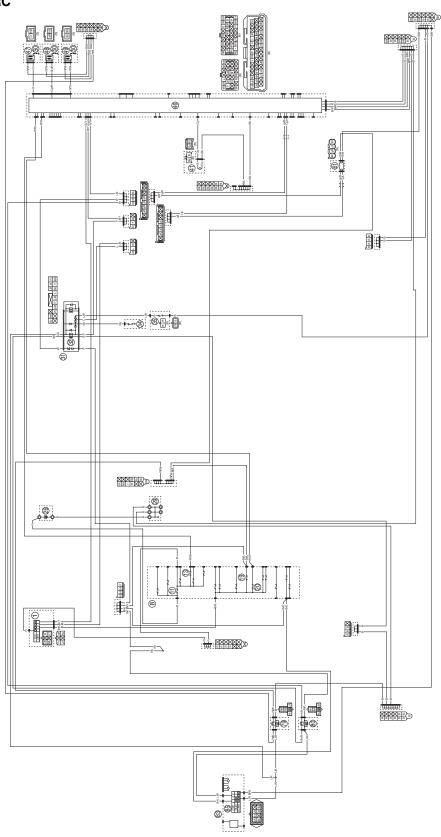

IGNITION SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 26. Battery
- 29. Frame ground
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 34. Neutral switch
- 35. Sidestand switch
- 41. Crankshaft position sensor
- 46. ECU (Engine Control Unit)
- 47. Ignition coil #1
- 48. Ignition coil #2
- 49. Ignition coil #3
- 50. Spark plug
- 61. IMU (Inertial Measurement Unit)
- 79. Engine stop relay
- 80. Starting circuit cut-off relay 2
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank

MT09SPR/MT09SPRC

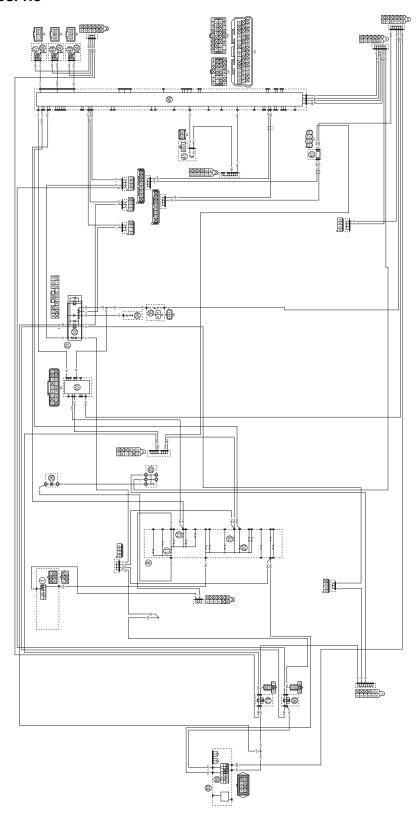

IGNITION SYSTEM


- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 26. Battery
- 29. Frame ground
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 34. Neutral switch
- 35. Sidestand switch
- 41. Crankshaft position sensor
- 46. ECU (Engine Control Unit)
- 47. Ignition coil #1
- 48. Ignition coil #2
- 49. Ignition coil #3
- 50. Spark plug
- 61. IMU (Inertial Measurement Unit)
- 79. Engine stop relay
- 80. Starting circuit cut-off relay 2
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- 101.Remote control unit
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank

EAS3049

ENGINE STOPPING DUE TO SIDESTAND OPERATION

When the engine is running and the transmission is in gear, the engine will stop if the sidestand is moved down. This is because the electric current from the ECU does not flow to the ignition coils or fuel injectors when the neutral switch or sidestand switch is open. However, the engine continues to run under the following conditions:

- The transmission is in gear (the neutral switch is open) and the sidestand is up (the sidestand switch circuit is closed).
- The transmission is in neutral (the neutral switch is closed) and the sidestand is down (the sidestand switch circuit is open).

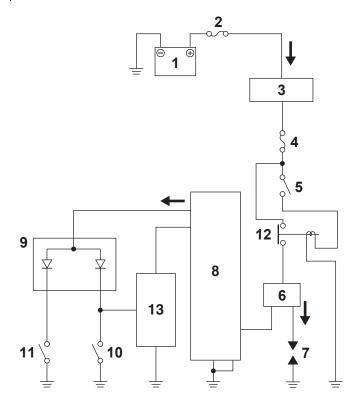

- 1. Battery
- 2. Main fuse
- 3. Main switch
- 4. Ignition fuse 1
- 5. Stop/run/start switch
- 6. Ignition coil
- 7. Spark plug
- 8. ECU (Engine Control Unit)
- 9. Relay unit (diode)
- 10. Sidestand switch
- 11. Neutral switch
- 12. Engine stop relay
- 13. Remote control unit

TROUBLESHOOTING The ignition system fails to operate (no spark or intermittent spark). Before troubleshooting, remove the following part(s): 1. Passenger seat 2. Rider seat 3. Fuel tank center cover 4. Air scoop 5. Fuel tank 6. Air filter case 1. Check the fuses. (Main, backup 2, ignition 1, and ig- $NG \rightarrow$ Replace the fuse(s). Refer to "CHECKING THE FUS-ES" on page 8-73. OK↓ 2. Check the battery. Refer to "CHECKING AND Clean the battery terminals. $NG \rightarrow$ CHARGING THE BATTERY" on Recharge or replace the battery. page 8-75. OK↓ 3. Check the spark plugs. Refer to "CHECKING THE SPARK $NG \rightarrow$ Re-gap or replace the spark plugs. PLUGS" on page 3-5. OK↓ 4. Check the ignition spark gap. Refer to "CHECKING THE IGNI- $\mathsf{OK} \!\! \to \!\!$ Ignition spark gap is OK. TION SPARK GAP" on page 8-78. NG↓ 5. Check the ignition coils. Refer to "CHECKING THE IGNI- $NG \rightarrow$ Replace the ignition coils. TION COILS" on page 8-78. OK↓ 6. Check the crankshaft position sensor. Refer to "CHECKING THE $NG \rightarrow$ Replace the stator coil assembly. CRANKSHAFT POSITION SEN-SOR" on page 8-79.

OK↓

7. Check the main switch. Refer to "CHECKING THE SWITCHES" on page 8-68.

 $NG \rightarrow$

Replace the main switch.

OK↓

IGNITION SYSTEM

8. Check the neutral switch. $\text{NG}{\rightarrow}$ Refer to "CHECKING THE Replace the neutral switch. SWITCHES" on page 8-68. OK↓ 9. Check the sidestand switch. $NG \rightarrow$ Refer to "CHECKING THE Replace the sidestand switch. SWITCHES" on page 8-68. OK↓ 10. Check the relay unit (diode). Refer to "CHECKING THE RELAY $NG \rightarrow$ Replace the relay unit. UNIT (DIODE)" on page 8-77. OK↓ 11. Check the stop/run/start switch. Refer to "CHECKING THE HAN- $NG \rightarrow$ Replace the handlebar switch (right). DLEBAR SWITCH (RIGHT)" on page 8-72. OK↓ 12. Check the entire ignition system's Properly connect or repair the ignition sys- $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on tem's wiring. page 8-1. OK↓ Replace the ECU and/or the remote control unit. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.


IGNITION SYSTEM

EAS2007

ELECTRIC STARTING SYSTEM

CIRCUIT DIAGRAM


MT09R/MT09RC

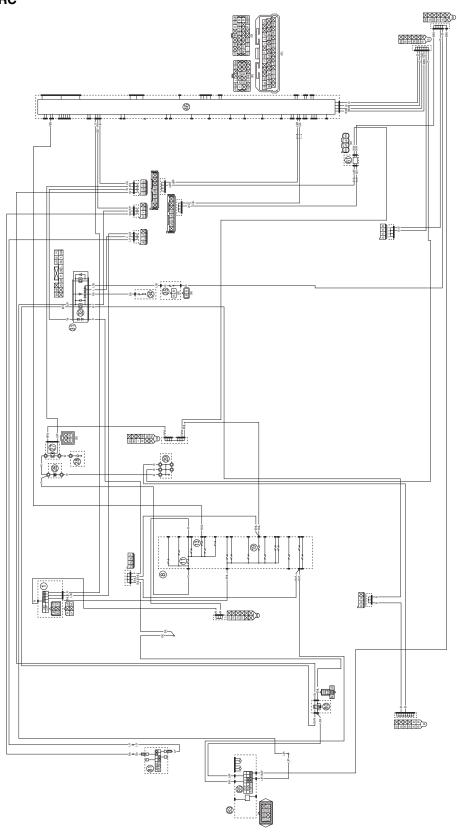

ELECTRIC STARTING SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 26. Battery
- 27. Starter relay
- 28. Starter motor
- 29. Frame ground
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 34. Neutral switch
- 35. Sidestand switch
- 46. ECU (Engine Control Unit)
- 61. IMU (Inertial Measurement Unit)
- 80. Starting circuit cut-off relay 2
- 81. Clutch switch
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank

MT09SPR/MT09SPRC

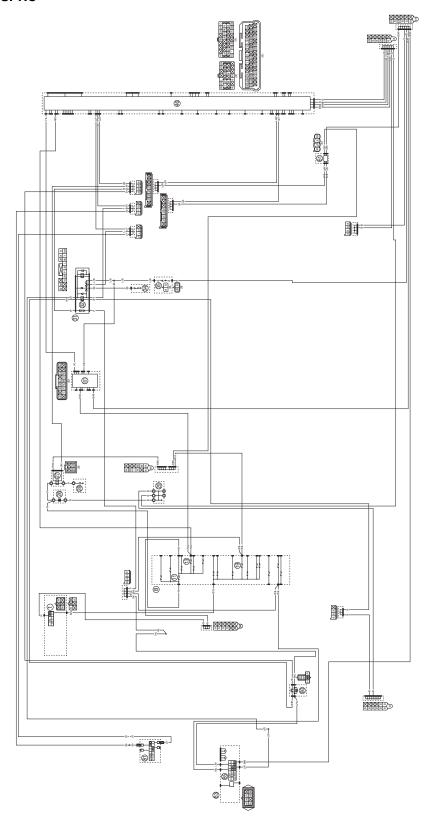

ELECTRIC STARTING SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 26. Battery
- 27. Starter relay
- 28. Starter motor
- 29. Frame ground
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 34. Neutral switch
- 35. Sidestand switch
- 46. ECU (Engine Control Unit)
- 61. IMU (Inertial Measurement Unit)
- 80. Starting circuit cut-off relay 2
- 81. Clutch switch
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- 101.Remote control unit
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank


EAS3049

STARTING CIRCUIT CUT-OFF SYSTEM OPERATION

If the main switch is turned to "ON" and the "©" side of the stop/run/start switch is pushed, the starter motor can only operate if at least one of the following conditions is met:

- The transmission is in neutral (the neutral switch is closed).
- The clutch lever is pulled to the handlebar (the clutch switch is closed) and the sidestand is up (the sidestand switch is closed).

The starting circuit cut-off relay prevents the starter motor from operating when neither of these conditions has been met. In this instance, the starting circuit cut-off relay is open so current cannot reach the starter motor. When at least one of the above conditions has been met, the starting circuit cut-off relay is closed and the engine can be started by pressing the "⑤" side of the stop/run/start switch.

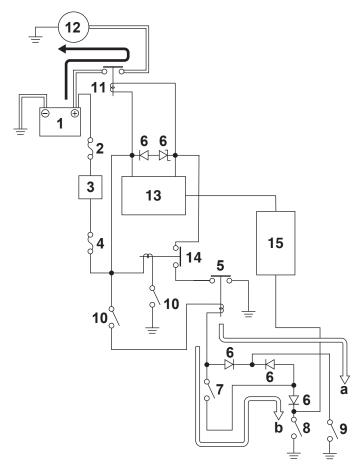

- a. WHEN THE TRANSMISSION IS IN NEUTRAL
- b. WHEN THE SIDESTAND IS UP AND THE CLUTCH LEVER IS PULLED TO THE HANDLEBAR
- 1. Battery
- 2. Main fuse
- 3. Main switch
- 4. Ignition fuse 1
- 5. Starting circuit cut-off relay
- 6. Relay unit (diode)
- 7. Clutch switch
- 8. Sidestand switch
- 9. Neutral switch
- 10. Stop/run/start switch

- 11. Starter relay
- 12. Starter motor
- 13. ECU (Engine Control Unit)
- 14. Starting circuit cut-off relay 2
- 15. Remote control unit

TROUBLESHOOTING The starter motor fails to turn. Before troubleshooting, remove the following part(s): 1. Passenger seat 2. Rider seat 3. Fuel tank center cover 4. Air scoop 5. Fuel tank 6. Air filter case 1. Check the fuses. (Main, backup 2, ignition 1, and ig- $NG \rightarrow$ Replace the fuse(s). nition 2) Refer to "CHECKING THE FUS-ES" on page 8-73. OK↓ 2. Check the battery. Refer to "CHECKING AND Clean the battery terminals. $NG \rightarrow$ CHARGING THE BATTERY" on Recharge or replace the battery. page 8-75. OK↓ 3. Check the starter motor operation. Starter motor is OK. Perform the electric Refer to "CHECKING THE START- $\mathsf{OK} \!\! \to \!\!$ starting system troubleshooting, starting ER MOTOR OPERATION" on with step (5). page 8-79. NG↓ 4. Check the starter motor. Refer to "CHECKING THE START- $NG \rightarrow$ Repair or replace the starter motor. ER MOTOR" on page 5-43. OK↓ 5. Check the relay unit (starting circuit cut-off relay). $NG \rightarrow$ Replace the relay unit. Refer to "CHECKING THE RE-LAYS" on page 8-75. OK↓ 6. Check the relay unit (diode). Refer to "CHECKING THE RELAY $NG \rightarrow$ Replace the relay unit. UNIT (DIODE)" on page 8-77. OK↓ 7. Check the starter relay. Refer to "CHECKING THE RE- $NG \rightarrow$ Replace the starter relay. LAYS" on page 8-75. OK↓

ELECTRIC STARTING SYSTEM


8. Check the main switch. Refer to "CHECKING THE SWITCHES" on page 8-68.	NG→	Replace the main switch.
OK↓	'	
9. Check the neutral switch. Refer to "CHECKING THE SWITCHES" on page 8-68.	$NG{ o}$	Replace the neutral switch.
OK↓	!	
10.Check the sidestand switch. Refer to "CHECKING THE SWITCHES" on page 8-68.	$NG {\to}$	Replace the sidestand switch.
OK↓	l	
11.Check the clutch switch. Refer to "CHECKING THE SWITCHES" on page 8-68.	NG→	Replace the clutch switch.
OK↓	l	
12.Check the stop/run/start switch. Refer to "CHECKING THE HAN- DLEBAR SWITCH (RIGHT)" on page 8-72.	NG→	Replace the handlebar switch (right).
OK↓	l	
13.Check the entire starting system's wiring. Refer to "CIRCUIT DIAGRAM" on page 8-9.	NG→	Properly connect or repair the starting system's wiring.
OK↓	•	
Replace the ECU and/or the remote control unit. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.		

ELECTRIC STARTING SYSTEM

FAS20074

CHARGING SYSTEM


CIRCUIT DIAGRAM
MT09R/MT09RC

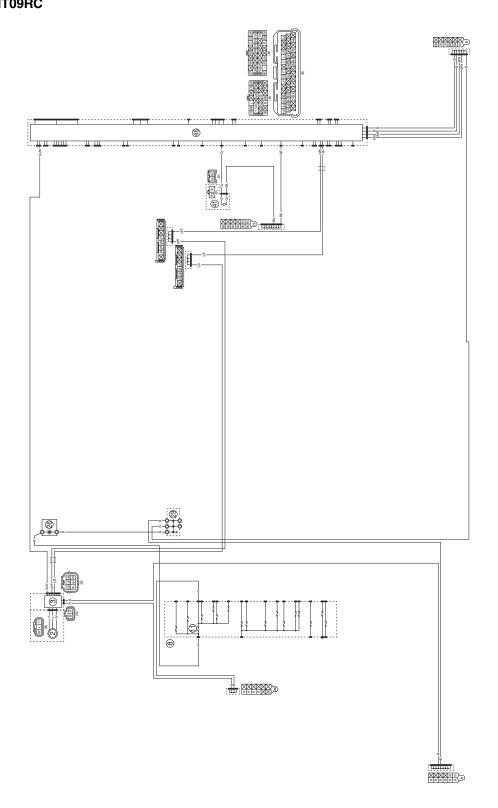

CHARGING SYSTEM

- 2. AC magneto
- 3. GCU (Generator Control Unit)
- 8. Fuse box
- 11. Main fuse
- 26. Battery
- 29. Frame ground
- 41. Crankshaft position sensor
- 46. ECU (Engine Control Unit)
- *. For California only: Y Except for California: blank

MT09SPR/MT09SPRC

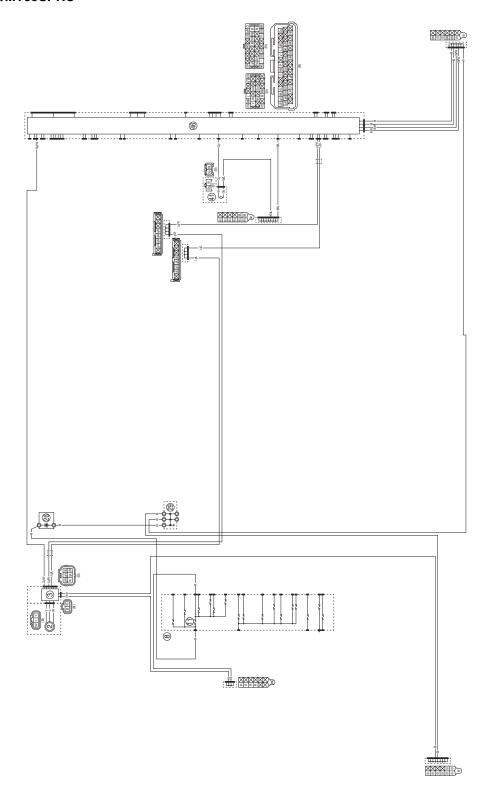

CHARGING SYSTEM

- 2. AC magneto
- 3. GCU (Generator Control Unit)
- 8. Fuse box
- 11. Main fuse
- 26. Battery
- 29. Frame ground
- 41. Crankshaft position sensor
- 46. ECU (Engine Control Unit)
- *. For California only: Y Except for California: blank

TROUBLESHOOTING The battery is not being charged. Before troubleshooting, remove the following part(s): 1. Passenger seat 2. Rider seat 3. Battery 4. Fuel tank center cover 5. Air scoop 6. Fuel tank 7. Air filter case 1. Check the fuse. (Main) $NG \rightarrow$ Replace the fuse. Refer to "CHECKING THE FUS-ES" on page 8-73. OK↓ 2. Check the battery. Refer to "CHECKING AND Clean the battery terminals. $NG \rightarrow$ CHARGING THE BATTERY" on Recharge or replace the battery. page 8-75. OK↓ 3. Check the stator coil. Refer to "CHECKING THE STA- $NG \rightarrow$ Replace the stator coil assembly. TOR COIL" on page 8-79. OK↓ 4. Check the crankshaft position sen-Refer to "CHECKING THE $NG \rightarrow$ Replace the stator coil assembly. CRANKSHAFT POSITION SEN-SOR" on page 8-79. OK↓ 5. Check the entire charging system's wiring. Properly connect or repair the charging $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on system's wiring. page 8-17. OK↓ 6. Check the GCU (Generator Control Unit). Replace the GCU (Generator Control Refer to "CHECKING THE GCU $NG \rightarrow$ Unit). (Generator Control Unit)" on page 8-80.


OK↓

CHARGING SYSTEM

Replace the ECU. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

LIGHTING SYSTEM


CIRCUIT DIAGRAM MT09R/MT09RC

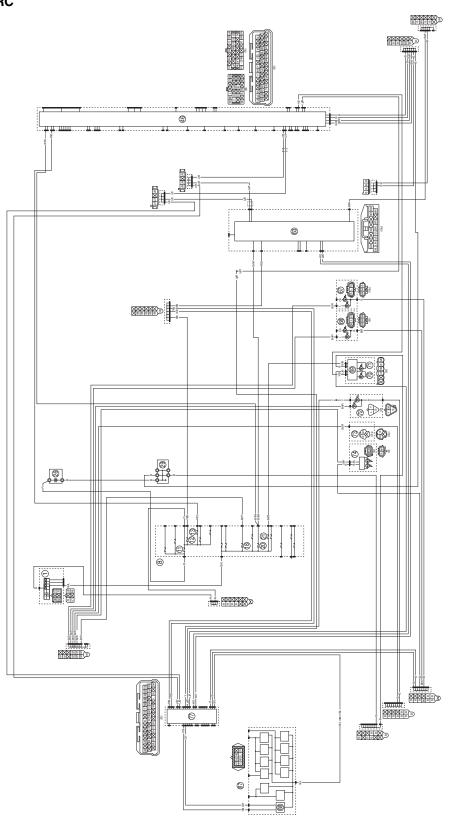

LIGHTING SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 20. Ignition fuse 2
- 21. Headlight fuse
- 26. Battery
- 29. Frame ground
- 46. ECU (Engine Control Unit)
- 63. Meter assembly
- 67. Front turn signal/position light (right)
- 68. Front turn signal/position light (left)
- 69. Headlight control unit
- 70. Headlight (low)
- 71. Headlight (high)
- 72. Tail/brake light
- 73. License plate light
- 74. Auxiliary light
- 77. BCM (Body Control Module)
- 87. Handlebar switch (left)
- 88. Dimmer/pass switch
- *. For California only: Y Except for California: blank

MT09SPR/MT09SPRC

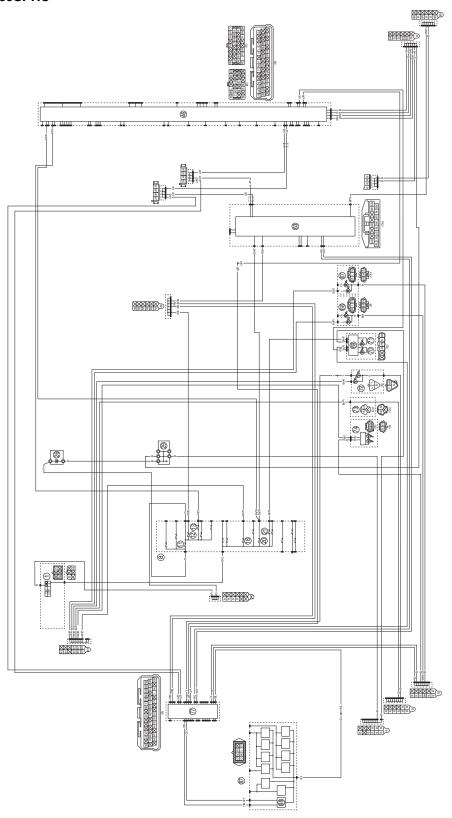

LIGHTING SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 20. Ignition fuse 2
- 21. Headlight fuse
- 26. Battery
- 29. Frame ground
- 46. ECU (Engine Control Unit)
- 63. Meter assembly
- 67. Front turn signal/position light (right)
- 68. Front turn signal/position light (left)
- 69. Headlight control unit
- 70. Headlight (low)
- 71. Headlight (high)
- 72. Tail/brake light
- 73. License plate light
- 74. Auxiliary light
- 77. BCM (Body Control Module)
- 87. Handlebar switch (left)
- 88. Dimmer/pass switch
- *. For California only: Y Except for California: blank

EAS30499

TROUBLESHOOTING

Any of the following fail to light: headlight, auxiliary light, high beam indicator light, position light, taillight, license light or meter light.

TIP

- Before troubleshooting, remove the following part(s):
- 1. Passenger seat
- 2. Rider seat
- 3. Radiator cover (left and right)
- 4. Fuel tank center cover
- 5. Air scoop
- 6. Fuel tank
- 7. Air filter case
- 8. Meter cover
- 9. Headlight front cover
- 10.Headlight cover
- 11.Auxiliary light
- 12.Headlight assembly
 - Check the fuses.
 (Main, headlight, ignition 2, backup 1, backup 2, and signaling system) Refer to "CHECKING THE FUS-ES" on page 8-73.

 $NG \rightarrow$

Replace the fuse(s).

OK↓

2. Check the battery.
Refer to "CHECKING AND
CHARGING THE BATTERY" on
page 8-75.

 $NG \rightarrow$

• Clean the battery terminals.

• Recharge or replace the battery.

OK↓

Check the main switch. Refer to "CHECKING THE SWITCHES" on page 8-68.

 $NG \rightarrow$

Replace the main switch.

OK↓

 Check the dimmer switch. Refer to "CHECKING THE HAN-DLEBAR SWITCH (LEFT)" on page 8-70.

 $NG \rightarrow$

The dimmer switch is faulty. Replace the handlebar switch (left).

OK↓

 Check the pass switch.
 Refer to "CHECKING THE HAN-DLEBAR SWITCH (LEFT)" on page 8-70.

 $NG \rightarrow$

The pass switch is faulty. Replace the handlebar switch (left).

OK↓

LIGHTING SYSTEM

 Check the entire lighting system's wiring.
 Refer to "CIRCUIT DIAGRAM" on page 8-23.

 $NG \rightarrow$

Properly connect or repair the lighting system's wiring.

ОК↓

Replace the BCM (Body Control Module), Headlight control unit, ECU, meter assembly, headlight assembly, front turn signal/position light, tail/brake light, license plate light or auxiliary light.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.


EAS20076

SIGNALING SYSTEM

EAS30500

CIRCUIT DIAGRAM


MT09R/MT09RC

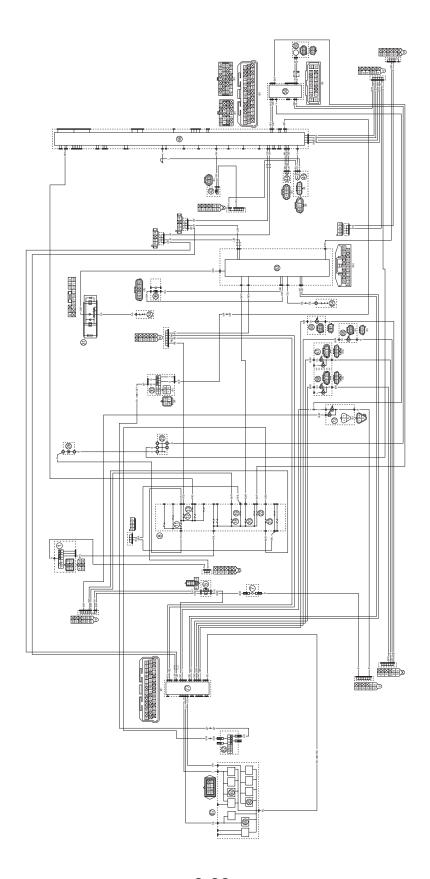

SIGNALING SYSTEM

- 1. Main switch
- 5. Horn relay
- 7. Horn
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 22. ABS control unit fuse
- 23. Brake light fuse
- 26. Battery
- 29. Frame ground
- 30. Rear brake light switch
- 31. Relay unit
- 34. Neutral switch
- 36. Fuel sender
- 42. Coolant temperature sensor
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 58. ABS ECU (Electronic Control Unit)
- 60. Rear wheel sensor
- 63. Meter assembly
- 64. Oil pressure switch
- 65. Rear turn signal light (right)
- 66. Rear turn signal light (left)
- 67. Front turn signal/position light (right)
- 68. Front turn signal/position light (left)
- 72. Tail/brake light
- 77. BCM (Body Control Module)
- 82. Front brake light switch
- 87. Handlebar switch (left)
- 89. Turn signal switch
- 92. Hazard switch
- 95. Horn switch
- For California only: Y
 Except for California: blank

MT09SPR/MT09SPRC

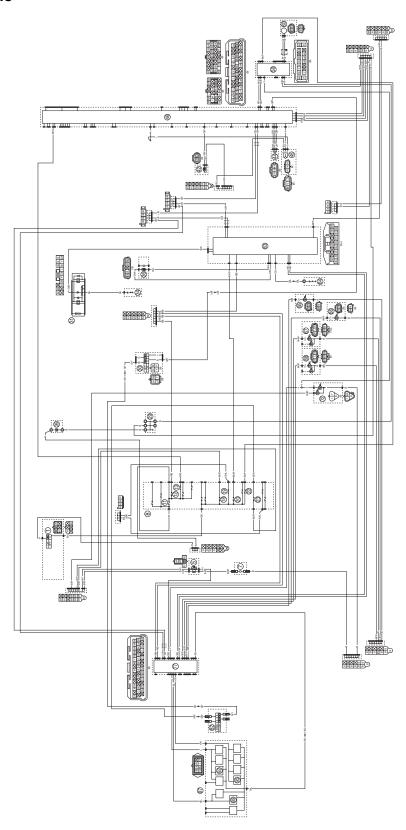

SIGNALING SYSTEM

- 1. Main switch
- 5. Horn relay
- 7. Horn
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 22. ABS control unit fuse
- 23. Brake light fuse
- 26. Battery
- 29. Frame ground
- 30. Rear brake light switch
- 31. Relay unit
- 34. Neutral switch
- 36. Fuel sender
- 42. Coolant temperature sensor
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 58. ABS ECU (Electronic Control Unit)
- 60. Rear wheel sensor
- 63. Meter assembly
- 64. Oil pressure switch
- 65. Rear turn signal light (right)
- 66. Rear turn signal light (left)
- 67. Front turn signal/position light (right)
- 68. Front turn signal/position light (left)
- 72. Tail/brake light
- 77. BCM (Body Control Module)
- 82. Front brake light switch
- 87. Handlebar switch (left)
- 89. Turn signal switch
- 92. Hazard switch
- 95. Horn switch
- For California only: Y
 Except for California: blank

EAS30501

TROUBLESHOOTING

- Any of the following fail to light: turn signal/position light, brake light or an indicator light.
- The horn fails to sound.
- The fuel meter fails to come on.
- The speedometer fails to operate.

TIP_

- Before troubleshooting, remove the following part(s):
- 1. Passenger seat
- 2. Rider seat
- 3. Radiator cover (left and right)
- 4. Fuel tank center cover
- 5. Air scoop
- 6. Fuel tank
- 7. Air filter case
- 8. Radiator cover
 - Check the fuses.
 (Main, ignition 1, ignition 2, ABS control unit, signaling system, backup 1, backup 2, and brake light.)

 Refer to "CHECKING THE FUSES" on page 8-73.

Replace the fuse(s).

OK↓

2. Check the battery.
Refer to "CHECKING AND
CHARGING THE BATTERY" on
page 8-75.

 $NG \rightarrow$

 $NG \rightarrow$

Clean the battery terminals.

• Recharge or replace the battery.

OK↓

3. Check the main switch. Refer to "CHECKING THE SWITCHES" on page 8-68.

 $NG \rightarrow$

Replace the main switch.

OK↓

Check the entire signaling system's wiring.
 Refer to "CIRCUIT DIAGRAM" on page 8-29.

 $NG \rightarrow$

Properly connect or repair the signaling system's wiring.

OK↓

Check the condition of each of the signaling system circuits. Refer to "Checking the signaling system" on page 8-34.

Checking the signaling system

The horn fails to sound.

 Check the horn.
 Refer to "CHECKING THE HORN" on page 8-80.

 $NG \rightarrow$

Replace the horn.

OK↓

2. Check the horn relay. Refer to "CHECKING THE RE-LAYS" on page 8-75.

 $NG \rightarrow$

Replace the horn relay.

OK↓

Check the horn switch.
 Refer to "CHECKING THE HANDLEBAR SWITCH (LEFT)" on page 8-70.

 $NG \rightarrow$

Replace the handlebar switch (left).

OK↓

Check the entire signaling system's wiring.
 Refer to "CIRCUIT DIAGRAM" on page 8-29.

 $NG \rightarrow$

Properly connect or repair the signaling system's wiring.

OK↓

Replace the BCM (Body Control Module).

The tail/brake light fails to come on.

1. Check the front brake light switch. Refer to "CHECKING THE SWITCHES" on page 8-68.

 $NG \rightarrow$

Replace the front brake light switch.

OK↓

2. Check the rear brake light switch. Refer to "CHECKING THE SWITCHES" on page 8-68.

 $NG \rightarrow$

Replace the rear brake light switch.

OK↓

Check the entire signaling system's wiring.
 Refer to "CIRCUIT DIAGRAM" on page 8-29.

 $NG \rightarrow$

Properly connect or repair the signaling system's wiring.

OK↓

Replace the BCM (Body Control Module), ECU or tail/brake light. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74. The turn signal/position light, turn signal indicator light or both fail to blink. 1. Check the turn signal switch. Refer to "CHECKING THE HAN- $NG \rightarrow$ Replace the handlebar switch (left). DLEBAR SWITCH (LEFT)" on page 8-70. OK↓ 2. Check the hazard switch. Refer to "CHECKING THE HAN- $NG \rightarrow$ Replace the handlebar switch (left). DLEBAR SWITCH (LEFT)" on page 8-70. OK↓ 3. Check the entire signaling system's wiring. Properly connect or repair the signaling $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on system's wiring. page 8-29. OK↓ Replace the BCM (Body Control Module), meter assembly or turn signal/ position light. The neutral indicator light fails to come on. 1. Check the neutral switch. Refer to "CHECKING THE $NG \rightarrow$ Replace the neutral switch. SWITCHES" on page 8-68. OK↓ 2. Check the relay unit (diode). Refer to "CHECKING THE RELAY $NG \rightarrow$ Replace the relay unit. UNIT (DIODE)" on page 8-77. OK↓ 3. Check the entire signaling sys-Properly connect or repair the signaling tem's wiring. $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on system's wiring. page 8-29. OK↓ Replace the meter assembly. The oil pressure warning icon fails to come on when the main switch is set to "ON". 1. Check the entire signaling system's wiring. Properly connect or replace the wiring har-

OK↓

page 8-29

Refer to "CIRCUIT DIAGRAM" on

 $NG \rightarrow$

2. Disconnect the oil pressure switch lead from the oil pressure switch, and then check whether the oil pressure and coolant temperature warning light comes on when the lead is connected to the frame ground.	NG→	Replace the meter assembly.		
ok↓				
Replace the oil pressure switch.				
The oil pressure warning icon remains on after the engine is started.				
Check the entire signaling system's wiring. Refer to "CIRCUIT DIAGRAM" on page 8-29.	NG→	Properly connect or replace the wiring harness.		
OK↓				
2. Measure the engine oil pressure. Refer to "MEASURING THE EN- GINE OIL PRESSURE" on page 3- 30.	NG→	Check the engine oil leakage, oil viscosity, oil seal, oil filter, or oil pump.		
OK↓	ı			
Replace the oil pressure switch.				
The fuel level warning light fails to come on.				
Check the fuel sender. Refer to "CHECKING THE FUEL SENDER" on page 8-80.	NG→	Replace the fuel pump assembly.		
OK↓	ı			
Check the entire signaling system's wiring. Refer to "CIRCUIT DIAGRAM" on page 8-29.	NG→	Properly connect or repair the signaling system's wiring.		
OK↓				
Replace the meter assembly.				
The coolant temperature warning icon fails to come on.				
Check the coolant temperature sensor. Refer to "CHECKING THE COOLANT TEMPERATURE SENSOR" on page 8-81.	$NG{ o}$	Replace the coolant temperature sensor.		
OK↓				

8-36

SIGNALING SYSTEM

Check the entire signaling system's wiring. Refer to "CIRCUIT DIAGRAM" on page 8-29.	$\text{NG}{\rightarrow}$	Properly connect or replace the wiring harness.
ОК↓		
Replace the ECU or meter assembly. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.		
Quick shift system does not operate.		
Check that the auxiliary system warning does not come on.	$\text{NG}{\rightarrow}$	Repair the faulty parts.
ОК↓		
Check that the quick shift system is working under normal quick shift system operating conditions.	$NG {\to}$	Check the quick shift system operating conditions explained in the owner's manual and operate the quick shift system accordingly.
ОК↓		
 3. Make sure that the quick shift system is effective. (Check whether the "QS▲▼" icon is displayed at the top of the meter.) 	$NG{\rightarrow}$	Activate the quick shift system. (Set the quick shift system to a setting other than "OFF".)
OK↓		
 4. Are you operating while the "QS▲▼" icon is lit? 	$NG {\to}$	Operate while the "QS▲▼" icon is lit.
OK↓		
5. Is the transmission gear display normal?	$NG {\to}$	Repair the gear position sensor.
OK↓		
6. Check the connection of the coupler between the gear position sensor and the ECU.	$NG {\rightarrow}$	Connect the gear position sensor coupler.
OK↓		
7. Are the clutch and neutral switches normal?	$NG {\to}$	Repair the switch if it is not normal.
OK↓		

SIGNALING SYSTEM

8. Check the shift sensor value in the diagnostic mode. 2.5 V when the shift pedal is not being operated. $NG \rightarrow$ Replace the shift sensor. 4.5 V when the shift pedal is pressed fully in. 0.5 V when the shift pedal is pushed fully up. OK↓ 9. Check the entire signaling system's wiring. Properly connect or repair the signaling $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on system's wiring. page 8-29. OK↓ Replace the ECU. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74. The speedometer fails to operate. 1. Check the rear wheel sensor. Refer to "MAINTENANCE OF THE $NG \rightarrow$ Replace the rear wheel sensor. REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28. OK↓ 2. Check the entire wheel sensor wir-Properly connect or repair the wheel sening. $NG \rightarrow$ sor wiring. Refer to TIP. OK↓ Replace the hydraulic unit assembly, ECU or meter assembly. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74. TIP Repair or replace if there is an open or short circuit. Between rear wheel sensor coupler and ABS ECU coupler. (white-white) (black-black) Between ABS ECU coupler and ECU coupler. (white/green-white/green) (white/black-white/black) Between ECU coupler and meter assembly coupler. (blue/white-blue/white) (blue/black-blue/black)


EAS20077

COOLING SYSTEM

EAS30502

CIRCUIT DIAGRAM


MT09R/MT09RC

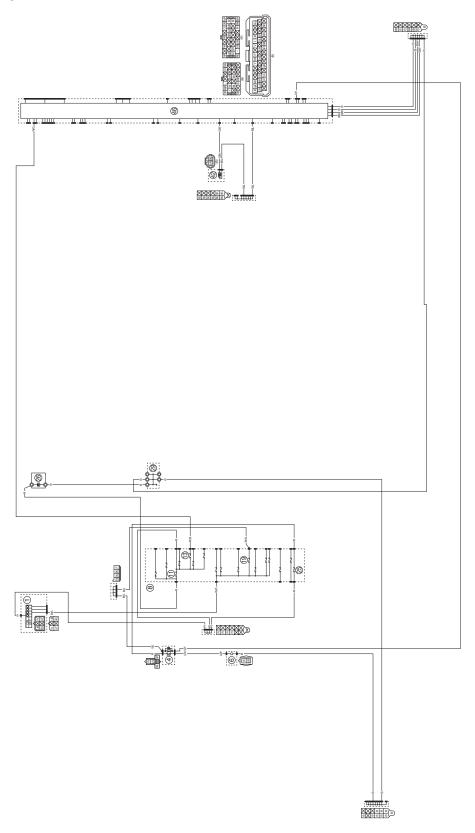

COOLING SYSTEM

- 1. Main switch
- 4. Radiator fan motor relay
- 6. Radiator fan motor
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 25. Radiator fan motor fuse
- 26. Battery
- 29. Frame ground
- 42. Coolant temperature sensor
- 46. ECU (Engine Control Unit)
- *. For California only: Y Except for California: blank

MT09SPR/MT09SPRC

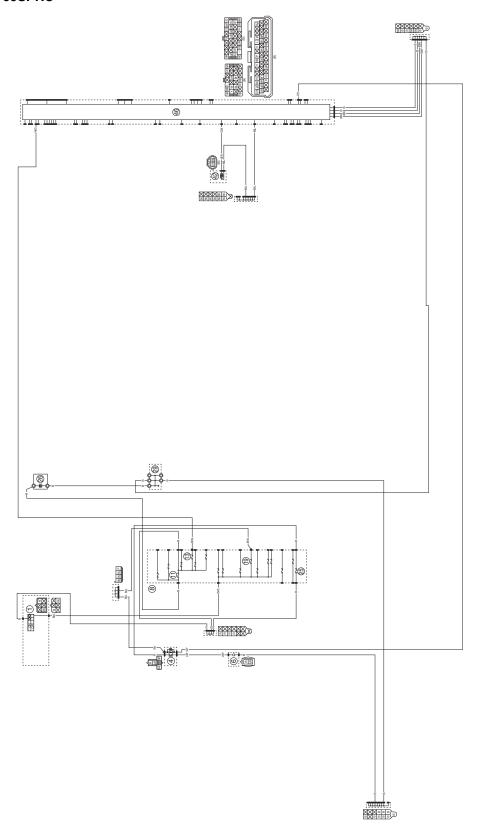

COOLING SYSTEM

- 1. Main switch
- 4. Radiator fan motor relay
- 6. Radiator fan motor
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 25. Radiator fan motor fuse
- 26. Battery
- 29. Frame ground
- 42. Coolant temperature sensor
- 46. ECU (Engine Control Unit)
- *. For California only: Y Except for California: blank

TROUBLESHOOTING TIP • Before troubleshooting, remove the following part(s): 1. Passenger seat 2. Rider seat 3. Fuel tank center cover 4. Air scoop 5. Fuel tank 6. Air filter case 1. Check the fuses. (Main, ignition 1, backup 2, and radiator fan motor) $NG \rightarrow$ Replace the fuse(s). Refer to "CHECKING THE FUS-ES" on page 8-73. OK↓ 2. Check the battery. Refer to "CHECKING AND Clean the battery terminals. $NG \rightarrow$ Recharge or replace the battery. CHARGING THE BATTERY" on page 8-75. OK↓ 3. Check the main switch. Refer to "CHECKING THE $NG \rightarrow$ Replace the main switch. SWITCHES" on page 8-68. OK↓ 4. Check the radiator fan motor. $\text{NG}{\rightarrow}$ Refer to "CHECKING THE RADIA-Replace the radiator fan motor. TOR FAN MOTOR" on page 8-81. OK↓ 5. Check the radiator fan motor relay. Refer to "CHECKING THE RE- $NG \rightarrow$ Replace the radiator fan motor relay. LAYS" on page 8-75. OK↓ 6. Check the coolant temperature sensor. Refer to "CHECKING THE COOL- $NG \rightarrow$ Replace the coolant temperature sensor. ANT TEMPERATURE SENSOR" on page 8-81. OK↓ 7. Check the entire cooling system's Properly connect or repair the cooling syswiring. $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on tem's wiring.

OK↓

page 8-39.

COOLING SYSTEM


Replace the ECU. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74. EAS2008

FUEL PUMP SYSTEM

EAS30513

CIRCUIT DIAGRAM


MT09R/MT09RC

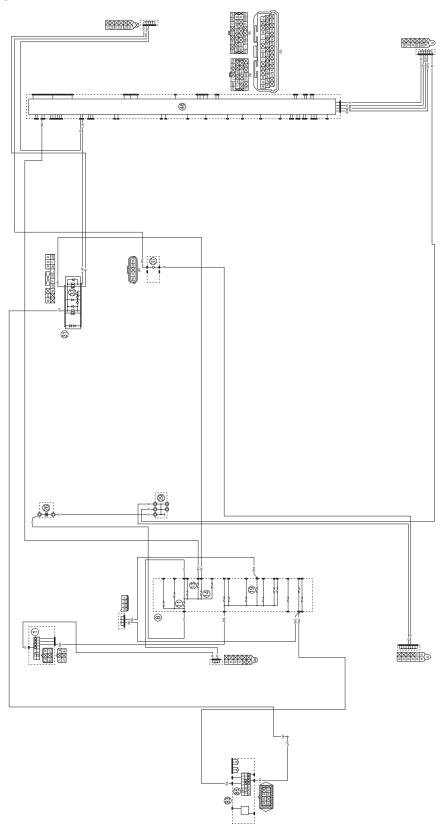

FUEL PUMP SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 14. Fuel injection system fuse
- 19. Ignition fuse 1
- 26. Battery
- 29. Frame ground
- 31. Relay unit
- 33. Fuel pump relay
- 37. Fuel pump
- 46. ECU (Engine Control Unit)
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- *. For California only: Y Except for California: blank

MT09SPR/MT09SPRC

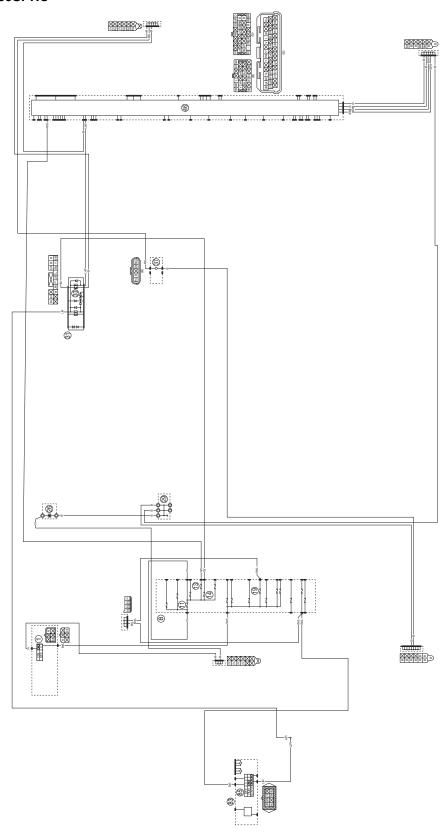

FUEL PUMP SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 13. Backup fuse 2
- 14. Fuel injection system fuse
- 19. Ignition fuse 1
- 26. Battery
- 29. Frame ground
- 31. Relay unit
- 33. Fuel pump relay
- 37. Fuel pump
- 46. ECU (Engine Control Unit)
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- *. For California only: Y Except for California: blank

EAS30514 TROUBLESHOOTING If the fuel pump fails to operate. Before troubleshooting, remove the following part(s): 1. Passenger seat 2. Fuel tank center cover 3. Rider seat 4. Air scoop 5. Fuel tank 1. Check the fuses. (Main, ignition 1, backup 2, and fuel injection system) $NG \rightarrow$ Replace the fuse(s). Refer to "CHECKING THE FUS-ES" on page 8-73. OK↓ 2. Check the battery. Refer to "CHECKING AND Clean the battery terminals. $NG \rightarrow$ CHARGING THE BATTERY" on Recharge or replace the battery. page 8-75. OK↓ 3. Check the main switch. Refer to "CHECKING THE $NG \rightarrow$ Replace the main switch. SWITCHES" on page 8-68. OK↓ 4. Check the relay unit (fuel pump relay). $NG \rightarrow$ Replace the relay unit. Refer to "CHECKING THE RE-LAYS" on page 8-75. OK↓ 5. Check the fuel pump. Refer to "CHECKING THE FUEL $NG \rightarrow$ Replace the fuel pump. PUMP OPERATION" on page 7-4. OK↓ 6. Check the stop/run/start switch. Refer to "CHECKING THE HAN-Replace the handlebar switch (right). $NG \rightarrow$ DLEBAR SWITCH (RIGHT)" on page 8-72. OK↓ 7. Check the entire fuel pump system's wiring. Properly connect or repair the fuel pump $NG \rightarrow$ Refer to "CIRCUIT DIAGRAM" on system's wiring.

OK↓


page 8-45.

FUEL PUMP SYSTEM

Replace the ECU. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74. EAS2020

SMART KEY SYSTEM (for MT09SPR/MT09SPRC)

CIRCUIT DIAGRAM

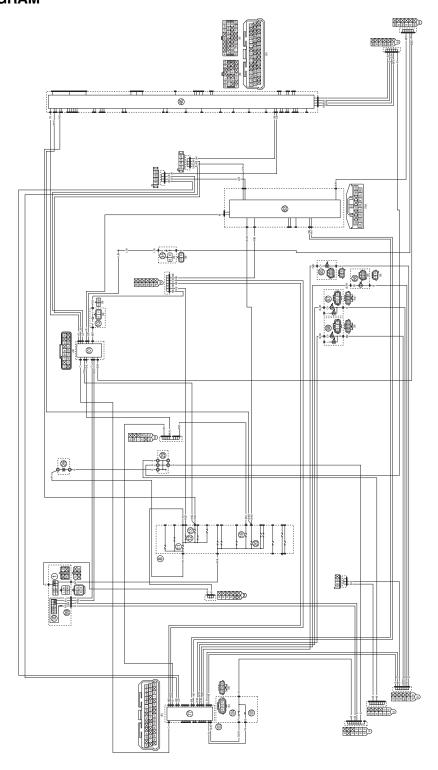

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 26. Battery
- 29. Frame ground
- 35. Sidestand switch
- 46. ECU (Engine Control Unit)
- 63. Meter assembly
- 65. Rear turn signal light (right)
- 66. Rear turn signal light (left)
- 67. Front turn signal/position light (right)
- 68. Front turn signal/position light (left)
- 77. BCM (Body Control Module)
- 99. Main switch solenoid
- 100.Request switch
- 101.Remote control unit
- 102.Buzzer
- 103.Fuel tank cap
- 104. Fuel tank cap unlock switch
- 105. Fuel tank cap latch solenoid
- For California only: Y
 Except for California: blank
- **. For California only: R/W Except for California: blank

EAS31453

TROUBLESHOOTING

Vehicle power does not turn on. (Meter does not start and auxiliary light, taillight do not come on.) Engine does not start even though vehicle power is turned on.

Fuel tank cap does not open. (Vehicle power is turned on.)

Answer back function does not operate.

TIP

Before troubleshooting, remove the following part(s):

- 1. Passenger seat
- 2. Rider seat
- 3. Fuel tank center cover
- 4. Air scoop
- 5. Fuel tank

Checking the vehicle power

- 1. Check the smart key.
 - → The smart key indicator light comes on when the ON/OFF switch "¬" is pushed.
 - → Check the button cell battery. Refer to "CHECKING THE SMART KEY BATTERY (for MT09SPR/ MT09SPRC)" on page 8-84.

 $NG \rightarrow$

Replace the button cell battery of the smart key. Standard battery: CR2025

OK↓

Check the fuses.
 (Main, backup 1, backup 2, ignition 1 and ignition 2
 Refer to "CHECKING THE FUSES" on page 8-73.

 $NG \rightarrow$

Replace the fuse(s).

OK↓

3. Check the battery.
Refer to "CHECKING AND
CHARGING THE BATTERY" on
page 8-75.

 $NG \rightarrow$

Clean the battery terminals.

Recharge or replace the battery.

OK↓

4. Check the main switch and request switch.

Refer to "CHECKING THE SWITCHES" on page 8-68.

 $NG \rightarrow$

Replace the main switch.

OK↓

 Check the main switch solenoid. Refer to "CHECKING THE MAIN SWITCH SOLENOID (for MT09SPR/MT09SPRC)" on page 8-85.

 $NG \rightarrow$

Replace the main switch.

OK↓

6. Check the entire smart key system's wiring. Refer to "CIRCUIT DIAGRAM" on page 8-51.

 $NG \rightarrow$

Properly connect or replace the wire harness.

OK↓

Replace the remote control unit.

Checking the smart key system

Before checking the smart key system, make sure that the smart key is located within the operating range of the smart key system and that the key is turned on.

Vehicle power does not turn on. (The meter does not start, the taillight and auxiliary light do not come <u>on.)</u>

TIP

- Before performing this procedure, make sure that there are no sources of strong electromagnetic waves in the vicinity. (Because the amount of electromagnetic waves will change if the vehicle is moved a short distance, move the vehicle away from sources of strong electromagnetic waves before performing the procedure.)
- Use the smart key that is registered to the vehicle.
 - 1. Check the vehicle power. Refer to "Checking the vehicle power".

 $NG \rightarrow$

Repair or replace any defective parts.

OK↓

- There are sources of strong electromagnetic waves in the vicinity \rightarrow Move the vehicle.
- Smart key malfunction → Register and use a different smart key.
- Remote control unit malfunction → Replace the remote control unit.

Engine does not start even though vehicle power is turned on.

1. When the vehicle power is turned on, the smart key system indicator light "48" flashes. Refer to "SMART KEY SYSTEM

SELF-DIAGNOSIS" on page 8-56.

 $NO \rightarrow$

Check and repair the electric starting sys-

Refer to "ELECTRIC STARTING SYS-TEM" on page 8-9.

YES↓

2. Check for continuity in the communication line between the ECU and the remote control unit (Yellow/ Blue).

 $NG \rightarrow$

Replace the wire harness.

OK↓

- Check the engine.
 Refer to "Checking the vehicle power" on page 8-53.
- Replace the ECU.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- Replace the remote control unit.

Fuel tank cap does not open. (Vehicle power can be turned on.)

 Check the vehicle power. Refer to "Checking the vehicle power".

 $NG \rightarrow$

Repair or replace any defective parts.

OK↓

 Check the fuel tank cap latch solenoid.
 Refer to "CHECKING THE FUEL TANK CAP (for MT09SPR/ MT09SPRC)" on page 8-84.

 $NG \rightarrow$

Replace the fuel tank cap.

OK↓

- Check the mechanical components of the lock for malfunctions. Repair or replace any defective parts.
- Replace the remote control unit.

Answer back function does not operate.

1. Check the vehicle power. Refer to "Checking the vehicle power" on page 8-53.

 $NG \rightarrow$

Repair or replace any defective parts.

OK↓

2. Check the buzzer operation. Refer to "CHECKING THE BUZZ-ER (for MT09SPR/MT09SPRC)" on page 8-84.

 $NG \rightarrow$

Replace the buzzer.

OK↓

Replace the turn signal/position lights, BCM (Body Control Module) or the remote control unit.

EAS31534

SMART KEY SYSTEM SELF-DIAGNOSIS

The smart key system is equipped with a self-diagnostic function. If a malfunction is detected in the system, the malfunction will be indicated by the flash pattern of the smart key indicator light "----".

TIP

The smart key indicator light "---" comes on for about 2 seconds when the vehicle power is on. If one of the following malfunctions is detected, the indicator light starts flashing.

Item	Flash pattern	Flashing time/num- ber of flashes	Malfunction and check point
Low voltage of smart key button cell battery	a D.5 (s) a.LED on b.LED off	20 (seconds)	Replace the button cell battery of the smart key. Refer to "SMART KEY SYSTEM (for MT09SPR/ MT09SPRC)" on page 8-51.
Vehicle power off verification error	a 0.15 (s) b 0.15 (s) a.LED on b.LED off	30 (seconds)	The smart key cannot be recognized. Check that there are no sources of strong electromagnetic waves in the vicinity, the smart key is not lost, and the battery is not discharged.
Running detection er- ror*	a 0.15 (s) b 0.15 (s) a.LED on b.LED off	Flashes continuously until the error is resolved.	The smart key cannot be recognized. Check that there are no sources of strong electromagnetic waves in the vicinity, the smart key is not lost, and the battery is not discharged.
 ECU communication error Data error ECU malfunction 	a.LED on b.LED off	Flashes continuously until the error is resolved./flashes 4 times in a repeating cycle.	Check the wire harness. Check the ECU. Check the remote control unit.

^{*} The running detection error

If the smart key is dropped or can no longer be recognized while the vehicle is traveling. If the vehicle travels while the smart key cannot be recognized, the smart key system indicator light "--3" flashes in 0.15-second intervals.

The vehicle can be ridden, but the vehicle power cannot be turned off.

Although a forced shutdown can be performed to turn off the vehicle power (the main switch is pushed for 4 times within 2 seconds while the smart key system indicator light """ is flashing in 0.15-second intervals), the vehicle power cannot be turned back on.

SMART KEY SYSTEM SELF-DIAGNOSIS

If a communication error between the ECU and the remote control unit is detected, the following DTC numbers will be displayed on the meter to indicate the location of the malfunction.

TIP

These DTC numbers are not stored in the memory of the ECU. Note all of the displayed DTC numbers, and then check the vehicle.

DTC	Device that de- tected the mal- function	Symptom	Cause	Check or mainte- nance job	
51	Remote control unit	Communication error between the smart key and the remote control unit.	Radio wave noise interference. • Lock condition in the smart key • Defective smart key • Defective remote control unit	Perform the checks and maintenance job for "Engine does not start even though ve- hicle power is turned on."	
53	Remote control unit	Communication error between the ECU and the remote control unit.	Radio wave noise interference or disconnected lead. Obstruction due to radio wave noise Disconnection in the wire harness Defective ECU Defective remote control unit	Perform the checks and maintenance job for "Engine does not start even though ve- hicle power is turned on."	
54	Remote control unit	Codes transmitted between the ECU and the remote control unit do not match.	Radio wave noise interference or disconnected lead. Obstruction due to radio wave noise. Disconnection in the wire harness Defective ECU (when the ECU or remote control unit is replaced with a unit from a different vehicle) Defective remote control unit	Perform the checks and maintenance job for "Engine does not start even though ve- hicle power is turned on."	
56	ECU	Unidentified code is received.	Radio wave noise interference or disconnected lead. Obstruction due to radio wave noise Disconnection in the wire harness Defective ECU Defective remote control unit	Perform the checks and maintenance job for "Engine does not start even though ve- hicle power is turned on."	

EAS31535

SMART KEY SYSTEM EMERGENCY MODE

When the smart key is lost, damaged, or its battery has discharged, the vehicle can still be turned on and the engine started. You will need a smart key system identification number. To operate the vehicle in emergency mode, carry out the following steps.


TIP

Emergency mode operation will be canceled if the respective steps are not carried out within the time set for each operation.

- 1. Stop the vehicle in a safe place and turn the main switch to "OFF".
- 2. Push the main switch for 5 seconds until the smart key system indicator light flashes once, then release it. Repeat two more times. The smart key system indicator light "1" will come on for 3 seconds to indicate the transition to emergency mode.



3. After the smart key system indicator light "--®" goes off, use the main switch to enter the smart key identification number "1" located on the identification number card. (Refer to the following procedure on how to input the identification number.)

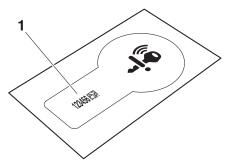

4. The input identification number is indicated by the number of flashes of the smart key system indicator light "*" while the main switch is pushed.

For example, if the smart key identification number is 123456:

Push and hold the main switch. \rightarrow

The smart key system indicator light " \clubsuit " will start to flash. \rightarrow



Release the main switch after the smart key system indicator light " \clubsuit " flashes 1 time. \rightarrow

The first digit of the identification number has been set as 1. \rightarrow Push and hold the main switch again. \rightarrow



Release the main switch after the smart key system indicator light " $_{4}$ " flashes 2 times. \rightarrow The second digit of the identification number has been set as 2. \rightarrow Repeat the above procedure until all 6 digits of the identification number have been set.

5. The smart key system indicator light "45" will come on for 10 seconds if the correct 6-digit identification number was entered.

TIP

When one of the following situations applies, emergency mode will be terminated and the smart key system indicator light will flash quickly for 3 seconds. In this case, start over again from step 2.

- When there are no main switch operations for 10 seconds during the identification number input process.
- When the smart key system indicator light is allowed to flash nine or more times.
- The identification number is not entered correctly.
- 6. While the smart key system indicator light is on, push the main switch once more to complete emergency mode access. The smart key system indicator light will go off and then come back on for approximately 4 seconds.
- 7. While the smart key system indicator light is on, turn the main switch to "ON". The vehicle can now be operated normally.


EAS31536

REGISTERING A SMART KEY


The following procedure can be used to register additional smart keys or a new smart key in case the original smart key is lost.

TIP_

- A maximum of 6 smart keys can be registered to the remote control unit.
- Be sure to register the smart keys one at a time. Do not register multiple smart keys at the same time.
- 1. Place the smart key "1" that will be registered within 80 cm (31.5 in) "a" of the remote control unit "2".

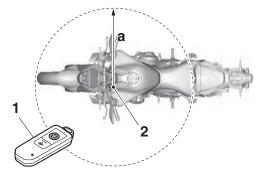


- 2. Perform steps 1-5 in "SMART KEY SYSTEM EMERGENCY MODE" on page 8-58.
- 3. While the smart key system indicator light "-®" is on for 10 seconds, push the main switch "1" for 5 seconds until buzzer sounds once.

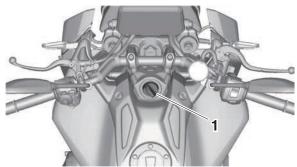

4. The smart key indicator light (red) "1" on the new smart key comes on for 10 seconds.

TIP

While the smart key system indicator light on the smart key is on, the smart key system indicator light "45" flashes according to the number of currently registered smart keys. (For example, if 5 smart keys are registered, the indicator light flashes 5 times.)

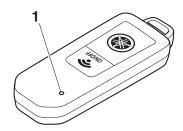

- 5. While the smart key system indicator is on for 10 seconds, push the button on the smart key to transmit a signal from the smart key to the remote control unit.
- 6. If the smart key is registered successfully, the smart key system indicator light "-3" will come on for 3 seconds, and then the smart key system will turn off.

 If the smart key was not registered successfully, the smart key system indicator light "-3" will flash for

TIP

If this registration procedure is performed for a smart key that is already registered, the smart key system indicator light "-48" will flash for 7 seconds (on for 0.2 second and off for 0.8 second).


EAS31537

DISABLING A SMART KEY

If a smart key is lost or stolen, the smart key can be disabled.


3 seconds, and then the smart key system will turn off.

1. Place all of the smart keys "1" 300 cm (118.1 in) "a" or more away from the remote control unit "2" or lock the communication.

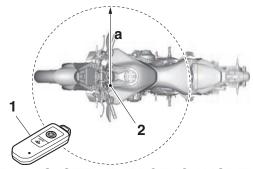

2. Perform steps 1-5 in "SMART KEY SYSTEM EMERGENCY MODE" on page 8-58.

- 3. While the smart key system indicator light "" is on for 10 seconds, perform the following procedure.
 - a. Push the main switch "1" 5 times or more until buzzer sounds 3 times.

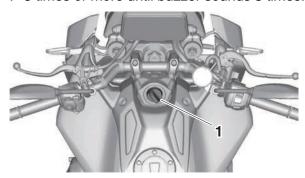

- 4. Check that the smart key system indicator light "48" goes off (the smart key disable mode is activated).
- 5. Turn on (unlocked setting) the smart keys that you want to enable and place them within 80 cm (31.5 in) of the smart key unit.
- 6. Push the main switch for 5 seconds or more to start the communication between the smart key unit and the smart keys that are located within 80 cm (31.5 in) of the unit.

TIP

The number of smart keys that currently can be used will be indicated.

Number of flashes = Number of verified smart keys. (1 cycle of on for 0.3 second and off for 0.3 second = 1 smart key)

7. Push the main switch for 5 seconds or more. The use of only the verified smart keys will be enabled. The use of all other smart keys will be disabled.


TIP

- If the procedure was not completed successfully, repeat the procedure from step 1.
- To enable a smart key after its use has been disabled, perform this procedure again.

EAS32347

DISABLING THE POWER-ON ALARM

1. Place the smart key "1" that will be registered within 80 cm (31.5 in) "a" of the remote control unit "2".

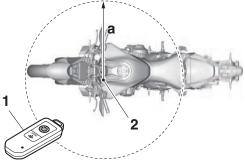

- 2. Push the main switch and the smart key system indicator light will come on for approximately 4 seconds
- 3. While the smart key system indicator light is on, turn the main switch to "ON".
- 4. Extend and retract the sidestand by hand for 10 times or more within 15 seconds from vehicle power on.
- 5. When the buzzer sounds, the setting is complete.
 - If the buzzer sounds 2 times: The power-on alarm is turned off.
 - If the buzzer sounds 1 times: The power-on alarm is turned on.

EAS34104

REPLACING THE REMOTE CONTROL UNIT AND ECU

TIP

Do not replace the remote control unit and ECU at the same time. Always replace them in the following order: (1) remote control unit and (2) ECU.

EAS32447

REPLACING THE REMOTE CONTROL UNIT

- 1. Replace the remote control unit, and then place only 1 previously used smart key within 80 cm (31.5 in) of the remote control unit.
- 2. Check that the vehicle power can be turned on and off correctly.
- 3. Register any additional smart keys.

TIP

- If multiple smart keys were registered to the previous remote control unit, perform the preceding procedure for only 1 smart key. Do not perform the procedure for multiple smart keys at the same time.
- If the smart key identification number matches, it can be determined that the replacement procedure is being performed for a legitimate user. Write the remote control unit identification number and smart key identification number to the remote control unit and overwrite the smart identification number on the smart key with the new number.

EAS31541

REPLACING THE ECU

- 1. Replace the ECU, and then place the previously used smart key within 80 cm (31.5 in) of the remote control unit.
- 2. Check that the vehicle power can be turned on and off correctly.

TIP

An identification number is not written to the ECU when it is shipped from the factory. When the vehicle system is turned on for the first time, the remote control unit identification number is automatically written from the remote control unit to the ECU.

EAS31	71	ξ

REPLACEMENT PARTS LIST

TIP

When replacing the parts, refer to the following sections.


- Refer to "SMART KEY SYSTEM EMERGENCY MODE" on page 8-58.
- Refer to "REGISTERING A SMART KEY" on page 8-59.
- Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

Faulty part	when repart of the part of th	Smart key identifica- : tion number or smart key is required.		Replacement parts (when an item is required in order to replace parts) This part must be replaced even if it is not faulty.		Remarks
	Smart key identifi- cation number	Smart key	Smart key	Re- mote con- trol unit	ECU	
Smart key	0	×	0	×	×	Register the smart key identification number in the emergency mode.
Remote control unit	×	×	O*	0	O*	Replace the smart key, remote control unit, and ECU as a set.
ECU	Δ	Δ	×	×	0	When the vehicle system is turned on, the smart key identification number is automatically registered to the ECU.
Remote control unit/ECU	×	×	O*	0	0	Replace the smart key, remote control unit, and ECU as a set.
Smart key/Remote control unit	×	×	0	0	O*	Replace the smart key, remote control unit, and ECU as a set.
Smart key/ECU	0	×	0	×	0	Register the smart key identification number in the emergency mode. When the vehicle system is turned on, the smart key identification number is automatically registered to the ECU.

	Required item when replacing parts		Replacement parts (when an item is re- quired in order to re- place parts)				
	○: Requ	uired.	○: Replace.				
Faulty part	is required.			Remarks			
	×: Not re- quired.		This part must be *: replaced even if it is not faulty.				
	Smart key identifi- cation number	Smart key	Smart key	Re- mote con- trol unit	ECU		
Smart key/Remote control unit/ECU	×	×	0	0	0	Replace the smart key, remote control unit, and ECU as a set.	


EAS20089

ELECTRICAL COMPONENTS

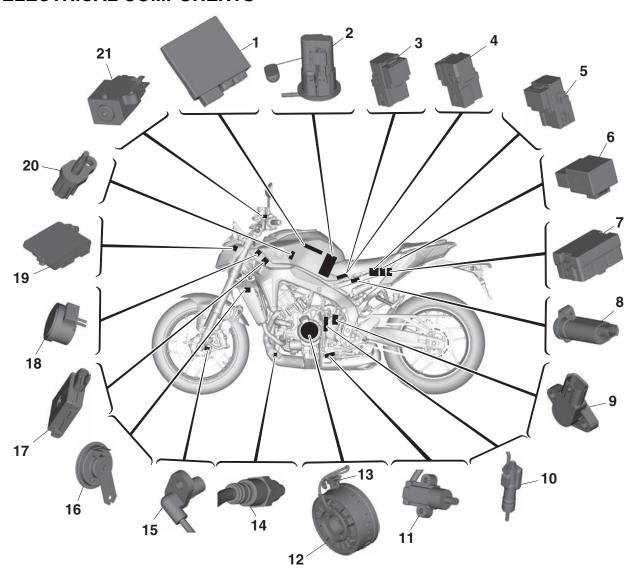

- 1. ECU (Engine Control Unit)
- 2. Fuel pump
- 3. Horn relay
- 4. Radiator fan motor relay
- 5. Engine stop relay
- 6. Relay unit
- 7. Fuse box
- 8. USB jack
- 9. Gear position sensor
- 10. Shift sensor
- 11. Sidestand switch
- 12. AC magneto
- 13. Crankshaft position sensor
- 14. O₂ sensor
- 15. Front wheel sensor
- 16. Horn
- 17. Remote control unit (for MT09SPR/ MT09SPRC)


- 18. Buzzer (for MT09SPR/MT09SPRC)
- 19. Headlight control unit
- 20. Intake air temperature sensor
- 21. Clutch switch

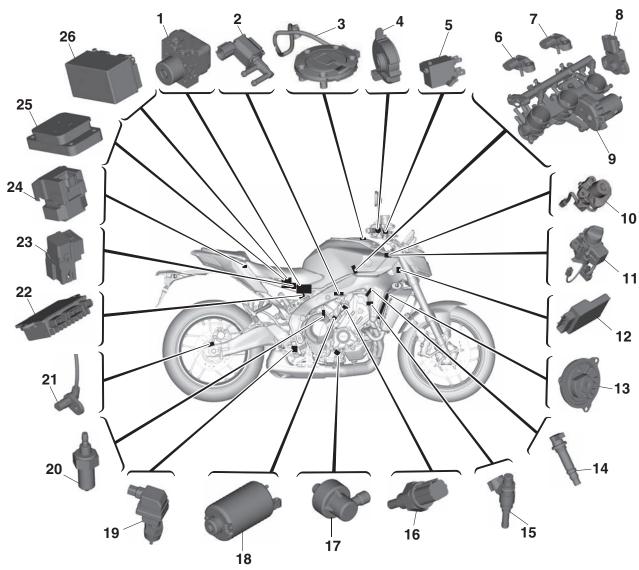

- 1. ABS ECU (Electronic Control Unit)
- 2. Purge cut valve solenoid (for California only)
- 3. Fuel tank cap (for MT09SPR/MT09SPRC)
- 4. Accelerator position sensor
- 5. Front brake light switch
- 6. Intake air pressure sensor 2
- 7. Intake air pressure sensor 1
- 8. Throttle position sensor
- 9. Throttle servo motor
- 10. Main switch (for MT09R/MT09RC)
- 11. Main switch (for MT09SPR/MT09SPRC)
- 12. BCM (Body Control Module)
- 13. Radiator fan motor
- 14. Ignition coil
- 15. Injector
- 16. Coolant temperature sensor
- 17. Oil pressure switch
- 18. Starter motor
- 19. Rear brake light switch
- 20. Neutral switch

- 21. Rear wheel sensor
- 22. GCU (Generator Control Unit)
- 23. Starting circuit cut-off relay 2
- 24. Starter relay
- 25. IMU (Inertial Measurement Unit)
- 26. Battery

RELAY LOCATION CHART

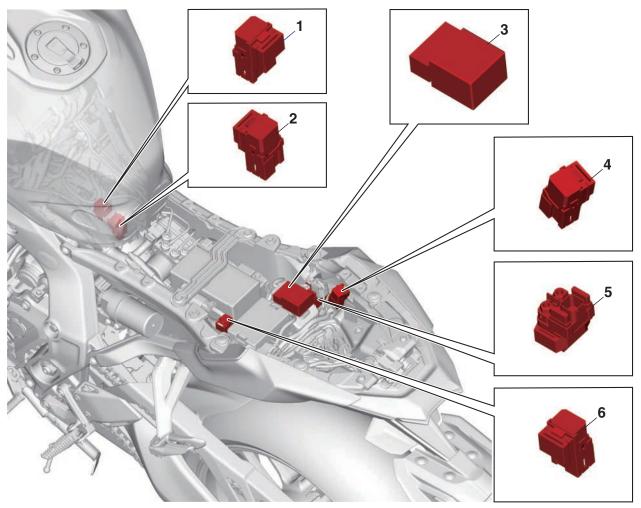

- 1. Horn relay
- 2. Radiator fan motor relay
- 3. Relay unit
- 4. Starting circuit cut-off relay 2
- 5. Starter relay
- 6. Engine stop relay


EAS30549

CHECKING THE SWITCHES


Check each switch for continuity with the digital circuit tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

TIP

Refer to "CHECKING THE SWITCHES" in "BASIC INFORMATION" (separate volume).

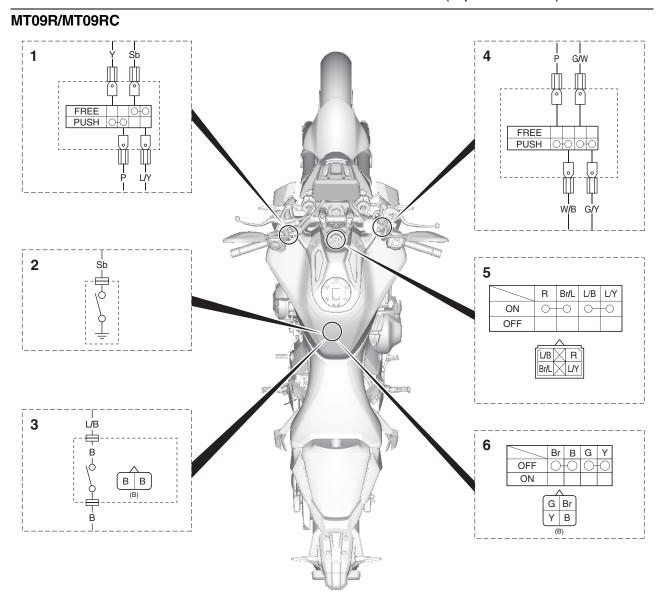

- 1. Clutch switch
- 2. Neutral switch
- 3. Sidestand switch
- 4. Front brake light switch
- 5. Main switch
- 6. Rear brake light switch

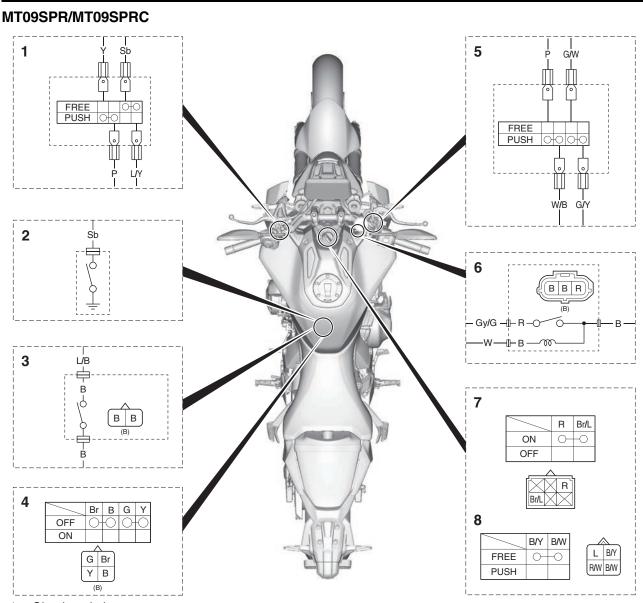

- 1. Clutch switch
- 2. Neutral switch
- 3. Sidestand switch
- 4. Rear brake light switch
- 5. Front brake light switch
- 6. Fuel tank cap unlock switch
- 7. Main switch
- 8. Request switch

EAS34058

CHECKING THE HANDLEBAR SWITCH (LEFT)

Check each switch for resistance with the digital circuit tester. If out of specification, replace the handlebar switch (left).


TIP_

When connecting the tester to the terminals, be careful not to bend the terminals.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- 1. Disconnect the handlebar switch (left) coupler.
- 2. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal as shown.

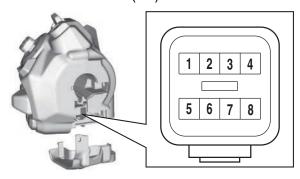


Cruise control power switch

- 1. Check:
- Cruise control power switch resistance Out of specification → Replace.



Resistance (pushed) 0.18–0.23 K Ω (between "3" and "2") Resistance (free) 10 K Ω (between "3" and "2")


a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.

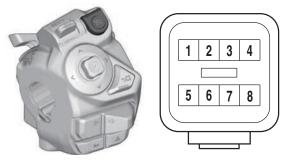


Measure the cruise control power switch resistance.

Cruise control setting switch

- 1. Check:
- Cruise control setting switch resistance
 Out of specification → Replace.

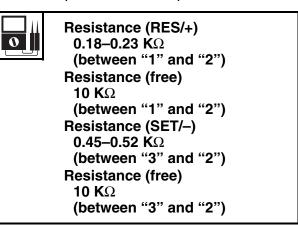

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.

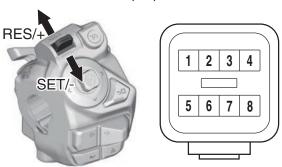

b. Measure the cruise control setting switch resistance.

Dimmer/pass switch

- 1. Check:
- Dimmer/pass switch resistance
 Out of specification → Replace.




Resistance (high beam) $0.18-0.23~\text{K}\Omega$ (between "7" and "2") Resistance (low beam) $0.45-0.52~\text{K}\Omega$ (between "7" and "2") Resistance (free) $10~\text{K}\Omega$ (between "7" and "2") Resistance (flash the high beam.) $0.18-0.23~\text{K}\Omega$ (between "4" and "2") Resistance (free) $10~\text{K}\Omega$ (between "4" and "2") Resistance (free) $10~\text{K}\Omega$ (between "4" and "2")

TIP

While the headlights are set to low beam, push the switch inwards (direction A) to momentarily flash the high beam.

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.

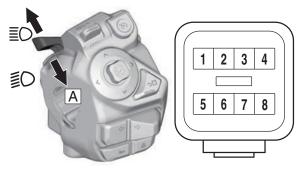

b. Measure the dimmer/pass switch resistance.

Horn switch

- 1. Check:
- Horn switch resistance
 Out of specification → Replace.



Resistance (pushed) 0.18–0.23 K Ω (between "5" and "2") Resistance (free) 10 K Ω (between "5" and "2")

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.





b. Measure the horn switch resistance.

Home Button


- 1. Check:
- Home button resistance
 Out of specification → Replace.



Resistance (pushed) 0.45–0.52 K Ω (between "5" and "2") Resistance (free) 10 K Ω (between "5" and "2")

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.



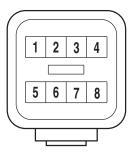

b. Measure the Home button resistance.

Hazard switch


- 1. Check:
- Hazard switch resistance
 Out of specification → Replace.



Resistance (pushed) 0.87–0.98 K Ω (between "3" and "2") Resistance (free) 10 K Ω (between "3" and "2")

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.



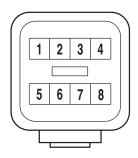

Measure the hazard switch resistance.

Turn signal switch

TIP

To cancel a turn signal manually, press the switch a second time in the same direction.

- 1. Check:
- Turn signal switch resistance
 Out of specification → Replace.




Resistance (left (soft press)) 0.45–0.52 K Ω (between "6" and "2") Resistance (left (hard press)) 0.18–0.23 K Ω (between "6" and "2") Resistance (right (soft press)) 1.64–1.85 K Ω (between "6" and "2") Resistance (right (hard press)) 0.87–0.98 K Ω (between "6" and "2") Resistance (free) 10 K Ω (between "6" and "2")

TIP

This switch controls the turn signal lights. This is a 2-stage switch, meaning that pressing it soft or hard has a different effect.

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.



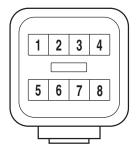

b. Measure the turn signal switch resistance.

Joystick


- 1. Check:
 - Joystick resistance
 Out of specification → Replace.



Resistance (left) **1.64–1.85 Κ**Ω (between "3" and "2") Resistance (right) 3.43-3.84 KΩ (between "3" and "2") Resistance (free) 10 K Ω (between "3" and "2") Resistance (up) **0.87–0.98 K**Ω (between "5" and "2") Resistance (down) 1.64-1.85 KΩ (between "5" and "2") Resistance (free) **10 Κ**Ω (between "5" and "2") Resistance (pushed) **3.43–3.84** ΚΩ (between "6" and "2") Resistance (free) **10 K**Ω (between "6" and "2")

a. Connect the digital circuit tester (Ω) to the handlebar switch (left) terminal.



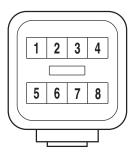

b. Measure the joystick resistance.

EAS3405

CHECKING THE HANDLEBAR SWITCH (RIGHT)

Check each switch for continuity or resistance with the digital circuit tester. If out of specification, replace the handlebar switch (right).


TIP

When connecting the tester to the terminals, be careful not to bend the terminals.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Disconnect the handlebar switch (right) coupler.
- 2. Connect the digital circuit tester (Ω) to the handlebar switch (right) terminal as shown.

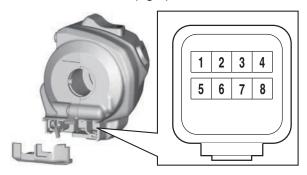

Stop/run/start switch

- 1. Check:
- Stop/run/start switch continuity
 Out of specification → Replace.



Stop ⋈
No continuity
(between "1" and "5")
(between "6" and "7")
Run ∩
Continuity
(between "1" and "5")
No continuity
(between "6" and "7")
Start ⊚ (while pressing)
Continuity
(between "1" and "5")
(between "1" and "5")

a. Connect the digital circuit tester (Ω) to the handlebar switch (right) terminal.



Measure the stop/run/start switch continuity.

YRC mode button

- 1. Check:
 - YRC mode button resistance
 Out of specification → Replace.



Resistance (pushed) 1.64–1.85 K Ω (between "3" and "4") Resistance (free) 10 K Ω (between "3" and "4")

a. Connect the digital circuit tester (Ω) to the handlebar switch (right) terminal.



b. Measure the YRC mode button resistance.

EAS3055

CHECKING THE FUSES

The following procedure applies to all of the fuses.

ECA13680

NOTICE

To avoid a short circuit, always set the main switch to "OFF" when checking or replacing a fuse.

- 1. Remove:
- Passenger seat
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Fuse box cover
- 2. Check:
- Fuse
- a. Connect the digital circuit tester to the fuse and check the continuity.

TIP

Set the digital circuit tester selector to " Ω ".



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927 b. If the digital circuit tester indicates "O.L", replace the fuse.

3. Replace:

- Blown fuse
- a. Set the main switch to "OFF".
- Install a new fuse of the correct amperage rating.
- c. Set on the switches to verify if the electrical circuit is operational.
- d. If the fuse immediately blows again, check the electrical circuit.

Fuses	Amper- age rating	Q'ty
Main	50 A	1
Headlight	7.5 A	1
Signaling system	7.5 A	1
Ignition 1	10 A	1
Ignition 2	7.5 A	1
Radiator fan motor	15 A	1
Brake light	2 A	1
Fuel injection system	7.5 A	1
Terminal 1	5 A	1
Backup 1	7.5 A	1
Backup 2	15 A	1
Electronic throttle valve	7.5 A	1
ABS motor	30 A	1
ABS control unit	7.5 A	1
ABS solenoid	15 A	1
Cruise control	2 A	1
Accessory 1	2 A	1
Spare fuse	30 A	1
Spare fuse	15 A	1
Spare fuse	10 A	1
Spare fuse	7.5 A	1
Spare fuse	5 A	1
Spare fuse	2 A	1

WARNING

Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition systems to malfunction and could possibly cause a fire.

4. Install:

- Fuse box cover
- Rider seat
- Passenger seat Refer to "GENERAL CHASSIS (1)" on page 4-1.

ECA27250

NOTICE

- Be careful not to lose or damage the fuse box cover. If the fuse box cover is lost or damaged, replace it with a new one.
- Be sure to install the fuse box cover. Water may get inside the fuse box and cause malfunction.


EAS31006

REPLACING THE ECU (Engine Control Unit)

- 1. Turn the main switch to "OFF".
- 2. Replace the ECU (Engine Control Unit).

TIP

Fix the ECU "1" with the claw of air filter case cover "2" properly.

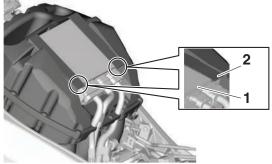

- Clean the throttle bodies and reset the ISC (idle speed control) learning value.
 Refer to "CHECKING AND CLEANING THE THROTTLE BODIES" on page 7-8.
- 4. Check:
- Engine idling speed
 Start the engine, warm it up, and then measure the engine idling speed.



Engine idling speed 1200–1400 r/min

EAS30552

CHECKING AND CHARGING THE BATTERY

TIP_

Refer to "CHECKING AND CHARGING THE BATTERY" in "BASIC INFORMATION" (separate volume).

- 1. Remove:
- Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 2. Disconnect:
 - Battery lead (from the battery terminals)

ECA13700

NOTICE

First, disconnect the negative battery lead, and then the positive battery lead.

- 3. Remove:
 - Battery Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 4. Check:
- Battery charge
- 5. Charge:
 - Battery
- 6. Install:
 - Battery Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 7. Connect:
- Battery lead (to the battery terminals)

ECA26980

NOTICE

First, connect the positive battery lead, and then the negative battery lead.

- 8. Check:
 - Battery terminal
 Dirt → Clean with a wire brush.

 Loose connection → Connect properly.
- 9. Lubricate:
 - Battery terminal



Recommended lubricant Dielectric grease

10.Install:

 Rider seat Refer to "GENERAL CHASSIS (1)" on page 4-1. EAS3055

CHECKING THE RELAYS


Check each relay for continuity with the digital circuit tester. If the continuity reading is incorrect, replace the relay.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- 1. Disconnect the relay from the wire harness.
- Connect the digital circuit tester (Ω) and battery (12 V) to the relay terminal as shown.
 Check the relay operation.
 Out of specification → Replace.

Starter relay

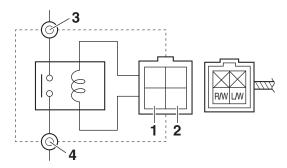


- 1. Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Relay operation
Continuity
(between "3" and "4")

Relay unit (starting circuit cut-off relay)

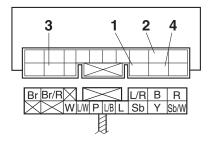


- Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Result Continuity (between "3" and "4")

Relay unit (fuel pump relay)

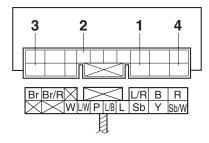


- 1. Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Result
Continuity
(between "3" and "4")

Radiator fan motor relay

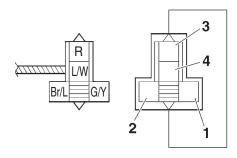


- 1. Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Result
Continuity
(between "3" and "4")

Engine stop relay

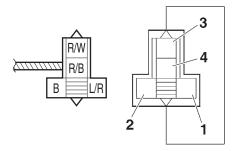


- 1. Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Result Continuity (between "3" and "4")

Starting circuit cut-off relay 2

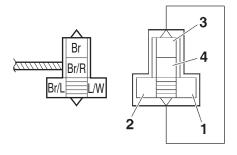


- 1. Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Result
Continuity
(between "3" and "4")

Horn relay

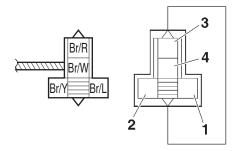

- 1. Positive battery terminal
- 2. Negative battery terminal
- 3. Positive tester probe
- 4. Negative tester probe



Result Continuity (between "3" and "4")

CHECKING THE RELAY UNIT (DIODE)

- 1. Check:
- Relay unit (diode) Out of specification \rightarrow Replace.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

TIP

The digital circuit tester readings are shown in the following table.



No continuity Positive tester probe sky blue "1" **Negative tester probe** yellow "2" Continuity Positive tester probe vellow "2" Negative tester probe sky blue "1" No continuity Positive tester probe sky blue "1" **Negative tester probe** blue "3" Continuity Positive tester probe blue "3" **Negative tester probe** sky blue "1" No continuity Positive tester probe sky blue "1" **Negative tester probe** sky blue/white "4" Continuity Positive tester probe sky blue/white "4" **Negative tester probe** sky blue "1" No continuity Positive tester probe

blue/black "5"


Negative tester probe blue "3"

Continuity

Positive tester probe

blue "3"

Negative tester probe blue/black "5"

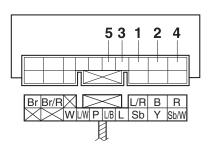

- a. Disconnect the relay unit coupler from the wire harness.
- b. Connect the digital circuit tester (Ω) to the relay unit terminal as shown.

- c. Check the relay unit (diode) for continuity.
- d. Check the relay unit (diode) for no continuity.

EAS30558

CHECKING THE IGNITION COILS

The following procedure applies to all of the ignition coils.

- 1. Check:
- Primary coil resistance
 Out of specification → Replace.




Primary coil resistance 1.19–1.61 Ω

- a. Disconnect the ignition coil coupler from the ignition coil.
- b. Connect the digital circuit tester (Ω) to the ignition coil as shown.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe Ignition coil terminal "1"
- Negative tester probe Ignition coil terminal "2"

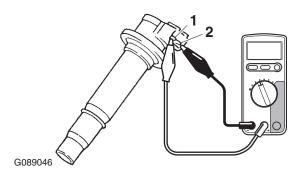

- c. Measure the primary coil resistance.
- 2. Check:
 - Secondary coil resistance
 Out of specification → Replace.




Secondary coil resistance 9.35–12.65 kΩ

a. Connect the digital circuit tester (Ω) to the ignition coil as shown.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Negative tester probe Ignition coil terminal "1"
- Positive tester probe Spark plug terminal "2"

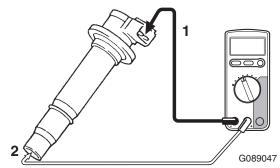

b. Measure the secondary coil resistance.

EAS3055

CHECKING THE IGNITION SPARK GAP

- 1. Check:
 - Ignition spark gap
 Out of specification → Perform the ignition
 system troubleshooting, starting with step (5).
 Refer to "TROUBLESHOOTING" on page 8-6



Minimum ignition spark gap 6.0 mm (0.24 in)


TIP

If the ignition spark gap is within specification, the ignition system circuit is operating normally.

- a. Remove the ignition coil from the spark plug.
- b. Connect the ignition checker "1" as shown.



Ignition checker 90890-06754 Oppama pet–4000 spark checker YM-34487

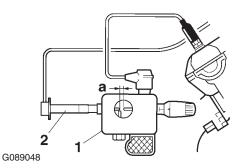

- 2. Ignition coil
- c. Turn the main switch to "ON".
- d. Measure the ignition spark gap "a".
- e. Crank the engine by pushing the "(s)" side of the stop/run/start switch and gradually increase the spark gap until a misfire occurs.

EAS30560

CHECKING THE CRANKSHAFT POSITION SENSOR

- 1. Disconnect:
- Crankshaft position sensor coupler (from the wire harness)
- 2. Check:
 - Crankshaft position sensor resistance
 Out of specification → Replace the stator coil assembly.




Crankshaft position sensor resistance 228–342 Ω

a. Connect the digital circuit tester (Ω) to the crankshaft position sensor coupler as shown.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe black "1"
- Negative tester probe gray "2"

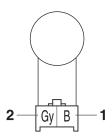

b. Measure the crankshaft position sensor resistance.

EAS30562

CHECKING THE STARTER MOTOR OPERATION

- 1. Check:
 - Starter motor operation
 Does not operate → Perform the electric
 starting system troubleshooting, starting with
 step (4).


Refer to "TROUBLESHOOTING" on page 8-14

 a. Connect the positive battery terminal "1" and starter motor lead "2" with a jumper lead "3".

EWA13810

WARNING

- A wire that is used as a jumper lead must have at least the same capacity of the battery lead, otherwise the jumper lead may burn.
- This check is likely to produce sparks, therefore, make sure no flammable gas or fluid is in the vicinity.

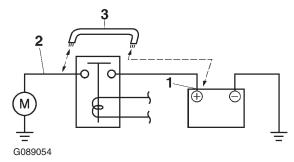

b. Check the starter motor operation.

EAS30566

CHECKING THE STATOR COIL


- 1. Disconnect:
- Stator coil coupler (from GCU (Generator Control Unit))

- 2. Check:
 - Stator coil
 - a. Connect the digital circuit tester to the stator coil coupler as shown.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe white "1"
- Negative tester probe blue"2"
- Positive tester probe white "1"
- Negative tester probe yellow "3"
- Positive tester probe blue"2"
- Negative tester probe yellow "3"

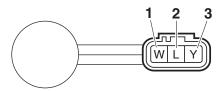

- b. Check the stator coil continuity.
- c. If there is no continuity, replace the stator coil assembly.

FAS34072

CHECKING THE GCU (Generator Control Unit)

- 1. Check:
- Battery charging voltage

Out of specification \rightarrow Check the stator coil condition. If the stator coil does not have a problem, replace the GCU (Generator Control Unit).

Refer to "CHECKING THE STATOR COIL" on page 8-79.



Battery charging voltage above 14 V at 5000 r/min

a. Connect the digital circuit tester to the battery terminal.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe → Battery positive terminal
- Negative tester probe → Battery negative terminal
- b. Start the engine and let it run at approximately 5000 r/min.
- c. Measure the battery charging voltage.

EAS3056

CHECKING THE HORN

- 1. Check:
 - Horn sound Faulty sound → Replace.

AS30573

CHECKING THE FUEL SENDER

- 1. Disconnect:
- Fuel pump coupler (from the fuel pump)
- 2. Remove:
- Fuel tank
- Remove:
- Fuel pump (from the fuel tank)
- 4. Check:
- Fuel sender resistance
 Out of specification → Replace the fuel pump assembly.




Sender unit resistance (full) 9.0–12.0 Ω Sender unit resistance (empty) 213.0–219.0 Ω


a. Connect the digital circuit tester (Ω) to the fuel sender terminals as shown.



- Positive tester probe → Fuel sender terminal "1"
- Negative tester probe → Fuel sender terminal "2"

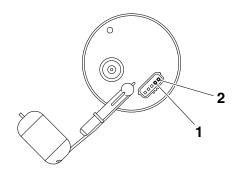

b. Move the fuel sender float to maximum "3" and minimum "4" level position.

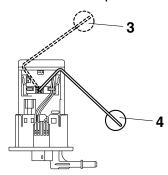

EAS30574

CHECKING THE FUEL LEVEL WARNING

This model is equipped with a self-diagnosis device for the fuel level detection circuit.

- 1. Check:
- Fuel level warning light "1"
 (Turn the main switch to "ON".)
 Warning light does not come on → Replace the meter assembly.


Warning light flashes eight times, then goes off for 3 seconds in a repeated cycle (malfunction detected in fuel sender) → Replace the fuel pump assembly.



EAS3057

CHECKING THE RADIATOR FAN MOTOR

- 1. Check:
 - Radiator fan motor Faulty/rough movement → Replace.
 - a. Disconnect the radiator fan motor coupler from the wire harness.
 - b. Connect the battery (DC 12 V) as shown.
- Positive tester probe blue "1"
- Negative tester probe black "2"

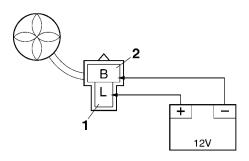

c. Measure the radiator fan motor movement.

EAS3057

CHECKING THE COOLANT TEMPERATURE SENSOR

- 1. Remove:
 - Coolant temperature sensor Refer to "CYLINDER HEAD" on page 5-26.

MARNING

- Handle the coolant temperature sensor with special care.
- Never subject the coolant temperature sensor to strong shocks. If the coolant temperature sensor is dropped, replace it.
- 2. Check:
- Coolant temperature sensor resistance
 Out of specification → Replace.



Coolant temperature sensor resistance

2513–2777 Ω at 20 °C (2513–2777 Ω at 68 °F)

Coolant temperature sensor resistance

210–221 Ω at 100 °C (210–221 Ω at 212 °F)

a. Connect the digital circuit tester (Ω) to the coolant temperature sensor as shown.




Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

b. Immerse the coolant temperature sensor "1" in a container filled with coolant "2".

TIP_

Make sure the coolant temperature sensor terminals do not get wet.

c. Place a thermometer "3" in the coolant.

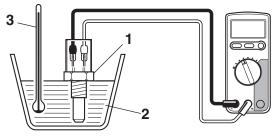

G089056

- d. Heat the coolant or let it cool down to the specified temperatures.
- e. Measure the coolant temperature sensor resistance.
- 3. Install:
 - Coolant temperature sensor



Coolant temperature sensor 15 N·m (1.5 kgf·m, 11 lb·ft)

EAS30592

CHECKING THE THROTTLE SERVO MOTOR

- 1. Remove:
- Air filter case Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 2. Check:
 - Throttle valve operation
 Throttle valves do not fully close → Replace the throttle bodies.
 - a. Connect two C-size batteries to the throttle servo motor terminals "1" as shown.


ECA17660


NOTICE

Do not use a 12 V battery to operate the throttle servo motor.

TIP

Do not use old batteries to operate the throttle servo motor.

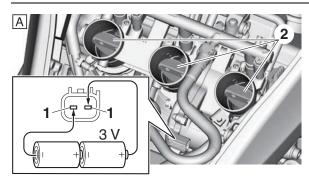

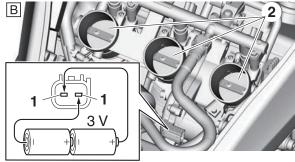

- A. Check that the throttle valves "2" open.
- B. Check that the throttle valves "2" fully close.

FAS30594

CHECKING THE INTAKE AIR TEMPERATURE SENSOR

- 1. Remove:
- Intake air temperature sensor

EWA1411

WARNING

- Handle the intake air temperature sensor with special care.
- Never subject the intake air temperature sensor to strong shocks. If the intake air temperature sensor is dropped, replace it.
- 2. Check:
 - Intake air temperature sensor resistance
 Out of specification → Replace.



Intake air temperature sensor resistance

5400–6600 Ω at 0 °C (5400–6600 Ω at 32 °F)

Intake air temperature sensor resistance

290–390 Ω at 80 $^{\circ}\text{C}$ (290–390 Ω at 176 $^{\circ}\text{F})$

a. Connect the digital circuit tester (Ω) to the intake air temperature sensor terminal as shown.



Digital circuit tester (CD732) 90890-03243


Model 88 Multimeter with tachometer YU-A1927

b. Immerse the intake air temperature sensor "1" in a container filled with water "2".

TIP

Make sure that the intake air temperature sensor terminals do not get wet.

c. Place a thermometer "3" in the water.

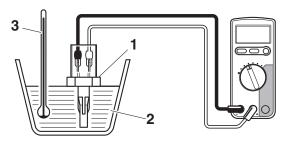

G089057

- d. Slowly heat the water, then let it cool down to the specified temperature.
- e. Measure the intake air temperature sensor resistance.
- 3. Install:
 - Intake air temperature sensor

FAS3068

CHECKING THE FUEL INJECTORS

The following procedure applies to all of the fuel injectors.

- 1. Remove:
- Fuel injector Refer to "THROTTLE BODIES" on page 7-6.
- 2. Check:
 - Fuel injector resistance
 Out of specification → Replace the fuel injector.




Resistance 12.0 Ω

- a. Disconnect the fuel injector coupler from the fuel injector.
- b. Connect the digital circuit tester (Ω) to the fuel injector coupler as shown.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe → Injector terminal "1"
- Negative tester probe → Injector terminal "2"

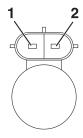

c. Measure the fuel injector resistance.

EAS32604

CHECKING THE PURGE CUT VALVE SOLENOID (for California only)

- 1. Check:
- Purge cut valve solenoid resistance Out of specification → Replace.




Solenoid resistance 22–26 Ω

- a. Disconnect the purge cut valve solenoid coupler from the wire harness.
- b. Connect the digital circuit tester to the purge cut valve solenoid terminals as shown.



- Positive tester probe → Purge cut valve solenoid terminal "1"
- Negative tester probe → Purge cut valve solenoid terminal "2"

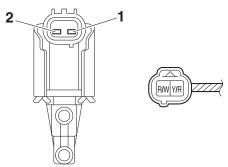

c. Measure the purge cut valve solenoid resistance.

EAS31553

CHECKING THE SMART KEY BATTERY (for MT09SPR/MT09SPRC)

- 1. Check:
- Smart key battery voltage
 Out of specification → Replace the smart key battery.




Smart key battery voltage 2.4–3.2 V

- a. Remove the smart key battery from the smart key.
- b. Connect the digital circuit tester (DC V) to the smart key battery as shown.



Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe → Positive battery terminal "1"
- Negative tester probe → Negative battery terminal "2"

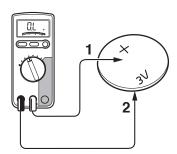


c. Measure the smart key battery voltage.

EAS3155

CHECKING THE BUZZER (for MT09SPR/MT09SPRC)

- 1. Check:
- Buzzer operation
 Buzzer does not sound → Replace.
- a. Disconnect the buzzer coupler from the wire harness.
- b. Connect the battery (12 V) to the buzzer coupler as shown.
- Positive battery lead → Yellow "1"
- Negative battery lead → Pink "2"

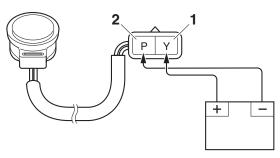

c. Check that the buzzer sounds.

EAS34105

CHECKING THE FUEL TANK CAP (for MT09SPR/MT09SPRC)

- 1. Check:
- Fuel tank cap latch solenoid resistance
 Out of specification → Replace the fuel tank cap.




Fuel tank cap latch solenoid resistance 10.2–12.4 Ω

- a. Disconnect the fuel tank cap coupler from the wire harness.
- b. Connect the digital circuit tester (Ω) to the fuel tank cap coupler shown.



- Positive tester probe → Black "1"
- Negative tester probe → Black "2"

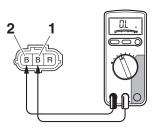

- c. Check the fuel tank cap latch solenoid resistance.
- 2. Check:
 - Fuel tank unlock switch continuity
 Out of specification → Replace the fuel tank cap.




Continuity
Open position
No continuity
Closed position

- a. Disconnect the fuel tank cap coupler from the wire harness.
- b. Connect the digital circuit tester (Ω) to the fuel tank cap coupler shown.




Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe → Red "1"
- Negative tester probe → Black "2"

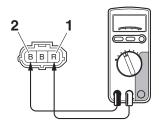

c. Move the fuel tank cap latch "3" to open position "a" and close position "b".

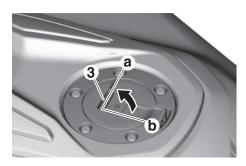

d. Check the fuel tank unlock switch continuity.


EAS31257

CHECKING THE MAIN SWITCH SOLENOID (for MT09SPR/MT09SPRC)

- 1. Check:
 - · Main switch solenoid
 - a. Disconnect the main switch solenoid coupler from the wire harness.
 - b. Connect the digital circuit tester to the main switch solenoid as shown.



- Positive tester probe → Blue"1"
- Negative tester probe → Red/White "2"

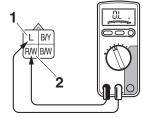

- c. Check the main switch solenoid continuity.
- d. If there is no continuity, replace the main switch.

SELF DIAGNOSTIC

SELF-DIAGNOSTIC FUNCTION	9-1
GLOSSARY	
OUTLINE	
CHECKING THE WARNING LIGHT	9-2
YDT	
PARTS CONNECTED TO THE ECU	
PARTS CONNECTED TO THE ABS ECU	
PARTS CONNECTED TO THE BCM	
PRECAUTIONS FOR ROAD TEST	9-5
SYSTEM DIAGRAM	
ECU CIRCUIT DIAGRAM	9-6
ECU COUPLER LAYOUT	9-9
FUEL INJECTION SYSTEM	9-13
CIRCUIT DIAGRAM	
BASIC PROCESS FOR TROUBLESHOOTING	9-17
[A] THE MIL COMES ON/FLASHES AND ENGINE OPERATION IS	
NOT NORMAL	
[B] THE MIL DOES NOT COME ON, BUT THE ENGINE OPERATION	
IS NOT NORMAL	9-18
CRUISE CONTROL SYSTEM	9-19
CIRCUIT DIAGRAM	
CRUISE CONTROL CIRCUIT OPERATION	
BASIC INSTRUCTIONS FOR TROUBLESHOOTING	
BASIC PROCESS FOR TROUBLESHOOTING	9-25
[A] CHECKING THE CRUISE CONTROL SYSTEM INDICATOR	0.00
LIGHT[B-1] DIAGNOSIS USING THE DTC	
[B-2] DIAGNOSIS USING THE DTC[B-2] DIAGNOSIS USING THE MALFUNCTION HISTORY CODES	
[B-3] MALFUNCTION HISTORY IS NOT DISPLAYED	
[C-1] ERASING THE DTC	
[C-2] FINAL CHECK	
	0 /
ABS (Anti-lock Brake System)	
CIRCUIT DIAGRAM	
ABS COMPONENTS CHARTABS COUPLER LOCATION CHART	
MAINTENANCE OF THE ABS ECU	9-34 0.25
ABS TROUBLESHOOTING OUTLINE	
BASIC INSTRUCTIONS FOR TROUBLESHOOTING	
[A] CHECKING THE ABS WARNING LIGHT	
[A-1] ONLY THE ABS WARNING LIGHT FAILS TO COME ON	
[A-2] ALL INDICATOR LIGHTS FAIL TO COME ON	
[A-3] THE ABS WARNING LIGHT COMES ON	9-38
IA ALONI VITHE ARS ECLI FAILS TO COMMINICATE	

B-1 MALFUNCTION ARE CURRENTLY DETECTED 9-39 B-2 DIAGNOSIS USING THE DTC 9-39 B-2 DIAGNOSIS USING THE DTC 9-39 B-3 DELETING THE DTC 9-40 9-41	[A-5] ABS ECU AND FI ECU FAIL TO COMMUNICATE	
B-3 DELETING THE DTC 9-40 (C-1) FINAL CHECK 9-40 (C-1) FINAL CHECK 9-40 (C-1) FINAL CHECK 9-41 DTC TABLE 9-41 DTC TABLE 9-41 SELF-DIAGNOSTIC FUNCTION TABLE 9-46 SELF-DIAGNOSTIC FUNCTION TABLE (FOR FUEL INJECTION SYSTEM) 9-46 SELF-DIAGNOSTIC FUNCTION TABLE (FOR ABS (Anti-lock Brake System)) 9-60 SELF-DIAGNOSTIC FUNCTION TABLE (FOR BCM (Body Control Module) 9-65 COMMUNICATION ERROR WITH THE METER 9-65 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 P-75 TROUBLESHOOTING 9-75 TROUBLESHOOTING 9-77 TROUBLESHOOTING 9-77 TROUBLESHOOTING 9-78 P-78 P-79 P-79	• •	
[C-1] FINAL CHECK		
SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE 9-41 DTC TABLE 9-41 SELF-DIAGNOSTIC FUNCTION TABLE 9-46 (FOR FUEL INJECTION SYSTEM) 9-46 SELF-DIAGNOSTIC FUNCTION TABLE (FOR ABS (Anti-lock Brake System)) 9-60 SELF-DIAGNOSTIC FUNCTION TABLE (FOR BCM (Body Control Module) 9-65 COMMUNICATION ERROR WITH THE METER 9-65 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 SUEVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-77 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P0001, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100		
DTC TABLE	[C-1] FINAL CHECK	9-40
SELF-DIAGNOSTIC FUNCTION TABLE (FOR FUEL INJECTION SYSTEM)	SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE	9-41
(FOR FUEL INJECTION SYSTEM) 9-46 SELF-DIAGNOSTIC FUNCTION TABLE (FOR ABS (Anti-lock Brake System)) 9-60 SELF-DIAGNOSTIC FUNCTION TABLE (FOR BCM (Body Control Module) 9-65 COMMUNICATION ERROR WITH THE METER 9-65 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-75 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-96 P0117, P0118 9-910		9-41
SELF-DIAGNOSTIC FUNCTION TABLE (FOR ABS (Anti-lock Brake System))		
(FOR ABS (Anti-lock Brake System)) 9-60 SELF-DIAGNOSTIC FUNCTION TABLE 9-65 (FOR BCM (Body Control Module) 9-65 COMMUNICATION ERROR WITH THE METER 9-66 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-75 TROUBLESHOOTING 9-77 C0520 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-87 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-90		9-46
SELF-DIAGNOSTIC FUNCTION TABLE (FOR BCM (Body Control Module)		
(FOR BCM (Body Control Module) 9-65 COMMUNICATION ERROR WITH THE METER 9-65 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-77 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-78 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-96 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100	(FOR ABS (Anti-lock Brake System))	9-60
COMMUNICATION ERROR WITH THE METER 9-65 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 TROUBLESHOOTING 9-77 TROUBLESHOOTING 9-77 C0520 9-78 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 TROUBLESHOOTING 9-87 P0107, P0108 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-96 P0117, P0118 9-96	SELF-DIAGNOSTIC FUNCTION TABLE	
COMMUNICATION ERROR WITH THE METER 9-65 DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 TROUBLESHOOTING 9-77 TROUBLESHOOTING 9-77 C0520 9-78 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 TROUBLESHOOTING 9-87 P0107, P0108 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-96 P0117, P0118 9-96	(FOR BCM (Body Control Module)	9-65
DIAGNOSTIC CODE: SENSOR OPERATION TABLE 9-66 DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-77 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100		
DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE 9-70 EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-77 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-87 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100		
EVENT CODE TABLE 9-72 30_EVENT 9-75 TROUBLESHOOTING 9-75 70_EVENT 9-77 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100		
30_EVENT	DIAGNOSTIC CODE. ACTOATOR OF ENATION TABLE	9-70
TROUBLESHOOTING	EVENT CODE TABLE	9-72
TROUBLESHOOTING		
TROUBLESHOOTING	30 EVENT	9-75
70_EVENT 9-77 TROUBLESHOOTING 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100	TROUBLESHOOTING	9-75
TROUBLESHOOTING 9-77 C0520 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 TROUBLESHOOTING 9-87 TROUBLESHOOTING 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 TROUBLESHOOTING 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-96	111005220110011110	
TROUBLESHOOTING 9-77 C0520 9-78 TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 TROUBLESHOOTING 9-87 TROUBLESHOOTING 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 TROUBLESHOOTING 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-96	70 EVENT	9-77
C0520		
TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-90		
TROUBLESHOOTING 9-78 P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-90	C0520	9-78
P0030 9-82 TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100		
TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100	111000220110011110	
TROUBLESHOOTING 9-82 P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100	P0030	9-82
P00D1, P2195 9-87 TROUBLESHOOTING 9-87 P0107, P0108 9-92 TROUBLESHOOTING 9-92 P0112, P0113 9-96 TROUBLESHOOTING 9-96 P0117, P0118 9-100		
TROUBLESHOOTING		
TROUBLESHOOTING	P00D1. P2195	9-87
P0107, P0108	TROUBLESHOOTING	9-87
P0112, P0113	111005220110011110	
P0112, P0113	P0107. P0108	9-92
P0112, P0113	TROUBLESHOOTING	9-92
TROUBLESHOOTING	111000220110011110	
TROUBLESHOOTING	P0112, P0113	9-96
P0117, P01189-100	TROUBLESHOOTING	9-96
P0117 , P0118		
TROUBLESHOOTING9-100	P0117. P0118	9-100
	TROUBLESHOOTING	9-100

P0122, P0123, P0222, P02239-1	
TROUBLESHOOTING9-1	04
P01329-1	na
TROUBLESHOOTING9-1	
11100BLE31100111109-1	U9
P02019-1	
TROUBLESHOOTING9-1	13
P02029-1	17
TROUBLESHOOTING9-1	
P02039-1	
TROUBLESHOOTING9-1	22
P03359-1	27
TROUBLESHOOTING9-1	
P0351 9-1 TROUBLESHOOTING9-1	
THOUBLESHOUTING9-1	31
P03529-1	35
TROUBLESHOOTING9-1	35
P03539-1 TROUBLESHOOTING 9-1	
THOOBLESHOOTING9-1	39
P04589-1	43
TROUBLESHOOTING9-1	43
P0480	47
11100BLESI 100111109-1	7,
P0500, P15009-1	51
TROUBLESHOOTING9-1	51
Donos Boros	
P0560 , P0563 9-1 TROUBLESHOOTING9-1	64 64
71100ble01100111409-1	∪ -1
P05649-1	65
TROUBLESHOOTING9-1	65

P056C	9-172
TROUBLESHOOTING	9-172
P0601	9-180
TROUBLESHOOTING	9-180
P0606	9-181
TROUBLESHOOTING	
P062F	9-182
TROUBLESHOOTING	9-182
P0638	9-183
TROUBLESHOOTING	9-183
P0657	
TROUBLESHOOTING	9-188
P0916, P0917	9-193
TROUBLESHOOTING	9-193
P1004	9-197
TROUBLESHOOTING	9-197
P1600	9-199
TROUBLESHOOTING	9-199
P1601	9-203
TROUBLESHOOTING	9-203
P1602	9-207
TROUBLESHOOTING	9-207
P1606, P1607	9-212
TROUBLESHOOTING	9-212
P1806, P1807	9-216
TROUBLESHOOTING	
P2122, P2123, P2127, P2128, P2138	9-220
TROUBLESHOOTING	

P2135	9-224
TROUBLESHOOTING	9-224
D0450	0.007
P2158	9-227
TROUBLESHOOTING	9-227
U0100	
TROUBLESHOOTING	9-232
U0121	9-238
TROUBLESHOOTING	9-238
U0125	
TROUBLESHOOTING	9-242
U0155 or Err (Fl)	9-246
TROUBLESHOOTING	9-246
U0155 (BCM)	9-250
TROUBLESHOOTING	9-250
11_ABS	9-254
TROUBLESHOOTING	9-254
12_ABS	9-255
TROUBLESHOOTING	
13, 26_ABS	9-256
TROUBLESHOOTING	9-256
14, 27_ABS	9-257
TROUBLESHOOTING	9-257
15_ABS	9-258
TROUBLESHOOTING	9-258
16_ABS	9-260
TROUBLESHOOTING	
21_ABS	9-262
TROUBLESHOOTING	9-262

31_	_ABS	9-263
	TROUBLESHOOTING	9-263
33	_ABS	9-265
JJ_	TROUBLESHOOTING	9-203 0-265
	THOOBLESHOOTING	9-203
34_	_ ABS TROUBLESHOOTING	9-267
	THOUBLESHOUTING	9-207
41	_ABS	9-268
	TROUBLESHOOTING	
42_	_ABS	9-269
	TROUBLESHOOTING	9-269
43,	45_ABS	9-270
	TROUBLESHOOTING	9-270
44,	TROUBLESHOOTING	9-271
	TROUBLESHOOTING	9-271
51	_ABS	9-272
	TROUBLESHOOTING	9-272
53	_ABS	0-273
JJ_	TROUBLESHOOTING	
		0 270
55 _	_ABS	
	TROUBLESHOOTING	9-275
56	ARS	0-276
JU_	_ ABS TROUBLESHOOTING	9-276
		0 2.0
57	_ABS	9-277
	TROUBLESHOOTING	9-277
62	_ABS	9-281
JZ _	TROUBLESHOOTING	
68	_ABS	9-282
	TROUBLESHOOTING	9-282

89 ABS	9-283
TROUBLESHOOTING	
90_ABS	9-286
TROUBLESHOOTING	9-286
91_ABS	9-289
TROUBLESHOOTING	9-289

EAS2043

SELF-DIAGNOSTIC FUNCTION

EAS33142

GLOSSARY

Word	Description
MIL (Malfunction indica- tor light)	MIL is an indicator light that comes on when a control unit determines a malfunction.
DTC (Diagnostic trouble code)	DTC is a code that is saved within a control unit's memory when the control unit determines a malfunction.
Current malfunction	A DTC for an unrecovered, current malfunction.
Recovered malfunction	A DTC for a previously determined but now recovered malfunction.
Threshold	Threshold is a point set to detect if the output from sensors are abnormal or not.
OBD (On-board diagnos- tics)	Self-diagnostic system is equipped in a control unit for the emission control system.
GST (Generic scan tool)	Generic diagnostic tool that complies with OBD standards.
YDT (Yamaha diagnostic tool)	Diagnostic tool developed especially for Yamaha vehicles.

EAS32858

OUTLINE

The control unit is equipped with a self-diagnostic function in order to ensure that the system is operating normally. If this function detects a malfunction in the system, it immediately operates the system under substitute characteristics and illuminates the warning light to alert the rider that a malfunction has occurred in the system. Once a malfunction has been detected, a DTC is stored in the memory of the control unit.

EAS32859


CHECKING THE WARNING LIGHT

The warning light comes on after the main switch has been set to "ON". Refer to the following table for lighting up time.

If the warning light still comes on, refer to a check item of a troubleshooting of each system, check and repair it. If the warning light does not come on, the warning light (LED) may be defective.

TIP_

- This engine equips self-diagnostic function. It's controlled delicately for detecting defective and malfunction of the exhaust emission control system. Therefor, the vehicle modifying, poor maintenance, and improper using of the vehicle may also become the cause of the MIL come on. These events may cause the occurrence of the warning light coming on without malfunction.
- Reprogramming of the ECU software.
- Using the electrical accessory which may affect the ECU.
- Using the incorrect specification of spark plug and fuel injector. Using the third party accessories such as suspension and exhaust system.
- Change of specifications of drive chain, sprocket, wheel and tire.
- Removing or modifying the O₂ sensor, the exhaust system part (catalyst, etc.).
- Poor maintenance of the drive chain and tire air pressure.
- Incorrect brake pedal height, rear brake dragging.
- Excessive opening and closing of the throttle grip, frequently used of burnout, wheelie and half clutch.
- · Air mixture by fuel supply badness.

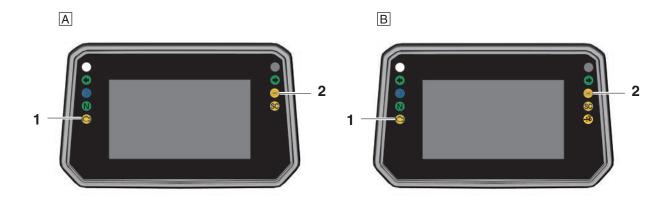

- A. MT09R/MT09RC
- B. MT09SPR/MT09SPRC

System	Lighting up warning light	Lighting time
FUEL INJECTION SYSTEM	MIL "1"	2.0 seconds
ABS (Anti-lock Brake System)	ABS warning light "2"	*1
CRUISE CONTROL SYSTEM	MIL "1"	2.0 seconds

TIP

^{*1:} The ABS warning light goes off when the vehicle is judged to normal with running.

SELF-DIAGNOSTIC FUNCTION

EAS32806

YDT

This model uses the YDT to identify malfunctions.

For information about using the YDT, refer to the operation manual that is included with the tool.




Yamaha diagnostic tool USB (US) 90890-03275 Yamaha diagnostic tool (A/I) 90890-03273

TIP_

- Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).
- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.
- A GST can also be used to identify malfunctions.

Connecting the YDT

Remove the protective cap, and then connect the YDT to the coupler "1".

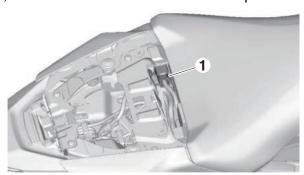

SELF-DIAGNOSTIC FUNCTION

EAS32864

PARTS CONNECTED TO THE ECU

The following parts are connected to the ECU.

When checking for a power short circuit, the couplers must be disconnected from all of the following parts beforehand.

- Crankshaft position sensor
- Injector #1
- Injector #2
- Injector #3
- Clutch switch
- Ignition coil #1
- Ignition coil #2
- Ignition coil #3
- Throttle position sensor
- Intake air pressure sensor 1
- Intake air pressure sensor 2
- Coolant temperature sensor
- Gear position sensor
- Shift sensor
- Intake air temperature sensor
- GCU (Generator Control Unit)
- Rear brake light switch

- Backup fuse 2
- Fuel pump
- O₂ sensor
- ABS ECU (Electronic Control Unit)
- Throttle servo motor
- Relay unit
- Starter relay
- Purge cut valve solenoid (for California only)
- Radiator fan motor relay
- Meter assembly
- Headlight control unit
- Handlebar switch (right)
- IMU (Inertial Measurement Unit)
- BCM (Body Control Module)
- Starting circuit cut-off relay 2
- Remote control unit (for MT09SPR/ MT09SPRC)

EAS32918

PARTS CONNECTED TO THE ABS ECU

The following parts are connected to the hydraulic unit assembly (ABS ECU).

When checking for a power short circuit, the couplers must be disconnected from all of the following parts beforehand.

- IMU (Inertial Measurement Unit)
- ECU (Engine Control Unit)
- Front wheel sensor
- Rear wheel sensor

- Tail/brake light
- BCM (Body Control Module)
- GCU (Generator Control Unit)

SELF-DIAGNOSTIC FUNCTION

EAS34063

PARTS CONNECTED TO THE BCM

The following parts are connected to the BCM.

When checking for a power short circuit, the couplers must be disconnected from all of the following parts beforehand.

- GCU (Generator Control Unit)
- Horn relay
- Starter relay
- Rear brake light switch
- O₂ sensor
- ECU (Engine Control Unit)
- ABS ECU (Electronic Control Unit)
- IMU (Inertial Measurement Unit)
- Meter assembly
- Rear turn signal light (right)
- Rear turn signal light (left)

- Front turn signal/position light (right)
- Front turn signal/position light (left)
- Headlight control unit
- Tail/brake light
- Engine stop relay
- Handlebar switch (right)
- Handlebar switch (left)
- Purge cut valve solenoid (for California only)
- Remote control unit (MT09SPR/MT09SPRC)
- Buzzer (MT09SPR/MT09SPRC)
- Fuel tank cap latch solenoid (MT09SPR/ MT09SPRC)

EAS3313

PRECAUTIONS FOR ROAD TEST

EWA208

WARNING


When test riding the vehicle, always comply with local traffic regulations.

EAS2038


SYSTEM DIAGRAM

EAS32920

ECU CIRCUIT DIAGRAM

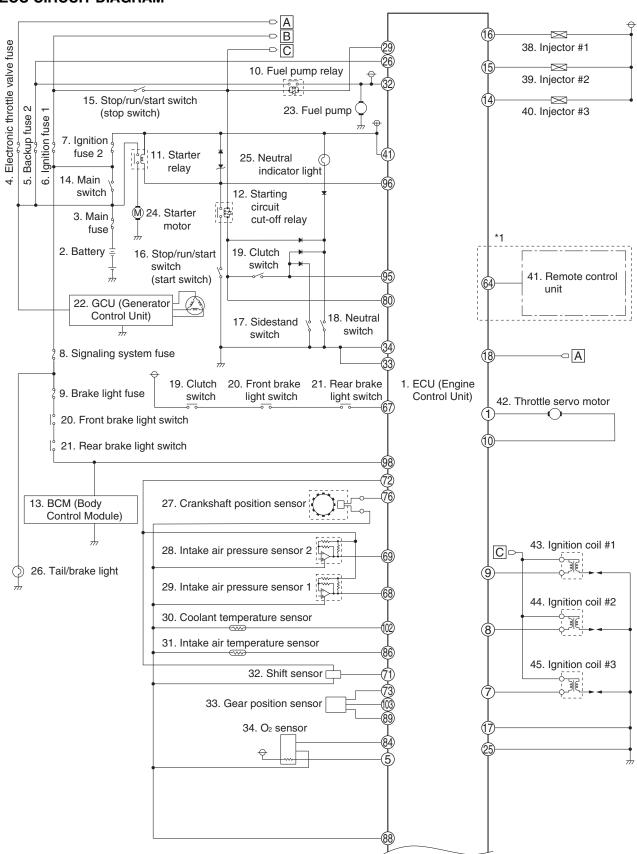

SYSTEM DIAGRAM

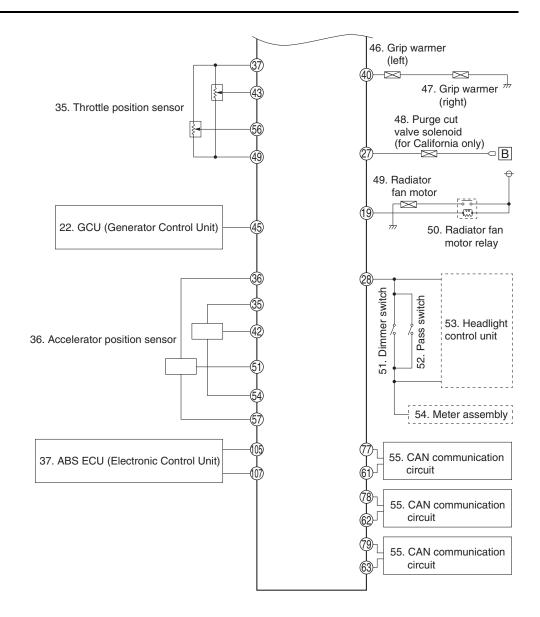

SYSTEM DIAGRAM

- 1. ECU (Engine Control Unit)
- 2. Battery
- 3. Main fuse
- 4. Electronic throttle valve fuse
- 5. Backup fuse 2
- 6. Ignition fuse 1
- 7. Ignition fuse 2
- 8. Signaling system fuse
- 9. Brake light fuse
- 10. Fuel pump relay
- 11. Starter relay
- 12. Starting circuit cut-off relay
- 13. BCM (Body Control Module)
- 14. Main switch
- 15. Stop/run/start switch (stop switch)
- 16. Stop/run/start switch (start switch)
- 17. Sidestand switch
- 18. Neutral switch
- 19. Clutch switch
- 20. Front brake light switch
- 21. Rear brake light switch
- 22. GCU (Generator Control Unit)
- 23. Fuel pump
- 24. Starter motor
- 25. Neutral indicator light
- 26. Tail/brake light
- 27. Crankshaft position sensor
- 28. Intake air pressure sensor 2
- 29. Intake air pressure sensor 1
- 30. Coolant temperature sensor
- 31. Intake air temperature sensor
- 32. Shift sensor
- 33. Gear position sensor
- 34. O₂ sensor
- 35. Throttle position sensor
- 36. Accelerator position sensor
- 37. ABS ECU (Electronic Control Unit)
- 38. Injector #1
- 39. Injector #2
- 40. Injector #3
- 41. Remote control unit
- 42. Throttle servo motor
- 43. Ignition coil #1
- 44. Ignition coil #2
- 45. Ignition coil #3
- 46. Grip warmer (left)
- 47. Grip warmer (right)
- 48. Purge cut valve solenoid (for California only)
- 49. Radiator fan motor
- 50. Radiator fan motor relay
- 51. Dimmer switch
- 52. Pass switch
- 53. Headlight control unit

- 54. Meter assembly
- 55. CAN communication circuit
- *1. For MT09SPR/MT09SPRC

ECU COUPLER LAYOUT

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34

35 36 37 38 39 40 41 × 42 43 44 45 46 47 × 48 49 50 51 52 53 54 55 56 57 58 59 60

61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108

No.	Connected parts	Wire harness color
1	Throttle servo motor	Y/R
2	_	_
3	_	_
4	_	_
5	O ₂ sensor	P/B
6	_	_
7	Ignition coil #3	O/G
8	Ignition coil #2	Gy/R
9	Ignition coil #1	0
10	Throttle servo motor	Lg/R
11	_	_
12	_	_
13	_	_
14	Injector #3	L/B
15	Injector #2	G/B
16	Injector #1	R/B
17	Ground	В
18	Electronic throttle valve fuse	R/L
19	Radiator fan motor relay	G/Y
20	_	_
21	_	_
22	_	_
23	_	_
24	_	_
25	Ground	В
26	Backup fuse 2	R/G
27	Purge cut valve so- lenoid (for California only)	Υ

No.	Connected parts	Wire harness color
28	Dimmer/pass switch, Headlight control unit	Y/B
29	Fuel pump relay	L/W
30	_	_
31	_	_
32	Fuel pump relay, Fuel pump	R
33	Ground	B/W
34	Ground	B/W
35	Accelerator position sensor	Y/R
36	Accelerator position sensor	W/R
37	Throttle position sensor	L
38	_	_
39	_	_
40	Grip warmer (left), Grip warmer (right)	Br/Y
41	Ignition fuse 2	Br/W
42	Accelerator position sensor	Y
43	Throttle position sensor	W
44	_	_
45	GCU (Generator Control Unit)	Gy/W
46	_	_
47	_	_
48	_	_
49	Throttle position sensor	B/L

	_	
No.	Connected parts	Wire harness color
50	_	_
51	Accelerator position sensor	Br
52	_	_
53	_	_
54	Accelerator position sensor	Y/B
55	_	_
56	Throttle position sensor	В
57	Accelerator position sensor	W/B
58	_	_
59	_	_
60	_	_
61	CAN communica- tion circuit	L/B
62	CAN communica- tion circuit	Lg/L
63	CAN communica- tion circuit	W/L
64	_	
64 (*1)	Remote control unit	Y/L
65	_	_
66	_	_
67	Rear brake light switch	Y
68	Intake air pressure sensor 1	P/W
69	Intake air pressure sensor 2	Р
70	_	_
71	Shift sensor	V
72	Intake air pressure sensor 1, Intake air pressure sensor 2, Shift sensor	L
73	Gear position sensor	L/R
74	_	_
75	_	_

No.	Connected parts	Wire harness
	-	color
76	Crankshaft position sensor	Gy
77	CAN communica- tion circuit	L/W
78	CAN communica- tion circuit	Lg/W
79	CAN communica- tion circuit	W/Y
80	Starting circuit cut- off relay, Clutch switch	В/Ү
81	_	_
82	_	_
83	_	_
84	O ₂ sensor	Gy/G
85	_	_
86	Intake air tempera- ture sensor	Br/W
87	_	_
88	Crankshaft position sensor, Intake air pressure sensor 1, Intake air pressure sensor 2, Coolant temperature sensor, Intake air temperature sensor, Shift sensor, O ₂ sensor	B/L
89	Gear position sensor	B/R
90	_	_
91	_	_
92	_	_
93	_	_
94	_	_
95	Clutch switch	L/Y
96	Starter relay	L/G
97	_	_
98	BCM (Body Control Module), Rear brake light switch	Lg/B
99	_	_
100	_	_
101	_	_

No.	Connected parts	Wire harness color	
102	Coolant tempera- ture sensor	G/W	
103	Gear position sensor	G/B	
104	_	_	
105	ABS ECU (Electronic Control Unit)	W/G	
106	_	_	
107	ABS ECU (Electronic Control Unit)	W/B	
108	_	_	

^{*1.} For MT09SPR/MT09SPRC

SYSTEM DIAGRAM


EAS20440

FUEL INJECTION SYSTEM

EAS32871

CIRCUIT DIAGRAM

MT09R/MT09RC

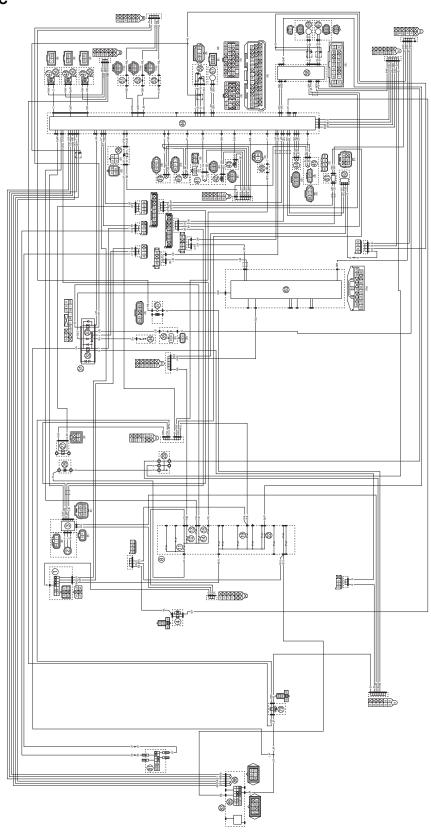


FUEL INJECTION SYSTEM

- 1. Main switch
- 2. AC magneto
- 3. GCU (Generator Control Unit)
- 4. Radiator fan motor relay
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 14. Fuel injection system fuse
- 15. Electronic throttle valve fuse
- 19. Ignition fuse 1
- 22. ABS control unit fuse
- 26. Battery
- 27. Starter relay
- 29. Frame ground
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 33. Fuel pump relay
- 34. Neutral switch
- 35. Sidestand switch
- 37. Fuel pump
- 38. O₂ sensor
- 39. Intake air pressure sensor 1
- 40. Intake air pressure sensor 2
- 41. Crankshaft position sensor
- 42. Coolant temperature sensor
- 43. Intake air temperature sensor
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 47. Ignition coil #1
- 48. Ignition coil #2
- 49. Ignition coil #3
- 50. Spark plug
- 51. Injector #1
- 52. Injector #2
- 53. Injector #3
- 56. Throttle position sensor
- 57. Throttle servo motor
- 58. ABS ECU (electronic control unit)
- 59. Front wheel sensor
- 60. Rear wheel sensor
- 61. IMU (Inertial Measurement Unit)
- 62. YDT coupler
- 63. Meter assembly
- 79. Engine stop relay
- 81. Clutch switch
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- 86. Accelerator position sensor
- Purge cut valve solenoid (for California only)
- *. For California only: Y Except for California: blank

**. For California only: R/W Except for California: blank

MT09SPR/MT09SPRC

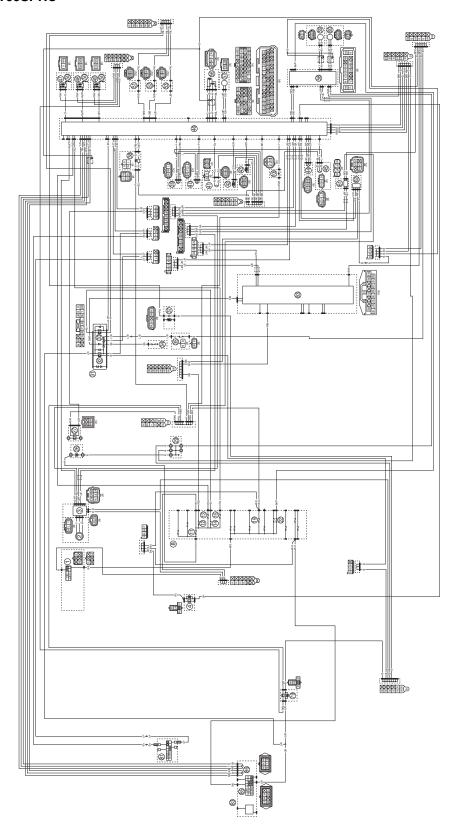


FUEL INJECTION SYSTEM

- 1. Main switch
- 2. AC magneto
- 3. GCU (Generator Control Unit)
- 4. Radiator fan motor relay
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 14. Fuel injection system fuse
- 15. Electronic throttle valve fuse
- 19. Ignition fuse 1
- 22. ABS control unit fuse
- 26. Battery
- 27. Starter relay
- 29. Frame ground
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 33. Fuel pump relay
- 34. Neutral switch
- 35. Sidestand switch
- 37. Fuel pump
- 38. O₂ sensor
- 39. Intake air pressure sensor 1
- 40. Intake air pressure sensor 2
- 41. Crankshaft position sensor
- 42. Coolant temperature sensor
- 43. Intake air temperature sensor
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 47. Ignition coil #1
- 48. Ignition coil #2
- 49. Ignition coil #3
- 50. Spark plug
- 51. Injector #1
- 52. Injector #2
- 53. Injector #3
- 56. Throttle position sensor
- 57. Throttle servo motor
- 58. ABS ECU (electronic control unit)
- 59. Front wheel sensor
- 60. Rear wheel sensor
- 61. IMU (Inertial Measurement Unit)
- 62. YDT coupler
- 63. Meter assembly
- 79. Engine stop relay
- 81. Clutch switch
- 83. Handlebar switch (right)
- 85. Stop/run/start switch
- 86. Accelerator position sensor
- 106.Purge cut valve solenoid (for California only)
- *. For California only: Y Except for California: blank

**. For California only: R/W Except for California: blank FAS32917

BASIC PROCESS FOR TROUBLESHOOTING

This section describes the basic process about fuel injection system troubleshooting. But because a work procedure varies depending to symptom and DTC, check and repair it according

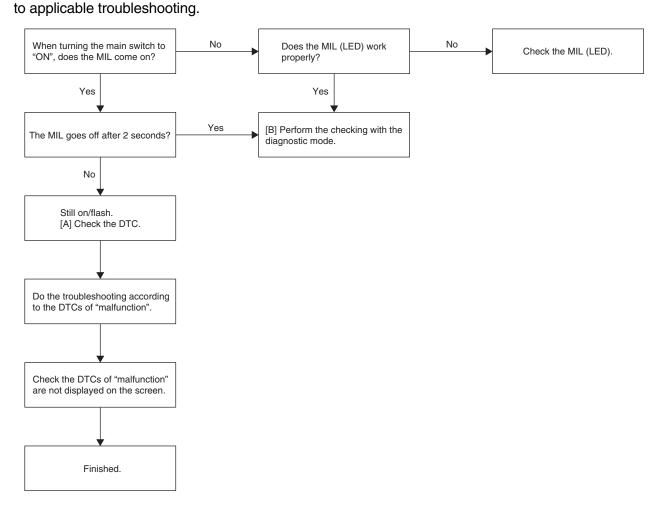

FUEL INJECTION SYSTEM

FAS33147

[A] THE MIL COMES ON/FLASHES AND ENGINE OPERATION IS NOT NORMAL

- 1. Check the DTC of "malfunction" using the YDT.
- 2. Check and repair the malfunction according to applicable DTC troubleshooting.
- 3. Turn the main switch from "OFF" to "ON", and then check the DTC of "malfunction" is not displayed.

TIP

- If another DTC is displayed, repeat steps (1) to (3) until no DTC is displayed.
- Turning the main switch to "OFF" will not erase the malfunction history.

EAS33148

[B] THE MIL DOES NOT COME ON, BUT THE ENGINE OPERATION IS NOT NORMAL

- Monitor the operation of these sensors and actuators by using the YDT in the diagnostic mode.
 Refer to "DIAGNOSTIC CODE: SENSOR OPERATION TABLE" on page 9-66 and "DIAGNOSTIC
 CODE: ACTUATOR OPERATION TABLE" on page 9-70.
- 01: Throttle position sensor signal 1 (throttle angle)
- 13: Throttle position sensor signal 2 (throttle angle)
- 14: Accelerator position sensor signal 1 (throttle angle)
- 15: Accelerator position sensor signal 2 (throttle angle)
- 30: Cylinder-#1 ignition coil
- 31: Cylinder-#2 ignition coil
- 32: Cylinder-#3 ignition coil
- 36: Injector #1
- 37: Injector #2
- 38: Injector #3


If a malfunction is detected in the sensors or actuators, repair or replace all faulty parts. If no malfunction is detected in the sensors and actuators, check and repair the inner parts of the engine.

CRUISE CONTROL SYSTEM

EAS32875

CIRCUIT DIAGRAM


MT09R/MT09RC

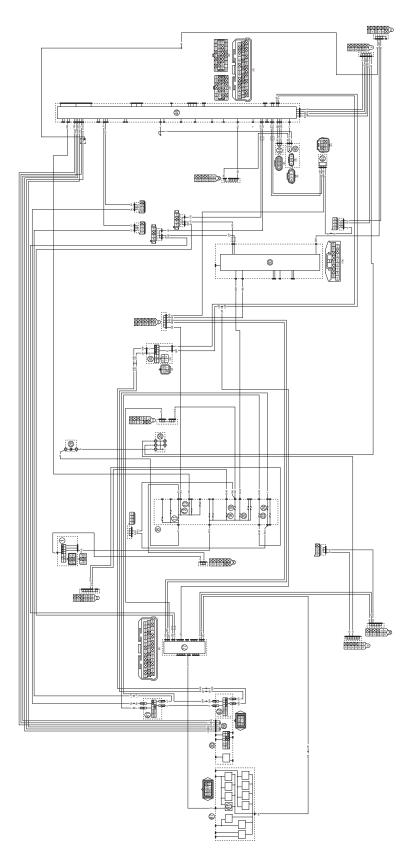

CRUISE CONTROL SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 23. Brake light fuse
- 24. Cruise control fuse
- 26. Battery
- 29. Frame ground
- 30. Rear brake light switch
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 62. YDT coupler
- 63. Meter assembly
- 77. BCM (Body Control Module)
- 81. Clutch switch
- 82. Front brake light switch
- 83. Handlebar switch (right)
- 86. Accelerator position sensor
- 87. Handlebar switch (left)
- 91. Cruise control switch
- For California only: Y
 Except for California: blank
- **. For California only: R/W Except for California: blank


MT09SPR/MT09SPRC

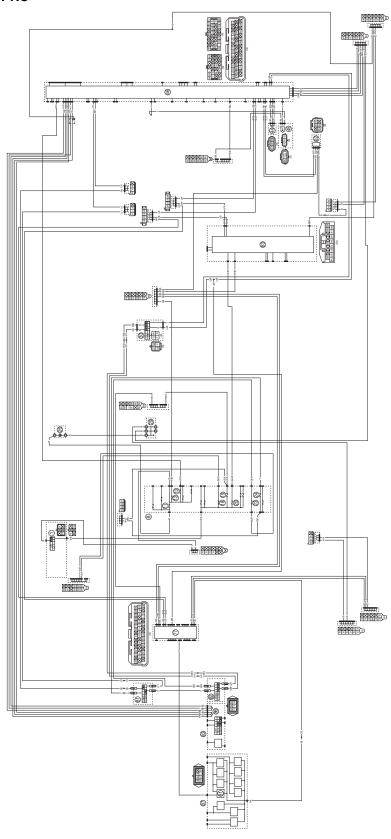

CRUISE CONTROL SYSTEM

- 1. Main switch
- 8. Fuse box
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 23. Brake light fuse
- 24. Cruise control fuse
- 26. Battery
- 29. Frame ground
- 30. Rear brake light switch
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 62. YDT coupler
- 63. Meter assembly
- 77. BCM (Body Control Module)
- 81. Clutch switch
- 82. Front brake light switch
- 83. Handlebar switch (right)
- 86. Accelerator position sensor
- 87. Handlebar switch (left)
- 91. Cruise control switch
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank

CRUISE CONTROL CIRCUIT OPERATION

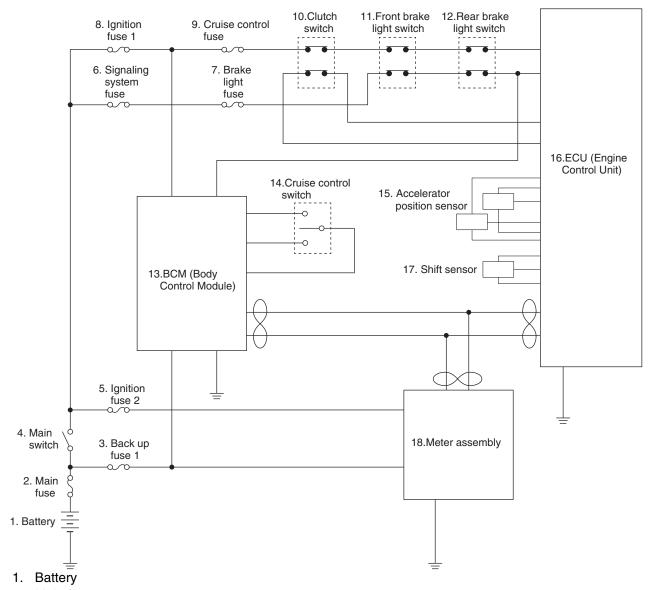

- 2. Main fuse
- 3. Backup fuse 1
- 4. Main switch
- 5. Ignition fuse 2
- 6. Signaling system fuse
- 7. Brake light fuse
- 8. Ignition fuse 1
- 9. Cruise control fuse
- 10. Clutch switch
- 11. Front brake light switch
- 12. Rear brake light switch
- 13. BCM (Body Control Module)
- 14. Cruise control switch
- 15. Accelerator position sensor
- 16. ECU (Engine Control Unit)
- 17. Shift sensor
- 18. Meter assembly

CRUISE CONTROL SYSTEM

FAS3287

BASIC INSTRUCTIONS FOR TROUBLESHOOTING

- 1. Check the DTC of "malfunction" using the YDT.
- 2. Check and repair the malfunction according to applicable DTC troubleshooting.
- 3. Turn the main switch from "OFF" to "ON", and then check the DTC of "malfunction" is not displayed.

TIP

- If another DTC is displayed, repeat steps (1) to (3) until no DTC is displayed.
- Turning the main switch to "OFF" will not erase the malfunction history.
- 4. Do the final check.

EWA17420

WARNING

- Perform the troubleshooting [A]→[B]→[C] in order. Be sure to follow the order since a wrong diagnosis could result if the steps are followed in a different order or omitted.
- Use sufficiently charged regular batteries only.

EAS32878 **BASIC PROCESS FOR TROUBLESHOOTING** When turning the main switch to "ON", does the MIL come on? No Check the MIL (LED). Yes The MIL goes off after 2 Yes seconds? No [A] Push the cruise control Fails to come on The cruise control power switch is power switch, and check defective. the cruise control system The cruise control system fuse is indicator light. Flashes blown. Return to [A]. The ECU is defective. Comes on ▶ [B-1] Diagnosis using the DTC. [C-1] Delete the DTC. Return to [A]. [B-2] Check the malfunction Yes history using the malfunction mode of the YDT. Is there any malfunction history? No [B-3] Is there automatic Yes Explain the conditions for deactivation history for the cruise control system? automatically deactivating the cruise control system to the customer. No OK [C-2] Final check.

DTC No. is not displayed.

Finished.

[A] CHECKING THE CRUISE CONTROL SYSTEM INDICATOR LIGHT

Turn the main switch, and then push the cruise control power switch.

- 1. The cruise control system indicator light does not come on.
 - Check the fuse for continuity. If the cruise control system fuse is blown, replace the fuse. Refer to "CHECKING THE FUSES" on page 8-73.
 - Check the cruise control power switch for resistance. If there is no resistance, replace the handle-bar switch (left).
 - Refer to "CHECKING THE HANDLEBAR SWITCH (LEFT)" on page 8-70.
 - Check for continuity between the blue terminal of the handlebar switch coupler (left) and blue terminal of the BCM (Body Control Module) coupler. If there is no continuity, the wire harness is defective. Replace the wire harness.
 - Check for continuity between the black/blue terminal of the handlebar switch coupler (left) and black/blue terminal of the BCM (Body Control Module) coupler. If there is no continuity, the wire harness is defective. Disconnect the BCM (Body Control Module) coupler and handlebar coupler (right), and then replace the wire harness.
- 2. The cruise control system indicator light flashes. [B-1]
- 3. The cruise control system indicator light come on. [B-2]

EAS32880

[B-1] DIAGNOSIS USING THE DTC

1. Information for the DTCs from the cruise control system is contained in the following table. Refer to this table for troubleshooting.

DTC table

DTC No.	Symptom	Check point
P056C	No normal signals from the front brake light switch, rear brake light switch and clutch switch are received by the ECU.	 Cruise control fuse Clutch switch Front brake light switch Rear brake light switch ECU (electronic control unit) Wire harness (Between the circuits of the above parts)
P0564	No normal signals from the cruise control setting switch are received by the BCM.	 Handlebar switch (left) BCM (Body Control Module) Wire harness (Between the circuits of the above parts)

EAS32881

[B-2] DIAGNOSIS USING THE MALFUNCTION HISTORY CODES

Check the malfunction history using the malfunction mode of the YDT.

- Malfunction history is displayed on the YDT. [B-1]
- Malfunction history is not displayed on the YDT. [B-3]

EAS32882

[B-3] MALFUNCTION HISTORY IS NOT DISPLAYED

Use the YDT to check whether automatic deactivation history for the cruise control system exists.

- 1. There is automatic deactivation history for the cruise control system.
 - Explain the conditions for automatically deactivating the cruise control system to the customer.
 - For information about the conditions for automatically deactivating the cruise control system. Refer to "Automatic deactivation of the cruise control system" on page 9-27.

TIF

If you do not have a YDT, the automatic deactivation history cannot be checked. Therefore, explain the automatic deactivation function of the cruise control system to the customer and explain that this is not a malfunction.

Automatic deactivation of the cruise control system

The cruise control system is electronically controlled and linked with other control systems. The cruise control system will automatically deactivate under the following conditions:

- The cruise control system is not able to maintain the set cruising speed (such as when going up a steep hill).
- Wheel slip or wheel spin is detected. (If the traction control system has not been turned off, the traction control system will work.)
- The start/engine stop switch is set to the "⋈" position.
- The engine stalls.
- The sidestand is lowered.

When traveling with a set cruising speed, if the cruise control system is deactivated under the above conditions, the "\otin" indicator light will turn off and the "SET" indicator light will flash for 4 seconds.

When not traveling with a set cruising speed, if the start/engine stop switch is set to the " \boxtimes " position, the engine stalls, or the sidestand is lowered, then the " \boxtimes " indicator light will go off (the "SET" indicator light will not flash).

If the cruise control system was automatically deactivated, please stop and confirm that your vehicle is in good operating condition before continuing on.

When traveling on roads with steep grades, the cruise control system may not be able to maintain the set cruising speed.

- When going uphill, the actual traveling speed may become lower than the set cruising speed. If this occurs, accelerate to the desired traveling speed using the throttle.
- When going downhill, the actual traveling speed may become higher than the set cruising speed. If this occurs, the setting switch cannot be used to adjust the set cruising speed. To reduce the traveling speed, apply the brakes. When the brakes are applied, the cruise control system will deactivate.

EAS3288

[C-1] ERASING THE DTC

1. Delete the DTC using the malfunction of the YDT, and check that the MIL goes off.

EAS3288

[C-2] FINAL CHECK

EWA17441

WARNING

When maintenance or checks have been performed on components related to the cruise control system, be sure to perform a final check before delivering the vehicle to the customer.

- 1. Check the clutch lever, front brake lever and rear brake pedal operation.
- 2. Check the clutch switch, front brake light switch and rear brake light switch. Refer to "CHECKING THE SWITCHES" on page 8-68.
- 3. Execute the diagnostic mode (No. 14, 15, 82 and 83) to check the operation of the front brake light switch, rear brake light switch, and accelerator position sensor.
 - Refer to "DIAGNOSTIC CODE: SENSOR OPERATION TABLE" on page 9-66.
- 4. Execute the diagnostic mode (No. 80 and 81) to check the operation of the cruise control setting switch.
 - Refer to "DIAGNOSTIC CODE: SENSOR OPERATION TABLE" on page 9-66.
- 5. Delete the DTCs.
 - Refer to "DTC TABLE" on page 9-41.
- 6. Check the operation of the cruise control system.

Test ride the vehicle and confirm that the cruise control system is operating normally.


CRUISE CONTROL SYSTEM

ABS (Anti-lock Brake System)

EAS32890

CIRCUIT DIAGRAM


MT09R/MT09RC

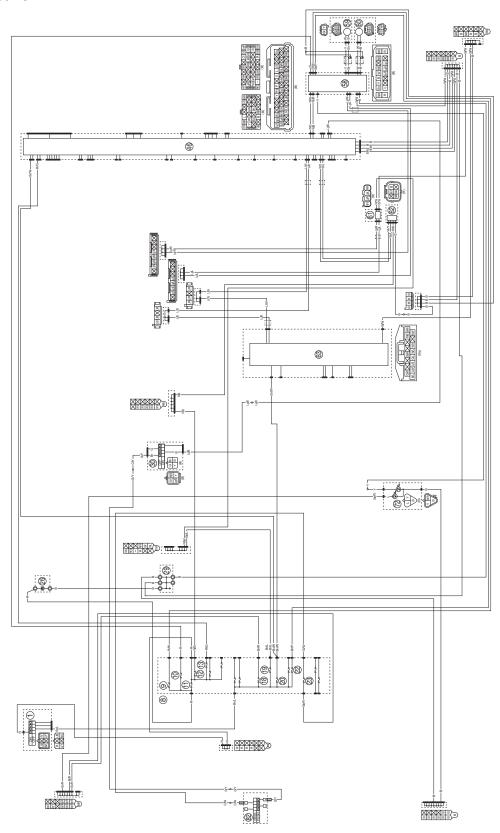

ABS (Anti-lock Brake System)

- 1. Main switch
- 8. Fuse box
- 9. ABS solenoid fuse
- 10. ABS motor fuse
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 22. ABS control unit fuse
- 23. Brake light fuse
- 26. Battery
- 29. Frame ground
- 30. Rear brake light switch
- 46. ECU (Engine Control Unit)
- 58. ABS ECU (electronic control unit)
- 59. Front wheel sensor
- 60. Rear wheel sensor
- 61. IMU (Inertial Measurement Unit)
- 62. YDT coupler
- 63. Meter assembly
- 72. Tail/brake light
- 82. Front brake light switch
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank


MT09SPR/MT09SPRC

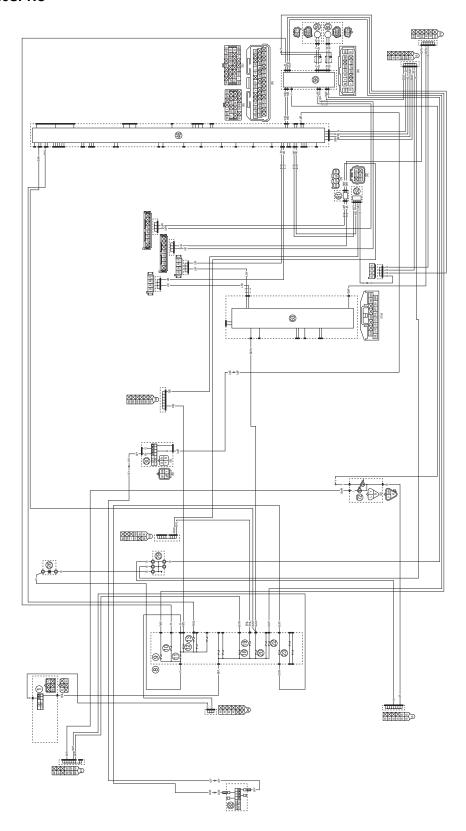

ABS (Anti-lock Brake System)


- 1. Main switch
- 8. Fuse box
- 9. ABS solenoid fuse
- 10. ABS motor fuse
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 22. ABS control unit fuse
- 23. Brake light fuse
- 26. Battery
- 29. Frame ground
- 30. Rear brake light switch
- 46. ECU (Engine Control Unit)
- 58. ABS ECU (electronic control unit)
- 59. Front wheel sensor
- 60. Rear wheel sensor
- 61. IMU (Inertial Measurement Unit)
- 62. YDT coupler
- 63. Meter assembly
- 72. Tail/brake light
- 82. Front brake light switch
- *. For California only: Y Except for California: blank
- **. For California only: R/W Except for California: blank

ABS COMPONENTS CHART

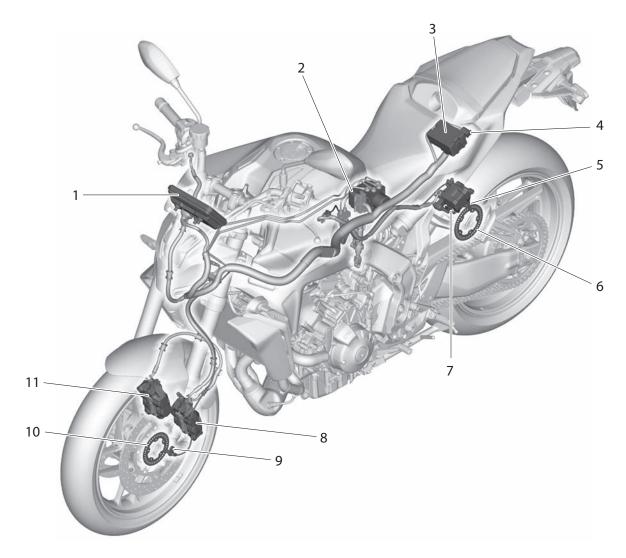

- 1. Meter assembly
- 2. Hydraulic unit assembly (ABS ECU)
- 3. Fuse box (ABS motor fuse, ABS control unit fuse, ABS solenoid fuse)
- 4. YDT coupler
- 5. Rear wheel sensor
- 6. Rear wheel sensor rotor
- 7. Rear brake caliper
- 8. Front brake caliper (left)
- 9. Front wheel sensor
- 10. Front wheel sensor rotor
- 11. Front brake caliper (right)

ABS COUPLER LOCATION CHART

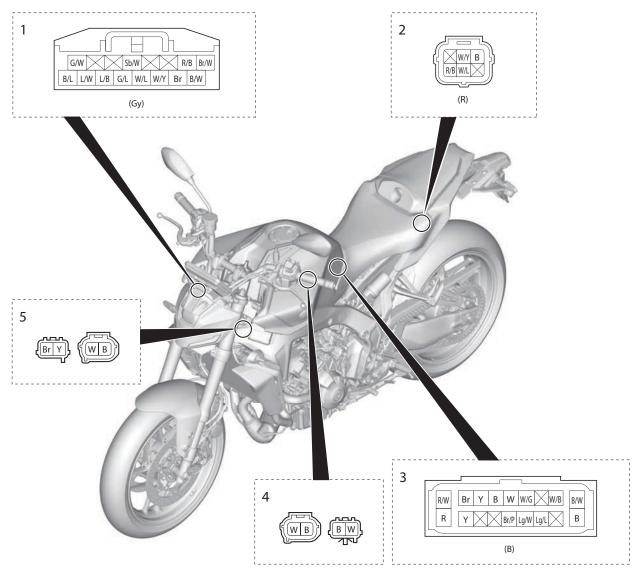

- 1. Meter assembly coupler
- 2. YDT coupler
- 3. ABS ECU coupler
- 4. Rear wheel sensor coupler
- 5. Front wheel sensor coupler


MAINTENANCE OF THE ABS ECU

Checking the ABS ECU

- 1. Check:
- Terminals "1" of the hydraulic unit assembly (ABS ECU)
 Cracks/damages → Replace the hydraulic unit assembly, brake hoses, and brake pipes that are connected to the assembly as a set.
- Terminals "2" of the ABS ECU coupler
 Connection defective, contaminated, come-off → Correct or clean.

TIP

If the ABS ECU coupler is clogged with mud or dirt, clean with compressed air.

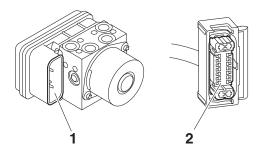

EAS33284

ABS TROUBLESHOOTING OUTLINE

EWA16710

WARNING

When maintenance or checks have been performed on components related to the ABS, be sure to perform a final check before delivering the vehicle to the customer.

TIP

To final check, refer to "[C-1] FINAL CHECK" on page 9-40.

ABS operation when the ABS warning light comes on

- 1. The ABS warning light remains on \rightarrow ABS operates as a normal brake system.
- A malfunction was detected using the ABS self-diagnosis function.
- The ABS self-diagnosis has not been completed.

 The ABS self-diagnosis starts when the main switch is turned to "ON" and finishes when the vehicle has traveled at a speed of approximately 3 mi/h (5 km/h).
- 2. The ABS warning light comes on after the engine starts, and then goes off when the vehicle starts moving (traveling at a speed of approximately 3 mi/h (5 km/h)). → ABS operation is normal.
- 3. The ABS warning light flashes \rightarrow ABS operation is normal.
 - Refer to "[C-1] FINAL CHECK" on page 9-40.

Self-diagnosis with the ABS ECU

The ABS ECU performs a static check of the entire system when the main switch is turned to "ON". It also checks for malfunctions while the vehicle is ridden. Since all malfunctions are recorded after they are detected, it is possible to check the recorded malfunction data by utilizing the YDT when the ABS ECU has entered the self-diagnosis mode.

ABS (Anti-lock Brake System)

TIP

The ABS performs a self-diagnosis test for a few seconds each time the vehicle first starts off after the main switch was turned to "ON". During this test, a "clicking" noise can be heard from under the seat, and if the brake lever or brake pedal are even slightly applied, a vibration can be felt at the lever and pedal, but these do not indicate a malfunction.

Special precautions for handling and servicing a vehicle equipped with ABS

CA17620

NOTICE

Care should be taken not to damage components by subjecting them to shocks or pulling on them with too much force since the ABS components are precisely adjusted.

- The ABS ECU and hydraulic unit are united assemblies and cannot be disassembled.
- The malfunction history is stored in the memory of the ABS ECU. Delete the DTC when the service is finished. (This is because the past DTC will be displayed again if another malfunction occurs.)

E483280

BASIC INSTRUCTIONS FOR TROUBLESHOOTING

- 1. Check the DTC of "malfunction" using the YDT.
- 2. Check and repair the malfunction according to applicable DTC troubleshooting.
- 3. Turn the main switch from "OFF" to "ON", and then check the DTC of "malfunction" is not displayed.

TIP


- If another DTC is displayed, repeat steps (1) to (3) until no DTC is displayed.
- Turning the main switch to "OFF" will not erase the malfunction history.
- 4. Do the final check.

WA17420

WARNING

- Perform the troubleshooting [A]→[B]→[C] in order. Be sure to follow the order since a wrong diagnosis could result if the steps are followed in a different order or omitted.
- Use sufficiently charged regular batteries only.

ABS (Anti-lock Brake System)

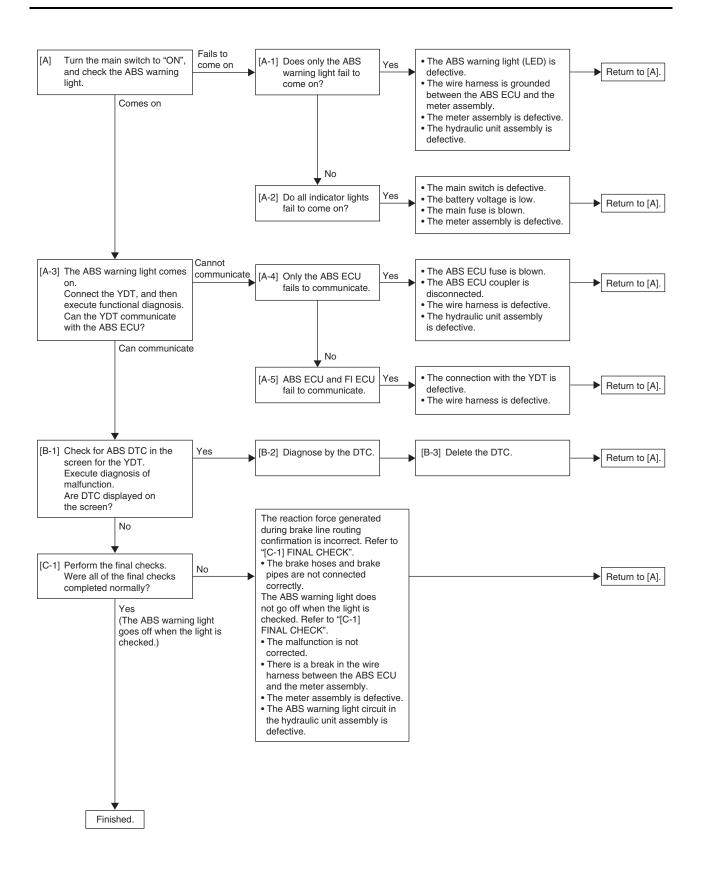

[A] CHECKING THE ABS WARNING LIGHT

Turn the main switch to "ON". (Do not start the engine.)

- 1. The ABS warning light does not come on.
- Only the ABS warning light fails to come on. [A-1]
- The ABS warning light and all other indicator lights fail to come on. [A-2]
- 2. The ABS warning light comes on. [A-3]

FAS3289

[A-1] ONLY THE ABS WARNING LIGHT FAILS TO COME ON

- 1. Check for a short circuit to the ground between the green/orange terminal of the ABS ECU coupler and green/orange terminal of the meter assembly.
- If there is short circuit to the ground, the wire harness is defective. Replace the wire harness.
- 2. Disconnect the ABS ECU coupler and check that the ABS warning light comes on when the main switch is turned to "ON".
 - If the ABS warning light does not come on, the meter assembly circuit (including the ABS warning light [LED]) is defective. Replace the meter assembly.
 - If the ABS warning light comes on, the ABS ECU is defective. Replace the hydraulic unit assembly.

EAS32899

[A-2] ALL INDICATOR LIGHTS FAIL TO COME ON

- 1. Main switch
- Check the main switch for continuity.
 Refer to "CHECKING THE SWITCHES" on page 8-68.
- If there is no continuity, replace the main switch.
- 2. Battery
 - Check the condition of the battery.

Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-75.

- If the battery is defective, clean the battery terminals and recharge it, or replace the battery.
- 3. Main fuse
- Check the fuse for continuity.

Refer to "CHECKING THE FUSES" on page 8-73.

- If the main fuse is blown, replace the fuse.
- 4. Circuit
 - Check the meter assembly circuit.

Refer to "CIRCUIT DIAGRAM" on page 9-29.

• If the meter assembly circuit is open, replace the wire harness.

FAS32900

[A-3] THE ABS WARNING LIGHT COMES ON

Connect the YDT to the YDT coupler and execute functional diagnosis. (For information about how to execute functional diagnosis, refer to the operation manual that is included with the tool.)

Check that communication with the ABS ECU is possible.

- Only the ABS ECU fails to communicate. [A-4]
- ABS ECU and FI ECU fail to communicate. [A-5]
- Communication is possible with the ABS ECU. [B-1] (The ABS is displayed on the select unit screen.)

EAS32901

[A-4] ONLY THE ABS ECU FAILS TO COMMUNICATE

- 1. ABS control unit fuse
- Check the ABS control unit fuse for continuity.
 Refer to "CHECKING THE FUSES" on page 8-73.
- If the ABS control unit fuse is blown, replace the fuse.

2. ABS ECU coupler

• Check that the ABS ECU coupler is connected properly.

For information about connecting the ABS ECU coupler properly, refer to "INSTALLING THE HY-DRAULIC UNIT ASSEMBLY" on page 4-65.

3. Wire harness

Open circuit between the main switch and the ABS ECU, or between the ABS ECU and the ground.
 Check for continuity between brown/blue terminal of the main switch coupler and red/black terminal of the ABS ECU coupler.

Check for continuity between black terminal of the ABS ECU coupler and the ground.

If there is no continuity, the wire harness is defective. Replace the wire harness.

Open circuit in the wire harness between the ABS ECU coupler and the YDT coupler.
 Check for continuity between blue/white terminal of the ABS ECU coupler and blue/white terminal of the YDT coupler. (CANH)

Check for continuity between blue/black terminal of the ABS ECU coupler and blue/black terminal of the YDT coupler. (CANL)

4. ABS ECU malfunction

Replace the hydraulic unit assembly.

EAS32902

[A-5] ABS ECU AND FI ECU FAIL TO COMMUNICATE

1. YDT

Check that the YDT is properly connected.

- 2. Wire harness
 - Open circuit in the wire harness between the ABS ECU coupler and the YDT coupler.
 Check for continuity between blue/white terminal of the ABS ECU coupler and blue/white terminal of the YDT coupler. (CANH)

Check for continuity between blue/black terminal of the ABS ECU coupler and blue/black terminal of the YDT coupler. (CANL)

EAS32903

[B-1] MALFUNCTION ARE CURRENTLY DETECTED

When the YDT is connected to the YDT coupler, the DTC will be displayed on the computer screen.

- A DTC is displayed. [B-2]
- A DTC is not displayed. [C-1]

EAS32904

[B-2] DIAGNOSIS USING THE DTC

This model uses the YDT to identify malfunctions.

For information about using the YDT, refer to the operation manual that is included with the tool.



Yamaha diagnostic tool USB (US) 90890-03275 Yamaha diagnostic tool (A/I) 90890-03273

TIP

- Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).
- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.

Details about the displayed DTCs are shown in the following chart. Refer to this chart and check the vehicle.

Once all the work is complete, delete the DTCs. [B-3]

ABS (Anti-lock Brake System)

TIP

Do the final check after terminating the connection with the YDT and turning the main switch off. [C-1]

EAS33333

[B-3] DELETING THE DTC

To delete the DTCs, use the YDT. For information about deleting the DTCs, refer to the operation manual of the YDT.

Check that all the displayed DTCs are deleted.



Yamaha diagnostic tool USB (US) 90890-03275 Yamaha diagnostic tool (A/I) 90890-03273

TIP

- Yamaha diagnostic tool (A/I) (90890-03273) includes YDT sub harness (6P) (90890-03266).
- If you already have Yamaha diagnostic tool (A/I) (90890-03262), YDT sub harness (6P) (90890-03266) is separately required.

EAS32905

[C-1] FINAL CHECK

EWA1671

WARNING

When maintenance or checks have been performed on components related to the ABS, be sure to perform a final check before delivering the vehicle to the customer.

Check all the following items to complete the inspection.

If the process is not completed properly, start again from the beginning.

Checking procedures

Check the brake fluid level in the front brake master cylinder reservoir and the rear brake master cylinder reservoir.

Refer to "CHECKING THE BRAKE FLUID LEVEL" on page 3-13.

2. Check the wheel sensors for proper installation.

Refer to "INSTALLING THE FRONT WHEEL (FRONT BRAKE DISCS)" on page 4-21 and "INSTALLING THE REAR WHEEL (REAR BRAKE DISC)" on page 4-28.

3. Perform brake line routing confirmation.

Refer to "HYDRAULIC UNIT OPERATION TESTS" on page 4-66.

If it does not have reaction-force properly, the brake hose is not properly routed or connected.

4. Delete the DTCs.

Refer to "[B-3] DELETING THE DTC" on page 9-40.

5. Checking the ABS warning light.

Confirm the ABS warning light go off.

If the ABS warning light does not come on or does not go off, refer to "[A] CHECKING THE ABS WARNING LIGHT" on page 9-38.

If the ABS warning light does not turn off, the possible causes are following:

- The problem is not solved.
- Open circuit between the ABS ECU and the meter assembly.

Check for continuity between green/orange terminal of the ABS ECU coupler and green/orange terminal of the meter assembly coupler.

- Malfunction in the meter assembly circuit.
- Malfunction in the ABS warning light circuit in the hydraulic unit assembly.

SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE

EAS33149

DTC TABLE

		Fail-safe	system	Diagnos-
DTC	Symptom	Starting the engine	Driving the vehicle	tic code
"11_ABS"	Front wheel sensor (intermittent pulses or no pulses)	_	_	_
"12_ABS"	Rear wheel sensor (intermittent pulses or no pulses)	_	_	_
"13, 26_ABS"	Front wheel sensor (abnormal pulse period)	_	_	_
"14, 27_ABS"	Rear wheel sensor (abnormal pulse period)	_	_	_
"15_ABS"	Front wheel sensor (open or short circuit)	_	_	_
"16_ABS"	Rear wheel sensor (open or short circuit)	_	_	_
"21_ABS"	Hydraulic unit assembly (defective sole- noid drive circuit)	_	_	_
"30_EVEN T"	Overturn detected.	Unable	Unable	17
"31_ABS"	Hydraulic unit assembly (defective ABS solenoid power circuit)	_	_	_
"33_ABS"	Hydraulic unit assembly (abnormal ABS motor power supply)	_	_	_
"34_ABS"	Hydraulic unit assembly (short circuit in ABS motor power supply circuit)	_	_	_
"41_ABS"	Front wheel ABS (intermittent wheel speed pulses or incorrect depressurization)	_	_	_
"42_ABS"	Rear wheel ABS (intermittent wheel speed pulses or incorrect depressurization)	_	_	_
"43, 45_ABS"	Front wheel sensor (missing pulses)	_	_	_
"44, 46_ABS"	Rear wheel sensor (missing pulses)	_		_
"51_ABS"	Vehicle system power supply (voltage of ABS ECU power supply is high)	_	_	_
"53_ABS"	Vehicle system power supply (voltage of ABS ECU power supply is low)	_	_	_
"55_ABS"	Hydraulic unit assembly (defective ABS ECU)	_	_	_
"56_ABS"	Hydraulic unit assembly (abnormal internal circuit)	_	_	_
"57_ABS"	Vehicle CAN communication line or power source of vehicle system	_	_	_

		Fail-safe	system	Diognos
DTC	Symptom	Starting the engine	Driving the vehicle	Diagnos- tic code
"62_ABS"	Power supply voltage failure in pressure sensor	_	_	_
"68_ABS"	Defective hydraulic unit assembly (defective front pressure sensor)	_	_	_
"70_EVEN T"	Engine forcibly stops when the vehicle is left idling for a long period.	Able/Unable	Able/Unable	_
"89_ABS"	CAN communication (between meter assembly and hydraulic unit assembly)	_	_	_
"90_ABS"	CAN communication (between ECU and hydraulic unit assembly)	_	_	_
"91_ABS"	CAN communication (between IMU and hydraulic unit assembly)	_	_	_
"C0520"	ECU: no normal signals or malfunction signals are received from the IMU.	Able/Unable	Able/Unable	_
"P0030"	O ₂ sensor heater: defective heater controller detected.	Able	Able	_
"P00D1, P2195"	[P00D1] O ₂ sensor: heater performance deterioration [P2195] O ₂ sensor: open circuit detected.	Able	Able	_
"P0107, P0108"	[P0107] Intake air pressure sensor 1: ground short circuit detected. [P0108] Intake air pressure sensor 1: open or power short circuit detected.	Able	Able	03
"P0112, P0113"	[P0112] Intake air temperature sensor: ground short circuit detected. [P0113] Intake air temperature sensor: open or power short circuit detected.	Able	Able	05
"P0117, P0118"	[P0117] Coolant temperature sensor: ground short circuit detected. [P0118] Coolant temperature sensor: open or power short circuit detected.	Able	Able	06
"P0122, P0123, P0222, P0223"	[P0122] Throttle position sensor: ground short circuit detected. [P0123] Throttle position sensor: open or power short circuit detected. [P0222] Throttle position sensor: open or ground short circuit detected. [P0223] Throttle position sensor: power short circuit detected.	Able/Unable	Able/Unable	01, 13
"P0132"	O ₂ sensor: short circuit detected (power short circuit).	Able	Able	_
"P0201"	Injector #1: malfunction in injector #1.	Able (depending on the number of faulty cylinders)	Able (depending on the number of faulty cylinders)	36

		Fail-safe	system	Diagrae
DTC	Symptom	Starting the engine	Driving the vehicle	Diagnos- tic code
"P0202"	Injector #2: malfunction in injector #2.	Able (depending on the number of faulty cylinders)	Able (depending on the number of faulty cylinders)	37
"P0203"	Injector #3: malfunction in injector #3.	Able (depending on the num- ber of faulty cylinders)	Able (depending on the num- ber of faulty cylinders)	38
"P0335"	Crankshaft position sensor: no normal signals are received from the crankshaft position sensor.	Unable	Unable	_
"P0351"	Cylinder-#1 ignition coil: open or short circuit detected in the primary lead of the cylinder-#1 ignition coil.	Able (depending on the num- ber of faulty cylinders)	Able (depending on the num- ber of faulty cylinders)	30
"P0352"	Cylinder-#2 ignition coil: open or short circuit detected in the primary lead of the cylinder-#2 ignition coil.	Able (depending on the number of faulty cylinders)	Able (depending on the num- ber of faulty cylinders)	31
"P0353"	Cylinder-#3 ignition coil: open or short circuit detected in the primary lead of the cylinder-#3 ignition coil.	Able (depending on the number of faulty cylinders)	Able (depending on the num- ber of faulty cylinders)	32
"P0458"*	Purge cut valve solenoid: open circuit detected.	Able	Able	46
"P0480"	Radiator fan motor relay: open or short circuit detected.	Able	Able	51
"P0500, P1500"	Rear wheel sensor: no normal signals are received from the rear wheel sensor. Neutral switch: open or short circuit is detected. Clutch switch: open or short circuit is detected.	Able	Able	07, 21
"P0560, P0563"	[P0560] Charging voltage is abnormal. [P0563] Vehicle system power voltage out of range	Able	Able	_
"P0564"	Cruise control setting switch "RES+": open or short circuit is detected. Cruise control setting switch "SET-": open or short circuit is detected.	Able	Able	80, 81

		Fail-safe	system	Diagnas
DTC	Symptom	Starting the engine	Driving the vehicle	Diagnos- tic code
"P056C"	Front brake light switch: open or short circuit is detected. Rear brake light switch: open or short circuit is detected.	Able	Able	82, 83
"P0601"	Internal malfunction in ECU. (When this malfunction is detected in the ECU, the DTC might not appear on the tool display.)	Unable	Unable	_
"P0606"	Internal malfunction in ECU. (When this malfunction is detected in the ECU, the DTC might not appear on the tool display.)	Able/Unable	Able/Unable	_
"P062F"	EEPROM DTC: an error is detected while reading or writing on EEPROM.	Able/Unable	Able/Unable	60
"P0638"	YCC-T drive system: malfunction detected.	Able/Unable	Able/Unable	_
"P0657"	Fuel system voltage: incorrect voltage supplied to the fuel injector and fuel pump.	Able	Able	09, 50
"P0916, P0917"	[P0916] Gear position sensor: open or ground short circuit detected. [P0917] Gear position sensor: power short circuit detected.	Able	Able	_
"P1004"	Intake air pressure sensor 1 and intake air pressure sensor 2: output voltage deviation error.	Able	Able	03, 04
"P1600"	Lean angle sensor: open or short circuit detected.	Unable	Unable	17
"P1601"	Sidestand switch: open or short circuit of the blue/yellow lead of the ECU is detected.	Unable	Unable	20
"P1602"	Malfunction in ECU internal circuit (malfunction of ECU power cut-off function).	Able/Unable	Able/Unable	_
"P1606, P1607"	[P1606] Intake air pressure sensor 2: ground short circuit detected. [P1607] Intake air pressure sensor 2: open or power short circuit detected.	Able	Able	04
"P1806, P1807"	[P1806] Shift sensor: open or ground short circuit detected. [P1807] Shift sensor: power short circuit detected.	Able	Able	95

		Fail-safe	system	Diagnos
DTC	Symptom	Starting the engine	Driving the vehicle	Diagnos- tic code
"P2122, P2123, P2127, P2128, P2138"	[P2122] Accelerator position sensor: open or ground short circuit detected. [P2123] Accelerator position sensor: power short circuit detected. [P2127] Accelerator position sensor: open or ground short circuit detected. [P2128] Accelerator position sensor: power short circuit detected. [P2138] Deviation error	Able/Unable	Able/Unable	14, 15
"P2135"	Throttle position sensor: output voltage deviation error.	Able/Unable	Able/Unable	01, 13
"P2158"	Front wheel sensor: no normal signals are received from the front wheel sensor.	Able	Able	16
"U0100"	Abnormal CAN communication: Signals cannot be transmitted between the ECU and the BCM.	Able	Able	_
"U0121"	Abnormal CAN communication: Signals cannot be transmitted between the ABS ECU and the BCM.	Able	Able	_
"U0125"	Abnormal CAN communication: Signals cannot be transmitted between the ECU and the IMU.	Unable	Able/Unable	_
"U0155 or Err (FI)"	Abnormal CAN communication: Signals cannot be transmitted between the ECU and the meter assembly.	Able	Able	_
"U0155 (BCM)"	Abnormal CAN communication: Signals cannot be transmitted between the BCM and the meter assembly.	Able	Able	_

^{* &}quot;P0458" is indicated for California only.

EAS33028

SELF-DIAGNOSTIC FUNCTION TABLE (FOR FUEL INJECTION SYSTEM)

TIP

For details of the DTC, refer to "BASIC PROCESS FOR TROUBLESHOOTING" on page 9-17.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
30_EVEN T	Overturn detected.	 The vehicle has overturned. Installed condition of IMU. Defective IMU. Malfunction in ECU. 	_	_
70_EVEN T	Engine forcibly stops when the vehicle is left idling for a long period.	Allow to idle for a long period of time.Malfunction in ECU.	_	_
C0520	ECU: no normal signals or malfunction signals are received from the IMU.	 Defective IMU coupler or ECU coupler. Open or short circuit in wire harness between IMU and ECU. Improperly installed IMU. Malfunction in IMU. Malfunction in ECU. 	Engine cannot be started (depending on the circumstances).	Engine cannot be started (depending on the circumstances). Cruise control system cannot be operated.
P0030	O ₂ sensor heater: defective heater controller detected.	 Open circuit in wire harness. Disconnected coupler. Defective O₂ sensor heater controller (Malfunction in ECU). Broken or disconnected lead in O₂ sensor heater. 	(When the O ₂ sensor does not operate because the exhaust temperature is low) Increased exhaust emissions. Fuel learning cannot be carried out.	Display only (If the O ₂ sensor does not operate, O ₂ feedback is not carried out.) Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P00D1	O ₂ sensor: heater performance deterioration	 Improperly installed O₂ sensor. Defective coupler between O₂ sensor and ECU. Open or short circuit in wire harness between O₂ sensor and ECU. Incorrect fuel pressure. Defective O₂ sensor. Malfunction in ECU. 	Increased exhaust emissions.	O ₂ feedback is not carried out. O ₂ learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.
P0107 P0108	[P0107] Intake air pressure sensor 1: ground short circuit detected. [P0108] Intake air pressure sensor 1: open or power short circuit detected.	[P0107] Low voltage of the intake air pressure sensor 1 circuit (0.5 V or less) [P0108] High voltage of the intake air pressure sensor 1 circuit (4.8 V or more) • Defective coupler between intake air pressure sensor 1 and ECU. • Open or short circuit in wire harness between intake air pressure sensor 1 and ECU. • Defective intake air pressure sensor 1 and ECU. • Defective intake air pressure sensor 1. • Malfunction in ECU.	Engine idling speed is unstable. Engine response is poor. Loss of engine power. Increased exhaust emissions.	Intake air pressure is fixed to 101.3 [kPa]. Intake air pressure difference is fixed to 0 [kPa]. α-N is fixed. Fuel is not cut off due to the intake air pressure difference. O₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0112 P0113	[P0112] Intake air temperature sensor: ground short circuit detected. [P0113] Intake air temperature sensor: open or power short circuit detected.	 [P0112] Low voltage of the intake air temperature sensor circuit (0.1 V or less) [P0113] High voltage of the intake air temperature sensor circuit (4.8 V or more) Defective coupler between intake air temperature sensor and ECU. Open or short circuit in wire harness between intake air temperature sensor and ECU. Improperly installed intake air temperature sensor. Defective intake air temperature sensor. Malfunction in ECU. 	Engine is difficult to start. Increased exhaust emissions. Engine idling speed is unstable.	The intake air temperature is fixed to 20 [°C]. O ₂ sensor heater driving is not carried out. O ₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0117 P0118	[P0117] Coolant temperature sensor: ground short circuit detected. [P0118] Coolant temperature sensor: open or power short circuit detected.	 [P0117] Low voltage of the coolant temperature sensor circuit (0.1 V or less) [P0118] High voltage of the coolant temperature sensor circuit (4.9 V or more) Defective coupler between coolant temperature sensor and ECU. Open or short circuit in wire harness between coolant temperature sensor and ECU. Improperly installed coolant temperature sensor. Defective coolant temperature sensor. Malfunction in ECU. 	Engine is difficult to start. Increased exhaust emissions. Engine idling speed is unstable.	The radiator fan motor relay is on only when the vehicle is traveling at low speeds. O ₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. The coolant temperature is fixed to 60 [°C]. Quick shift system is not carried out. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0122 P0123 P0222 P0223 P2135	[P0122] Throttle position sensor: ground short circuit detected. [P0123] Throttle position sensor: open or power short circuit detected. [P0222] Throttle position sensor: open or ground short circuit detected. [P0223] Throttle position sensor: power short circuit detected. [P2135] Throttle position sensor: output voltage deviation error.	[P0122, P0222] Low voltage of the throttle position sensor circuit (0.25 V or less) [P0123, P0223] High voltage of the throttle position sensor circuit (4.75 V or more) [P2135] Difference in output voltage 1 and output voltage 2 of the throttle position sensor • Defective coupler between throttle position sensor and ECU. • Open or short circuit in wire harness between throttle position sensor and ECU. • Improperly installed throttle position sensor. • Defective throttle position sensor. • Defective throttle position sensor.	Engine idling speed is high. Engine idling speed is unstable. Engine response is poor. Loss of engine power. Deceleration is poor. Increased exhaust emissions. Vehicle cannot be driven.	Change in the throttle opening is 0 (transient control is not carried out). D–j is fixed. Throttle opening is fixed to 125 [°]. O₂ feedback is not carried out. Fuel is not cut off due to the throttle opening. Output is restricted. ISC feedback is not carried out. ISC learning is not carried out. O₂ sensor heater driving is not carried out. Quick shift system is not carried out. Quick shift system is not carried out. Engine brake management: control mode is fixed. (for MT09SPR/MT09SPRC) Cruise control system cannot be operated.
P0132	O ₂ sensor: deterioration detected.	High voltage of the O ₂ sensor circuit (4.8 V or more) • Improperly installed O ₂ sensor. • Defective coupler between O ₂ sensor and ECU. • Open or short circuit in wire harness between O ₂ sensor and ECU. • Incorrect fuel pressure. • Defective O ₂ sensor. • Malfunction in ECU.	Increased exhaust emissions.	O ₂ feedback is not carried out. O ₂ feedback learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0201 P0202 P0203	[P0201] Injector #1: malfunction in injector #1. [P0202] Injector #2: malfunction in injector #2. [P0203] Injector #3: malfunction in injector #3.	 Defective coupler between injector and ECU. Open or short circuit in wire harness between injector and ECU. Defective injector. Malfunction in ECU. Improperly installed injector. 	Loss of engine power. Engine is difficult to start. Engine cannot be started. Engine stops. Engine idling speed is unstable. Increased exhaust emissions.	O ₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.
P0335	Crankshaft position sensor: no normal signals are received from the crankshaft position sensor.	 Defective coupler between crank-shaft position sensor and ECU. Open or short circuit in wire harness between crankshaft position sensor and ECU. Improperly installed crankshaft position sensor. Malfunction in generator rotor. Defective crankshaft position sensor. Malfunction in generator rotor. Defective crankshaft position sensor. Malfunction in ECU. 	Engine cannot be started.	Does not operate. ISC feedback is not carried out. ISC learning is not carried out. Cruise control system cannot be operated.
P0351 P0352 P0353	[P0351] Cylinder-#1 ignition coil: open or short circuit detected in the primary lead of the cylinder-#1 ignition coil. [P0352] Cylinder-#2 ignition coil: open or short circuit detected in the primary lead of the cylinder-#2 ignition coil. [P0353] Cylinder-#3 ignition coil: open or short circuit detected in the primary lead of the cylinder-#3 ignition coil.	 Defective coupler between ignition coil and ECU. Open or short circuit in wire harness between ignition coil and ECU. Improperly installed ignition coil. Defective ignition coil. Malfunction in ECU. 	Engine stops. Loss of engine power. Engine is difficult to start. Engine cannot be started. Engine idling speed is unstable. Increased exhaust emissions.	O ₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0458*	Purge cut valve so- lenoid: open circuit detected.	 Open or short circuit in wire harness. Defective purge cut valve solenoid. Malfunction in ECU. 	Vapor gas cannot be purged from can- ister.	Closing side on purge cut valve solenoid is fixed.
P0480	Radiator fan motor relay: open or short circuit detected.	 Open or short circuit in wire harness. Disconnected coupler. Defective radiator fan motor relay. Defective radiator fan motor relay controller (Malfunction in ECU). 	Engine is difficult to start. Loss of engine power. Engine overheats. Increased exhaust emissions.	Radiator fan motor relay is off all the time. O ₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Cruise control system cannot be operated.
P0500 P1500	[P0500] Rear wheel sensor: no normal signals are received from the rear wheel sensor. [P1500] Neutral switch: open or short circuit is detected. [P1500] Clutch switch: open or short circuit is detected.	 Open or short circuit in wire harness between rear wheel sensor and ABS unit. Open or short circuit in wire harness between ABS unit and ECU. [P1500] Open or short circuit in wire harness between neutral switch and ECU. [P1500] Open or short circuit in wire harness between clutch switch and ECU. [P1500] Open or short circuit in wire harness between clutch switch and ECU. Defective rear wheel sensor. [P1500] Defective neutral switch. [P1500] Defective clutch switch. [P1500] Improper adjustment of clutch lever. Malfunction in ECU. 	Vehicle speed is not displayed on the meter. [P1500] Indication of the neutral indicator light is incorrect. Engine idling speed is unstable. Traction control does not work.	Vehicle speed displayed on the meter = 0 [km/h] O ₂ feedback is not carried out. Fuel cut-off control when the rear wheel sensor or neutral switch malfunctions is carried out. ISC feedback is not carried out. ISC learning is not carried out. Traction control does not work. Quick shift system is not carried out. Cruise control system cannot be operated. Back Slip Regulator does not work.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0560	Charging voltage is abnormal.	 Battery over-discharging (broken or disconnected lead in charging system). Battery over-discharging (defective GCU). 	Engine is difficult to start. Increased exhaust emissions. Battery performance has deteriorated or battery is defective.	O ₂ feedback is not carried out.
P0563	Vehicle system power voltage out of range	 Battery overcharging (defective GCU). Battery overcharging (broken or disconnected lead in GCU wire harness). 	Engine is difficult to start. Increased exhaust emissions. Battery performance has deteriorated or battery is defective.	O ₂ feedback is not carried out.
P0564	Cruise control setting switch "RES+": open or short circuit is detected. Cruise control setting switch "SET-": open or short circuit is detected.	 Open or short circuit in wire harness between cruise control setting switch and BCM. Defective cruise control setting switch. Malfunction in ECU. 	Cruise control system cannot be operated.	Cruise control system cannot be operated.
P056C	Front brake light switch: open or short circuit is detected. Rear brake light switch: open or short circuit is detected.	 Open or short circuit in wire harness between front brake light switch and ECU. Open or short circuit in wire harness between rear brake light switch and ECU. Defective front brake light switch or rear brake light switch switch. Malfunction in ECU. 	Cruise control system cannot be operated.	Cruise control system cannot be operated.
P0601	Internal malfunction in ECU. (When this malfunction is de- tected in the ECU, the DTC might not appear on the tool display.)	Malfunction in ECU.	Engine cannot be started.	Engine cannot be started. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0606	Internal malfunction in ECU. (When this malfunction is detected in the ECU, the DTC might not appear on the tool display.)	Malfunction in ECU.	Engine cannot be started. Engine response is poor. Loss of engine power.	Engine cannot be started. Ignition and injection are not carried out. Judgment for other DTCs is not carried out. Load control is not carried out. (The relay unit, radiator fan motor relay, and other relays are all turned off.) The CO adjustment mode and diagnostic mode cannot be activated. Output is restricted. Cruise control system cannot be operated.
P062F	EEPROM DTC: an error is detected while reading or writing on EE-PROM.	 CO adjustment value is not properly written. ISC learning value is not properly written. O₂ feedback learning value is not properly written. OBD memory value is not properly written. Malfunction in ECU. 	Increased exhaust emissions. Engine cannot be started or is difficult to start. Engine idling speed is unstable. OBD memory value is not correct.	CO adjustment value for the faulty cylinder = 0 (default value) ISC learning values = Default values. OBD memory value is initialized. Initialization of O ₂ feedback learning value. Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P0638	YCC-T drive system: malfunction detected.	 Defective coupler between throttle servo motor and ECU. Open or short circuit in wire harness between throttle servo motor and ECU. Defective throttle servo motor is stuck (mechanism or motor). Malfunction in ECU. Blown electric throttle valve fuse. 	Engine response is poor. Loss of engine power. Engine idling speed is unstable.	O ₂ feedback is not carried out. YCC-T evacuation is activated. Output is restricted. ISC feedback is not carried out. ISC learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.
P0657	Fuel system voltage: incorrect voltage supplied to the fuel injector and fuel pump.	 Open or short circuit in wire harness between relay unit and ECU. Open circuit in wire harness between battery and ECU. Defective relay unit. Malfunction in ECU. 	Engine is difficult to start. Increased exhaust emissions.	Monitor voltage = 12 [V] O ₂ feedback is not carried out. Cruise control system cannot be operated.
P0916 P0917	[P0916] Gear position sensor: open or ground short circuit detected. [P0917] Gear position sensor: power short circuit detected.	 [P0916] Low voltage of the gear position sensor circuit (0.2 V or less) [P0917] High voltage of the gear position sensor circuit (4.8 V or more) Defective coupler between gear position sensor and ECU. Open or power short circuit in wire harness between gear position sensor and ECU. Improperly installed gear position sensor. Defective gear position sensor. Malfunction in ECU. 	Improper display for position. Engine response is poor.	Maintains the gear position value at the previous value. Quick shift system is not carried out. Engine brake management: control mode is fixed. (for MT09SPR/MT09SPRC) Engine brake management: control value is fixed. (for MT09SPR/MT09SPRC) Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P1004	Intake air pressure sensor 1 and intake air pressure sensor 2: output voltage deviation error.	 Intake pressure sensor 1 hose or intake pressure sensor 2 hose is detached, clogged, kinked or bent. Defective intake air pressure sensor 1 or intake air pressure sensor 2. Malfunction in ECU. 	Engine is difficult to start. Engine idling speed is unstable. Increased exhaust emissions. Loss of engine power.	Intake air pressure is fixed to 101.3 [kPa]. Intake air pressure difference is fixed to 0 [kPa]. Atmospheric pressure is fixed to 101.3 [kPa]. α-N is fixed. Fuel is not cut off due to the intake air pressure difference. O₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Cruise control system cannot be operated. Quick shift system is not carried out.
P1600	Lean angle sensor: open or short circuit detected.	 Open or short circuit in wire harness. Malfunction in IMU. Malfunction in ECU. 	Engine cannot be started.	Engine cannot be started. Cruise control system cannot be operated.
P1601	Sidestand switch: open or short circuit of the blue/yellow lead of the ECU is detected.	 Defective coupler between relay unit and ECU. Open or short circuit in wire harness between relay unit and ECU. Defective coupler between sidestand switch and relay unit. Open or short circuit in wire harness between sidestand switch and relay unit. Defective sidestand switch and relay unit. Defective sidestand switch. Malfunction in ECU. 	Engine cannot be started.	Engine is forcefully stopped (the injector output is stopped). Cruise control system cannot be operated.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P1602	Malfunction in ECU internal circuit (malfunction of ECU power cut-off function).	 Open or short circuit in wire harness between ECU and battery. Open or short circuit in wire harness between ECU and main switch. Blown backup fuse. Malfunction in ECU. 	Engine idling speed is unstable. Engine idling speed is high. Increased exhaust emissions. Engine is difficult to start.	O ₂ feedback learning is not carried out. O ₂ feedback learning value is not written. Cruise control system cannot be operated.
P1606 P1607	[P1606] Intake air pressure sensor 2: ground short circuit detected. [P1607] Intake air pressure sensor 2: open or power short circuit detected.	 Defective coupler between intake air pressure sensor 2 and ECU. Open or short circuit in wire harness between intake air pressure sensor 2 and ECU. Improperly installed intake air pressure sensor 2. Defective intake air pressure sensor 2. Malfunction in ECU. 	Engine is difficult to start. Increased exhaust emissions. Insufficient power at high altitudes. Engine idling speed is unstable.	α-N is fixed. Intake air pressure difference is fixed to 0 [kPa]. Atmospheric pressure is fixed to 101.3 [kPa]. Fuel is not cut off due to the intake air pressure difference. O ₂ feedback is not carried out. ISC feedback is not carried out. ISC learning is not carried out. Cruise control system cannot be operated. Quick shift system is not carried out.
P1806 P1807	[P1806] Shift sensor: open or ground short circuit detected. [P1807] Shift sensor: power short circuit detected.	 Defective coupler between shift sensor and ECU. Open or power short circuit in wire harness between shift sensor and ECU. Improperly installed shift sensor. Defective shift sensor. Malfunction in ECU. 	Unable to carry out Quick shift system. (If this abnormality occurs during actual shifting, the opera- tion will be carried out until the process is completed.)	Quick shift system is not carried out.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P2122 P2123 P2127 P2128 P2138	[P2122] Accelerator position sensor: open or ground short circuit detected. [P2123] Accelerator position sensor: power short circuit detected. [P2127] Accelerator position sensor: open or ground short circuit detected. [P2128] Accelerator position sensor: power short circuit detected. [P2138] Deviation error	[P2122, P2127] Low voltage of the accelerator position sensor circuit (0.25 V or less) [P2123, P2128] High voltage of the accelerator position sensor circuit (4.75 V or more) [P2138] Difference in output voltage 1 and output voltage 2 of the accelerator position sensor • Defective coupler between accelerator position sensor and ECU. • Open or short circuit in wire harness between accelerator position sensor and ECU. • Improperly installed accelerator position sensor. • Defective accelerator position sensor. • Defective accelerator position sensor.	Engine response is poor. Loss of engine power. Engine idling speed is unstable.	No change in accelerator opening (transient control is not carried out). Accelerator opening is fixed to 0[°]. O₂ feedback is not carried out. YCC-T evacuation is activated. Fuel cut is prohibited by accelerator opening. Output is restricted. ISC feedback is not carried out. ISC learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.
P2158	Front wheel sensor: no normal signals are received from the front wheel sen- sor.	 Open or short circuit in wire harness between front wheel sensor and ABS ECU. Defective front wheel sensor. Malfunction in ABS ECU. Malfunction in ECU. 	Traction control does not work. Traction control system indicator on the meter comes on. Traction control system switch is disabled. (Traction control system indicator on the meter goes OFF.)	Traction control does not work. Cruise control sys- tem cannot be oper- ated. Back Slip Regulator does not work.

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
P2195	O ₂ sensor: open circuit detected.	 Low voltage of the O₂ sensor circuit (0.18–0.49 V). Improperly installed O₂ sensor. Defective coupler between O₂ sensor and ECU. Open or short circuit in wire harness between O₂ sensor and ECU. Incorrect fuel pressure. Defective O₂ sensor. Malfunction in ECU. 	Increased exhaust emissions.	O ₂ feedback is not carried out. O ₂ feedback learning is not carried out. Quick shift system is not carried out. Cruise control system cannot be operated.
U0125	Signals cannot be transmitted between the ECU and the IMU.	 Defective IMU coupler or ECU coupler. Open or short circuit in wire harness between IMU and ECU. Malfunction in IMU. Malfunction in ECU. 	Engine cannot be started.	Engine cannot be started. Cruise control system cannot be operated. Traction control does not work. Back Slip Regulator does not work.

^{* &}quot;P0458" is indicated for California only.

EAS33286

SELF-DIAGNOSTIC FUNCTION TABLE (FOR ABS (Anti-lock Brake System))

TIP

For details of the DTC, refer to "BASIC INSTRUCTIONS FOR TROUBLESHOOTING" on page 9-36.

DTC	Item	Symptom	Check point
11	Front wheel sensor (intermittent pulses or no pulses)	Front wheel sensor signal is not received properly. (Pulses are not received or are received intermittently while the vehicle is traveling.)	 Foreign material adhered around the front wheel sensor Incorrect installation of the front wheel Defective sensor rotor or incorrect installation of the rotor Defective front wheel sensor or incorrect installation of the sensor
12	Rear wheel sensor (intermittent pulses or no pulses)	Rear wheel sensor signal is not received properly. (Pulses are not received or are received intermittently while the vehicle is traveling.)	 Foreign material adhered around the rear wheel sensor Incorrect installation of the rear wheel Defective sensor rotor or incorrect installation of the rotor Defective rear wheel sensor or incorrect installation of the sensor
13* 26*	Front wheel sensor (abnormal pulse period)	Front wheel sensor signal is not received properly. (The pulse period is abnormal while the vehicle is traveling.)	 Foreign material adhered around the front wheel sensor Incorrect installation of the front wheel Defective sensor rotor or incorrect installation of the rotor Defective front wheel sensor or incorrect installation of the sensor
14* 27*	Rear wheel sensor (abnormal pulse period)	Rear wheel sensor signal is not received properly. (The pulse period is abnormal while the vehicle is traveling.)	 Foreign material adhered around the rear wheel sensor Incorrect installation of the rear wheel Defective sensor rotor or incorrect installation of the rotor Defective rear wheel sensor or incorrect installation of the sensor

DTC	Item	Symptom	Check point
15	Front wheel sensor (open or short circuit)	Open or short circuit is detected in the front wheel sensor.	 Defective coupler between the front wheel sensor and the hydraulic unit assembly Open or short circuit in the wire harness between the front wheel sensor and the hydraulic unit assembly Defective front wheel sensor or hydraulic unit assembly
16	Rear wheel sensor (open or short circuit)	Open or short circuit is detected in the rear wheel sensor.	 Defective coupler between the rear wheel sensor and the hydraulic unit assembly Open or short circuit in the wire harness between the rear wheel sensor and the hydraulic unit assembly Defective rear wheel sensor or hydraulic unit assembly
21	Hydraulic unit assembly (defective solenoid drive circuit)	Solenoid drive circuit in the hydraulic unit assembly is open or short-circuited.	Defective hydraulic unit assembly
31	Hydraulic unit assembly (defective ABS solenoid power circuit)	Power is not supplied to the solenoid circuit in the hydraulic unit assembly.	 Blown ABS solenoid fuse Defective coupler between the battery and the hydraulic unit assembly Open or short circuit in the wire harness between the battery and the hydraulic unit assembly Defective hydraulic unit assembly
33	Hydraulic unit assembly (abnormal ABS motor power supply)	Power is not supplied to the motor circuit in the hydraulic unit assembly.	 Blown ABS motor fuse Defective coupler between the battery and the hydraulic unit assembly Open or short circuit in the wire harness between the battery and the hydraulic unit assembly Defective hydraulic unit assembly
34	Hydraulic unit assembly (short circuit in ABS motor power supply circuit)	Short circuit is detected in the motor power supply circuit in the hydraulic unit assembly.	Defective hydraulic unit assembly

DTC	Item	Symptom	Check point
41	Front wheel ABS (intermittent wheel speed pulses or incorrect depressurization)	 Pulses from the front wheel sensor are received intermittently while the vehicle is traveling. Front wheel will not recover from the locking tendency even though the signal is transmitted from the ABS ECU to reduce the hydraulic pressure. 	 Incorrect installation of the front wheel sensor Incorrect rotation of the front wheel Front brake dragging Defective hydraulic unit assembly
42	Rear wheel ABS (intermittent wheel speed pulses or incorrect depressurization)	 Pulses from the rear wheel sensor are received intermittently while the vehicle is traveling. Rear wheel will not recover from the locking tendency even though the signal is transmitted from the ABS ECU to reduce the hydraulic pressure. 	 Incorrect installation of the rear wheel sensor Incorrect rotation of the rear wheel Rear brake dragging Defective hydraulic unit assembly
43* 45*	Front wheel sensor (missing pulses)	Front wheel sensor signal is not received properly. (Missing pulses are detected in the signal while the vehicle is traveling.)	 Foreign material adhered around the front wheel sensor Incorrect installation of the front wheel Defective sensor rotor or incorrect installation of the rotor Defective front wheel sensor or incorrect installation of the sensor
44* 46*	Rear wheel sensor (missing pulses)	Rear wheel sensor signal is not received properly. (Missing pulses are detected in the signal while the vehicle is traveling.)	 Foreign material adhered around the rear wheel sensor Incorrect installation of the rear wheel Defective sensor rotor or incorrect installation of the rotor Defective rear wheel sensor or incorrect installation of the sensor
51	Vehicle system power supply (voltage of ABS ECU power supply is high)	Power voltage supplied to the ABS ECU in the hy- draulic unit assembly is too high.	 Defective battery Disconnected battery terminal Defective charging system

DTC	Item	Symptom	Check point
53	Vehicle system power supply (voltage of ABS ECU power supply is low)	Power voltage supplied to the ABS ECU in the hy- draulic unit assembly is too low.	 Defective battery Defective coupler between the battery and the hydraulic unit assembly Open or short circuit in the wire harness between the battery and the hydraulic unit assembly Defective charging system
55	Hydraulic unit assembly (defective ABS ECU)	Abnormal data is detected in the hydraulic unit assembly.	Defective hydraulic unit assembly
56	Hydraulic unit assembly (abnormal internal circuit)	Abnormality detected in of hydraulic unit assembly.	Defective hydraulic unit assembly
57	Vehicle CAN communica- tion line or power source of vehicle system	Short-circuit in CAN communication line or the voltage that supplies the hydraulic unit assembly is too low.	 Short-circuit in CAN communication line Defective battery Defective coupler between battery and hydraulic unit assembly Wire harness between battery and hydraulic unit is interrupted or has short-circuited Defective charging system
62	Power supply voltage fail- ure in pressure sensor	Abnormality detected in pressure sensor power supply circuit of hydraulic unit assembly.	Defective hydraulic unit assembly
68	Defective hydraulic unit assembly (defective front pressure sensor)	Abnormality detected in pressure sensor circuit at front caliper side of hydraulic unit assembly.	In case of electrical inter- locking brake • Defective front brake line • Defective hydraulic unit assembly
89	CAN communication (be- tween meter assembly and hydraulic unit assem- bly)	Transmitted data from the meter cannot be normally received.	Defective coupler between meter assembly and hydraulic unit assembly Harness is broken or short-circuit between meter assembly and hydraulic unit assembly Defective meter assembly Defective hydraulic unit assembly

DTC	Item	Symptom	Check point
90	CAN communication (between ECU and hydraulic unit assembly)	Transmitted data from the FI ECU cannot be normally received.	 Defective coupler between FI ECU and hydraulic unit assembly Harness is broken or short-circuit between FI ECU and hydraulic unit assembly Defective FI ECU Defective hydraulic unit assembly
91	CAN communication (between IMU and hydraulic unit assembly)	Transmitted data from the IMU cannot be normally received.	 Defective coupler between IMU and hydraulic unit assembly Harness is broken or short-circuit between IMU and hydraulic unit assembly Defective IMU Defective hydraulic unit assembly

 $^{^{\}ast}$ The DTC number varies according to the vehicle conditions.

EAS34060

SELF-DIAGNOSTIC FUNCTION TABLE (FOR BCM (Body Control Module)

DTC	Item	Probable cause of malfunction	Vehicle symp- tom	Fail-safe system op- eration
U0100	Abnormal can communication: signals cannot be transmitted between the ECU and the BCM.	 Defective ECU coupler or BCM coupler. Open or short circuit in wire harness between ECU and BCM. Malfunction in ECU. Malfunction in BCM. 	Flasher auto cancel function stopped.	Flasher auto cancel function stopped.
U0121	Abnormal can communication: signals cannot be transmitted between the ABS ECU and the BCM.	 Defective ABS ECU coupler or BCM coupler. Open or short circuit in wire harness between ABS ECU and BCM. Malfunction in ABS ECU. Malfunction in BCM. 	Hazard flashing function stopped due to ESS (emergency stop signaling).	Hazard flashing function stopped due to ESS (emergency stop signaling).
U0155 (BCM)	Abnormal can communication: signals cannot be transmitted between the meter assembly and the BCM.	 Defective meter assembly coupler or BCM coupler. Open or short circuit in wire harness between meter assembly and BCM. Malfunction in meter assembly. Malfunction in BCM. 	 Meter screen cannot be operated using joystick switch and meter return switch on the handle. The spanner mark lights up and Err is displayed on the meter screen. 	Meter screen cannot be operated using joy- stick switch and meter return switch on the handle.

EAS33030

COMMUNICATION ERROR WITH THE METER

DTC	Item	Probable cause of malfunction	Vehicle symptom	Fail-safe system operation
U0155 (YDT) Err (multi- function meter dis- play)	[U0155 (FI)] Multi- function meter: sig- nals cannot be transmitted between the ECU and the multi-function me- ter.	Communication between the ECU and the meter is not possible Defective meter coupler and ECU coupler Open or short circuit in the wire harness between the meter and the ECU Defective meter Defective ECU	Defective meter display. Traction control does not work.	MAP changeover: State is fixed. Traction control does not work. Meter switch input: OFF is fixed. Quick shift system is not carried out. Cruise control system cannot be operated. Back Slip Regulator does not work.

EAS3303

DIAGNOSTIC CODE: SENSOR OPERATION TABLE

Diagnostic code No.	Item	Tool display	Procedure
01	Throttle position sensor signal 1		
	Fully closed position	11–21	Check with throttle valves fully closed.
	Fully open position	96–107	Check with throttle valves fully open.
03	Intake air pressure	Displays the intake air pushing stop/rul the disp	
04	Intake air pressure 2	Displays the intake air pressure.	Operate the throttle while pushing the "©" side of the stop/run/start switch. (If the display value changes, the performance is OK.)
05	Intake air temperature	Displays the intake air temperature.	Compare the actually measured air temperature with the tool display value.
06	Coolant temperature	When engine is cold: Displays temperature closer to air temperature. When engine is hot: Displays current coolant temperature.	Compare the actually measured coolant temperature with the tool display value.
07	Rear wheel vehicle speed pulses	Rear wheel speed pulse 0-999	Check that the number increases when the rear wheel is rotated. The number is cumulative and does not reset each time the wheel is stopped.
09	Fuel system voltage (battery voltage)	Fuel system voltage Approximately 12.0	Set the stop/run/start switch to "O", and then compare the actually measured battery voltage with the tool display value. (If the actually measured battery voltage is low, recharge the battery.)
13	Throttle position sensor signal 2		
	Fully closed position	9–23	Check with throttle valves fully closed position.
	Fully open position	93–109	Check with throttle valves fully open position.

Diagnostic code No.	Item	Tool display	Procedure
14	Accelerator position sensor signal 1		
	Fully closed position	14–18	Check with throttle grip fully closed position.
	Fully open position	82–92	Check with throttle grip fully open position.
	Turn the throttle grip past the closed position in the deceleration direction.	7–12	
15	Accelerator position sensor signal 2		
	Fully closed position	14–18	Check with throttle grip fully closed position.
	Fully open position	82–92	Check with throttle grip fully open position.
	Turn the throttle grip past the closed position in the deceleration direction.	7–12	
16	Front wheel vehicle speed pulses	Front wheel speed pulse 0–999	Check that the number increases when the front wheel is rotated. The number is cumulative and does not reset each time the wheel is stopped.
17	Bank angle display	Displays the bank angle in increments of 5° • 0–5° (vehicle is vertical) • Less than 30° (when the sidestand is used)	Check that 0–5° is displayed when the vehicle is vertical and that the displayed value increases as the vehicle continues to incline.
20	Sidestand switch • Sidestand retracted	ON	Extend and retract the sidestand (with the trans-
	Sidestand extended	OFF	mission in gear).

Diagnostic code No.	Item	Tool display	Procedure
21	Neutral switch and clutch switch		Operate the transmission, clutch lever, and side-
	Transmission is in neutral	ON	stand.
	Transmission is in gear or the clutch lever re- leased	OFF	
	Clutch lever is squeezed with the transmission in gear and when the side- stand is retracted	ON	
	Clutch lever is squeezed with the transmission in gear and when the side- stand is extended	OFF	
60	EEPROM DTC display		_
	No history	ON No malfunctions detected (If the DTC P062F is indicated, the ECU is defective.)	
	History exists	01–03 (CO adjustment value) • (If more than one cylinder is defective, the display alternates every two seconds to show all the detected cylinder numbers. When all cylinder numbers are shown, the display repeats the same process.)	
		Except 00–03 (EEPROM data error for corresponding learning/memory values)	
67	ISC (Idle Speed Control) learning condition display ISC (Idle Speed Control) learning data erasure	OO ISC (Idle Speed Control) learning data has been erased. O1 It is not necessary to erase the ISC (Idle Speed Control) learning data. O2 It is necessary to erase the ISC (Idle Speed Control) learning data.	To erase the ISC (Idle Speed Control) learning data, push the "Operation" button 3 times in 5 sec- onds.
70	Control number	0–254 [-]	_

Diagnostic code No.	Item	Tool display	Procedure
80	Cruise control setting switch "RES+"		Push and release the "RES+" side of the cruise
	Switch is pushed	ON	control setting switch.
	Switch is released	OFF	
81	Cruise control setting switch "SET-"		Push and release the "SET-" side of the cruise
	Switch is pushed	ON	control setting switch.
	Switch is released	OFF	
82	Cruise control cancel circuit		Operate the clutch lever, brake lever, brake pedal,
	Clutch lever is squeezed	ON	and throttle grip.
	Clutch lever is released	OFF	
	Brake lever is squeezed	ON	
	Brake lever is released	OFF	
	Brake pedal is depressed	ON	
	Brake pedal is released	OFF	
83	Front brake light switch and rear brake light switch		Operate the brake lever and brake pedal.
	Brake lever is squeezed	ON	
	Brake lever is released	OFF	
	Brake pedal is depressed	ON	
	Brake pedal is released	OFF	
87	O ₂ feedback learning data erasure	O0 O2 feedback learning data has been erased. O1 O2 feedback learning data has not been erased.	To erase the O ₂ feedback learning data, push the "Operation" button 3 times in 5 seconds.
95	Shift sensor		Check the sensor condi-
	Shift sensor output voltage display	0.2–4.8 [V]	tion by operating the shift pedal.
	With no shift weighting input	Approx. 2.5 [V]	
	Shift up weighting	Changes to the low side	
	Shift down weighting	Changes to the high side	

EAS33032

DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE

Diagnostic code No.	Item	Actuation	Procedure
30	Cylinder-#1 ignition coil	Actuates the cylinder-#1 ignition coil five times at one-second intervals. The "check" indicator on the YDT screen come on each time the ignition coil is actuated.	Check that a spark is generated five times. Connect an ignition checker.
31	Cylinder-#2 ignition coil	Actuates the cylinder-#2 ignition coil five times at one-second intervals. The "check" indicator on the YDT screen come on each time the ignition coil is actuated.	Check that a spark is generated five times. Connect an ignition checker.
32	Cylinder-#3 ignition coil	Actuates the cylinder-#3 ignition coil five times at one-second intervals. The "check" indicator on the YDT screen come on each time the ignition coil is actuated.	Check that a spark is generated five times. Connect an ignition checker.
36	Injector #1	Actuates the injector #1 five times at one-second intervals. The "check" indicator on the YDT screen come on each time the fuel injector is actuated.	Disconnect the fuel pump coupler before doing this procedure. Check that injector #1 is actuated five times by listening for the operating sound.
37	Injector #2	Actuates the injector #2 five times at one-second intervals. The "check" indicator on the YDT screen come on each time the fuel injector is actuated.	Disconnect the fuel pump coupler before doing this procedure. Check that injector #2 is actuated five times by listening for the operating sound.
38	Injector #3	Actuates the injector #3 five times at one-second intervals. The "check" indicator on the YDT screen come on each time the fuel injector is actuated.	Disconnect the fuel pump coupler before doing this procedure. Check that injector #3 is actuated five times by listening for the operating sound.
46*	Purge cut valve solenoid	Actuates the purge cut valve solenoid five times at one-second intervals. The "check" indicator on the YDT screen come on each time the intake solenoid is actuated.	Check that the purge cut valve solenoid is actuated five times by listening for the operating sound.

Diagnostic code No.	Item	Actuation	Procedure
50	Main relay	Actuates the relay unit five times at one-second intervals. The "check" indicator on the YDT screen come on each time the relay is actuated.	Check that the relay unit is actuated five times by listening for the operating sound.
51	Radiator fan motor relay	Actuates the radiator fan motor relay five times at five-seconds intervals. The "check" indicator on the YDT screen come on each time the relay is actuated.	Check that the radiator fan motor relay is actuated five times by listening for the operating sound.
52	Headlight	Actuates the headlight five times at five-seconds intervals. The "check" indicator on the YDT screen come on each time the headlight is actuated.	Check that the headlight comes on five times.
57	Grip warmer	Turns on the grip warmers for 2 minutes.	Check that the grip warmers become warm.

^{* 46} is indicated for California only.

EAS2070

EVENT CODE TABLE

TIF

The event code numbers listed below cannot be displayed on the meter. To display the event code numbers, use the YDT.

No.	Item	Symptom	Possible causes	Note
192	Intake air pres- sure sensor	Brief abnormality detected in the in- take air pressure sensor	Same as for DTC number P0107 and P0108	Perform the inspection items listed for DTC number P0107 and P0108.
193	Throttle position sensor	Brief abnormality detected in the throttle position sensor	Same as for DTC num- ber P0122, P0123, P0222 and P0223	Perform the inspection items listed for DTC number P0122, P0123, P0222 and P0223.
195	Sidestand switch	Brief abnormality detected in the ECU (blue/yellow) input line	Same as for DTC num- ber P1601	Perform the inspection items listed for DTC number P1601.
196	Coolant tem- perature sensor	Brief abnormality detected a in the coolant tempera- ture sensor	Same as for DTC num- ber P0117 and P0118	Perform the inspection items listed for DTC number P0117 and P0118.
197	Intake air tem- perature sensor	Brief abnormality detected in the in- take air temperature sensor	Same as for DTC number P0112 and P0113	Perform the inspection items listed for DTC number P0112 and P0113.
199	Intake air pres- sure sensor 2	Brief abnormality detected in the in- take air pressure sensor 2	Same as for DTC No. P1606 and P1607	Perform the inspection items listed for DTC No. P1606 and P1607.
207	Accelerator position sensor	Brief abnormality detected in the ac- celerator position sensor	Same as for DTC num- ber P2122, P2123, P2127 and P2128	Perform the inspection items listed for DTC number P2122, P2123, P2127 and P2128.
220	Gear position sensor	Brief abnormality detected in the gear position sensor	Same as for DTC num- ber P0916 and P0917	Perform the inspection items listed for DTC number P0916 and P0917.
240	O ₂ sensor (Stuck at the upper limit for adjustment)	During O ₂ feed- back, the adjust- ment is maintained at the upper limit	 Open or short circuit in the wire harness between the sensor and ECU Drop in fuel pressure Clogged fuel injector Fault in sensor Malfunction in ECU Malfunction in the fuel injection system 	If a DTC is occurring, respond to that first. * Rarely, Code 240 occurs even when the system is functioning properly.

EVENT CODE TABLE

No.	Item	Symptom	Possible causes	Note
241	O ₂ sensor (Stuck at the lower limit for adjustment)	During O ₂ feed- back, the adjust- ment is maintained at the lower limit	 Open or short circuit in the wire harness between the sensor and ECU Drop in fuel pressure Clogged fuel injector Fault in sensor Malfunction in ECU Malfunction in the fuel injection system 	If a DTC is occurring, respond to that first. * Rarely, Code 241 oc- curs even when the sys- tem is functioning properly.
242	ISC (Stuck at the upper limit for adjustment)	During idling, the adjustment is maintained at the upper limit	Idling engine speed is slow Clogged throttle body Poorly adjusted clutch cable Malfunction in the fuel injection system Dirty or worn spark plug Malfunction in the battery Malfunction in ECU	 Implement diagnosis mode D67, and check the ISC maintenance request. If a DTC is occurring, respond to that first. * Rarely, Code 242 occurs even when the system is functioning properly.
243	ISC (Stuck at the lower limit for adjustment)	During idling, the adjustment is main- tained at the lower limit	Idling engine speed is fast Poorly adjusted clutch cable Malfunction in the fuel injection system Dirty or worn spark plug Malfunction in the battery Malfunction in ECU	If a DTC is occurring, respond to that first. * Rarely, Code 243 oc- curs even when the sys- tem is functioning properly.
244	Poor starting/in- ability to start	Poor starting/inability to start detected	 No gasoline Malfunction in the fuel injection system Dirty or worn spark plug Malfunction in the battery Malfunction in ECU 	If a DTC is occurring, respond to that first. * Rarely, Code 244 oc- curs even when the sys- tem is functioning properly.
245	Engine stop	Engine stop detected	 No gasoline Poorly adjusted clutch cable Malfunction in the fuel injection system Dirty or worn spark plug Malfunction in the battery Malfunction in ECU 	If a DTC is occurring, respond to that first. * Rarely, Code 245 occurs even when the system is functioning properly.

EVENT CODE TABLE

No.	Item	Symptom	Possible causes	Note
246	Cruise control	Automatic turning off of the cruise control system detected	The cruise control system will automatically turn off under the following conditions: • Unable to maintain the set cruising speed when traveling up a steep slope • Wheel slip detected • Engine stalls • Sidestand is extended • Engine stop switch is set to the "⋈" position	The automatic turning off of the cruise control system does not indicate a malfunction in the system.
251	Shift sensor	Brief abnormality detected in the shift sensor	Same as for DTC number P1806 and P1807	Perform the inspection items listed for DTC number P1806 and P1807.

EAS20552

30 EVENT

EAS33033

TROUBLESHOOTING

Item

Overturn detected.

Fail-safe system

- Unable to start engine
- Unable to drive vehicle

Procedure

- 1. The vehicle has overturned.
- Raise the overturned vehicle vertically and check again.
- Turn the main switch to "ON", then to "OFF", and then back to "ON".

```
Is the MIL on?
YES

→ Go to step 2.
NO

→ Service is completed.
```

- 2. Installed condition of IMU.
- Check the installed direction and condition of the sensor. Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Check the grommet for cracks.

Is check result OK?

```
YES
```

 \rightarrow Go to step 3.

NO

- a. Fix the IMU installation condition.
- b. Turn the main switch to "ON", then to "OFF", and then back to "ON".

Is the MIL on?

YES

 \rightarrow Go to step 3.

NO

 \rightarrow Service is completed.

- 3. Defective IMU.
 - Execute the diagnostic mode. (Code 17)
 - Check that 0°-5° is displayed when the vehicle is vertical and that the displayed value increases as the vehicle continues to incline.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

a. Replace the IMU.

Refer to "GENERAL CHASSIS (1)" on page 4-1.

b. Turn the main switch to "ON", then to "OFF", and then back to "ON".

Is the MIL on?

YES

 \rightarrow Go to step 4.

 \rightarrow Service is completed.

- 4. Malfunction in ECU.

• Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

EAS20554

70 EVENT

EAS33034

TROUBLESHOOTING

Item

Engine forcibly stops when the vehicle is left idling for a long period.

Procedure

TIE

If another error code is displayed at the same time, check the other error code first and repair it.

- 1. Allow to idle for a long period.
- Turn the main switch to "OFF".
- Check whether it is possible to start the engine.

Can the engine starting?

YES

 \rightarrow Service is completed.

NO

 \rightarrow Go to step 2.

- 2. Malfunction in ECU.
 - Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

EAS20560

C0520

EAS33319

TROUBLESHOOTING

Item

ECU: no normal signals or malfunction signals are received from the IMU.

Fail-safe system

- Able/Unable to start engine
- Able/Unable to drive vehicle

Procedure

- 1. Connection of IMU coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

```
YES
```

 \rightarrow Go to step 7, and complete the service.

NΩ

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES


 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the ECU coupler "1", IMU coupler "4" and ignition fuse 1 "5".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between ignition fuse 1 "5" coupler and IMU coupler "4"	brown/blue-red/white
Between IMU coupler "4" and joint coupler "2"	light green/white-light green/white
Between IMU coupler "4" and joint coupler "3"	light green/blue-light green/blue
Between ECU coupler "1" and joint coupler "2"	light green/white-light green/white
Between ECU coupler "1" and joint coupler "3"	light green/blue-light green/blue
Between IMU coupler "4" and ground	black/white-ground

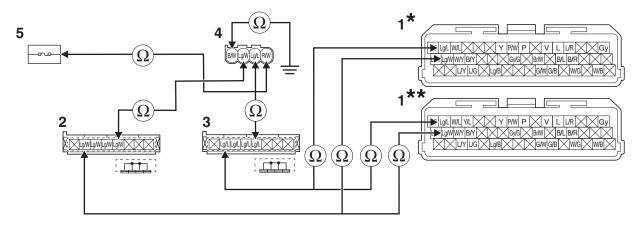

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to "Short circuit check".

• Short circuit check


TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between ECU coupler "1" and ground	light green/blue-ground light green/white-ground
Between IMU coupler "4" and ground	light green/white-ground light green/blue-ground red/white-ground

Lines short circuit check "B"	
ECU coupler "1"	light green/blue-any other coupler terminal light green/white-any other coupler terminal
IMU coupler "4"	light green/blue-any other coupler terminal light green/white-any other coupler terminal red/white-any other coupler terminal

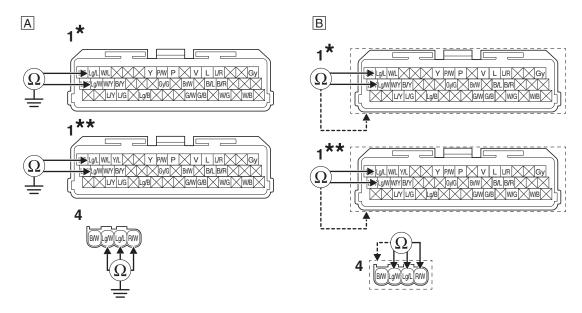

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of IMU.
 - Check the installed direction and condition of the sensor. Refer to "GENERAL CHASSIS (1)" on page 4-1.
 - Check the grommet for cracks.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Fix the IMU installation condition.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective IMU.
 - Replace the IMU.

Refer to "GENERAL CHASSIS (1)" on page 4-1.

• Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NΩ

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20397

P0030

EAS33134

TROUBLESHOOTING

Item

 O_2 sensor heater: defective heater controller detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- Connection of O₂ sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and warm-up the vehicle (5 min or more), and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 6, and complete the service.

NO

→ Start the engine, and then check the condition of the DTC.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 2.

TIP

For this check, also set the stop/run/start switch to run.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and warm-up the vehicle (5 min or more), and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Start the engine, and then check the condition of the DTC.

Is it in the "Recovered" condition?

YFS

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 3.


TIP_

For this check, also set the stop/run/start switch to run.

- 3. Wire harness continuity.
- Disconnect the O₂ sensor coupler "1", ECU coupler "2" and ignition fuse 1 "3".
- Open circuit check


Between O ₂ sensor coupler "1" and ECU coupler "2"	pink/black-pink/black
Between O ₂ sensor coupler "1" and ignition fuse 1 holder "3"	red-brown/blue

Except for California:

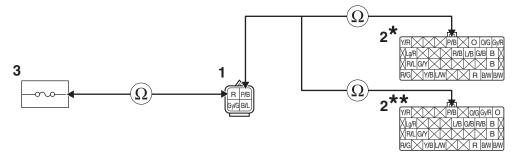

- *. MT09R
- **. MT09SPR

For California only:

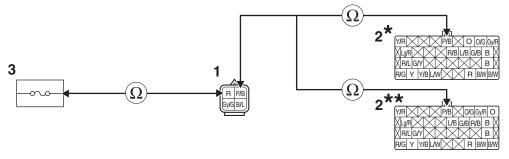

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Start the engine and warm-up the vehicle (5 min or more), and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Start the engine, and then check the condition of the DTC.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

→ Go to "Short circuit check".

TIP_

For this check, also set the stop/run/start switch to run.

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between O ₂ sensor coupler "1" and ground	red-ground pink/black-ground

Lines short circuit check "B"


O ₂ sensor coupler "1"	red–any other coupler terminal pink/black–any other coupler terminal
ECU coupler "2"	pink/black-any other coupler terminal


Except for California:


Α





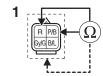

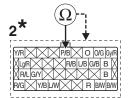

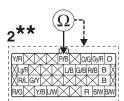

- *. MT09R
- **. MT09SPR


For California only:










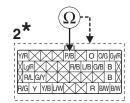

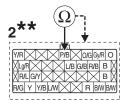

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Start the engine and warm-up the vehicle (5 min or more), and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

→ Start the engine, and then check the condition of the DTC.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 4.

TIF

For this check, also set the stop/run/start switch to run.

- 4. Defective O₂ sensor.
 - Replace the O₂ sensor.

Refer to "ENGINE REMOVAL" on page 5-9.

• Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

→ Start the engine, and then check the condition of the DTC.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 5.

-	_		

For this check, also set the stop/run/start switch to run.

- 5. Malfunction in ECU.
 - Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20660

P00D1, P2195

EAS33115

TROUBLESHOOTING

ltem

- [P00D1] O₂ sensor: heater performance deterioration
- [P2195] O₂ sensor: open circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- P0030
- 1. Installed condition of O₂ sensor.
- · Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- a. Reinstall or replace the O₂ sensor.
 - Refer to "ENGINE REMOVAL" on page 5-9.
- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NO

- → Go to step 2, or delete this DTC even if it has a condition of "Detected".
- Connection of O₂ sensor coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

→ Go to step 3, or delete this DTC even if it has a condition of "Detected".

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.


NO

→ Go to step 4, or delete this DTC even if it has a condition of "Detected".

- 4. Wire harness continuity.
 - Disconnect the O₂ sensor coupler "1", ECU coupler "2" and ignition fuse 1 "3".
 - Open circuit check


Between O ₂ sensor coupler "1" and ECU coupler "2"	gray/green—gray/green pink/black—pink/black black/blue—black/blue
Between O ₂ sensor coupler "1" and ignition fuse 1 holder "3"	red-brown/blue

Except for California:

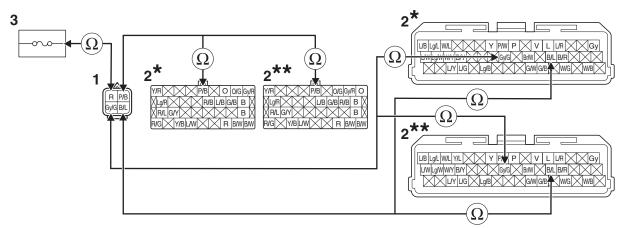

- *. MT09R
- **. MT09SPR

For California only:

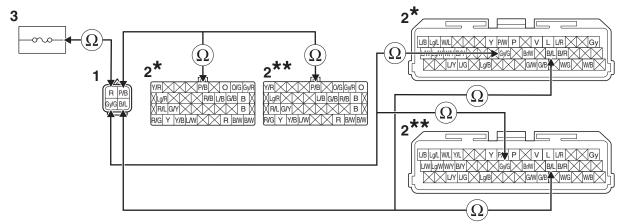

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

→ Go to "Short circuit check", or delete this DTC even if it has a condition of "Detected".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between O ₂ sensor coupler "1" and ground	gray/green-ground pink/black-ground black/blue-ground red-ground
--	---

Lines short circuit check "B"


O ₂ sensor coupler "1"	gray/green-any other coupler terminal pink/black-any other coupler terminal black/blue-any other coupler terminal red-any other coupler terminal
ECU coupler "2"	gray/green-any other coupler terminal pink/black-any other coupler terminal black/blue-any other coupler terminal

Except for California:

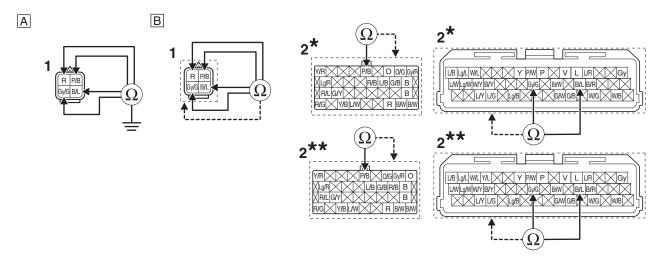

- *. MT09R
- **. MT09SPR

For California only:

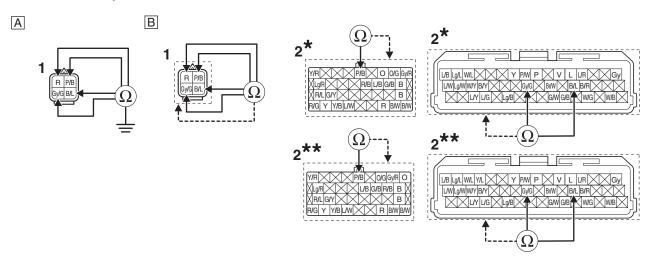

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 5, or delete this DTC even if it has a condition of "Detected".

- 5. Check fuel pressure.
 - Check the fuel pressure.

Refer to "CHECKING THE FUEL PRESSURE" on page 7-11.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the fuel pump.
 - Refer to "REMOVING THE FUEL PUMP" on page 7-4.
- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

 \rightarrow Go to step 8, and complete the service.

NC

- → Go to step 6, or delete this DTC even if it has a condition of "Detected".
- 6. Defective O₂ sensor.
 - a. Replace the O₂ sensor.

Refer to "ENGINE REMOVAL" on page 5-9.

- b. Start the engine, warm-up the vehicle (5 min or more), and then racing the engine.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

- → Go to step 7, or delete this DTC even if it has a condition of "Detected".
- 7. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 8. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

FAS2056

P0107, P0108

EAS33047

TROUBLESHOOTING

ltem

- [P0107] Intake air pressure sensor 1: ground short circuit detected.
- [P0108] Intake air pressure sensor 1: open or power short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of intake air pressure sensor 1 coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


 \rightarrow Go to step 7, and complete the service.

NC

- 3. Wire harness continuity.
- Disconnect the intake air pressure sensor 1 coupler "1" and ECU coupler "2".
- Open circuit check

Between ECU coupler "2" and intake air pressure sensor 1 coupler "1"

[P0108] black/blue—black/blue
[P0108] blue—blue
[P0107, P0108] pink/white—pink/white

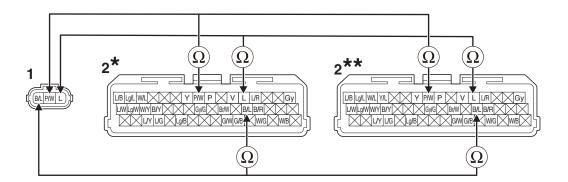

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NΩ

- → Go to "Short circuit check".
- Short circuit check

TIP_

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between intake air pressure sensor 1 coupler "1" and ground	blue-ground pink/white-ground
T and ground	pinit trinto ground

Lines short circuit check "B"

ECU coupler "2"	[P0108] blue—any other coupler terminal [P0108] black/blue—any other coupler terminal [P0107, P0108] pink/white—any other coupler terminal
Intake air pressure sensor 1 coupler "1"	[P0108] blue—any other coupler terminal [P0108] black/blue—any other coupler terminal [P0107, P0108] pink/white—any other coupler terminal



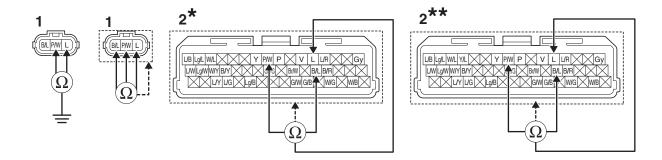

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of intake air pressure sensor 1.
 - Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the sensor.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

- 5. Defective intake air pressure sensor 1.
 - Execute the diagnostic mode. (Code 03)
 - When engine is stopped: Atmospheric pressure at the current altitude and weather conditions is indicated.

At sea level	Approx. 101 kPa (757.6 mmHg, 29.8 inHg), approx. 3.64 V
1000 m (3300 ft) above sea level	Approx. 90 kPa (675.1 mmHg, 26.6 inHg), approx. 3.30 V
2000 m (6700 ft) above sea level	Approx. 80 kPa (600.0 mmHg, 23.6 inHg), approx. 3.00 V
3000 m (9800 ft) above sea level	Approx. 70 kPa (525.0 mmHg, 20.7 inHg), approx. 2.70 V

• When engine is cranking: Make sure that the indication value changes.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the intake air pressure sensor 1. Refer to "THROTTLE BODIES" on page 7-6.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

FAS20568

P0112, P0113

FAS33048

TROUBLESHOOTING

ltem

- [P0112] Intake air temperature sensor: ground short circuit detected.
- [P0113] Intake air temperature sensor: open or power short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP

Perform this procedure when the engine is cold.

- 1. Connection of intake air temperature sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

→ Go to step 7, and complete the service.

NO

- 3. Wire harness continuity.
- Disconnect the intake air temperature sensor coupler "1" and ECU coupler "2".
- Open circuit check

Between ECU coupler "2" and intake air tem-	[P0113] brown/white-brown/white
perature sensor coupler "1"	[P0112, P0113] black/blue-black/blue

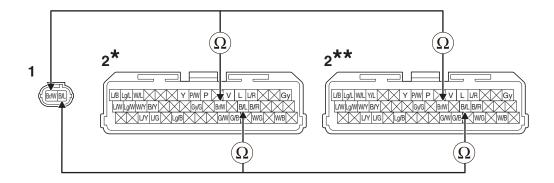

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

→ Go to "Short circuit check".

Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between intake air temperature sensor coupler "1" and ground	[P0112, P0113] brown/white-ground
--	-----------------------------------

Lines short circuit check "B"

intake air temperature sensor coupler "1"	[P0112, P0113] brown/white—any other coupler terminal [P0113] black/blue—any other coupler terminal
ECU coupler "2"	[P0112, P0113] brown/white—any other coupler terminal [P0113] black/blue—any other coupler terminal



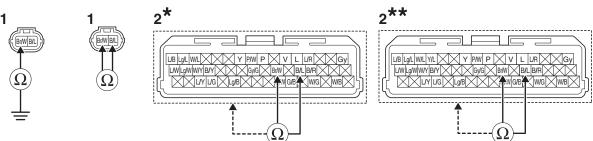

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of intake air temperature sensor.
 - Check for looseness or pinching.

Refer to "GENERAL CHASSIS (2)" on page 4-14.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall the sensor.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective intake air temperature sensor.
 - Execute the diagnostic mode. (Code 05)
 - When engine is cold: Displayed temperature is close to the ambient temperature.
 - The displayed temperature is not close to the ambient temperature → Check the intake air temperature sensor.

Refer to "DIAGNOSTIC CODE: SENSOR OPERATION TABLE" on page 9-66.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the intake air temperature sensor.
 Refer to "GENERAL CHASSIS (2)" on page 4-14.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- 6. Malfunction in ECU.
- Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20569

P0117, P0118

EAS33049

TROUBLESHOOTING

ltem

- [P0117] Coolant temperature sensor: ground short circuit detected.
- [P0118] Coolant temperature sensor: open or power short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP

Perform this procedure when the engine is cold.

- 1. Connection of coolant temperature sensor coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

→ Go to step 7, and complete the service.

NO

- 3. Wire harness continuity.
- Disconnect the coolant temperature sensor coupler "1" and ECU coupler "2".
- Open circuit check

	[P0117, P0118] green/white–green/white
"1" and ECU coupler "2"	[P0118] black/blue-black/blue

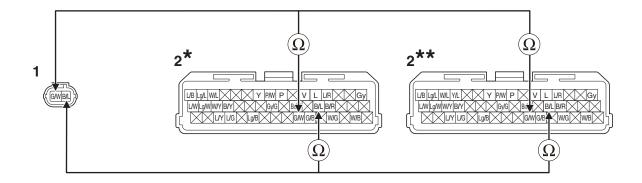

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to step "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

→ Go to step "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking.


Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between coolant temperature sensor coupler "1" and ground	[P0117, P0118] green/white-ground
---	-----------------------------------

Lines short circuit check "B"

Coolant temperature sensor coupler "1"	[P0117, P0118] green/white–any other coupler terminal [P0118] black/blue–any other coupler terminal
ECU coupler "2"	[P0117, P0118] green/white–any other coupler terminal [P0118] black/blue–any other coupler terminal

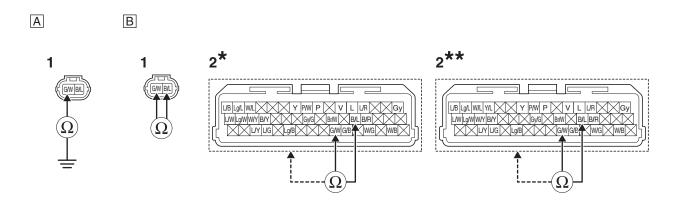

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of coolant temperature sensor.
 - Check for looseness or pinching.

Refer to "CYLINDER HEAD" on page 5-26.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall the sensor.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective coolant temperature sensor.
 - Execute the diagnostic mode. (Code 06)
 - When engine is cold: Displayed temperature is close to the ambient temperature.
 - The displayed temperature is not close to the ambient temperature → Check the coolant temperature sensor.

Refer to "CHECKING THE COOLANT TEMPERATURE SENSOR" on page 8-81.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the coolant temperature sensor.
 Refer to "CYLINDER HEAD" on page 5-26.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

FAS20813

P0122, P0123, P0222, P0223

EAS33050

TROUBLESHOOTING

ltem

- [P0122] Throttle position sensor: ground short circuit detected.
- [P0123] Throttle position sensor: open or power short circuit detected.
- [P0222] Throttle position sensor: open or ground short circuit detected.
- [P0223] Throttle position sensor: power short circuit detected.

Fail-safe system

- Able/Unable to start engine
- Able/Unable to drive vehicle

Procedure

- 1. Connection of throttle position sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NC

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

 \rightarrow Go to step 8, and complete the service.

NO

- 3. Wire harness continuity.
 - Disconnect the throttle position sensor coupler "1" and ECU coupler "2".
 - Open circuit check

[P0122, P0123, P0222, P0223] white—white Between throttle position sensor coupler "1" and ECU coupler "2" [P0123, P0223] black/blue—black/blue [P0122, P0222] blue—blue [P0122, P0123, P0222, P0223] black—black

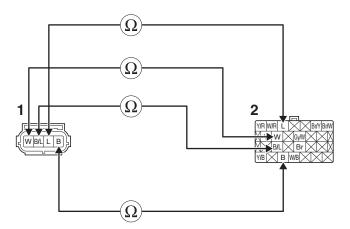

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NO

- → Go to "Short circuit check".
- Short circuit check

TIP

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"


Between throttle position sensor coupler "1" and	[P0122, P0123, P0222, P0223] white-ground
	[P0122, P0222] blue-ground
ground	[P0122, P0123, P0222, P0223] black-ground


Lines short circuit check "B"


	[P0122, P0123, P0222, P0223] white-any other
Throttle position sensor coupler "1"	coupler terminal [P0123, P0223] black/blue–any other coupler terminal [P0122, P0222] blue–any other coupler terminal [P0122, P0123, P0222, P0223] black–any other coupler terminal
ECU coupler "2"	[P0122, P0123, P0222, P0223] white—any other coupler terminal [P0123, P0223] black/blue—any other coupler terminal [P0122, P0222] blue—any other coupler terminal [P0122, P0123, P0222, P0223] black—any other coupler terminal

Α



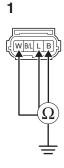

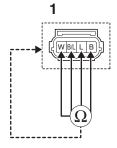

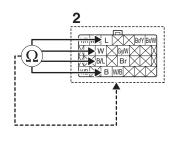

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

- 4. Installed condition of throttle position sensor.
- Check for looseness or pinching.

Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or adjust the sensor.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

→ Go to step 8, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective throttle position sensor.
- Check throttle position sensor signal 1.
- Execute the diagnostic mode. (Code 01)

When the throttle valves are fully closed	11–21
When throttle valves are fully open	96–107

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the throttle position sensor.
 - Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NO

- 6. Defective throttle position sensor.
 - Check throttle position sensor signal 2.
 - Execute the diagnostic mode. (Code 13)

When the throttle valves are fully closed	9–23
When throttle valves are fully open	93–109

Is check result OK?

YES

 \rightarrow Go to step 7.

NO

- a. Replace the throttle position sensor.
 - Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

- 7. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 8. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20571

P0132

EAS33051

TROUBLESHOOTING

Item

O₂ sensor: short circuit detected (power short circuit).

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Installed condition of O₂ sensor.
- Check for looseness or pinching.
 Refer to "ENGINE REMOVAL" on page 5-9.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- a. Reinstall or replace the O_2 sensor.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of O₂ sensor coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Wire harness continuity.
 - Disconnect the O₂ sensor coupler "1" and ECU coupler "2".
 - Open circuit check

Between O₂ sensor coupler "1" and ECU coupler "2" gray/green—gray/green black/blue—black/blue

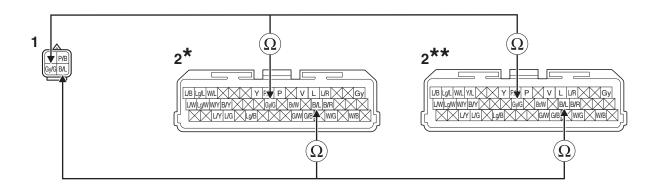

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

→ Go to "Short circuit check".

Short circuit check

TIP_

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between O ₂ sensor coupler "1" and ground	gray/green-ground
--	-------------------

Lines short circuit check "B"

O ₂ sensor coupler "1"	gray/green-any other coupler terminal black/blue-any other coupler terminal
ECU coupler "2"	gray/green-any other coupler terminal black/blue-any other coupler terminal



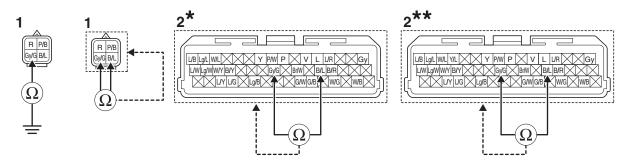

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective O₂ sensor.
 - a. Replace the O₂ sensor.

Refer to "ENGINE REMOVAL" on page 5-9.

b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 6.
- 6. Malfunction in ECU.
- Replace the ECU, and complete the service.

 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20574

P0201

EAS33054

TROUBLESHOOTING

Item

Injector #1: malfunction in injector #1.

Fail-safe system

- Able to start engine (depending on the number of faulty cylinders)
- Able to drive vehicle (depending on the number of faulty cylinders)

Procedure

- 1. Connection of injector #1 coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 36)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to step 2.

- 2. Defective injector #1.
 - Measure the injector resistance.

Refer to "CHECKING THE FUEL INJECTORS" on page 8-83.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

a. Replace the injector #1.

Refer to "THROTTLE BODIES" on page 7-6.

b. Execute the diagnostic mode. (Code 36)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 36)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.


NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
 - Disconnect the injector #1 coupler "1", ECU coupler "2" and relay unit coupler "3".
 - Open circuit check


Between injector #1 coupler "1" and ECU coupler "2"	red/black-red/black
Between injector #1 coupler "1" and relay unit coupler "3"	red/blue-red

Except for California:

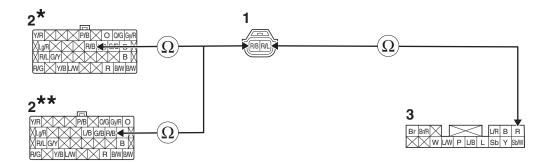

- *. MT09R
- **. MT09SPR

For California only:

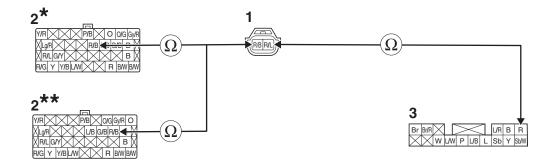

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 36)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between injector #1 coupler "1" and ground	red/black-ground red/blue-ground
--	-------------------------------------


Lines short circuit check "B"

Injector #1 coupler "1"	red/black-any other coupler terminal red/blue-any other coupler terminal
ECU coupler "2"	red/black-any other coupler terminal
Relay unit coupler "3"	red-any other coupler terminal

Except for California:

Α



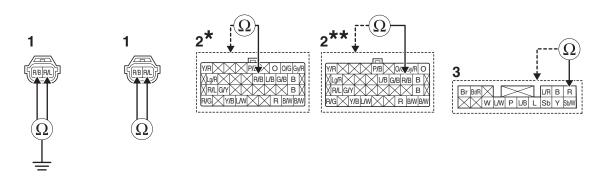


- *. MT09R
- **. MT09SPR

For California only:

Α



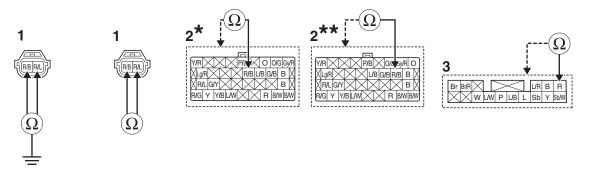

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 36)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

- 5. Malfunction in ECU.
- Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
 - Start the engine and let it idle for approximately 5 seconds.
- Confirm that the DTC has a condition of "Recovered" using the malfunction mode of the YDT, and then delete the DTC.

EAS20575

P0202

EAS33055

TROUBLESHOOTING

Item

Injector #2: malfunction in injector #2.

Fail-safe system

- Able to start engine (depending on the number of faulty cylinders)
- Able to drive vehicle (depending on the number of faulty cylinders)

Procedure

- 1. Connection of injector #2 coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 37)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to step 2.

- 2. Defective injector #2.
 - Measure the injector resistance.

Refer to "CHECKING THE FUEL INJECTORS" on page 8-83.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

a. Replace the injector #2.

Refer to "THROTTLE BODIES" on page 7-6.

b. Execute the diagnostic mode. (Code 37)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 37)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.


NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
- Disconnect the injector #2 coupler "1", ECU coupler "2" and relay unit coupler "3".
- Open circuit check


Between injector #2 coupler "1" and ECU coupler "2"	green/black-green/black
Between injector #2 coupler "1" and relay unit coupler "3"	red/blue-red

Except for California:

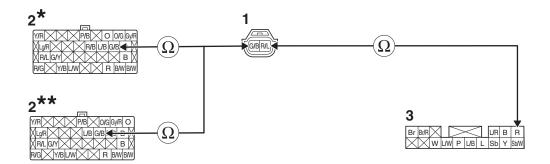

- *. MT09R
- **. MT09SPR

For California only:

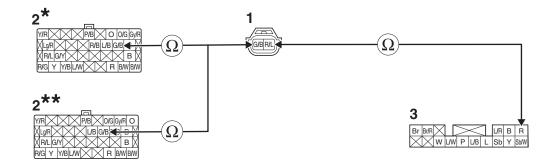

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 37)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP__

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between injector #2 coupler "1" and ground	green/black-ground red/blue-ground
--	---------------------------------------


Lines short circuit check "B"

Injector #2 coupler "1"	green/black-any other coupler terminal red/blue-any other coupler terminal
ECU coupler "2"	green/black-any other coupler terminal
Relay unit coupler "3"	red-any other coupler terminal

Except for California:

Α

В

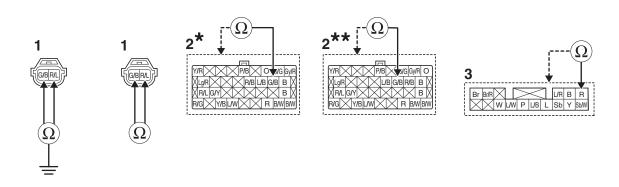


- *. MT09R
- **. MT09SPR

For California only:

Α

В

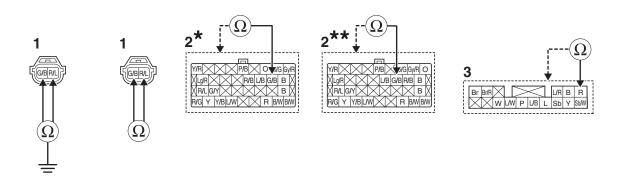

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 37)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

- 5. Malfunction in ECU.
- Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
 - Start the engine and let it idle for approximately 5 seconds.
 - Confirm that the DTC has a condition of "Recovered" using the malfunction mode of the YDT, and then delete the DTC.

EAS20576

P0203

EAS33056

TROUBLESHOOTING

Item

Injector #3: malfunction in injector #3.

Fail-safe system

- Able to start engine (depending on the number of faulty cylinders)
- Able to drive vehicle (depending on the number of faulty cylinders)

Procedure

- 1. Connection of injector #3 coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 38)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to step 2.

- 2. Defective injector #3.
 - Measure the injector resistance.

Refer to "CHECKING THE FUEL INJECTORS" on page 8-83.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

a. Replace the injector #3.

Refer to "THROTTLE BODIES" on page 7-6.

b. Execute the diagnostic mode. (Code 38)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 38)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.


NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
- Disconnect the injector #3 coupler "1", ECU coupler "2" and relay unit coupler "3"
- Open circuit check


Between injector #3 coupler "1" and ECU coupler "2"	blue/black-blue/black
Between injector #3 coupler "1" and relay unit coupler "3"	red/blue-red

Except for California:

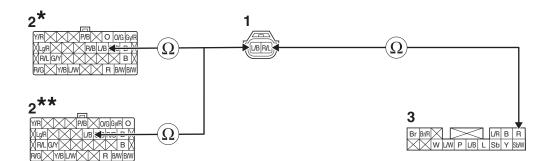

- *. MT09R
- **. MT09SPR

For California only:

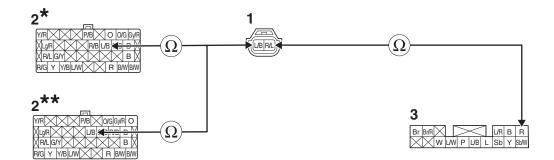

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 38)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between injector #3 coupler "1" and ground	blue/black-ground red/blue-ground
--	--------------------------------------


Lines short circuit check "B"

Injector #3 coupler "1"	blue/black-any other coupler terminal red/blue-any other coupler terminal
ECU coupler "2"	blue/black-any other coupler terminal
Relay unit coupler "3"	red-any other coupler terminal

Except for California:





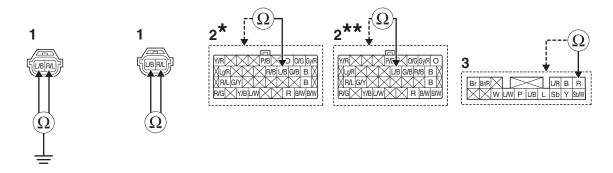


- *. MT09R
- **. MT09SPR

For California only:

Α



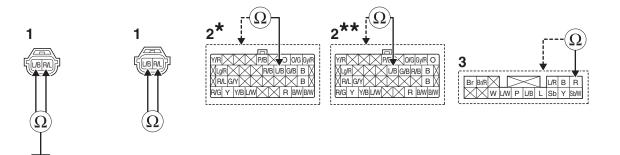

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 38)

Is it hear operating sound?

YES

 \rightarrow Go to step 6.

NO

 \rightarrow Go to step 5.

- 5. Malfunction in ECU.
- Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
 - Start the engine and let it idle for approximately 5 seconds.
 - Confirm that the DTC has a condition of "Recovered" using the malfunction mode of the YDT, and then delete the DTC.

EAS20578

P0335

EAS33058

TROUBLESHOOTING

Item

Crankshaft position sensor: no normal signals are received from the crankshaft position sensor.

Fail-safe system

- Unable to start engine
- Unable to drive vehicle

Procedure

- 1. Connection of crankshaft position sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Crank the engine, and then check the condition of the DTC using the malfunction mode of the YDT

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Connection of wire harness ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Crank the engine, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


VES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 3.
- 3. Wire harness continuity.
 - Disconnect the crankshaft position sensor coupler "1" and ECU coupler "2".
 - Open circuit check

Between crankshaft position sensor coupler "1"	gray-gray
and ECU coupler "2"	black/blue-black/blue

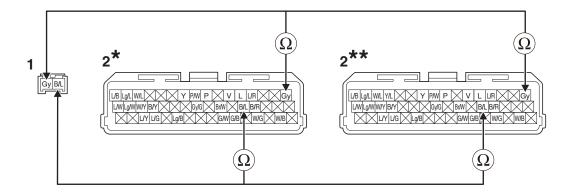

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Crank the engine, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP


Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between crankshaft position sensor coupler "1"	gray-ground
and ground	black/blue-ground

Lines short circuit check "B"

I I rankenatt noettion eaneor colliniar " i "	black/blue-any other coupler terminal gray-any other coupler terminal
	black/blue-any other coupler terminal gray-any other coupler terminal

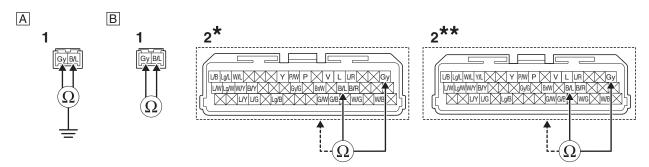

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Crank the engine, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Installed condition of crankshaft position sensor.
 - Check for looseness or pinching.
 - Check the gap (0.85 mm (0.03 in)) between the crankshaft position sensor and the generator rotor.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the sensor.
- b. Crank the engine, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

- \rightarrow Go to step 5.
- 5. Defective crankshaft position sensor.
 - Check the crankshaft position sensor.

Refer to "CHECKING THE CRANKSHAFT POSITION SENSOR" on page 8-79.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the stator coil assembly.
- b. Crank the engine, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20580

P0351

EAS33060

TROUBLESHOOTING

Item

Cylinder-#1 ignition coil: open or short circuit detected in the primary lead of the cylinder-#1 ignition coil.

Fail-safe system

- Able to start engine (depending on the number of faulty cylinders)
- Able to drive vehicle (depending on the number of faulty cylinders)

Procedure

- 1. Connection of cylinder-#1 ignition coil coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.


NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the cylinder-#1 ignition coil coupler "1" and ECU coupler "2".
 - Open circuit check


Between cylinder-#1 ignition coil coupler "1" and ECU coupler "2"	orange-orange

Except for California:

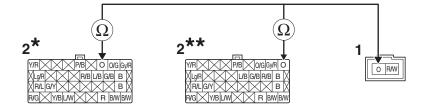

- *. MT09R
- **. MT09SPR

For California only:

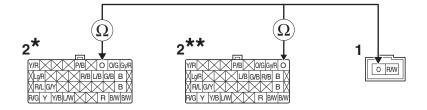

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between cylinder-#1 ignition coil coupler "1" and ground	orange-ground
--	---------------

Lines short circuit check "B"

	orange—any other coupler terminal red/white—any other coupler terminal
ECU coupler "2"	orange-any other coupler terminal


Except for California:










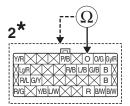


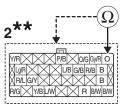

- *. MT09R
- **. MT09SPR


For California only:


Α

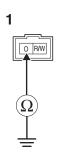

В



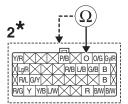

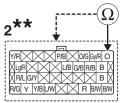

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

- \rightarrow Go to step 4.
- 4. Installed condition of cylinder-#1 ignition coil.
 - Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the ignition coil.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective cylinder-#1 ignition coil.
- Measure the primary coil resistance of the cylinder-#1 ignition coil. Refer to "CHECKING THE IGNITION COILS" on page 8-78.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the cylinder-#1 ignition coil. Refer to "CAMSHAFTS" on page 5-16.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Execute the diagnostic mode. (Code 30)
 - · Confirm that spark plug does not sparking.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20581

P0352

EAS33061

TROUBLESHOOTING

Item

Cylinder-#2 ignition coil: open or short circuit detected in the primary lead of the cylinder-#2 ignition coil.

Fail-safe system

- Able to start engine (depending on the number of faulty cylinders)
- Able to drive vehicle (depending on the number of faulty cylinders)

Procedure

- 1. Connection of cylinder-#2 ignition coil coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.


NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the cylinder-#2 ignition coil coupler "1" and ECU coupler "2".
 - Open circuit check


Between cylinder-#2 ignition coil coupler "1" and ECU coupler "2"	gray/red-gray/red

Except for California:

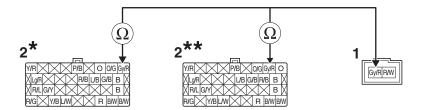

- *. MT09R
- **. MT09SPR

For California only:

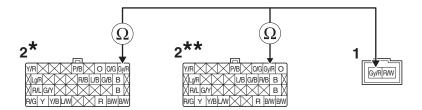

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YFS

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"


Between cylinder-#2 ignition coil coupler "1" and ground	gray/red-ground
--	-----------------

Lines short circuit check "B"

	gray/red-any other coupler terminal red/white-any other coupler terminal
ECU coupler "2"	gray/red-any other coupler terminal


Except for California:




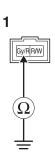





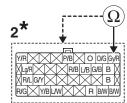


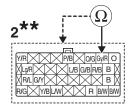

- *. MT09R
- **. MT09SPR


For California only:


Α

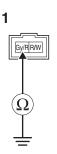

В



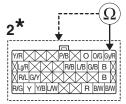

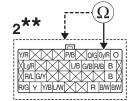

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

- \rightarrow Go to step 4.
- 4. Installed condition of cylinder-#2 ignition coil.
 - Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the ignition coil.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective cylinder-#2 ignition coil.
- Measure the primary coil resistance of the cylinder-#2 ignition coil. Refer to "CHECKING THE IGNITION COILS" on page 8-78.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the cylinder-#2 ignition coil. Refer to "CAMSHAFTS" on page 5-16.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Execute the diagnostic mode. (Code 31)
 - · Confirm that spark plug does not sparking.
 - Replace the ECU, and complete the service.

 Peter to "PERLACING THE ECU! (Engine Control Unit

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20582

P0353

EAS33062

TROUBLESHOOTING

Item

Cylinder-#3 ignition coil: open or short circuit detected in the primary lead of the cylinder-#3 ignition coil.

Fail-safe system

- Able to start engine (depending on the number of faulty cylinders)
- Able to drive vehicle (depending on the number of faulty cylinders)

Procedure

- 1. Connection of cylinder-#3 ignition coil coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.


NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the cylinder-#3 ignition coil coupler "1" and ECU coupler "2".
 - Open circuit check


Between cylinder-#3 ignition coil coupler "1" and ECU coupler "2"	orange/green-orange/green
LCO coupler 2	

Except for California:

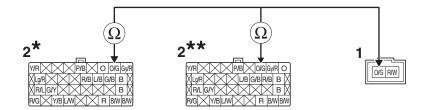

- *. MT09R
- **. MT09SPR

For California only:

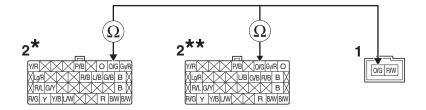

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"


Between cylinder-#3 ignition coil coupler "1" an ground	orange/green-ground
---	---------------------

Lines short circuit check "B"

	orange/green-any other coupler terminal red/white-any other coupler terminal
ECU coupler "2"	orange/green-any other coupler terminal


Except for California:




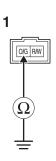





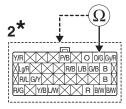


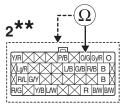

- *. MT09R
- **. MT09SPR


For California only:




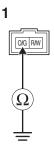





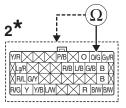

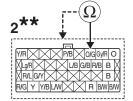

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Installed condition of cylinder-#3 ignition coil.
 - Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the ignition coil.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective cylinder-#3 ignition coil.
- Measure the primary coil resistance of the cylinder-#3 ignition coil. Refer to "CHECKING THE IGNITION COILS" on page 8-78.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the cylinder-#3 ignition coil. Refer to "CAMSHAFTS" on page 5-16.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Execute the diagnostic mode. (Code 32)
 - · Confirm that spark plug does not sparking.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20785

P0458

TIF

"P0458" is indicated for California only.

EAS33528

TROUBLESHOOTING

Item

Purge cut valve solenoid: open circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of purge cut valve solenoid coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES


 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
- Disconnect the ignition fuse 1 "1", purge cut valve solenoid coupler "2", ECU coupler "3" and main switch coupler "4".
- Open circuit check

Between ignition fuse 1 holder "1" and purge cut valve solenoid coupler "2"	brown/blue-red/white
Between purge cut valve solenoid coupler "2" and ECU coupler "3"	yellow-yellow
Between main switch coupler "4" and ignition fuse 1 holder "1"	brown/blue-brown/blue

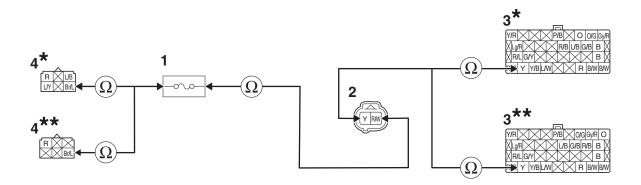

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- → Go to "Short circuit check".
- Short circuit check

TIP

Disconnect the ECU related connectors before checking.


Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

Ground short circuit check "A"

Between purge cut valve solenoid coupler "2" and ground	red/white-ground yellow-ground
Between main switch coupler "4" and ground	brown/blue-ground

Lines short circuit check "B"

Purge cut valve solenoid coupler "2"	red/white-any other coupler terminal yellow-any other coupler terminal
ECU coupler "3"	yellow-any other coupler terminal
Main switch coupler "4"	brown/blue-any other coupler terminal

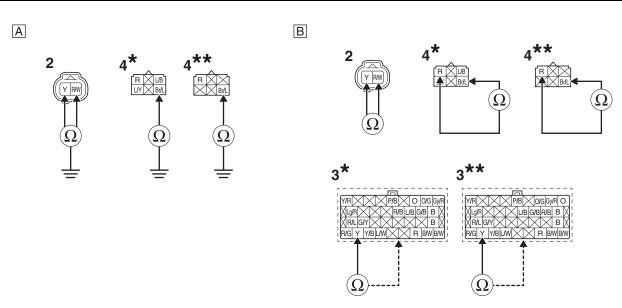

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Installed condition of purge cut valve solenoid.
- Check for looseness or pinching. Refer to "FUEL TANK" on page 7-1.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the purge cut valve solenoid. Refer to "FUEL TANK" on page 7-1.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 5.
- 5. Defective purge cut valve solenoid.
 - Execute the diagnostic mode. (Code 46)

Is it hear operating sound?

YES

 \rightarrow Go to step 7, and complete the service.

NO

→ Check the purge cut valve solenoid.

Refer to "CHECKING THE PURGE CUT VALVE SOLENOID (for California only)" on page 8-83.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the purge cut valve solenoid.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 7. Delete the DTC and check that the MIL goes off.
 - Start the engine and let it idle for approximately 5 seconds.
- Confirm that the DTC has a condition of "Recovered" using the malfunction mode of the YDT, and then delete the DTC.

EAS20585

P0480

EAS33065

TROUBLESHOOTING

Item

Radiator fan motor relay: open or short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of radiator fan motor relay coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NC

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

 \rightarrow Go to step 6, and complete the service.


NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the radiator fan motor relay "1", ECU coupler "2" and relay unit "4".
 - Remove the joint coupler cap "3".
 - Open circuit check


Between radiator fan motor relay "1" and joint coupler "3"	brown/blue-brown/blue
Between radiator fan motor relay "1" and ECU coupler "2"	green/yellow-green/yellow
Between relay unit "4" and joint coupler "3"	pink–pink

Except for California:

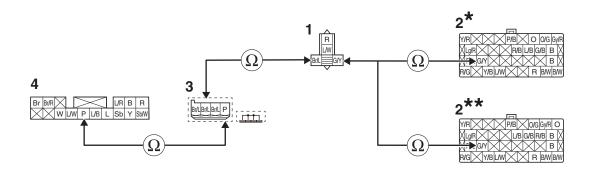

- *. MT09R
- **. MT09SPR

For California only:

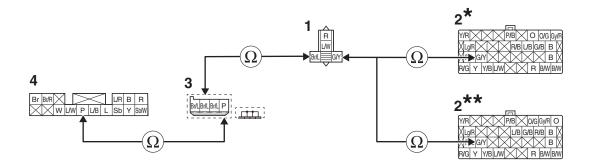

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between radiator fan motor relay "1" and ground	green/yellow-ground brown/blue-ground
Between relay unit "4" and ground	pink–ground

Lines short circuit check "B"

Radiator fan motor relay "1"	green/yellow-any other coupler terminal brown/blue-any other coupler terminal
ECU coupler "2"	green/yellow-any other coupler terminal
Relay unit "4"	pink-any other coupler terminal


Except for California:

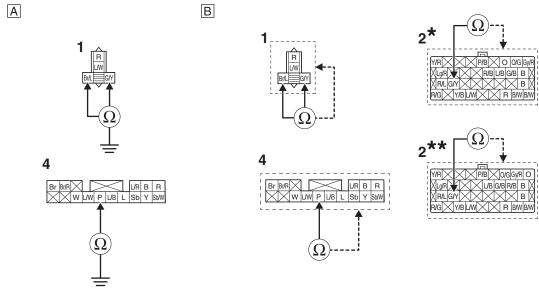


- *. MT09R
- **. MT09SPR


For California only:




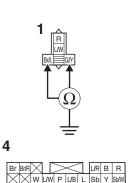

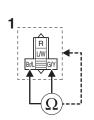

В

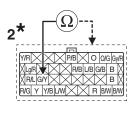

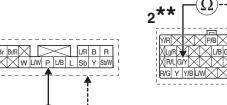

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Defective radiator fan motor relay.
 - Replace the radiator fan motor relay.
 - Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Malfunction in ECU.
- Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20774

P0500, P1500

EAS33303

TROUBLESHOOTING

ltem

- Rear wheel sensor: no normal signals are received from the rear wheel sensor.
- Neutral switch: open or short circuit is detected.
- Clutch switch: open or short circuit is detected.

Fail-safe system

- · Able to start engine
- Able to drive vehicle

Procedure

TIP_

- In case P0500 is detected, or both P0500 and P1500 are detected, proceed from step 1.
- If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.
- P0335
- 1. Locate the malfunction.
- DTCs P0500 or P0500 and P1500 detected.
- a. Execute the diagnostic mode. (Code 07)
- b. Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 2.

TIP

Perform the procedure from step 2 to step 7 and step 21.

- DTC P1500 detected.
- a. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is check result OK?

YES

 \rightarrow Go to step b.

NO

 \rightarrow Go to step 8.

TID

Perform the procedure from step 8 to step 14 and step 21.

b. Execute the diagnostic mode. (Code 21)

When the transmission is in gear with the clutch lever squeezed and the sidestand retracted	ON
	1

Is check result OK?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 15.

TIP

Perform the procedure from step 15 to step 21.

- 2. Connection of rear wheel sensor coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 07)
- c. Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 3.

- 3. Connection of ABS ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 07)
- c. Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 21.

NC

 \rightarrow Go to step 4.

- 4. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 5.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 07)
- c. Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES


 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 5.

- 5. Wire harness continuity.
 - Disconnect the rear wheel sensor coupler "1", ABS ECU coupler "2" and ECU coupler "3".
 - Open circuit check

Between rear wheel sensor coupler "1" and ABS ECU coupler "2"	black-black white-white
Between ABS ECU coupler "2" and ECU coupler "3"	white/green-white/green white/black-white/black

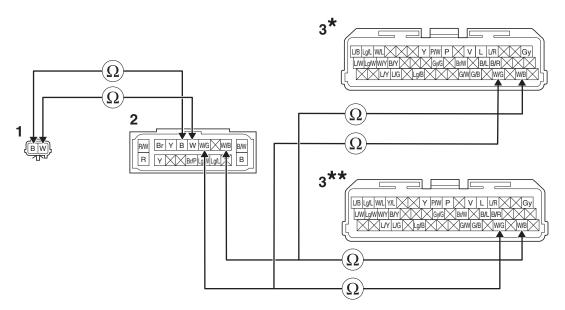

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 07)
- c. Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_


Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between ABS ECU coupler "2" and ground	black-ground white-ground white/green-ground white/black-ground
--	--

Lines short circuit check "B"

Rear wheel sensor coupler "1"	black-any other coupler terminal white-any other coupler terminal
ABS ECU coupler "2"	black-any other coupler terminal white-any other coupler terminal white/green-any other coupler terminal white/black-any other coupler terminal
ECU coupler "3"	white/green-any other coupler terminal white/black-any other coupler terminal

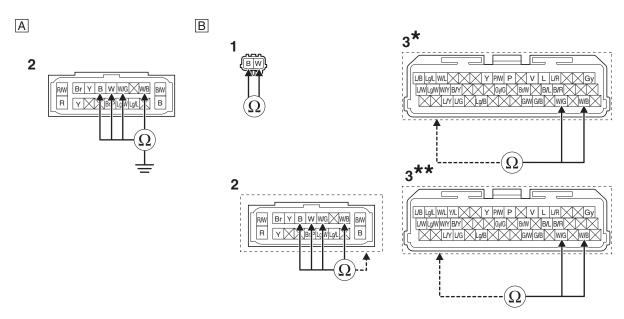

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 07)
- c. Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- Execute the diagnostic mode. (Code 07)
- Rotate the rear wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 7.

- 7. Malfunction in ABS ECU.
 - Replace the ABS ECU and go to step 21.
- 8. Connection of neutral switch coupler.
 - Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 9.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 9.

- 9. Connection of ECU coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 10.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is it correct indication?

YES

 \rightarrow Go to step 21.


NO

 \rightarrow Go to step 10.

10. Wire harness continuity.

- Disconnect the relay unit coupler "1", ECU coupler "2" and neutral switch coupler "3".
- Remove the joint coupler cap "4".
- Open circuit check

Between relay unit coupler "1" and joint coupler "4"	yellow-yellow
Between joint coupler "4" and ECU coupler "2"	black/yellow-black/yellow
Between relay unit coupler "1" and neutral switch coupler "3"	sky blue–sky blue

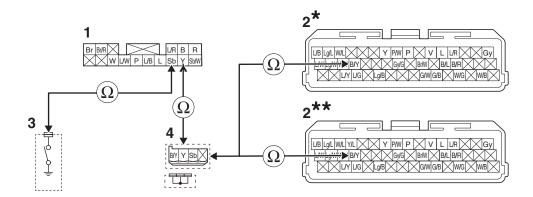

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between relay unit coupler "1" and ground	yellow-ground sky blue-ground
---	----------------------------------

Lines short circuit check "B"

	yellow-any other coupler terminal sky blue-any other coupler terminal
ECU coupler "2"	black/yellow-any other coupler terminal

A

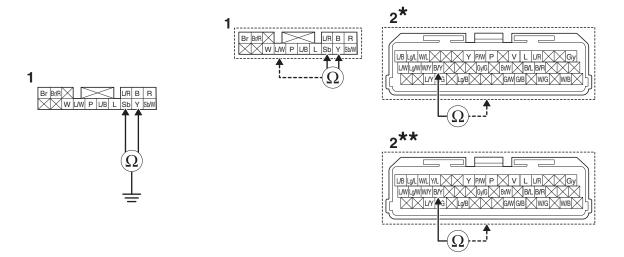

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 11.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 11.

- 11.Defective relay unit.
- Check the relay unit.

Refer to "CHECKING THE RELAY UNIT (DIODE)" on page 8-77.

Is check result OK?

YES

 \rightarrow Go to step 12.

NO

- a. Replace the relay unit.
- b. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 12.

- 12.Defective neutral switch.
 - Check the neutral switch.
- Refer to "CHECKING THE SWITCHES" on page 8-68.

Is check result OK?

YES

 \rightarrow Go to step 13.

NO

- a. Replace the neutral switch.
 - Refer to "CRANKCASE" on page 5-63.
- b. Execute the diagnostic mode. (Code 21)

When the transmission is in neutral	ON
When the transmission is in gear with the clutch lever released	OFF

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 13.

- 13. Faulty shift drum (neutral detection area).
- Check the shift drum.

Refer to "CHECKING THE SHIFT DRUM ASSEMBLY" on page 5-92.

Is check result OK?

YES

 \rightarrow Go to step 14.

NO

 \rightarrow Replace the shift drum and go to step 21.

Refer to "TRANSMISSION" on page 5-86.

- 14.Malfunction in ECU.
- Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 15. Clutch lever adjustment.
- Refer to "ADJUSTING THE CLUTCH LEVER FREE PLAY" on page 3-12.
- Execute the diagnostic mode. (Code 21)

When the clutch lever is released with the transmission in gear and when the sidestand is retracted	OFF
When the clutch lever is squeezed with the transmission in gear and when the sidestand is retracted	ON

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 16.

- 16. Connection of clutch switch coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 17.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the clutch lever is released with the transmission in gear and when the sidestand is retracted	
When the clutch lever is squeezed with the transmission in gear and when the sidestand is retracted	ON

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 17.

17. Connection of ECU coupler.

- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 18.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the clutch lever is released with the transmission in gear and when the sidestand is retracted	
When the clutch lever is squeezed with the transmission in gear and when the sidestand is retracted	ОИ

Is it correct indication?

YES

 \rightarrow Go to step 21.


NO

 \rightarrow Go to step 18.

18. Wire harness continuity.

- Disconnect the ECU coupler "2", relay unit coupler "1" and clutch switch connector "3".
- Remove the joint coupler cap "4" and joint coupler cap "5".
- Open circuit check

Between ECU coupler "2" and joint coupler "4"	black/yellow-black/yellow
Between relay unit coupler "1" and joint coupler "4"	yellow-yellow
Between clutch switch connector "3" and joint coupler "4"	sky blue–sky blue
Between clutch switch connector "3" and joint coupler "5"	blue/yellow-blue/yellow
Between relay unit coupler "1" and joint coupler "5"	blue-blue
Between ECU coupler "2" and joint coupler "5"	blue/yellow-blue/yellow

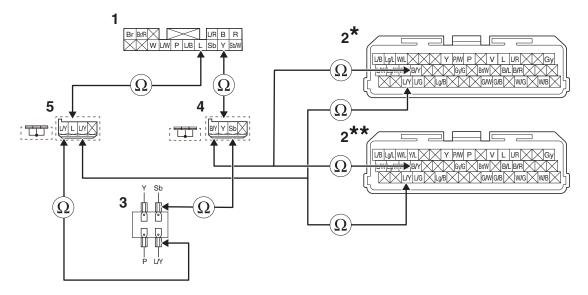

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the clutch lever is released with the transmission in gear and when the sidestand is retracted	-
When the clutch lever is squeezed with the transmission in gear and when the sidestand is retracted	ON

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to "Short circuit check".


• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"	
Between relay unit coupler "1" and ground yellow-ground blue-ground	
Lines short circuit check "B"	
Dolov unit coupler "1"	yellow-any other coupler terminal

Relay unit coupler "1"	yellow–any other coupler terminal blue–any other coupler terminal
ECU coupler "2"	black/yellow-any other coupler terminal blue/yellow-any other coupler terminal
Clutch switch connector "3"	sky blue–any other coupler terminal blue/yellow–any other coupler terminal

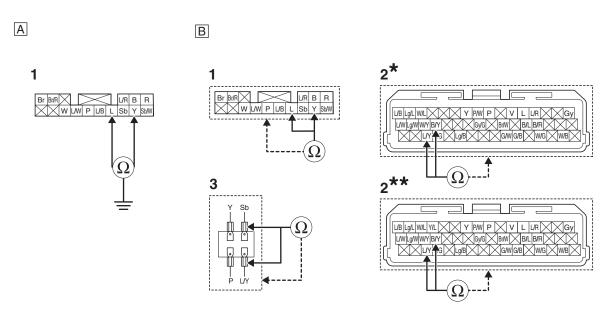

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 19.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 21)

When the clutch lever is released with the transmission in gear and when the sidestand is retracted	
When the clutch lever is squeezed with the transmission in gear and when the sidestand is retracted	ON

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 19.

19. Defective clutch switch.

• Check the clutch switch.

Refer to "CHECKING THE SWITCHES" on page 8-68.

Is check result OK?

YES

 \rightarrow Go to step 20.

NO

a. Replace the clutch switch. Refer to "HANDLEBAR" on page 4-70.

b. Execute the diagnostic mode. (Code 21)

When the clutch lever is released with the transmission in gear and when the sidestand is retracted	OFF
When the clutch lever is squeezed with the transmission in gear and when the sidestand is retracted	ON

Is it correct indication?

YES

 \rightarrow Go to step 21.

NO

 \rightarrow Go to step 20.

20.Malfunction in ECU.

- Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 21.Delete the DTC and check that the MIL goes off.
 - Turn the main switch to "ON", and then rotate the rear wheel by hand.
 - Start the engine, and input the vehicle speed signals by operating the vehicle at 20 to 30 km/h (12 to 19 mph).
 - Confirm that the DTC has a condition of "Recovered" using the malfunction mode of the YDT, and then delete the DTC. Delete this DTC even if it has a condition of "Detected".

P0560, P0563

EAS33304

TROUBLESHOOTING

Item

- [P0560] Charging voltage is abnormal.
- [P0563] Vehicle system power voltage out of range

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP_

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- P0335
- 1. Malfunction in charging system.
- Check the charging system.

Refer to "CHARGING SYSTEM" on page 8-17.

Is check result OK?

YES

 \rightarrow Repeat step 1.

NO

- a. Defective GCU or AC magneto \rightarrow Replace.
- b. Defective connection in the charging system circuit → Properly connect or replace the wire harness.
- c. Start the engine and let it idle for approximately 5 seconds.
- d. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 2, and complete the service.

NO

- \rightarrow Repeat step 1.
- 2. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P0564

EAS33074

TROUBLESHOOTING

ltem

- Cruise control setting switch "RES+": open or short circuit is detected.
- Cruise control setting switch "SET-": open or short circuit is detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of ECU coupler, handlebar switch coupler (left) and main switch coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then push the "RES+" side and "SET-"side of the cruise control setting switch.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 10, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Locate the malfunction.
 - a. Execute the diagnostic mode. (Code 80)

When the cruise control setting switch "RES+" is pushed	ON
When the cruise control setting switch is released	OFF

Is check result OK?

YES

 \rightarrow Go to step b.

NO

 \rightarrow Go to step 3.

TIP

Perform the procedure from step 3 to step 5, and from step 9 to step 10.

b. Execute the diagnostic mode. (Code 81)

When the cruise control setting switch "SET-" is pushed	ON
When the cruise control setting switch is released	OFF

- c. Confirm that it is defective.
- d. Go to step 6.

TIP

Perform the procedure from step 6 to step 10.

- 3. Check the fuse.
- Check the ignition fuse 1 and cruise control fuse.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the fuse.
- b. Turn the main switch to "ON".
- c. Push and release the "RES+" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 10, and complete the service.


NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity
- Disconnect the handlebar switch (left) coupler "1" and BCM coupler "2".
- Open circuit check

Between handlebar switch (left) coupler "1" and BCM coupler "2"

green—green
blue—blue
black/blue—black/blue

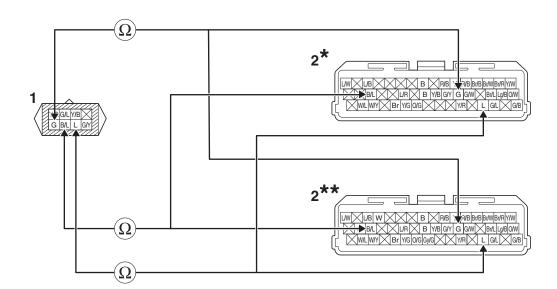

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Push and release the "RES+" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 10, and complete the service.

NO

→Go to "Short circuit check".

• Short circuit check

TIP


Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"


Between handlebar switch (left) coupler "1" and ground	green-ground blue-ground black/blue-ground
--	--

Lines short circuit check "B"

Handlebar switch (left) coupler "1"	green-any other coupler terminal blue-any other coupler terminal black/blue-any other coupler terminal
BCM coupler "2"	green-any other coupler terminal blue-any other coupler terminal black/blue-any other coupler terminal

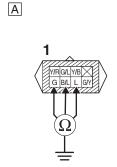

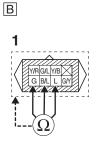

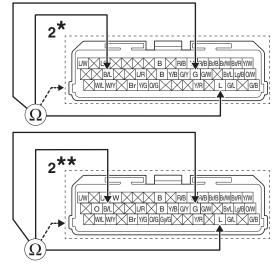

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NΩ

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Push and release the "RES+" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 10, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective cruise control setting switch.
- Replace the handlebar switch (left).
- Turn the main switch to "ON".
- Push the "RES+" side and "SET-" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YFS

→Go to step 10, and complete the service.

NO

 \rightarrow Go to step 9.

6. Check the fuse. (main fuse, cruise control fuse)

Is check result OK?

YES

 \rightarrow Go to step 7.

NO

- a. Replace the fuse.
- b. Turn the main switch to "ON".
- c. Push and release the "SET-" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→Go to step 10, and complete the service.

NO

 \rightarrow Go to step 7.

- 7. Wire harness continuity.
 - Open circuit check
 - Disconnect the cruise control fuse "1", clutch switch connector "2", front brake light switch connector "3", rear brake light switch coupler "4" and ECU coupler "5".

Between cruise control fuse "1" and clutch switch connector "2"	yellow-yellow
Between clutch switch connector "2" and front brake light switch connector "3"	pink–pink
Between front brake light switch connector "3" and rear brake light switch coupler "4"	white/black-white/black
Between rear brake light switch coupler "4" and ECU coupler "5"	yellow-yellow

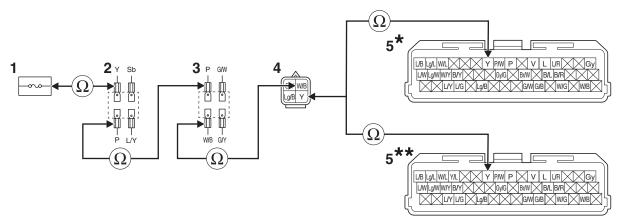

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".c. Push and "SET-" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

→Go to step 10, and complete the service.

→Go to "Short circuit check".


• Short circuit check

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between clutch switch connector "2" and ground	yellow-ground pink-ground
Between front brake light switch connector "3" and ground	pink-ground white/black-ground
Between rear brake light switch coupler "4" and ground	white/black-ground yellow-ground

Lines short circuit check "B"		
Clutch switch connector "2"	yellow-any other coupler terminal pink-any other coupler terminal	
ECU coupler "5"	yellow-any other coupler terminal	
Front brake light switch connector "3"	pink-any other coupler terminal white/black-any other coupler terminal	
Rear brake light switch coupler "4"	white/black-any other coupler terminal yellow-any other coupler terminal	

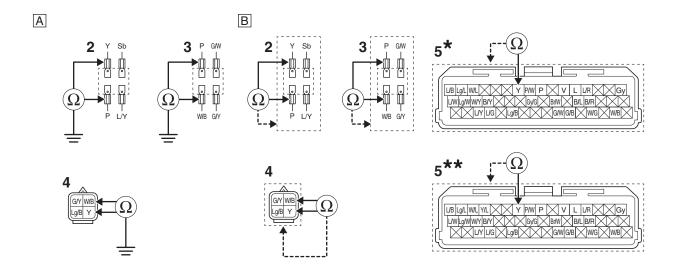

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 8.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Push and "SET-" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 10, and complete the service.

NO

 \rightarrow Go to step 8.

- 8. Defective cruise control setting switch.
 - Replace the handlebar switch (left).
 - Turn the main switch to "ON".
 - Push the "RES+" side and "SET-" side of the cruise control setting switch, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 10, and complete the service.

NO

 \rightarrow Go to step 9.

- 9. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 10.Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P056C

EAS33075

TROUBLESHOOTING

Item

- Front brake light switch: open or short circuit is detected.
- Rear brake light switch: open or short circuit is detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Locate the malfunction.
 - a. Execute the diagnostic mode. (Code 82, 83)

When the front brake is applied	ON
When the front brake is not applied	OFF

Is check result OK?

YES

 \rightarrow Go to step b.

NO

 \rightarrow Go to step 2.

TIP_

Perform the procedure from step 2 to step 5, and from step 10 to step 11.

Execute the diagnostic mode. (Code 82, 83)

When the rear brake is applied	ON
When the rear brake is not applied	OFF

- c. Confirm that it is defective.
- d. Go to step 6.

TIP_

Perform the procedure from step 6 to step 11.

- 2. Connection of ECU coupler, front brake light switch coupler, brake light relay coupler and main switch coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON".
- c. Operate the front brake lever, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

 \rightarrow Go to step 3.

3. Check the fuse. (signaling system fuse and brake light fuse)

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the fuse.
- b. Turn the main switch to "ON".
- c. Operate the front brake lever, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→Go to step 11, and complete the service.

NO

→Go to step 4.

- 4. Wire harness continuity.
- Disconnect the brake light fuse "1", front brake light switch connector "2", rear brake light switch coupler "3" and ECU coupler "4".
- Open circuit check

Between brake light fuse holder "1" and front brake light switch connector "2"	green/white-green/white
Between front brake light switch connector "2" and rear brake light switch coupler "3"	green/yellow-green/yellow
Between rear brake light switch coupler "3" and ECU coupler "4"	light green/black—light green/black

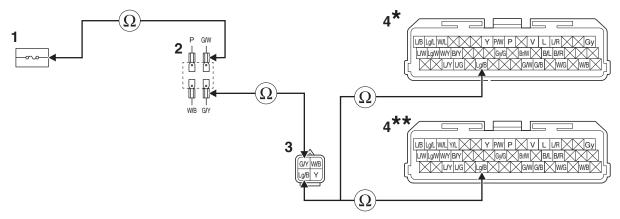

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Operate the front brake lever, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

→Go to "Short circuit check".

• Short circuit check

TIP


Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between front brake light switch connector "2" and ground	green/white-ground green/yellow-ground
Between rear brake light switch coupler "3"	light green/black-ground green/yellow-ground

Lines short circuit check "B"

Front brake light switch connector "2"	green/white-any other coupler terminal green/yellow-any other coupler terminal
Rear brake light switch coupler "3"	green/yellow-any other coupler terminal light green/black-any other coupler terminal
ECU coupler "4"	light green/black-any other coupler terminal

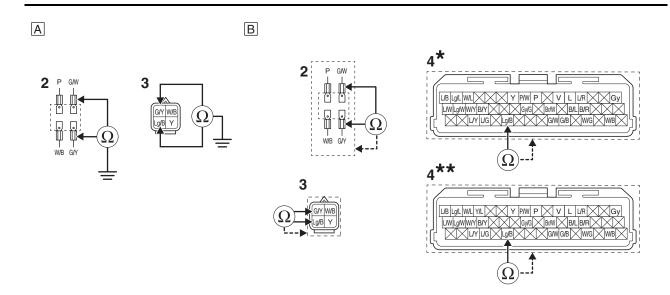

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Operate the front brake lever, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

- \rightarrow Go to step 5.
- 5. Defective front brake light switch.
 - Replace the front brake light switch.
 - Refer to "FRONT BRAKE" on page 4-31.
 - Turn the main switch to "ON".
 - Operate the front brake lever, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

- \rightarrow Go to step 10.
- 6. Connection of wire harness ECU coupler, rear brake light switch coupler, brake light relay coupler and main switch coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 7.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON".
- c. Operate the rear brake pedal, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

 \rightarrow Go to step 7.

7. Check the fuse. (signaling system fuse and brake light fuse)

Is check result OK?

YES

 \rightarrow Go to step 8.

NO

- a. Replace the fuse.
- b. Turn the main switch to "ON".
- c. Operate the rear brake pedal, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→Go to step 11, and complete the service.

NO

 \rightarrow Go to step 8.

- 8. Wire harness continuity.
 - Disconnect the brake light fuse "1", front brake light switch connector "2", rear brake light switch coupler "3" and ECU coupler "4".
 - Open circuit check

Between brake light fuse holder "1" and front brake light switch connector "2"	green/white-green/white
Between front brake light switch connector "2" and rear brake light switch coupler "3"	green/yellow-green/yellow
Between rear brake light switch coupler "3" and ECU coupler "4"	light green/black—light green/black

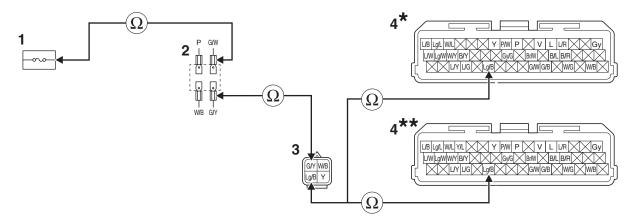

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Operate the rear brake pedal, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NC

→Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking.


Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between front brake light switch connector "2" and ground	green/white-ground green/yellow-ground
Between rear brake light switch coupler "3"	light green/black–ground green/yellow–ground

Lines short circuit check "B"

Front brake light switch connector "2"	green/white-any other coupler terminal green/yellow-any other coupler terminal
Rear brake light switch coupler "3"	green/yellow-any other coupler terminal light green/black-any other coupler terminal
ECU coupler "4"	light green/black-any other coupler terminal

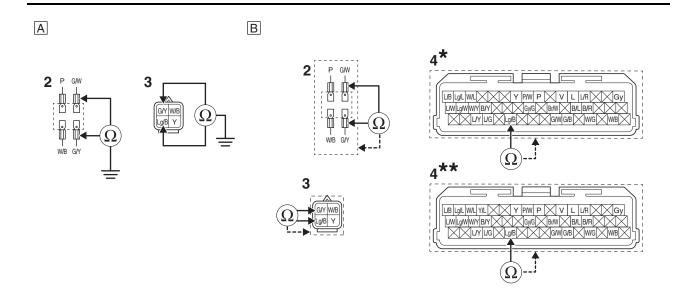

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 9.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON".
- c. Operate the rear brake pedal, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

- \rightarrow Go to step 9.
- 9. Defective rear brake light switch.
 - Replace the rear brake light switch.

Refer to "REAR BRAKE" on page 4-49.

Is check result OK?

YES

 \rightarrow Go to step 10.

NO

- a. Turn the main switch to "ON".
- b. Operate the rear brake pedal, and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→Go to step 11, and complete the service.

NO

 \rightarrow Go to step 10.

10.Malfunction in ECU.

- Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 11.Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P0601

EAS33305

TROUBLESHOOTING

Item

Internal malfunction in ECU. (When this malfunction is detected in the ECU, the DTC might not appear on the tool display.)

Fail-safe system

- Unable to start engine
- Unable to drive vehicle

Procedure

- 1. Malfunction in ECU.
- Replace the ECU.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- Turn the main switch to "ON".
- Check that the MIL does not come on.

P0606

EAS33306

TROUBLESHOOTING

Item

Internal malfunction in ECU. (When this malfunction is detected in the ECU, the DTC might not appear on the tool display.)

Fail-safe system

- Able/Unable to start engine
- Able/Unable to drive vehicle

Procedure

- 1. Check and repair for simultaneous malfunction.
- Check the items of DTCs P0122, P0123, P0222, P0223 and P2135, if they are detected at the same time, correct the P0122, P0123, P0222, P0223 and P2135 first.
- Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 3, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Malfunction in ECU.
 - Replace the ECU.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- Turn the main switch to "ON".
- Check that the MIL does not come on.
- 3. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P062F

EAS33078

TROUBLESHOOTING

Item

EEPROM DTC: an error is detected while reading or writing on EEPROM.

Fail-safe system

- Able/Unable to start engine
- Able/Unable to drive vehicle

Procedure

- 1. Locate the malfunction.
- Execute the diagnostic mode (Code 60)
- 2. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 3. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P0638

EAS33079

TROUBLESHOOTING

Item

YCC-T drive system: malfunction detected.

Fail-safe system

- Able/Unable to start engine
- Able/Unable to drive vehicle

Procedure

- 1. Connection of throttle servo motor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 3.
- 3. Check the electronic throttle valve fuse.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the electronic throttle valve fuse.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.


NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
 - Disconnect the throttle servo motor coupler "1", ECU coupler "2" and electronic throttle valve fuse "3".
 - Open circuit check


Between throttle servo motor coupler "1" and ECU coupler "2"	yellow/red-yellow/red light green/red-light green/red
Between ECU coupler "2" and electronic throttle valve fuse holder "3"	red/blue-red/blue

Except for California:

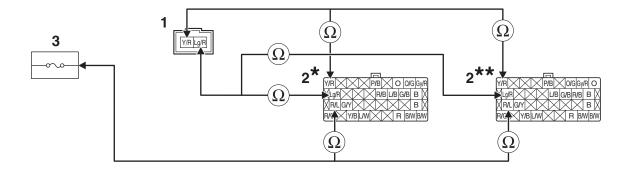

- *. MT09R
- **. MT09SPR

For California only:

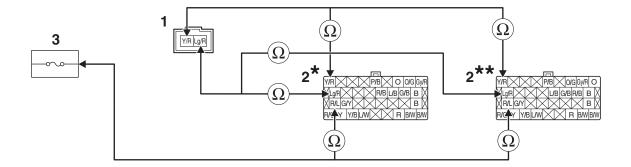

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NΟ

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- → Go to "Short circuit check".
- Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"


Between ECU coupler "2" and ground	yellow/red-ground light green/red-ground red/blue-ground

Lines short circuit check "B"

Throttle servo motor coupler "1"	yellow/red-any other coupler terminal light green/red-any other coupler terminal
	yellow/red-any other coupler terminal light green/red-any other coupler terminal red/blue-any other coupler terminal


Except for California:

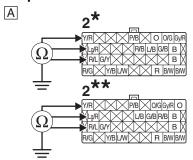


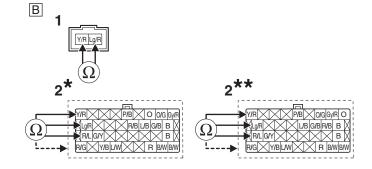

- *. MT09R
- **. MT09SPR

For California only:

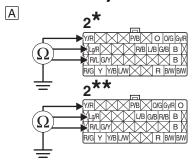

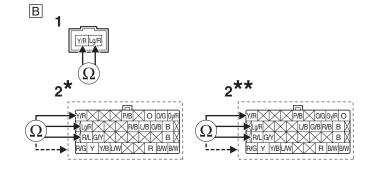

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YFS

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective throttle bodies.
 - Check the throttle bodies.

Refer to "CHECKING THE THROTTLE SERVO MOTOR" on page 8-82.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the throttle bodies.
 - Refer to "REPLACING THE THROTTLE BODIES" on page 7-10.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
- Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P0657

EAS33081

TROUBLESHOOTING

Item

Fuel system voltage: incorrect voltage supplied to the fuel injector and fuel pump.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP_

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- P0335
- 1. Connection of relay unit coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of handlebar switch coupler (right).
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Refer to "HANDLEBAR" on page 4-70.

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.


NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
- Disconnect the fuel injection system fuse "1", relay unit coupler "2", ignition fuse 1 "3", handlebar switch (right) coupler "4" and ECU coupler "5".
- Remove the joint coupler cap "6".
- Open circuit check


Between fuel injection system fuse holder "1" and relay unit coupler "2"	brown-brown
Between ignition fuse 1 holder "3" and joint coupler "6"	brown/blue-brown/blue
Between relay unit coupler "2" and ECU coupler "5"	blue/white-blue/white red-red
Between relay unit coupler "2" and handlebar switch (right) coupler "4"	blue/red-blue/red
Between handlebar switch (right) coupler "4" and joint coupler "6"	brown/blue-brown/blue

Except for California:

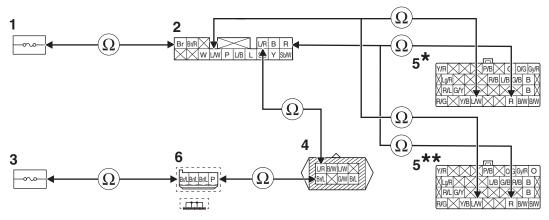

- *. MT09R
- **. MT09SPR

For California only:

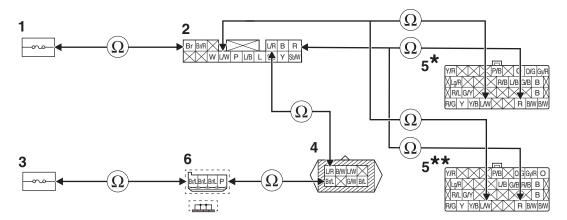

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

→ Go to "Short circuit check".

• Short circuit check

TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between relay unit coupler "2" and ground	brown-ground blue/white-ground red-ground blue/red-ground
Between handlebar switch (right) coupler "4" and ground	blue/red-ground brown/blue-ground

Lines short circuit check "B"


Relay unit coupler "2"	brown-any other coupler terminal blue/white-any other coupler terminal red-any other coupler terminal blue/red-any other coupler terminal
Handlebar switch (right) coupler "4"	blue/red-any other coupler terminal brown/blue-any other coupler terminal
ECU coupler "5"	red-any other coupler terminal blue/white-any other coupler terminal

Except for California:

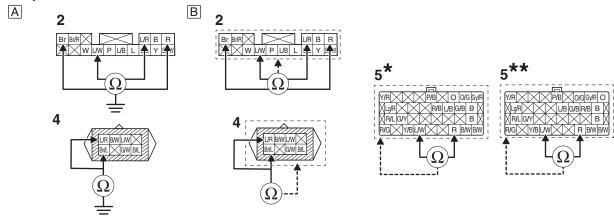

- *. MT09R
- **. MT09SPR

For California only:

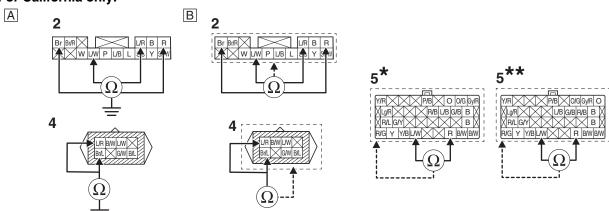

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective relay unit.
- Execute the diagnostic mode. (Code 50)
- Check the operating sound of the relay.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the relay unit.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Defective relay unit.
 - Execute the diagnostic mode. (Code 09)

Is the fuel system voltage less than 3V?

YES

- a. Replace the relay unit.
- b. Start the engine and let it idle for approximately 5 seconds.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 7.

NO

 \rightarrow Go to step 7.

- 7. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 8. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P0916, P0917

EAS33091

TROUBLESHOOTING

ltem

- [P0916] Gear position sensor: open or ground short circuit detected.
- [P0917] Gear position sensor: power short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of gear position sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YF.S

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


 \rightarrow Go to step 7, and complete the service.

NC

- \rightarrow Go to step 3.
- 3. Wire harness continuity.
 - Disconnect the gear position sensor coupler "1" and ECU coupler "2".
 - Open circuit check

Between gear position sensor coupler "1" and ECU coupler "2"

blue/red-blue/red black/red-black/red green/black-green/black

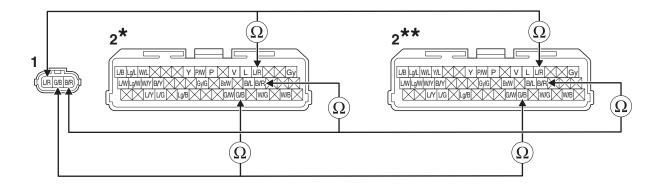

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NΩ

- → Go to "Short circuit check".
- Short circuit check

TIP_

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between gear position sensor coupler "1" and	blue/red-ground
ground	green/black-ground

Lines short circuit check "B"

Gear position sensor coupler "1"	blue/red-any other coupler terminal green/black-any other coupler terminal black/red-any other coupler terminal
ECU coupler "2"	blue/red-any other coupler terminal green/black-any other coupler terminal black/red-any other coupler terminal



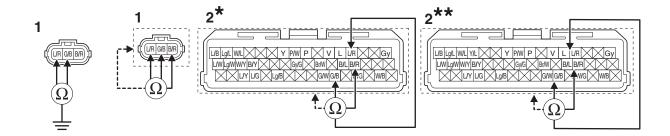

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of gear position sensor.
- Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the sensor.
 - Refer to "CRANKCASE" on page 5-63.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

 \rightarrow Go to step 5.

- 5. Defective gear position sensor.
 - Make sure that the position of each gear is correctly displayed on the meter.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the gear position sensor.
 Refer to "CRANKCASE" on page 5-63.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
- Replace the ECU, and complete the service.

 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

P1004

EAS33529

TROUBLESHOOTING

Item

Intake air pressure sensor 1 and intake air pressure sensor 2: output voltage deviation error.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP_

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- P0108, P0335, P0606
- 1. Defective intake air pressure sensor 1.
- Execute the diagnostic mode. (Code 03)
- When engine is stopped: Atmospheric pressure at the current altitude and weather conditions is indicated.

At sea level	Approx. 101 kPa (757.6 mmHg, 29.8 inHg), approx. 3.64 V
1000 m (3300 ft) above sea level	Approx. 90 kPa (675.1 mmHg, 26.6 inHg), approx. 3.30 V
2000 m (6700 ft) above sea level	Approx. 80 kPa (600.0 mmHg, 23.6 inHg), approx. 3.00 V
3000 m (9800 ft) above sea level	Approx. 70 kPa (525.0 mmHg, 20.7 inHg), approx. 2.70 V

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- a. Replace the intake air pressure sensor 1. Refer to "THROTTLE BODIES" on page 7-6.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 4, and complete the service.

NC

- \rightarrow Go to step 2.
- 2. Defective intake air pressure sensor 2.
 - Execute the diagnostic mode. (Code 04)
 - When engine is stopped: Atmospheric pressure at the current altitude and weather conditions is indicated.

At sea level	Approx. 101 kPa (757.6 mmHg, 29.8 inHg), approx. 3.64 V
1000 m (3300 ft) above sea level	Approx. 90 kPa (675.1 mmHg, 26.6 inHg), approx. 3.30 V
2000 m (6700 ft) above sea level	Approx. 80 kPa (600.0 mmHg, 23.6 inHg), approx. 3.00 V
3000 m (9800 ft) above sea level	Approx. 70 kPa (525.0 mmHg, 20.7 inHg), approx. 2.70 V

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- a. Replace the intake air pressure sensor 2. Refer to "THROTTLE BODIES" on page 7-6.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 4, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Malfunction in ECU.
 - Replace the ECU, and complete the service.

 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 4. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20613

P1600

EAS33093

TROUBLESHOOTING

ltem

Lean angle sensor: open or short circuit detected.

Fail-safe system

- Unable to start engine
- Unable to drive vehicle

Procedure

TIP_

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- U0125
- 1. Connection of IMU coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", then to "OFF", and back to "ON".
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", then to "OFF", and back to "ON".
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the ECU coupler "1", IMU coupler "4" and ignition fuse 1 "5".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between ECU coupler "1" and joint coupler "2"	light green/white-light green/white
Between ECU coupler "1" and joint coupler "3"	light green/blue-light green/blue
Between joint coupler "2" and IMU coupler "4"	light green/white-light green/white
	light green/blue-light green/blue
Between ignition fuse 1 holder "5" and IMU coupler "4"	brown/blue-red/white
Between IMU coupler "4" and ground	black/white-ground

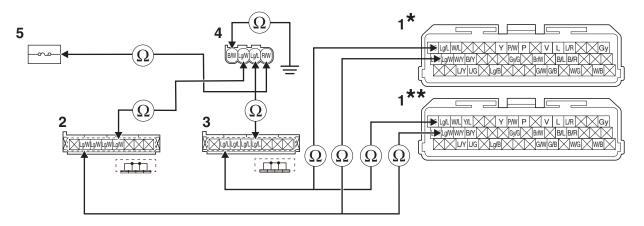

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", then to "OFF", and back to "ON".
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NC

- \rightarrow Go to "Short circuit check".
- Short circuit check

TIP


Disconnect the ECU and IMU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between ECU coupler "1" and ground	light green/blue–ground light green/white–ground
Between IMU coupler "4" and ground	light green/blue-ground light green/white-ground red/white-ground

Lines short circuit check "B"

light green/blue-any other coupler terminal light green/white-any other coupler terminal
light green/blue-any other coupler terminal light green/white-any other coupler terminal red/white-any other coupler terminal

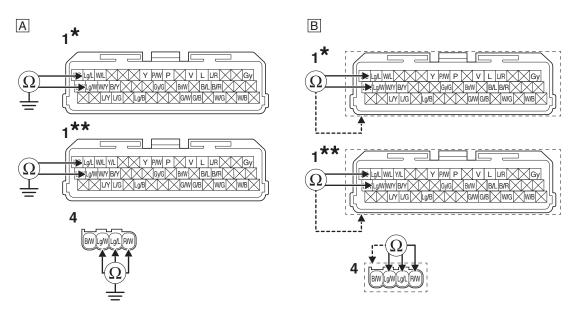

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", then to "OFF", and back to "ON".
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of IMU.
- Check the installed direction and condition of the sensor.
 Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Check the grommet for cracks.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Fix the IMU installation condition.
- b. Turn the main switch to "ON.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective IMU.
 - Replace the IMU.

Refer to "GENERAL CHASSIS (1)" on page 4-1.

- Turn the main switch to "ON", then to "OFF", and back to "ON".
- Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20614

P1601

TROUBLESHOOTING

Item

Sidestand switch: open or short circuit of the blue/yellow lead of the ECU is detected.

Fail-safe system

- Unable to start engine
- Unable to drive vehicle

Procedure

- Connection of sidestand switch coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.b. Turn the main switch to "ON", and then extend and retract the sidestand.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then extend and retract the sidestand.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Connection of relay unit coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then extend and retract the sidestand.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
 - Disconnect the relay unit coupler "1", ECU coupler "2" and sidestand switch coupler "3".
 - Remove the joint coupler cap "4".
 - Open circuit check

Between relay unit coupler "1" and joint coupler cap "4"	blue-blue
Between joint coupler "4" and ECU coupler "2"	blue/yellow-blue/yellow
Between relay unit coupler "1" and sidestand switch coupler "3"	blue/black-blue/black

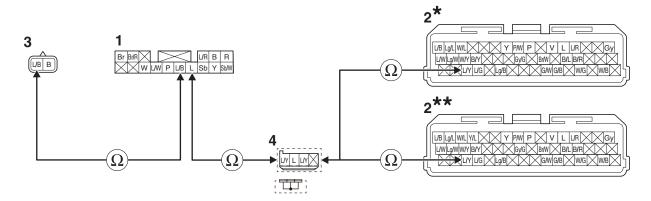

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then extend and retract the sidestand.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP_


Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between relay unit coupler "1" and ground	blue-ground blue/black-ground
---	----------------------------------

Lines short circuit check "B"

Relay unit coupler "1"	blue-any other coupler terminal blue/black-any other coupler terminal
ECU coupler "2"	blue/yellow-any other coupler terminal
Sidestand switch coupler "3"	blue/black-any other coupler terminal black-any other coupler terminal

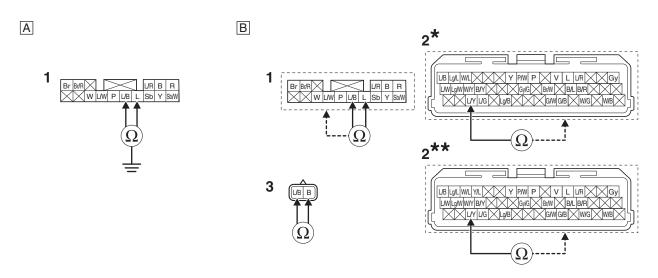

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then extend and retract the sidestand.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective sidestand switch.
- Execute the diagnostic mode. (Code 20)
- Shift the transmission into gear.

Sidestand retracted	ON
Sidestand extended	OFF

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the sidestand switch.
- b. Turn the main switch to "ON", and then extend and retract the sidestand.
- c. Check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 7. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20615

P1602

EAS33095

TROUBLESHOOTING

Item

Malfunction in ECU internal circuit (malfunction of ECU power cut-off function).

Fail-safe system

- Able/Unable to start engine
- Able/Unable to drive vehicle

Procedure

- 1. Installed condition of battery leads.
- Check the installed condition of the battery and battery leads (loose bolts).

Is check result OK?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Reinstall or replace the battery leads.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Connection of starter relay coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Connection of main switch coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Check the backup fuse.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Replace the fuse.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.


NO

 \rightarrow Go to step 5.

- 5. Wire harness continuity.
- Disconnect the battery "1", backup fuse 2 "2", ECU coupler "3", main switch coupler "4" and ignition fuse 2 "5".
- Open circuit check


Between battery "1" and backup fuse 2 holder "2"	red-red
Between backup fuse 2 holder "2" and ECU coupler "3"	red/green-red/green
Between main switch coupler "4" and ignition fuse 2 holder "5"	brown/blue-brown/blue
Between ignition fuse 2 holder "5" and ECU coupler "3"	brown/white-brown/white

Except for California:

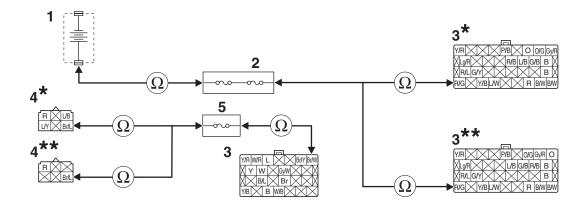

- *. MT09R
- **. MT09SPR

For California only:

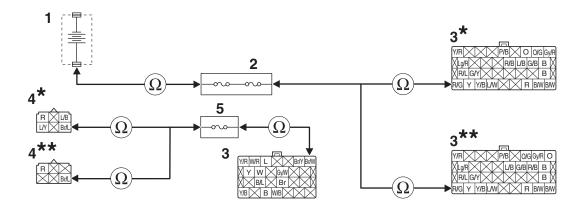

- *. MT09RC
- **. MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

 \rightarrow Go to step 7, and complete the service.

NC

- → Go to "Short circuit check".
- Short circuit check

TIP

Disconnect the ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"

Between battery "1" and ground	red-ground
	red/green-ground brown/white-ground
Between main switch coupler "4" and ground	brown/blue-ground

Lines short circuit check "B"


	red/green-any other coupler terminal brown/white-any other coupler terminal
Main switch coupler "4"	brown/blue-any other coupler terminal

Except for California:

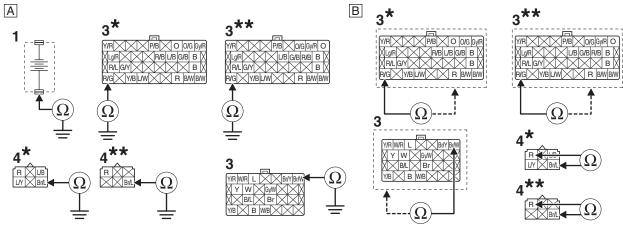

- *. MT09R
- **. MT09SPR

For California only:

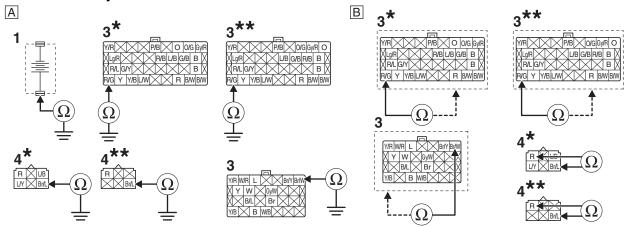

- *. MT09RC
- **. MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
- Replace the ECU, and complete the service.

 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

FAS20787

P1606, P1607

EAS33530

TROUBLESHOOTING

ltem

- [P1606] Intake air pressure sensor 2: ground short circuit detected.
- [P1607] Intake air pressure sensor 2: open or power short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of intake air pressure sensor 2 coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YF.S

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 3.
- 3. Wire harness continuity.
 - Disconnect the intake air pressure sensor 2 coupler "1" and ECU coupler "2".
 - Open circuit check

Between ECU coupler "2" and intake air pressure sensor 2 coupler "1"	[P1607] black/blue-black/blue [P1607] blue-blue [P1606, P1607] pink-pink
--	--

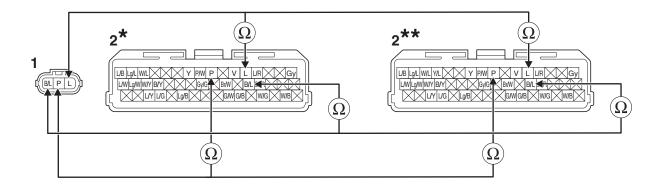

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NΩ

- → Go to "Short circuit check".
- Short circuit check

TIP

Disconnect the ECU related connectors before checking.


Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

Ground short circuit check "A"

Between intake air pressure sensor 2 coupler "1" and ground	[P1607] blue-ground [P1606, P1607] pink-ground
1 dila giodila	Li 1000, i 1007] pii iit ground

Lines short circuit check "B"

ECU coupler "2"	[P1607] blue-any other coupler terminal [P1607] black/blue-any other coupler terminal [P1606, P1607] pink-any other coupler terminal
Intake air pressure sensor 2 coupler "1"	[P1607] blue-any other coupler terminal [P1607] black/blue-any other coupler terminal [P1606, P1607] pink-any other coupler terminal

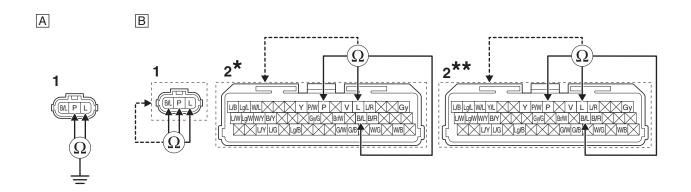

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of intake air pressure sensor 2.
 - Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the sensor.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective intake air pressure sensor 2.
 - Execute the diagnostic mode. (Code 04)
 - When engine is stopped: Atmospheric pressure at the current altitude and weather conditions is indicated.

At sea level	Approx. 101 kPa (757.6 mmHg, 29.8 inHg), approx. 3.64 V
1000 m (3300 ft) above sea level	Approx. 90 kPa (675.1 mmHg, 26.6 inHg), approx. 3.30 V
2000 m (6700 ft) above sea level	Approx. 80 kPa (600.0 mmHg, 23.6 inHg), approx. 3.00 V
3000 m (9800 ft) above sea level	Approx. 70 kPa (525.0 mmHg, 20.7 inHg), approx. 2.70 V

• When engine is cranking: Make sure that the indication value changes.

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the intake air pressure sensor 2.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "THROTTLE BODIES" on page 7-6.
- 7. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

FAS20623

P1806, P1807

EAS33103

TROUBLESHOOTING

ltem

- [P1806] Shift sensor: open or ground short circuit detected.
- [P1807] Shift sensor: power short circuit detected.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of shift sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

- \rightarrow Go to step 2.
- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NC

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

 \rightarrow Go to step 7, and complete the service.

NC

- \rightarrow Go to step 3.
- 3. Wire harness continuity
 - Disconnect the shift sensor coupler "1" and ECU coupler "2".
 - Open circuit check

Between shift sensor coupler "1" and ECU coupler "2"	blue-blue violet-violet black/blue-black/blue
--	---

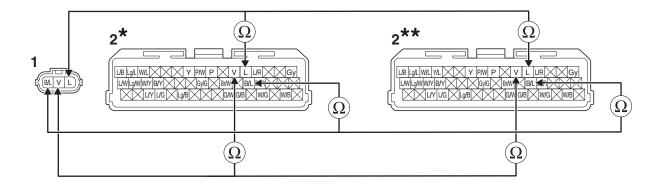

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NΩ

- → Go to "Short circuit check".
- Short circuit check

TIP_

Disconnect the ECU related connectors before checking.


Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between shift sensor coupler "1" and ground	violet-ground blue-ground
---	------------------------------

Lines short circuit check "B"

Shift sensor coupler "1"	black/blue-any other coupler terminal violet-any other coupler terminal blue-any other coupler terminal
ECU coupler "2"	black/blue-any other coupler terminal violet-any other coupler terminal blue-any other coupler terminal

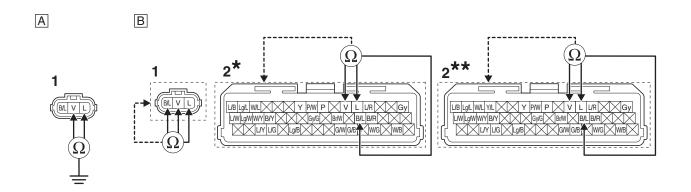

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Installed condition of shift sensor.
- Check for looseness or pinching.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or replace the sensor.
 - Refer to "CHAIN DRIVE" on page 4-102.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 7, and complete the service.

NC

 \rightarrow Go to step 5.

- 5. Defective shift sensor.
 - Execute the diagnostic mode. (Code D95)

Shift sensor output voltage display	0.2–4.8 [V]
With no shift weighting input	Approx. 2.5 [V]
Shift up weighting	Changes to the low side
Shift down weighting	Changes to the high side

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the shift sensor.
 Refer to "CHAIN DRIVE" on page 4-102.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ECU.
 - Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 7. Delete the DTC and check that the Auxiliary system warning goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS2063

P2122, P2123, P2127, P2128, P2138

EAS33112

TROUBLESHOOTING

ltem

- [P2122] Accelerator position sensor: open or ground short circuit detected.
- [P2123] Accelerator position sensor: power short circuit detected.
- [P2127] Accelerator position sensor: open or ground short circuit detected.
- [P2128] Accelerator position sensor: power short circuit detected.
- [P2138] Deviation error

Fail-safe system

- Able/unable to start engine
- Able/unable to drive vehicle

Procedure

TIP

If a DTC other than P2138 (P2122, P2123, P2127, or P2128) is indicated, perform troubleshooting first.

- 1. Connection of accelerator position sensor coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NΟ

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?


YES

 \rightarrow Go to step 6, and complete the service.

NO

- \rightarrow Go to step 3.
- 3. Wire harness continuity.
 - Disconnect the accelerator position sensor coupler "1" and ECU coupler "2".
 - Open circuit check

Between accelerator position sensor coupler "1" and ECU coupler "2" [P2122, P2127] white/red—white/red [P2122, P2123, P2127, P2128, P2138] yellow—yellow [P2123, P2128] white/black—white/black [P2123, P2128] yellow/black—yellow/black [P2123, P2128] yellow/black—yellow/black [P2122, P2123, P2127, P2128, P2138] brown—brown

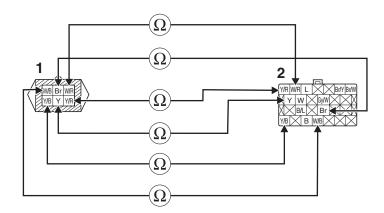

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NC

- → Go to "Short circuit check".
- Short circuit check

TIP_

Disconnect the ECU related connectors before checking.


Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.


Ground short circuit check "A"		
Between accelerator position sensor coupler "1" and ground	[P2122, P2123, P2127, P2128, P2138] brown- ground [P2122, P2127] white/red-ground [P2122, P2127] yellow/red-ground [P2122, P2123, P2127, P2128, P2138] yellow- ground	


Lines short circuit check "B"

lines snort circuit check "B"	
Accelerator position sensor coupler "1"	[P2122, P2123, P2127, P2128, P2138] brown—any other coupler terminal [P2122, P2127] white/red—any other coupler terminal [P2122, P2127] yellow/red—any other coupler terminal [P2122, P2123, P2127, P2128, P2138] yellow—any other coupler terminal [P2123, P2128] yellow/black—any other coupler terminal [P2123, P2128] white/black—any other coupler terminal
ECU coupler "2"	[P2122, P2123, P2127, P2128, P2138] brown—any other coupler terminal [P2122, P2127] white/red—any other coupler terminal [P2122, P2127] yellow/red—any other coupler terminal [P2122, P2123, P2127, P2128, P2138] yellow—any other coupler terminal [P2123, P2128] yellow/black—any other coupler terminal [P2123, P2128] white/black—any other coupler terminal

В

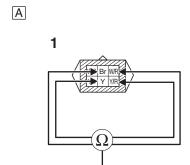

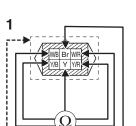

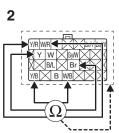

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Defective accelerator position sensor.
 - Execute the diagnostic mode. (Code 14) (Accelerator position sensor signal 1.)

When the throttle valves are fully closed	14–18
When the throttle valves are fully open	82–92
Turn the throttle grip past the closed position in the deceleration direction.	7–12

• Execute the diagnostic mode. (Code 15) (Accelerator position sensor signal 2.)

When the throttle valves are fully closed	14–18
When the throttle valves are fully open	82–92
Turn the throttle grip past the closed position in the deceleration direction.	7–12

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

 \rightarrow Replace the handlebar switch (right). Refer to "HANDLEBAR" on page 4-70.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Malfunction in ECU.
- Replace the ECU, and complete the service.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- 6. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20812

P2135

EAS33652

TROUBLESHOOTING

ltem

• Throttle position sensor: output voltage deviation error.

Fail-safe system

- Able to start engine (depending on the situation)
- Able to drive vehicle (depending on the situation)

Procedure

TIP

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- P0122, P0123, P0222, P0223, P0638
- 1. Check the starting and racing the engine possibility.
- Turn the main switch to "ON", and then start the engine and racing the engine.

Unable to starting the engine and racing the engine.

YES

 \rightarrow Go to step 2.

NO

- a. Replace the throttle position sensor.
- Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.
- b. Turn the main switch to "ON", and then check the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of throttle position sensor coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 8, and complete the service.

NC

- \rightarrow Go to step 3.
- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Installed condition of throttle position sensor.
 - Check for looseness or pinching.

Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.

Is check result OK?

YES

 \rightarrow Go to step 5.

NO

- a. Reinstall or adjust the sensor.
- b. Turn the main switch to "ON", and then check the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Defective throttle position sensor.
 - Check throttle position sensor signal 1.
 - Execute the diagnostic mode. (Code 01)

When the throttle valves are fully closed	11–21
When throttle valves are fully open	96–107

Is check result OK?

YES

 \rightarrow Go to step 6.

NO

- a. Replace the throttle position sensor.
 - Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.
- b. Turn the main switch to "ON", and then check the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Defective throttle position sensor.
- Check throttle position sensor signal 2.
- Execute the diagnostic mode. (Code 13)

When the throttle valves are fully closed	9–23
When throttle valves are fully open	93–109

Is check result OK?

YES

 \rightarrow Go to step 7.

NO

a. Replace the throttle position sensor.

Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-12.

b. Turn the main switch to "ON", and then check the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 8, and complete the service.

NO

 \rightarrow Go to step 7.

- 7. Malfunction in ECU.
 - Replace the ECU, and complete the service.
 Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 8. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

EAS20633

P2158

EAS33113

TROUBLESHOOTING

Item

Front wheel sensor: no normal signals are received from the front wheel sensor.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Locate the malfunction.
- Check the ABS warning light.

Is the ABS warning light on?

YES

→ Refer to "BASIC INSTRUCTIONS FOR TROUBLESHOOTING" on page 9-36.

NO

- \rightarrow Go to step 2.
- 2. Execute the diagnostic mode.
 - Execute the diagnostic mode. (Code 16)
 - Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 10, and complete the service.

NO

- \rightarrow Go to step 3.
- 3. Connection of front wheel sensor coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 16)
- c. Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

→ Go to step 10, and complete the service.

NO

- \rightarrow Go to step 4.
- 4. Connection of ABS ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 5.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 16)
- c. Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

→ Go to step 10, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 6.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Execute the diagnostic mode. (Code 16)
- c. Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES


→ Go to step 10, and complete the service.

NC

 \rightarrow Go to step 6.

- 6. Wire harness continuity.
 - Disconnect the front wheel sensor coupler "1", ABS ECU coupler "2" and ECU coupler "3".
- Open circuit check

Between front wheel sensor coupler "1" and ABS ECU coupler "2"	brown-brown yellow-yellow
Between ABS ECU coupler "2" and ECU coupler "3"	white/green-white/green white/black-white/black

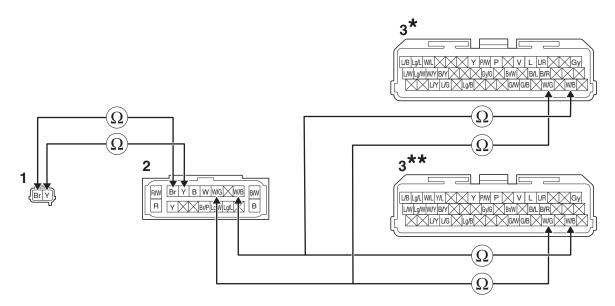

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 16)
- c. Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 10, and complete the service.

NO

- \rightarrow Go to "Short circuit check".
- Short circuit check

TIP


Disconnect the ECU and ABS ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4 and "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"

Between ABS ECU coupler "2" and ground	brown-ground yellow-ground white/green-ground white/black-ground
--	--

Lines short circuit check "B"	
Front wheel sensor coupler "1"	brown-any other coupler terminal yellow-any other coupler terminal
ABS ECU coupler "2"	brown-any other coupler terminal yellow-any other coupler terminal white/green-any other coupler terminal white/black-any other coupler terminal
ECU coupler "3"	white/green-any other coupler terminal white/black-any other coupler terminal

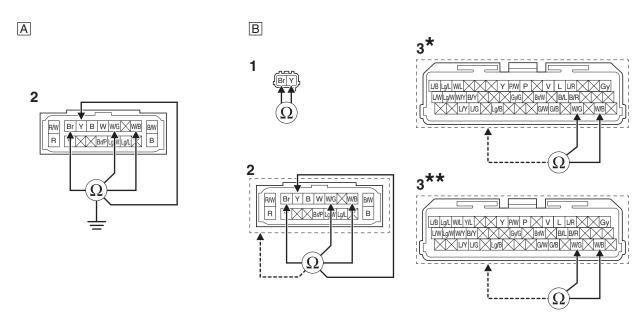

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 7.

NO

- a. Replace the wire harness.
- b. Execute the diagnostic mode. (Code 16)
- c. Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 10, and complete the service.

NO

 \rightarrow Go to step 7.

- 7. Defective front wheel sensor.
 - Check the front wheel sensor.
 Refer to "FRONT WHEEL" on page 4-16.

Is check result OK?

YES

 \rightarrow Go to step 8.

NO

- a. Reinstall or replace the front wheel sensor.
 Refer to "FRONT WHEEL" on page 4-16.
- b. Execute the diagnostic mode. (Code 16)
- c. Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

→ Go to step 10, and complete the service.

NO

 \rightarrow Go to step 8.

- 8. Malfunction in ECU.
 - Replace the ECU.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- Execute the diagnostic mode. (Code 16)
- Rotate the front wheel by hand and check that the indicated value increases.

Is that value increased?

YES

 \rightarrow Go to step 10, and complete the service.

NO

 \rightarrow Go to step 9.

- 9. Malfunction in ABS ECU.
 - Replace the ABS ECU.

Refer to "REMOVING THE HYDRAULIC UNIT ASSEMBLY" on page 4-64.

- Go to step 10, and complete the service.
- 10.Delete the DTC and check that the MIL goes off.
- Turn the main switch to "ON", and then rotate the front wheel by hand.
- Start the engine, and input the vehicle speed signals by operating the vehicle at 20 to 30 km/h (12 to 19 mph).
- Confirm that the DTC has a condition of "Recovered" using the malfunction mode of the YDT, and then delete the DTC.
- Delete this DTC even if it has a condition of "Detected".

EAS20644

U0100

EAS33124

TROUBLESHOOTING

Item

Abnormal CAN communication: Signals cannot be transmitted between the ECU and the BCM.

Fail-safe system

- · Able to start engine
- Able to drive vehicle

Procedure

TIP_

This code detects past recovered malfunction. If there is a current malfunction, the YDT cannot recognize the BCM.

- 1. Locate the malfunction.
- Check the recovered malfunction using the YDT.

U0100/U0121/U0155

 \rightarrow Go to step 2.

U0100/U0121

- \rightarrow Go to step 6.
- 2. Connection of BCM coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→ Go to step 10, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the BCM coupler "1".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between BCM coupler "1" and joint coupler "2"	blue/white-blue/white
Between BCM coupler "1" and joint coupler "3"	blue/black-blue/Black

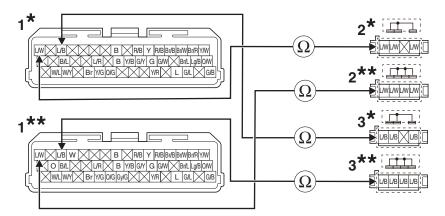

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 10, and complete the service.

NC

 \rightarrow Go to "Short circuit check".

• Short circuit check

TIP


Disconnect the BCM related connectors before checking. Refer to "PARTS CONNECTED TO THE BCM" on page 9-5.

Ground short circuit check "A"

Between BCM coupler "1" and ground	Blue/white-ground Blue/black-ground
------------------------------------	--

Ground short circuit check "B"

BCM coupler "1" blue/black—any other coupler terminal	BCM coupler "1"	blue/white—any other coupler terminal blue/black—any other coupler terminal
---	-----------------	---

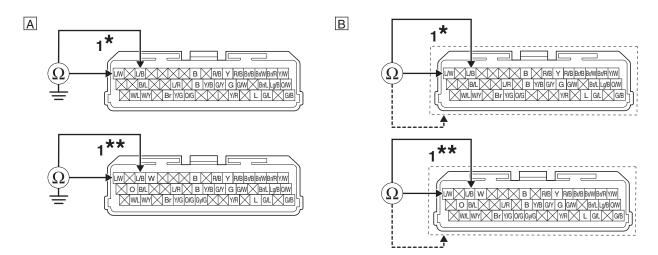

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 10, and complete the service.

NO

 \rightarrow Go to step 5.

- 4. Check the condition of the DTC.
 - a. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 10, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Malfunction in BCM.
 - Replace the BCM.

Refer to "GENERAL CHASSIS (2)" on page 4-14.

- Go to step 10, and complete the service.
- 6. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 7.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


 \rightarrow Go to step 10, and complete the service.

NO

 \rightarrow Go to step 7.

- 7. Wire harness continuity.
 - Disconnect the ECU coupler "1".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between ECU coupler "1" and joint coupler "2"	blue/white-blue/white
Between ECU coupler "1" and joint coupler "3"	blue/black-blue/black

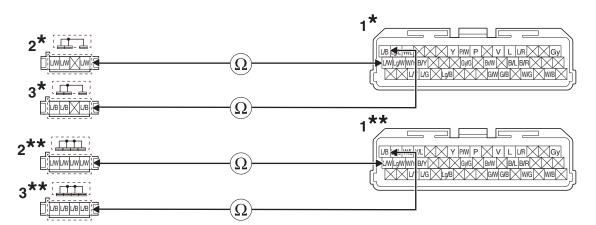

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 10, and complete the service.

NC

- → Go to "Short circuit check".
- Short circuit check

TIP_


Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"

Between ECU coupler "1" and ground	blue/white-ground blue/black-ground
------------------------------------	--

Ground short circuit check "B"

ECU coupler "1"	blue/white-any other coupler terminal
ECO coupler 1	blue/black-any other coupler terminal

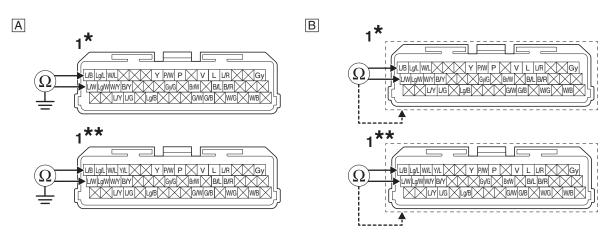

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 8.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 10, and complete the service.

NO

 \rightarrow Go to step 9.

- 8. Check the condition of the DTC.
 - a. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 10, and complete the service.

NO

 \rightarrow Go to step 9.

- 9. Malfunction in ECU.
 - Replace the ECU.

Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.

- Go to step 10, and complete the service.
- 10.Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

U0121

EAS33126

TROUBLESHOOTING

Item

Abnormal CAN communication: Signals cannot be transmitted between the BCM and the ABS ECU.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

- 1. Connection of ABS ECU coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

```
YES
```

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of BCM coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 4.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Wire harness continuity.
 - Disconnect the ABS ECU coupler "1" and ECU coupler "4".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between ECU coupler "4" and joint coupler "2"	light green/blue-light green/blue
Between ECU coupler "4" and joint coupler "3"	light green/white-light green/white
Between ABS ECU coupler "1" and joint coupler "2"	light green/blue-light green/blue
Between ABS ECU coupler "1" and joint coupler "3"	light green/white-light green/white

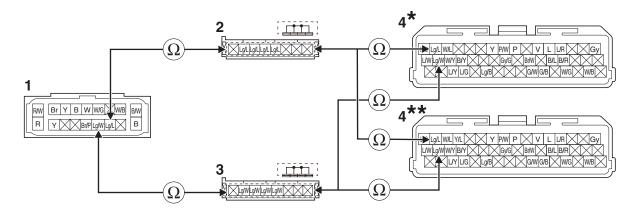

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to "Short circuit check".

Short circuit check

TIP

Disconnect the ECU and ABS ECU related connectors before checking.


Refer to "PARTS CONNECTED TO THE ECU" on page 9-4 and "PARTS CONNECTED TO THE ABS ECU" on page 9-4.


Ground short circuit check "A"

light green/white-ground light green/blue-ground
light green/white-ground light green/blue-ground

Lines short circuit check "B"

light green/white-any other coupler terminal light green/blue-any other coupler terminal
light green/white-any other coupler terminal light green/blue-any other coupler terminal

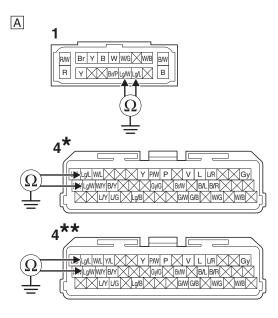

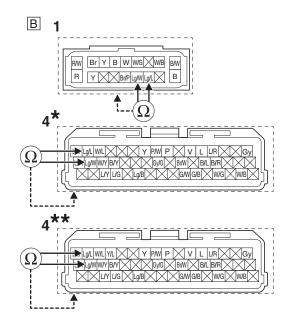

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty\,\Omega$?

YES

 \rightarrow Go to step 5.

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Malfunction in BCM.
- Replace the BCM.

Refer to "GENERAL CHASSIS (2)" on page 4-14.

• Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 7, and complete the service.

NO

 \rightarrow Go to step 6.

- 6. Malfunction in ABS ECU.
- Replace the ABS ECU, and complete the service. Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.
- 7. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

U0125

EAS33127

TROUBLESHOOTING

Item

Abnormal CAN communication: Signals cannot be transmitted between the ECU and the IMU.

Fail-safe system

- Unable to start engine
- Able/Unable to drive vehicle

Procedure

TIP

If more than one DTC is detected at the same time, perform troubleshooting of DTC listed below first.

- P1600
- 1. Connection of IMU coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 6, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→ Go to step 6, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
- Disconnect the ECU coupler "1", IMU coupler "4" and ignition fuse 1 "5".
- Remove the joint coupler cap "2" and joint coupler cap "3".
- Open circuit check

Between ECU coupler "1" and joint coupler "2"	light green/white-light green/white
Between ECU coupler "1" and joint coupler "3"	light green/blue-light green/blue
Between joint coupler "2" and IMU coupler "4"	light green/white-light green/white
Between joint coupler "3" and IMU coupler "4"	light green/blue-light green/blue
Between ignition fuse 1 holder "5" and IMU coupler "4"	red/white-brown/blue
Between IMU coupler "4" and ground	black/white- ground

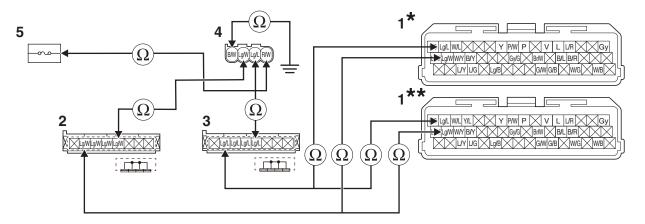

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NC

- \rightarrow Go to "Short circuit check".
- Short circuit check

TIF


Disconnect the ECU and IMU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

	Ground short circuit ch	eck "A"
--	-------------------------	---------

Greatia eriett erieatt erieett 71	
Between ECU coupler "1" and ground	light green/white-ground light green/blue-ground
	light green/white-ground light green/blue-ground red/white-ground

Lines short circuit check "B"

light green/white-any other coupler terminal light green/blue-any other coupler terminal
light green/white—any other coupler terminal light green/blue—any other coupler terminal red/white—any other coupler terminal

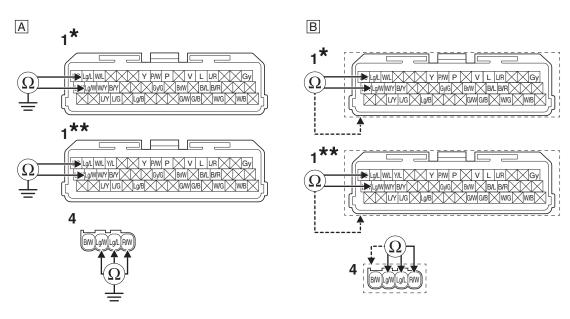

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 4.

- 4. Malfunction in IMU.
- Replace the IMU.

Refer to "GENERAL CHASSIS (1)" on page 4-1.

• Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

 \rightarrow Go to step 5.

- 5. Malfunction in ECU.
- Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
- Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

U0155 or Err (FI)

EAS33129

TROUBLESHOOTING

Item

Multi-function meter: Signals cannot be transmitted between the ECU and the multi-function meter.

Fail-safe system

- Able to start engine
- Able to drive vehicle

Procedure

TIP

"Err" is displayed on the clock display of the multi-function meter, but the MIL does not come on.

- 1. Connection of meter assembly coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NΩ

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 6, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of ECU coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

VES


→ Go to step 6, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the meter assembly coupler "1" and ECU coupler "4".
- Remove the joint coupler cap "2" and joint coupler cap "3".
- Open circuit check

Between meter assembly coupler "1" and joint coupler "2"	blue/white-blue/white
Between meter assembly coupler "1" and joint coupler "3"	blue/black-blue/black
Between joint coupler "2" and ECU coupler "4"	blue/white-blue/white
Between joint coupler "3" and ECU coupler "4"	blue/black-blue/black

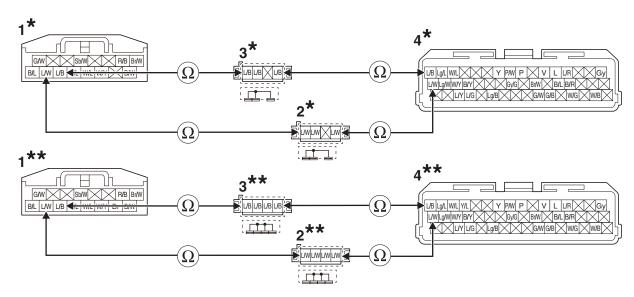

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

- → Go to "Short circuit check".
- Short circuit check


TIP_

Disconnect the ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ECU" on page 9-4.

Ground short circuit check "A"	
Between meter assembly coupler "1" and ground	blue/white-ground blue/black-ground
Between ECU coupler "4" and ground	blue/white-ground blue/black-ground

Lines short circuit check "B"

Meter assembly coupler "1"	blue/white-any other coupler terminal blue/black-any other coupler terminal
ECU coupler "4"	blue/white-any other coupler terminal blue/black-any other coupler terminal

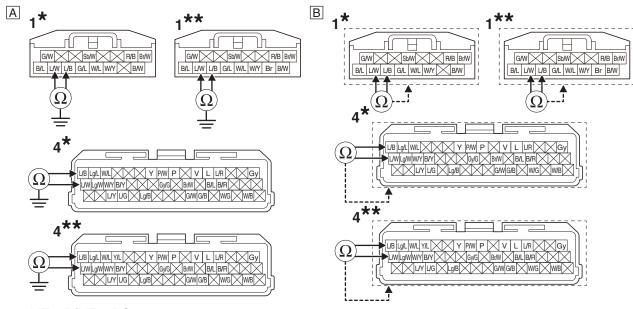

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NC

 \rightarrow Go to step 4.

- 4. Defective meter assembly.
- Replace the meter assembly.
 Refer to "GENERAL CHASSIS (1)" on page 4-1.
- Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

- \rightarrow Go to step 5.
- 5. Malfunction in ECU.
 - Replace the ECU, and complete the service. Refer to "REPLACING THE ECU (Engine Control Unit)" on page 8-74.
- 6. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

U0155 (BCM)

EAS34077

TROUBLESHOOTING

Item

Abnormal CAN communication: Signals cannot be transmitted between the BCM and the meter assembly.

Fail-safe system

- · Able/Unable to start engine
- Able to drive vehicle

Procedure

TIP

"Err" is displayed on the clock display of the multi-function meter and the spanner mark light up.

- Connection of meter assembly coupler.
- Check the locking condition of the coupler.
- Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 2.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

→ Go to step 6, and complete the service.

NO

 \rightarrow Go to step 2.

- 2. Connection of BCM coupler.
 - Check the locking condition of the coupler.
 - Disconnect the coupler and check the pins (bent or broken terminals and locking condition of the pins).

Is the coupler condition normal?

YES

 \rightarrow Go to step 3.

NO

- a. Connect the coupler securely or replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES


→ Go to step 6, and complete the service.

NO

 \rightarrow Go to step 3.

- 3. Wire harness continuity.
 - Disconnect the meter assembly coupler "1" and BCM coupler "4".
- Remove the joint coupler cap "2" and joint coupler cap "3".
- Open circuit check

Between meter assembly coupler "1" and joint coupler "2"	blue/white-blue/white
Between meter assembly coupler "1" and joint coupler "3"	blue/black-blue/black
Between joint coupler "2" and BCM coupler "4"	blue/white-blue/white
Between joint coupler "3" and BCM coupler "4"	blue/black-blue/black

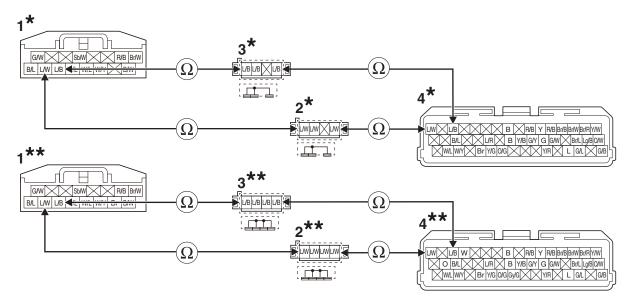

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NO

- → Go to "Short circuit check".
- Short circuit check


TIP_

Disconnect the BCM related connectors before checking. Refer to "PARTS CONNECTED TO THE BCM" on page 9-5.

Ground short circuit check "A"	
Between meter assembly coupler "1" and ground	blue/white-ground blue/black-ground
Between BCM coupler "4" and ground	blue/white-ground blue/black-ground

Lines short circuit check "B"

Meter assembly coupler "1"	blue/white-any other coupler terminal blue/black-any other coupler terminal
BCM coupler "4"	blue/white-any other coupler terminal blue/black-any other coupler terminal

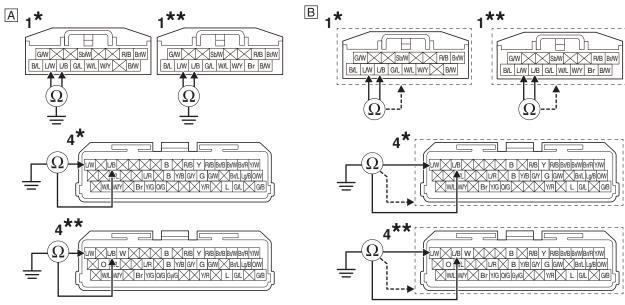

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- a. Replace the wire harness.
- b. Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

NC

 \rightarrow Go to step 4.

- 4. Malfunction in BCM.
 - Replace the BCM.

Refer to "GENERAL CHASSIS (2)" on page 4-14.

• Turn the main switch to "ON", and then check the condition of the DTC using the malfunction mode of the YDT.

Is it in the "Recovered" condition?

YES

 \rightarrow Go to step 6, and complete the service.

- \rightarrow Go to step 5.
- 5. Defective meter assembly.
- Replace the meter assembly, and complete the service. Refer to "GENERAL CHASSIS (1)" on page 4-1.
- 6. Delete the DTC and check that the MIL goes off.
 - Confirm that the DTC has a condition of "Recovered" using the YDT, and then delete the DTC.

11 ABS

EAS33314

TROUBLESHOOTING

Item

Front wheel sensor (intermittent pulses or no pulses)

Procedure

TIP

If the rear wheel continues to turn for more than 20 seconds after the front wheel has stopped, this will be recorded.

- 1. Foreign material adhered around the front wheel sensor
 - Check the surface of the sensor rotor and wheel sensor for foreign material, such as metal particles.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- \rightarrow Clean the sensor rotor and wheel sensor.
- 2. Incorrect installation of the front wheel
 - Check the components for looseness, distortion, and bends.
 Refer to "CHECKING THE FRONT WHEEL" on page 4-18.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace the wheel axle, tire, front wheel, wheel bearings or oil seals.
- 3. Defective sensor rotor or incorrect installation of the rotor
- Check the surface of the sensor rotor for damage.

Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the sensor rotor.
- 4. Defective front wheel sensor or incorrect installation of the sensor
 - Check the wheel sensor for damage and the installed condition of the sensor.
 Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

→ Replace the hydraulic unit assembly (ABS ECU).

NO

 \rightarrow Repair or replace the wheel sensor.

12 ABS

EAS33315

TROUBLESHOOTING

Item

Rear wheel sensor (intermittent pulses or no pulses)

Procedure

- 1. Foreign material adhered around the rear wheel sensor
- Check the surface of the sensor rotor and wheel sensor for foreign material, such as metal particles.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Clean the sensor rotor and wheel sensor.
- 2. Incorrect installation of the rear wheel
 - Check the components for looseness, distortion, and bends.

Refer to "CHECKING THE REAR WHEEL" on page 4-26.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace the wheel axle, tire, rear wheel, wheel bearings or oil seals.
- 3. Defective sensor rotor or incorrect installation of the rotor
 - Check the surface of the sensor rotor for damage.

Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the sensor rotor.
- 4. Defective rear wheel sensor or incorrect installation of the sensor
- Check the wheel sensor for damage and the installed condition of the sensor.
 Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-

Is check result OK?

YES

28.

→ Replace the hydraulic unit assembly (ABS ECU).

NO

 \rightarrow Repair or replace the wheel sensor.

13, 26 ABS

EAS33316

TROUBLESHOOTING

Item

Front wheel sensor (abnormal pulse period)

Procedure

TIF

- If the front brake ABS operates continuously for 20 seconds or more, DTC No. 26 will be recorded. If the front brake ABS operates continuously for 36 seconds or more, DTC No. 13 will be recorded.
- Vehicle possibly ridden on uneven roads.
- 1. Foreign material adhered around the front wheel sensor
- Check the surface of the sensor rotor and wheel sensor for foreign material, such as metal particles.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Clean the sensor rotor and wheel sensor.
- 2. Incorrect installation of the front wheel
 - Check the components for looseness, distortion, and bends.

Refer to "CHECKING THE FRONT WHEEL" on page 4-18.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace the wheel axle, tire, rear wheel, wheel bearings or oil seals.
- Defective sensor rotor or incorrect installation of the rotor
 - Check the surface of the sensor rotor for damage.

Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the sensor rotor.
- 4. Defective front wheel sensor or incorrect installation of the sensor
 - Check the wheel sensor for damage and the installed condition of the sensor.
 Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

→ Replace the hydraulic unit assembly (ABS ECU).

NO

→ Repair or replace the wheel sensor.

14, 27 ABS

EAS33317

TROUBLESHOOTING

Item

Rear wheel sensor (abnormal pulse period)

Procedure

TIF

- If the rear brake ABS operates continuously for 20 seconds or more, DTC No. 27 will be recorded. If the rear brake ABS operates continuously for 36 seconds or more, DTC No. 14 will be recorded.
- Vehicle possibly ridden on uneven roads.
- 1. Foreign material adhered around the rear wheel sensor
- Check the surface of the sensor rotor and wheel sensor for foreign material, such as metal particles.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Clean the sensor rotor and wheel sensor.
- 2. Incorrect installation of the rear wheel
 - Check the components for looseness, distortion, and bends.

Refer to "CHECKING THE REAR WHEEL" on page 4-26.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace the wheel axle, tire, rear wheel, wheel bearings or oil seals.
- Defective sensor rotor or incorrect installation of the rotor
 - Check the surface of the sensor rotor for damage.

Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the sensor rotor.
- Defective rear wheel sensor or incorrect installation of the sensor
 - Check the wheel sensor for damage and the installed condition of the sensor.
 Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28.

Is check result OK?

YES

→ Replace the hydraulic unit assembly (ABS ECU).

NO

→ Repair or replace the wheel sensor.

15_ABS

EAS33040

TROUBLESHOOTING

Item

Front wheel sensor (open or short circuit)

Procedure

- 1. Defective coupler between the front wheel sensor and the hydraulic unit assembly
- Check the coupler for any pins that may be pulled out.
- Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?


YES

 \rightarrow Go to step 2.

NO

- \rightarrow If there is a malfunction, repair it and connect the coupler securely.
- 2. Wire harness continuity
 - Disconnect the ABS ECU coupler "1" and front wheel sensor coupler "2".
 - Open circuit check

Between ABS ECU coupler "1" and front wheel	brown-brown
sensor coupler "2"	yellow-yellow

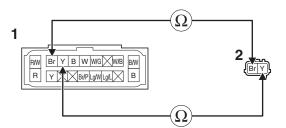

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".


NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP_

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"		
Between ABS ECU coupler "1" and ground	yellow-ground brown-ground	
Lines short circuit check "B"		
ABS ECU coupler "1"	yellow-any other coupler terminal brown-any other coupler terminal	

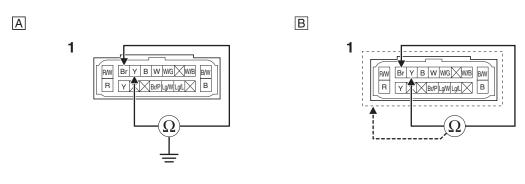

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 3.

- \rightarrow Replace the wire harness.
- 3. Defective front wheel sensor or hydraulic unit assembly
- If the above items were performed and no malfunctions were found, the wheel sensor or hydraulic unit assembly is defective.
- Replace the wheel sensor or hydraulic unit assembly.

 Refer to "FRONT WHEEL" on page 4-16 and "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

16_ABS

EAS33285

TROUBLESHOOTING

Item

Rear wheel sensor (open or short circuit)

Procedure

- 1. Defective coupler between the rear wheel sensor and the hydraulic unit assembly
- Check the coupler for any pins that may be pulled out.
- Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?


YES

 \rightarrow Go to step 2.

NO

- \rightarrow If there is a malfunction, repair it and connect the coupler securely.
- 2. Wire harness continuity
 - Disconnect the ABS ECU coupler "1" and rear wheel sensor coupler "2".
 - Open circuit check

Between ABS ECU coupler "1" and rear wheel	white-white
sensor coupler "2"	black-black

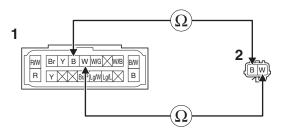

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".


NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP_

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"		
Between ABS ECU coupler "1" and ground	white-ground black-ground	
Lines short circuit check "B"		
ABS ECU coupler "1"	white-any other coupler terminal black-any other coupler terminal	

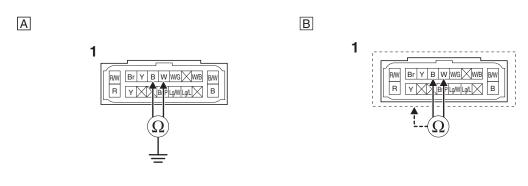

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 3.

- \rightarrow Replace the wire harness.
- 3. Defective rear wheel sensor or hydraulic unit assembly
- If the above items were performed and no malfunctions were found, the wheel sensor or hydraulic unit assembly is defective.
- Replace the wheel sensor or hydraulic unit assembly. Refer to "REAR WHEEL" on page 4-23 and "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

EAS20690 **21_ABS**

TROUBLESHOOTING

Item

Hydraulic unit assembly (defective solenoid drive circuit)

Procedure

- 1. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.
 Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

31 ABS

EAS33321

TROUBLESHOOTING

Hydraulic unit assembly (defective ABS solenoid power circuit)

Procedure

- 1. Blown ABS solenoid fuse
- Check the ABS solenoid fuse.

Refer to "CHECKING THE FUSES" on page 8-73.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Replace the fuse and check the wire harness.
- 2. Defective coupler between the battery and the hydraulic unit assembly
 - Check the coupler for any pins that may be pulled out.
 - Check the locking condition of the coupler.

TIP_

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?


YES

 \rightarrow Go to step 3.

NO

- → If there is a malfunction, repair it and connect the coupler securely.
- 3. Wire harness continuity
 - Disconnect the ABS solenoid fuse "1" and ABS ECU coupler "2".
- Open circuit check

Between ABS solenoid fuse holder "1" and ABS ECU coupler "2"	red/white-blue/white
--	----------------------

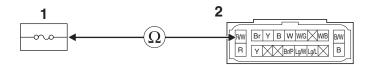

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

- \rightarrow Replace the wire harness.
- Short circuit check

TIP_

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"


Between ABS ECU coupler "2" and ground red/white-ground


Lines short circuit check "B"

ABS ECU coupler "2"	red/white-any other coupler terminal
•	•

В

Α

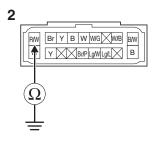

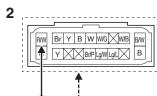

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

 \rightarrow Replace the wire harness.

- 4. Defective hydraulic unit assembly
 - Replace the hydraulic unit assembly. Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

33_ABS

EAS33322

TROUBLESHOOTING

Item

Hydraulic unit assembly (abnormal ABS motor power supply)

Procedure

- 1. Blown ABS motor fuse
- Check the ABS motor fuse.

Refer to "CHECKING THE FUSES" on page 8-73.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- \rightarrow Replace the fuse and check the wire harness.
- 2. Defective coupler between the battery and the hydraulic unit assembly
 - Check the coupler for any pins that may be pulled out.
 - Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → If there is a malfunction, repair it and connect the coupler securely.
- 3. Wire harness continuity
 - Disconnect the ABS motor fuse "1" and ABS ECU coupler "2".
 - Open circuit check

Between ABS motor fuse "1" and ABS ECU coupler "2"	red-red/white
--	---------------



Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".

NO

→ Replace the wire harness.

Short circuit check

TIP

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"


Between ABS ECU coupler "2" and ground red-ground

Lines short circuit check "B"


ABS ECU coupler "2"	red-any other coupler terminal
·	'

В

Α

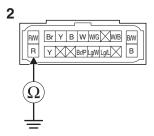



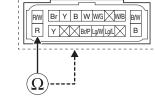

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

- \rightarrow Replace the wire harness.
- 4. Defective hydraulic unit assembly
 - Replace the hydraulic unit assembly. Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

EAS20693 **34_ABS**

TROUBLESHOOTING

Item

Hydraulic unit assembly (short circuit in ABS motor power supply circuit)

Procedure

- 1. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.
 Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

41 ABS

EAS33331

TROUBLESHOOTING

Item

Front wheel ABS (intermittent wheel speed pulses or incorrect depressurization)

Procedure

- 1. Incorrect installation of the front wheel sensor
- Check the components for looseness, distortion, and bends.
 Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Repair or replace the defective part.
- 2. Incorrect rotation of the front wheel
- Check that there is no brake disc drag on the wheel and make sure that it rotates smoothly. Refer to "CHECKING THE FRONT WHEEL" on page 4-18 and "CHECKING THE FRONT BRAKE DISCS" on page 4-40.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Repair or replace the defective part.
- 3. Front brake dragging
 - Check that the brake fluid pressure is correctly transmitted to the brake caliper when the brake lever is operated and that the pressure decreases when the lever is released.
 Refer to "CHECKING THE FRONT BRAKE DISCS" on page 4-40.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Repair or replace the defective part.
- 4. Defective hydraulic unit assembly
 - Replace the hydraulic unit assembly.

Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

42 ABS

EAS33324

TROUBLESHOOTING

Item

Rear wheel ABS (intermittent wheel speed pulses or incorrect depressurization)

Procedure

- 1. Incorrect installation of the rear wheel sensor
- Check the components for looseness, distortion, and bends.
 Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28.

Is check result OK?

YES

 \rightarrow Go to step 2.

NC

- → Repair or replace the defective part.
- 2. Incorrect rotation of the rear wheel
 - Check that there is no brake disc drag on the wheel and make sure that it rotates smoothly. Refer to "CHECKING THE REAR WHEEL" on page 4-26 and "CHECKING THE REAR BRAKE DISC" on page 4-56.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Repair or replace the defective part.
- 3. Rear brake dragging
- Check that the brake fluid pressure is correctly transmitted to the brake caliper when the brake pedal is operated and that the pressure decreases when the pedal is released.

 Refer to "CHECKING THE REAR BRAKE DISC" on page 4-56.

Is check result OK?

YES

 \rightarrow Go to step 4.

- \rightarrow Repair or replace the defective part.
- 4. Defective hydraulic unit assembly
 - Replace the hydraulic unit assembly. Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

43, 45 ABS

EAS33330

TROUBLESHOOTING

Item

Front wheel sensor (missing pulses)

Procedure

TIF

After the DTC 45 is recorded, DTC 43 will be recorded if a certain speed and time are exceeded.

- 1. Foreign material adhered around the front wheel sensor
- Check the surface of the sensor rotor and wheel sensor for foreign material, such as metal particles.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Clean the sensor rotor and wheel sensor.
- 2. Incorrect installation of the front wheel
 - Check the components for looseness, distortion, and bends.
 Refer to "CHECKING THE FRONT WHEEL" on page 4-18.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace the wheel axle, tire, front wheel, wheel bearings or oil seals.
- 3. Defective sensor rotor or incorrect installation of the rotor
 - Check the surface of the sensor rotor for damage.

Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the sensor rotor.
- Defective front wheel sensor or incorrect installation of the sensor
- Check the wheel sensor for damage and the installed condition of the sensor.
 Refer to "MAINTENANCE OF THE FRONT WHEEL SENSOR AND SENSOR ROTOR" on page 4-20.

Is check result OK?

YES

→ Replace the hydraulic unit assembly (ABS ECU).

NO

 \rightarrow Repair or replace the wheel sensor.

44, 46 ABS

EAS33325

TROUBLESHOOTING

Item

Rear wheel sensor (missing pulses)

Procedure

TIF

After the DTC 46 is recorded, DTC 44 will be recorded if a certain speed and time are exceeded.

- 1. Foreign material adhered around the rear wheel sensor
- Check the surface of the sensor rotor and wheel sensor for foreign material, such as metal particles.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- → Clean the sensor rotor and wheel sensor.
- 2. Incorrect installation of the rear wheel
 - Check the components for looseness, distortion, and bends. Refer to "CHECKING THE REAR WHEEL" on page 4-26.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace the wheel axle, tire, rear wheel, wheel bearings or oil seals.
- 3. Defective sensor rotor or incorrect installation of the rotor
 - Check the surface of the sensor rotor for damage.

Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28.

Is check result OK?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the sensor rotor.
- Defective rear wheel sensor or incorrect installation of the sensor
- Check the wheel sensor for damage and the installed condition of the sensor.
 Refer to "MAINTENANCE OF THE REAR WHEEL SENSOR AND SENSOR ROTOR" on page 4-28.

Is check result OK?

YES

→ Replace the hydraulic unit assembly (ABS ECU).

NO

 \rightarrow Repair or replace the wheel sensor.

51 ABS

EAS33326

TROUBLESHOOTING

Item

Vehicle system power supply (voltage of ABS ECU power supply is high)

Procedure

- 1. Defective battery
- Recharge or replace the battery, and check again. Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-75.
- 2. Disconnected battery terminal
 - Check the connection.

Is check result OK?

YES

 \rightarrow Go to step 3.

NO

- → Replace or reconnect the terminal.
- 3. Defective charging system
- Check the charging system.

Refer to "CHARGING SYSTEM" on page 8-17.

Is check result OK?

YES

→ Replace the hydraulic unit assembly (ABS ECU).

NO

→ Confirm the cause of the problem and repair it, and check again.

53 ABS

EAS33327

TROUBLESHOOTING

Item

Vehicle system power supply (voltage of ABS ECU power supply is low)

Procedure

- 1. Defective battery
- Recharge or replace the battery, and check again.
 Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-75.
- 2. Defective coupler between the battery and the hydraulic unit assembly
 - Check the coupler for any pins that may be pulled out.
 - Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?


YES

 \rightarrow Go to step 3.

NO

- \rightarrow If there is a malfunction, repair it and connect the coupler securely.
- 3. Wire harness continuity
 - Disconnect the ABS control unit fuse "1" and ABS ECU coupler "2".
 - Open circuit check

Between ABS control unit fuse holder "1" and ABS ECU coupler "2" brown/pink-red/black

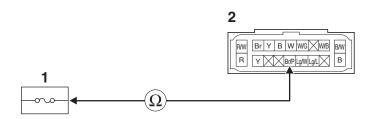

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check".


NO

- → Replace the wire harness.
- Short circuit check

TIP_

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"	
Between ABS ECU coupler "2" and ground	brown/pink-ground
Lines short circuit check "B"	
ABS ECU coupler "2"	brown/pink-any other coupler terminal

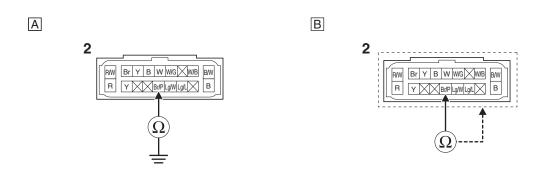

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 4.

NO

- \rightarrow Replace the wire harness.
- 4. Defective charging system
 - Check the charging system.
 Refer to "CHARGING SYSTEM" on page 8-17.

Is check result OK?

YES

 \rightarrow Replace the hydraulic unit assembly (ABS ECU).

NO

 \rightarrow Confirm the cause of the problem and repair it, and check again.

EAS20700 **55_ABS**

TROUBLESHOOTING

Item

Hydraulic unit assembly (defective ABS ECU)

Procedure

- 1. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.
 Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

EAS20701 **56_ABS**

TROUBLESHOOTING

Item

Hydraulic unit assembly (abnormal internal circuit)

Procedure

- 1. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.
 Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

57 ABS

EAS33292

TROUBLESHOOTING


Item

Vehicle CAN communication line or power source of vehicle system

Procedure

- 1. Wire harness continuity.
- Disconnect the ECU coupler "1" and ABS ECU coupler "4".
- Remove the joint coupler cap "2" and joint coupler cap "3".
- Open circuit check

Between ECU coupler "1" and joint coupler "2"	light green/white-light green/white
Between ECU coupler "1" and joint coupler "3"	light green/blue-light green/blue
Between joint coupler "2" and ABS ECU coupler "4"	light green/white-light green/white
Between joint coupler "3" and ABS ECU coupler "4"	light green/blue-light green/blue

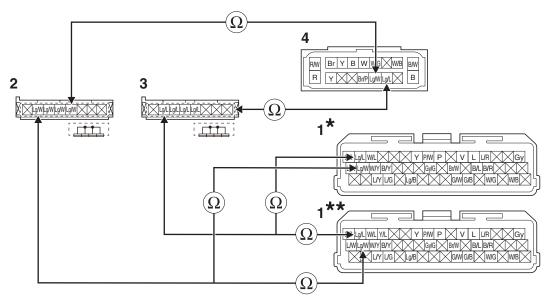

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check"

NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP_


Disconnect the ECU and ABS ECU related connectors before checking.

Refer to "PARTS CONNECTED TO THE ECU" on page 9-4 and "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"	
Between ECU coupler "1" and ground	light green/white-ground light green/blue-ground
Between ABS ECU coupler "4" and ground	light green/white-ground light green/blue-ground

Lines short circuit check "B"

	light green/white-any other coupler terminal light green/blue-any other coupler terminal
ABS ECU coupler "4"	light green/white-any other coupler terminal light green/blue-any other coupler terminal

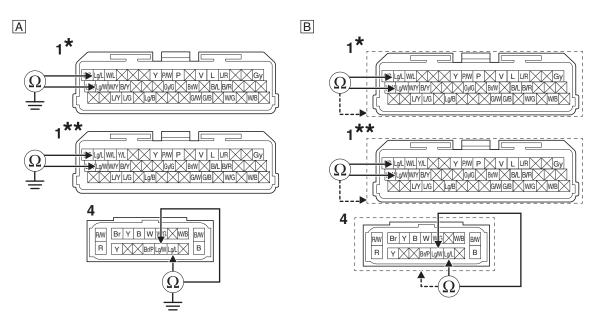

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 2.

NO

 \rightarrow Replace the wire harness.

- 2. Defective battery
 - Recharge or replace the battery, and check again.
 Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-75.
- 3. Defective coupler between the battery and the hydraulic unit assembly
 - Check the coupler for any pins that may be pulled out.
- Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?


YES

 \rightarrow Go to step 4.

NO

- \rightarrow If there is a malfunction, repair it and connect the coupler securely.
- 4. Wire harness continuity
- Disconnect the ABS control unit fuse "1", ABS solenoid fuse "2" and ABS ECU coupler "3".
- Open circuit check

Between ABS control unit fuse holder "1" and ABS ECU coupler "3"	brown/pink—brown/pink
Between ABS solenoid fuse holder "2" and ABS ECU coupler "3"	red/white-red/white

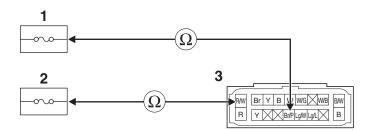

Is resistance 0 Ω ?

YES

→ Go to "Short circuit check"

NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP_

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.


Ground short circuit check "A"

Between ABS ECU coupler "3" and ground	brown/pink-ground red/white-ground
--	---------------------------------------

Lines short circuit check "B"

ABS ECU coupler "3"	brown/pink-any other coupler terminal red/white-any other coupler terminal
---------------------	--

RWW Br Y B W W/G W/B B/W Y B/P LG/W B

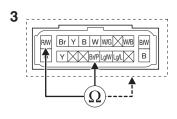

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 5.

NO

- \rightarrow Replace the wire harness.
- 5. Defective charging system
 - Check the charging system. Refer to "CHARGING SYSTEM" on page 8-17.

Is resistance $\infty \Omega$?

YES

 \rightarrow Replace the hydraulic unit assembly (ABS ECU).

NO

 \rightarrow Confirm the cause of the problem and repair it, and check again.

В

EAS20702 **62_ABS**

TROUBLESHOOTING

Item

Power supply voltage failure in pressure sensor

Procedure

- 1. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.
 Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

68 ABS

EAS33336

TROUBLESHOOTING

Item

Defective hydraulic unit assembly (defective front pressure sensor)

Procedure

- 1. Defective front brake line
- Check the front brake line.

Is check result OK?

YES

 \rightarrow Go to step 2.

NO

- \rightarrow If there is bending or blocking, replace the front brake line.
- 2. Defective hydraulic unit assembly
 - Replace the hydraulic unit assembly.

Refer to "ABS (ANTI-LOCK BRAKE SYSTEM)" on page 4-62.

89 ABS

EAS33299

TROUBLESHOOTING

Item

CAN communication (between meter assembly and hydraulic unit assembly)

Procedure

- 1. Defective coupler between the meter assembly and the hydraulic unit assembly
- Check the coupler for any pins that may be pulled out.
- Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?

YES


 \rightarrow Go to step 2.

NO

 \rightarrow If there is a malfunction, repair it and connect the coupler securely.

- 2. Wire harness continuity.
 - Disconnect the meter assembly coupler "1", ABS ECU coupler "2" and ECU coupler "7".
 - Remove the joint coupler cap "3", joint coupler cap "4", joint coupler cap "5" and joint coupler cap "6".
 - Open circuit check

Between meter assembly coupler "1" and joint coupler "3"	blue/black-blue/black
Between meter assembly coupler "1" and joint coupler "4"	blue/white-blue/white
Between joint coupler "3" and ECU coupler "7"	blue/black-blue/black
Between joint coupler "4" and ECU coupler "7"	blue/white-blue/white
Between ABS ECU coupler "2" and joint coupler "5"	light green/white-light green/white
Between ABS ECU coupler "2" and joint coupler "6"	light green/blue-light green/blue
Between joint coupler "5" and ECU coupler "7"	light green/white-light green/white
Between joint coupler "6" and ECU coupler "7"	light green/blue-light green/blue

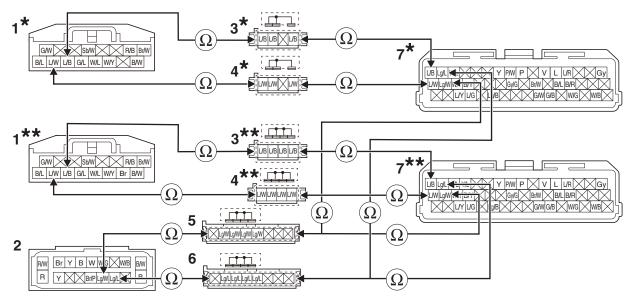

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP


Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.

Ground short circuit check "A"

Between meter assembly coupler "1" and ground	blue/black-ground blue/white-ground
Between ABS ECU coupler "2" and ground	light green/white-ground light green/blue-ground
Between ECU coupler "7" and ground	blue/black-ground blue/white-ground light green/white-ground light green/blue-ground

Lines short circuit check "B"

Meter assembly coupler "1"	blue/black-any other coupler terminal blue/white-any other coupler terminal
ABS ECU coupler "2"	light green/white-any other coupler terminal light green/blue-any other coupler terminal
ECU coupler "7"	blue/black-any other coupler terminal blue/white-any other coupler terminal light green/white-any other coupler terminal light green/blue-any other coupler terminal

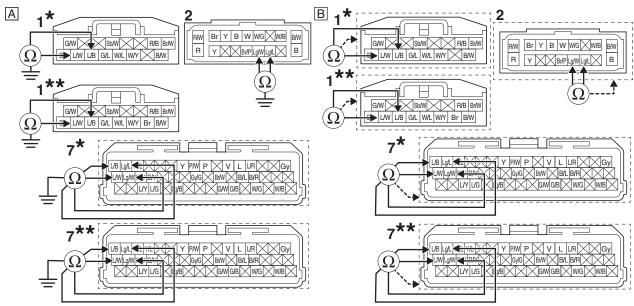

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 3.

NO

- \rightarrow Replace the wire harness.
- 3. Defective meter assembly
- Replace the meter assembly, and check again.
- 4. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.

90 ABS

EAS33300

TROUBLESHOOTING

Item

CAN communication (between ECU and hydraulic unit assembly)

Procedure

- 1. Defective coupler between the ECU and the hydraulic unit assembly
 - Check the coupler for any pins that may be pulled out.
 - Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?

YES


 \rightarrow Go to step 2.

NO

 \rightarrow If there is a malfunction, repair it and connect the coupler securely.

- 2. Wire harness continuity.
 - Disconnect the ECU coupler "1" and ABS ECU coupler "4".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between ECU coupler "1" and joint coupler "2"	light green/white-light green/white
Between ECU coupler "1" and joint coupler "3"	light green/blue-light green/blue
Between joint coupler "2" and ABS ECU coupler "4"	light green/white-light green/white
Between joint coupler "3" and ABS ECU coupler "4"	light green/blue-light green/blue

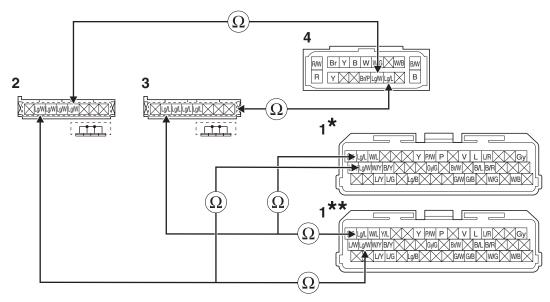

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP

Disconnect the ECU and ABS ECU related connectors before checking.


Refer to "PARTS CONNECTED TO THE ECU" on page 9-4 and "PARTS CONNECTED TO THE ABS ECU" on page 9-4.


Ground short circuit check "A"

	light green/white-ground light green/blue-ground
Between ABS ECU coupler "4" and ground	light green/white-ground light green/blue-ground

Lines short circuit check "B"

light green/white-any other coupler terminal light green/blue-any other coupler terminal		
light green/white-any other coupler terminal light green/blue-any other coupler terminal		

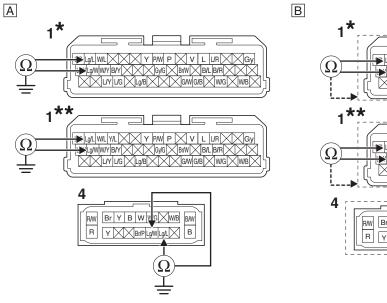

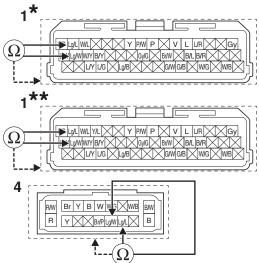

- *. MT09R/MT09RC
- **. MT09SPR/MT09SPRC

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 3.

NO

 \rightarrow Replace the wire harness.

- 3. Defective ECU
- Replace the ECU, and check again.
 Defective hydraulic unit assembly
 Replace the hydraulic unit assembly.

91 ABS

EAS33301

TROUBLESHOOTING

Item

CAN communication (between IMU and hydraulic unit assembly)

Procedure

- 1. Defective coupler between the IMU and the hydraulic unit assembly
- Check the coupler for any pins that may be pulled out.
- Check the locking condition of the coupler.

TIP

Turn the main switch to "OFF" before disconnecting or connecting a coupler.

Is check result OK?

YES


 \rightarrow Go to step 2.

NO

 \rightarrow If there is a malfunction, repair it and connect the coupler securely.

- 2. Wire harness continuity.
 - Disconnect the IMU coupler "1" and ABS ECU coupler "4".
 - Remove the joint coupler cap "2" and joint coupler cap "3".
 - Open circuit check

Between IMU coupler "1" and joint coupler "2"	light green/white-light green/white
Between IMU coupler "1" and joint coupler "3"	light green/blue-light green/blue
Between joint coupler "2" and ABS ECU coupler "4"	light green/white-light green/white
Between joint coupler "3" and ABS ECU coupler "4"	light green/blue-light green/blue

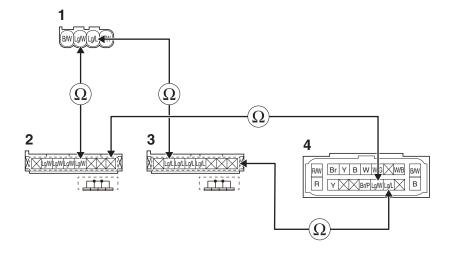

Is resistance 0 Ω ?

YES

 \rightarrow Go to "Short circuit check".

NO

- \rightarrow Replace the wire harness.
- Short circuit check

TIP

Disconnect the ABS ECU related connectors before checking. Refer to "PARTS CONNECTED TO THE ABS ECU" on page 9-4.


Ground short circuit check "A"

light green/white-ground light green/blue-ground
light green/white-ground light green/blue-ground


Lines short circuit check "B"


IMU coupler "1"	light green/white—any other coupler terminal light green/blue—any other coupler terminal		
ABS ECU coupler "4"	light green/white-any other coupler terminal light green/blue-any other coupler terminal		



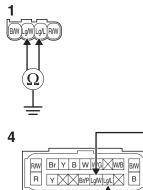



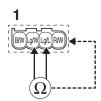

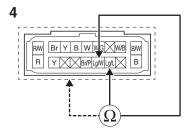

Is resistance $\infty \Omega$?

YES

 \rightarrow Go to step 3.

NO

 \rightarrow Replace the wire harness.

- 3. Defective IMU
- Replace the IMU, and check again.
- 4. Defective hydraulic unit assembly
- Replace the hydraulic unit assembly.

WIRING DIAGRAM

MT09R/MT09RC 2024

- 1. Main switch
- 2. AC magneto
- 3. GCU (Generator Control Unit)
- 4. Radiator fan motor relay
- 5. Horn relay
- 6. Radiator fan motor
- 7. Horn
- 8. Fuse box
- 9. ABS solenoid fuse
- 10. ABS motor fuse
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 14. Fuel injection system fuse
- 15. Electronic throttle valve fuse
- 16. Terminal fuse 1
- 17. Accessory fuse 1
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 21. Headlight fuse
- 22. ABS control unit fuse
- 23. Brake light fuse
- 24. Cruise control fuse
- 25. Radiator fan motor fuse
- 26. Battery
- 27. Starter relay
- 28. Starter motor
- 29. Frame ground
- 30. Rear brake light switch
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 33. Fuel pump relay
- 34. Neutral switch
- 35. Sidestand switch
- 36. Fuel sender
- 37. Fuel pump
- 38. O₂ sensor
- 39. Intake air pressure sensor 1
- 40. Intake air pressure sensor 2
- 41. Crankshaft position sensor
- 42. Coolant temperature sensor
- 43. Intake air temperature sensor
- 44. Gear position sensor
- 45. Shift sensor
- 46. ECU (Engine Control Unit)
- 47. Ignition coil #1
- 48. Ignition coil #2
- 49. Ignition coil #3
- 50. Spark plug
- 51. Injector #1
- 52. Injector #2
- 53. Injector #3
- 54. Grip warmer (left) (option)
- 55. Grip warmer (right) (option)
- 56. Throttle position sensor
- 57. Throttle servo motor

- 58. ABS ECU (electronic control unit)
- 59. Front wheel sensor
- 60. Rear wheel sensor
- 61. IMU (Inertial Measurement Unit)
- 62. YDT coupler
- 63. Meter assembly
- 64. Oil pressure switch
- 65. Rear turn signal light (right)
- 66. Rear turn signal light (left)
- 67. Front turn signal/position light (right)
- 68. Front turn signal/position light
- 69. Headlight control unit
- 70. Headlight (low)
- 71. Headlight (high)
- 72. Tail/brake light
- 73. License plate light
- 74. Auxiliary light
- 75. Auxiliary DC jack (option)
- 76. USB jack
- 77. BCM (Body Control Module)
- 78. Accessory (option)
- 79. Engine stop relay
- 80. Starting circuit cut-off relay 2
- 81. Clutch switch
- 82. Front brake light switch
- 83. Handlebar switch (right)
- 84. Mode switch
- 85. Stop/run/start switch
- 86. Accelerator position sensor
- 87. Handlebar switch (left)
- 88. Dimmer/pass switch
- 89. Turn signal switch
- 90. Joystick (push)
- 91. Cruise control switch
- 92. Hazard switch
- 93. Joystick (left)
- 94. Joystick (right)
- 95. Horn switch
- 96. Home button
- 97. Joystick (up)
- 98. Joystick (down)
- 99. Purge cut valve solenoid (for California only)
- *. For California only: Y
- Except for California: blank
- **. For California only: R/W
- Except for California: blank

MT09SPR/MT09SPRC 2024

- 1. Main switch
- 2. AC magneto
- 3. GCU (Generator Control Unit)
- 4. Radiator fan motor relay
- 5. Horn relay
- 6. Radiator fan motor
- 7. Horn
- 8. Fuse box
- 9. ABS solenoid fuse
- 10. ABS motor fuse
- 11. Main fuse
- 12. Backup fuse 1
- 13. Backup fuse 2
- 14. Fuel injection system fuse
- 15. Electronic throttle valve fuse
- 16. Terminal fuse 1
- 17. Accessory fuse 1
- 18. Signaling system fuse
- 19. Ignition fuse 1
- 20. Ignition fuse 2
- 21. Headlight fuse
- 22. ABS control unit fuse
- 23. Brake light fuse
- 24. Cruise control fuse
- 25. Radiator fan motor fuse
- 26. Battery
- 27. Starter relay
- 28. Starter motor
- 29. Frame ground 30. Rear brake light switch
- 31. Relay unit
- 32. Starting circuit cut-off relay
- 33. Fuel pump relay
- 34. Neutral switch
- 35. Sidestand switch 36. Fuel sender
- 37. Fuel pump
- 38. O₂ sensor 39. Intake air pressure sensor 1
- 40. Intake air pressure sensor 2
- 41. Crankshaft position sensor
- 42. Coolant temperature sensor
- 43. Intake air temperature sensor
- 44. Gear position sensor
- 45. Shift sensor 46. ECU (Engine Control Unit)
- 47. Ignition coil #1
- 48. Ignition coil #2
- 49. Ignition coil #3
- 50. Spark plug
- 51. Injector #1
- 52. Injector #2 53. Injector #3
- 54. Grip warmer (left) (option)
- 55. Grip warmer (right) (option)
- 56. Throttle position sensor
- 57. Throttle servo motor
- 58. ABS ECU (electronic control unit)

EAS30613 59. Front wheel sensor **COLOR CODE** 60. Rear wheel sensor В 61. IMU (Inertial Measurement Black Br Brown Chocolate Ch 62. YDT coupler DI Dark blue 63. Meter assembly G Green 64. Oil pressure switch Gv Grav 65. Rear turn signal light (right) L Blue 66. Rear turn signal light (left) Light green Lg 67. Front turn signal/position light O Orange (riaht) Р Pink 68. Front turn signal/position light R Red (left) Sb Sky blue 69. Headlight control unit V Violet 70. Headlight (low) W White 71. Headlight (high) Yellow Υ 72. Tail/brake light Black/Green B/G 73. License plate light B/L Black/Blue 74. Auxiliary light B/R Black/Red 75. Auxiliary DC jack (option) B/W Black/White 76. USB jack B/Y Black/Yellow 77. BCM (Body Control Module) Brown/Black Br/B 78. Accessory (option) Brown/Green Br/G Brown/Blue 79. Engine stop relay Br/L Br/P Brown/Pink 80. Starting circuit cut-off relay 2 Brown/Red Br/R 81. Clutch switch Br/W Brown/White 82. Front brake light switch Br/Y Brown/Yellow 83. Handlebar switch (right) G/B Green/Black 84. Mode switch G/L Green/Blue 85. Stop/run/start switch G/R Green/Red 86. Accelerator position sensor G/W Green/White 87. Handlebar switch (left) G/Y Green/Yellow 88. Dimmer/pass switch Gy/G Gray/Green 89. Turn signal switch Gray/Red Gy/R 90. Joystick (push) Gray/White Gy/W 91. Cruise control switch L/B Blue/Black 92. Hazard switch Blue/Green L/G 93. Joystick (left) L/R Blue/Red 94. Joystick (right) L/W Blue/White 95. Horn switch L/Y Blue/Yellow 96. Home button Light green/Black Lq/B 97. Joystick (up) Light green/Blue Lq/L 98. Joystick (down) Lg/R Light green/Red 99. Main switch solenoid Lg/W Light green/White 100.Request switch O/G Orange/Green Orange/White 101.Remote control unit O/W P/B Pink/Black 102.Buzzer P/W Pink/White 103. Fuel tank cap Red/Black R/B 104. Fuel tank cap unlock switch R/G Red/Green 105. Fuel tank cap latch solenoid Red/Blue R/L 106. Purge cut valve solenoid (for R/W Red/White California only) Sb/W Sky blue/White *. For California only: Y W/B White/Black Except for California: blank W/G White/Green **. For California only: R/W W/L White/Blue Except for California: blank W/R White/Red White/Yellow W/Y Y/B Yellow/Black Y/L Yellow/Blue Yellow/Green Y/R

Y/G Yellow/Red Y/W Yellow/White



